


Atmospheric Water Generator

User's Manual LT-AWG20G

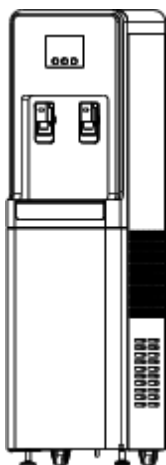

1, This appliance is intended to be used in household and similar applications such as: (IEC 60335-2- 15)

- staff kitchen areas in shops , offices and other working environments;
- farm houses;
- by clients in hotels , motels and other residential type environments;
- bed and breakfast type environments .

2, Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved .

3 , Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance .

4 , Children shall not play with the appliance .

5 , - this appliance can be used by children aged from 8 years and above and persons with reduced physical , sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved

6 , cleaning and user maintenance shall not be made by children without supervision

Important: Please read all instructions before connecting your appliance into a power supply.

Important: Do not throw away this manual .

CONTENT	page 1
1 . Introduction.....	page 2
Copyright.....	page 2
Limitation of Liability	page 2
Fields of application.....	page 2
2 . Security notes.....	page 2
3 . Security precautions	page 3
4 . Description of device functions.....	page 3
5 . Test features.....	page 4
6 . Components.....	page 5
7 . Operation	page 6
8 . Initial commissioning	page 7
9 . Dispensing water.....	page 7
10 . Replacement filters.....	page 8
Resetting the flashing filter warning.....	page 8
Replacing ① HEPA air filter	page 8
Replacing the water filters② - ⑥	page 9
Replacing ⑦LED UV lamps of the bottom tank	page 10
Replacing ⑧ LED UV lamps of the top tank	page 11
11 . Flushing , cleaning and disinfection	page 12
Flushing the device.....	page 12
Cleaning the lower tank	page 12
Device disinfection.....	page 12
12 . Connecting an additional source of water	page 13
13 . Complete deletion	page 13
14 . Troubleshooting.....	page 14
15 . Solving other problems	page 14
16 . Technical specifications.....	page 15

! Pay attention !

The device must be in vertical position 24 hours before engaging .

When using the new device for the first time , please note that it only supplies clean drinking water after the device has been completely watered (see 9 . Dispensing water, page 8) .

Do not forget to change filters in time , clean filters affect water quality.

1 . INTRODUCTION

Congratulations on your purchase of AWG (Atmospheric Water Generator) for producing your clean water from the air. No installation required , just plug into any power source and follow the instructions in this manual . After switching on , the machine will start producing , filtering and storing cold and hot water from the air - up to 20 liters per day, taking into account the ambient temperature and humidity. The device is easy to operate , environmentally friendly, cleans the ambient air, is healthy and does not deplete our increasingly scarce groundwater resources . When handing the product over to third parties , hand over this user manual with the product .

Copyright

This documentation is protected by copyright . Any reproduction , respectively. any reprint , even partial , as well as the reproduction of images , even in an altered state , is allowed only with the written consent of the manufacturer.

Limitation of Liability

All technical information , data and wiring and operating instructions contained in this user manual correspond to the latest state of the art at the time of printing and have been made to the best of our knowledge and experience . No claims can be derived from the data , illustrations , and descriptions in this user manual . The manufacturer is not liable for damages resulting from non-observance of the user manual , improper use , improper repairs or unauthorized changes , or the use of unauthorized spare parts .

Fields of application

The device is designed exclusively for the production of water from air at min . 15 ° C and 20 % humidity. Device may only be used indoors . Use other than that described in the user manual is not permitted and can lead to injuries and/ or device damage . The manufacturer is not liable for any damage caused by improper use . The risk is borne solely by the user.

2 . SECURITY NOTES

- 2 . 1 . The electrical outlet shall be equipped with a reliable and correct grounding
- 2 . 2 . Do not disconnect the grounding plug from the power cord
- 2 . 3 . Do not use an extension cord or power adapter
- 2 . 4 . Do not use damaged power cords or plugs
- 2 . 5 . Always turn off the machine by unplugging the power cord before servicing
- 2 . 6 . Do not plug in or unplug the power cord with wet hands
- 2 . 7 . Do not share the power outlet with other devices
- 2 . 8 . Use replacement and consumables supplied by the manufacturer
- 2 . 9 . Improper handling and handling may void the warranty
- 2 . 10 . Unplug the power cord and empty the water from all tanks before moving the machine
- 2 . 11 . Do not tilt the device more than 20 ° while moving it . If the device is tilted by more than 20 ° , it must remain in an upright position for at least 24 hours before re- connecting
- 2 . 12 . Avoid prolonged eye contact with the ultraviolet LED UV lamp
- 2 . 13 . Warm water is heated to 82 ° C , so avoid contact with skin to prevent skin burns
- 2 . 14 . CAUTION - UV light source - disconnect the power supply from the UV before opening the cover
- 2 . 15 . CAUTION - TO AVOID RISK OF FIRE OR ELECTRIC SHOCK , USE THE DEVICE ONLY INSIDE .
SEE FURTHER IN THE USER'S MANUAL
- 2 . 16 . Install the device away from toxic gases or aggressive liquids

3 . PRECAUTIONS

- 3 . 1 . It is forbidden to install and use the device in areas where there is a risk of explosion .
- 3 . 2 . It is forbidden to install and use the device in areas where the air contains oil , sulfur, chlorine or salt .
- 3 . 3 . T his device is not intended for outdoor use away from indoor areas
- 3 . 4 . It is forbidden to wash the device with a jet of water
- 3 . 5 . Do not place any objects on the device
- 3 . 6 . It is forbidden to cover the intake and exhaust ports
- 3 . 7 . It is forbidden to insert any objects into the device
- 3 . 8 . It is forbidden to cover or move the switched-on the device
- 3 . 9 . O perate the device in an upright vertical position
- 3 . 10 . A ll electrical cables must be secured against damage (e . g . against game)
- 3 . 11 . C heck that the extension cord meets the power, length , and destination requirements .
- 3 . 12 . T he switching voltage must not fall below 10 % of the standard supply to avoid increased noise or overheating . If this happens , disconnect the device from the mains immediately until the voltage returns to normal
- 3 . 13 . Young children must not use the device without adult supervision
- 3 . 14 . Position the device in an area where it will not hinder or injure people by hitting the device or spill water in the lower tank and cause an E7 error (see 14 . Troubleshooting , page 14)
- 3 . 15 . T he machine can only be operated in a vertical position , and the machine must be completely emptied before each operation (see 13 . Complete draining , page 13)
- 3 . 16 . P lease follow the user' s guide for detailed instructions before using the machine
- 3 . 17 . It is forbidden to use the device for purposes other than those speci fied in this user manual
- 3 . 18 . I n case of non- observance of these instructions , the manufacturer is not liable for any damages and the warranty cannot be applied in any way


I mportant electrical connection information

T he device must be connected to the mains in accordance with current standards for power supplies equipped with static circuit breakers . If the device is used in damp areas , the device must be equipped (provided by the purchaser) with a static electricity circuit breaker which must meet the conditions for such areas .

4 . DESCRIPTION OF FEATURES

T his device uses a eight-stage fi ltration process to produce clean drinking water from the air. T he device sucks air through the ① HEPA air fi lter to prevent micro particles and dust entering the device . T he cleaned air and water vapor then comes into contact with the evaporator where the water vapor freezes due to the compressor coolant in the coils . S ubsequently, the reverse function of the compressor heats up and the ice condenses into water, which drips into the water bowl of stainless steel , fl ows into the lower stainless steel tank , equipped with a ② LED UV lamp to remove bacteria and microorganisms . H i- tech pump pushes the water through water fi lters including ③ sediment fi lter eliminating dirt and particles with a diameter of over 5 microns , further goes through ④ pre- carbon fi lter with coconut shells , which absorbs dangerous organic substances , such as chlorine , pesticides and some volatile organic compounds , and then through ⑤ membrane fi lter, eliminating micro- particles , plastics and particles of diameter less than 0 .01 micron , through ⑥ M ineral fi lter with minerals beneficial to the human body (calcium , potassium , magnesium and sodium) . subsequently through⑦ Nano Ceram- PAC fi lter after sterilisation ,T he water is then pumped into an upper stainless steel tank equipped with an additional⑧ LED UV lamp to ensure that no other bacteria or microorganisms remain in the water. Two stainless steel tanks are located under the upper tank . O ne of these tanks heats the purified drinking water to 82 °C and the other cools the water to 6 °C .

Flowchart (Including filter numbers)

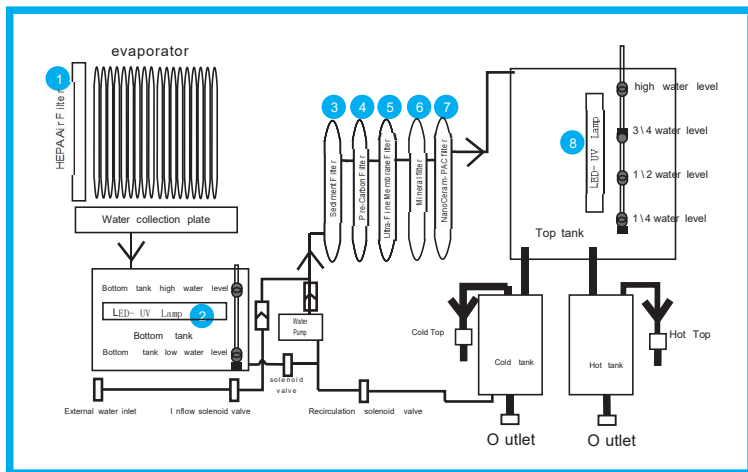

Note:

The device has the option of connecting an additional water source to ensure that it will in all conditions a constant supply of clean drinking water is available even in periods of low humidity, but is not required for normal operation. Water from an external source is filtered through the water filters in the equipment and is thus cleaned even if the external water source does not have clean water. Additional water sources are, for example: water supply, drain valve, separate water tank, etc. The device will automatically switch to using an additional water source if the water in the tank equipment is below the level required for dosing or when the relative humidity is lower than the operating humidity.

5 . TEST FEATURES

It is important to note that the actual performance of the device is based on physical laws, it depends on the relative humidity and ambient temperature. Relative humidity "RH" is ubiquitous and penetrates through all porous materials. In general, the higher the relative humidity and ambient temperature, the higher the amount of water produced. Deploying the latest technologies and materials now available for this product line water production is determined according to the table below.

Temperature	Tab. 1 . Production of water per day [litres]							
Humidity	25%	30%	40%	50%	60%	70%	80%	90%
15 °C	1,75	1,87	2,56	3,50	4,50	6,40	7,00	9,10
20 °C	2,85	3,04	4,16	5,70	6,40	7,90	9,01	12,43
25 °C	3,60	3,85	5,27	7,20	9,10	12,80	15,30	18,82
30 °C	4,60	4,92	6,74	9,20	12,60	17,70	20,00	25,20

Estimated 24 - hour water production function depends on the relative humidity and ambient temperature, generally provided by Mollier diagram (also IX HS or psychrometric chart used by axis). Device can produce up to 20 litres of pure water from the air. The amount of water will vary depending on the level of relative humidity and ambient air temperature. The device reaches the most efficient output with more than 80% and 30°C. At lower levels, it produces clean drinking water from the air as well, but in smaller amounts.

The operating ranges of the device are: RH of from 20% to 99% and a temperature of from 15°C to 45°C. For optimal, cost-effective and safe use, the device must comply with the following conditions:

In some places, the best time of traffic is at night (due to higher relative humidity).

1. The device must be positioned at least 30 cm from any walls or other structures from all sides, such as by placing in the middle of the long wall for optimum air circulation in the space.
2. It is still necessary to supply fresh moist air, choose wisely the location of the device e.g. lobby, corridors, halls, auditoriums, covered terraces and roofs, kitchen, the dining room and forced air change, or high concentrations of relative humidity, such as gyms, winter gardens etc. otherwise it may cause dry air in the room and improper device operation.
3. It must not be installed next to radiators or heaters.

6. COMPONENTS

6.1 Microcomputer - controls water production, collection, filtration, storage, heating, cooling and distribution of water that this device generates from the air.

6.2 Electronic sensor - controls LED UV lamp, temperature, water levels, energy efficiency, maintenance, security and other features.

6.3 Sensors for saving energy - control the process of making water from air with maximal efficiency.

6.4 Hot water lock - prevents accidental dispensing of hot water from the device.

6.5 Venturi blower - designed to provide maximum efficiency and reduced noise levels.

6.6 Water leak detector - in case leaking, the device stops working and automatically displays control panel error E7 (see 14. Troubleshooting, page 14).

6.7 Connection set - a set of water hoses can be connected directly to the tap or supply pipe, which allows the device to function as a water purifier using a device filtering and disinfection system. Additional installation instructions (see 12. Connection additional source of water, page 13).

6.8 Power switch - Control the total power supply of the machine. The machine starts to work when it is turned on and stops to work when it is turned off.

6.9 Hot water switch - for hot water, make sure that the hot water switch (red) is switched to "ON" position (UP). Water heating switch must be turned on for at least 30 minutes, that hot water is enough to warm to 82°C.

6.10 Cold water switch - for cold water, make sure that the cold-water switch (black) is switched to "ON" position (UP). Cold water switch must be turned on for at least 30 minutes to cool enough cold water to a temperature of 6°C.

6.11 8-phase filtering process: the filter system sucks air and pushes it through the HEPA filter. Water vapour in the air is in contact with the coils of stainless steel and condensation occurs, produces water, which then passes through the remainder seven-degree filtration, which removes i.e. (chlorine fluoride, lead or other harmful ingredients) and produces up to 2.0 litres of clean drinking water per day.

6.12 ① HEPA air filter - it prevents dust and micro particles penetration of the device and cleans air.

6.13 ② LED UV Lamp - kills bacteria and microorganisms (located in the lower tank).

6.14 ③ Sediment filter - eliminating dirt and particles having a diameter of over 5 microns.

6.15 ④ Pre-carbon filter - charcoal and coconut shells absorbing hazardous organic compounds, such as chlorine, pesticides and some volatile organic compounds.

6.16 ⑤ Membrane filter - ultrafine filter eliminates particles smaller than 0.01 microns.

6.17 ⑥ Mineral filter - with minerals beneficial to the human body (calcium, potassium, magnesium and sodium).

6.18 ⑦ Nano Ceram-PAC filter (Optional) - Further filter the bacteria in the water pipe.


6.19 ⑧ LED UV lamp - kills bacteria and the remaining microorganisms (located in the upper tank).

6.20 Recirculated water - our exclusive technology ensures clean water recirculating through the internal water filters every three hours, so that the stored water always remains fresh and drinkable.

6.21 Protection against overheating - overheating protection automatically switches the device off when it detects overheating.

6.22 Protection against coolant leakage - refrigerant leakage protection device automatically switches off if a leak is detected refrigerant.


Arrangement device

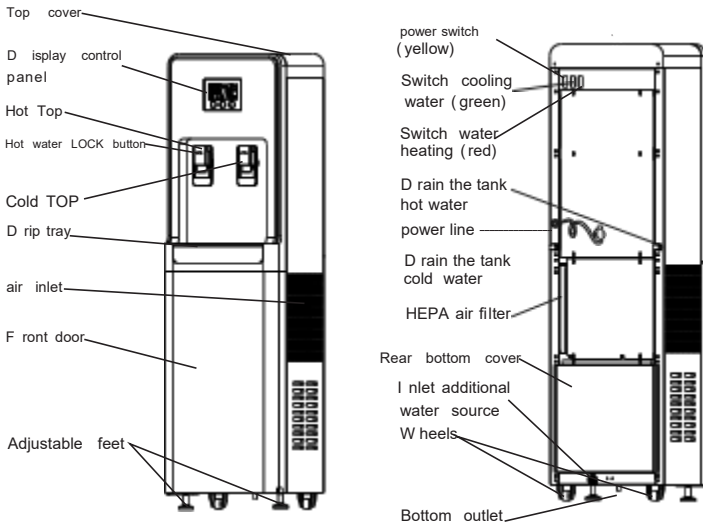

Note:

Read this user manual instructions carefully before plugging the device . Do not throw it away and keep it close to the device .

7. OPERATION

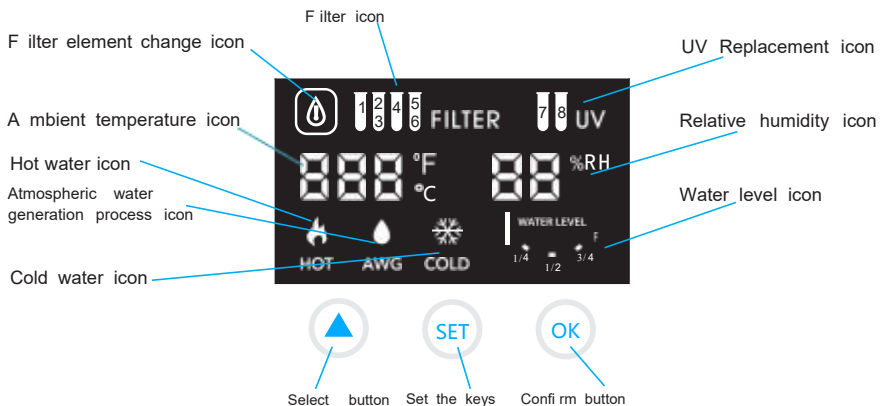

7 . 1 : Filter element change icon- The icon flashes when the machine is in trouble, and does not shine when the fault is removed

7 . 2 : Ambient temperature icon - measures the temperature around the device in degrees Celsius [° C] or Fahrenheit [° F] .

7 . 3 : Hot water icon - icon will flashes until water inside the tank heats up . Stays lit when water is heated to 8 2 ° C .

7 . 4 : Atmospheric water generation process icon - While the device is running and producing water, the icon stays on

7 . 5 : Cold water icon - icon will flash until the water inside the tank is cooled . R remains lit when the water is cooled to 6 ° C .

7 . 6 : Relative humidity icon- shows the relative humidity in the surrounding area as a percentage [%] . Please note that the device generates clean drinking water from 20 % humidity

7 . 7 : Water level icon - shows the amount of water in the upper stainless - steel tank in litres[L] , scale consists of 4 sections, 1 / 4 stands for about 3 . 75 of the total 12 l of the upper tank . The device can continue the production of the water after the tank bottom gets filled . Drain makes bar disappear, production fills it again .

7 . 8 : Select button\ Set the keys\ Confirm button- Reset flashing filter warning (page 8)

8 . INITIAL ENGAGING

8 . 1 . Unpack the cardboard box , remove the polystyrene cover and remove foil packaging of the device save the packaging for possible warranty complains .

8 . 2 . After unpacking , wait at least 24 hours before the device is plugged into the socket , failure to do so may damage the compressor.

8 . 3 . Make sure the device is not damaged or battered .

8 . 4 . The device must be located inside , vertically and fixed on a flat floor

8 . 5 . The device is equipped with wheels at the lower rear side for easy manipulation on the floor

8 . 6 . Place the device in the space at least 30 cm from any walls or other structures from all sides and good air circulation (see 5 . Working properties , page 4)

8 . 7 . Before connecting the device , check the tightness of all filters (Figure 1 .2-4)

8 . 8 . Connect the device to an electrical outlet that is provided with a circuit breaker at least 10 A

8 . 9 . We recommend flushing after prolonged shutdown (see 11 . Flushing device , page 12)

8 . 10 . We recommend connecting another source of water (see . 12 . Connection additional source of water, page 13)

8 . 11 . Remove the plastic film from the control panel display

8 . 12 . The device is now ready for use

9 . DISPENSING OF WATER

9 . 1 . The device dispenses clean drinking water only after operational irrigation , i . e . filter irrigation and filling 1/4 of the upper tank , which corresponds to approx . 12 liters of water, this quantity of water is minimal to ensure the correct operation of water recirculation according to the conditions of water production (see Table 1 , page 4)

9 . 2 . The water heating and cooling switches must be on for at least 30 minutes to prepare the water to the required temperatures of 6 ° C (cold) and 82 ° C (warm)

9 . 3 . Clean drinking water flows from the dispenser nozzle of the device

9 . 4 . Hold a glass or other water container under the dispenser nozzle of the device , or stand drip tray

9 . 5 . Press the anti- hot button of the hot tap and push the handle of the hot tap with the cup to get hot water.

9 . 6 . Use the glass to push the handle of the cold tap to take cold water.

9 . 7 . Please note that hot and cold water is only available when the heating and cooling switches are turned to the "ON" position on the back of the unit .

10 . CHANGE FILTERS

The device produces clean drinking water from the air by passing water through the filtration . Please follow the recommended filter change schedule to ensure the best water quality. The filter connectors are equipped with non- return valves . The device will detect when it is time to replace the filter and will display the filter number ① - ⑧ on the display. Table below shows the recommended filter replacement schedule and the number of filters in the device

Air Filter.....	(*Every 12 months)
Bottom Tank UV Lamp Filter.....	(Every 18 months)
Sediment Filter	(Every 6 months)
Pre-Carbon Filter	(Every 6 months)
Ultra-Fine Membrane Filter.....	(Every 12 months)
Mineral filter(Optional).....	(Every 6 months)
Nano Ceram-PAC filter (Optional).....	(Every 6 months)
Top Tank UV Lamp Filter.....	(Every 18 months)

* replacement depends on the degree of soiling or filter failure

Reset flashing filter warning

Press "SET" button 3 S and then press "Select Button" to Select the icon of the blinking filter element . After selecting , press "OK" button to clear the memory time of the current filter element and then start to remember the life of the newly replaced filter element .

10 . 1 . Clean ① HEPA air filter

- Unplug the device (Figure 1 . 1- 1)
- Pull out the air filter (Figure 1 . 1- 2) and Clean the dust on the surface of air filter directly with tap water or air, and then put it into the machine after cleaning .
- Reset the flashing filter warning no . 1 (see " Resetting the flashing warning filter" , page 8)

Figure 1 . 1- 1


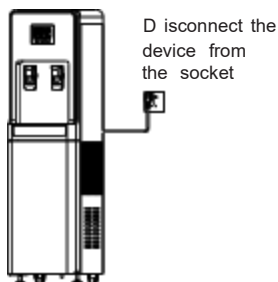



Figure 1 . 1- 2

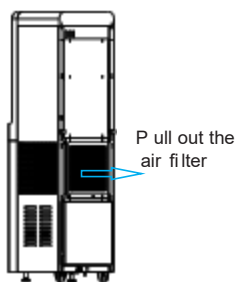


10 .2 . Replacement water filters ② - ⑥

- Disconnect the plug (F igure 1 .2- 1)
 - Open the front door on the right side of the device (F igure 1 .2- 2)
 - Remove the fi lter by turning counter clockwise (according to arrows on fi lter) and pull downwards (F igure 1.2- 3)
 - Keep in mind that fi lters are containing water and its removal may cause slight leakage of water, this is not a problem
 - Insert new fi lter in place of the original by pressing upwards and turning it clockwise to fasten the filter(F igure 1 .2-4)
 - Make sure fi lter is properly tightened around the whole perimeter of the connection point
 - Close the front door
 - Reset the flashing filter warning - no . 2-6 (see "Resetting the flashing fi lter warning" , page 8)
- Note: If you are replacing multiple fi lters , change water fi lters one by one


F igure 1.2- 1

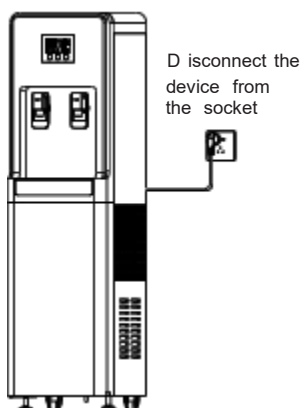


F igure 1 .2-2

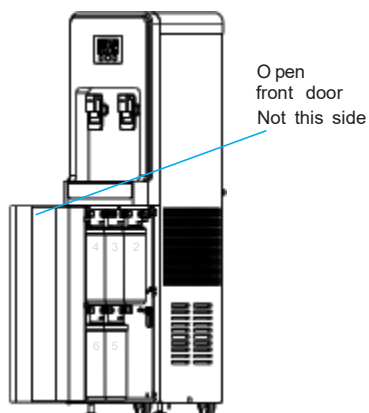

F igure 1 .2-3

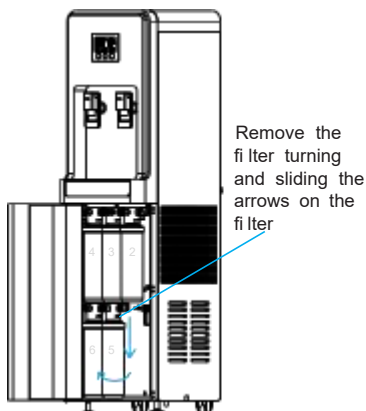

F igure 1 .2-4

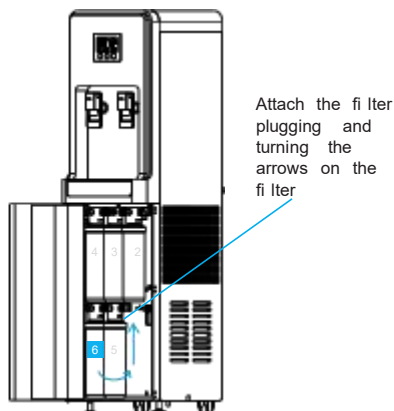

10.3. Replacing⑦ LED UV lamps bottom of the tank

- Unplug the device from the wall socket (Figure 1.3-1)
- Using a screwdriver or manually remove both screws from the back cover (Figure 1.3-2)
- Gasp the handle of the lower tank and slowly pull it towards you; do not disconnect the tube and connectors, pour the remaining water out of the tank by tilting it (Figure 1.3-3)
- Loosen the LED UV lamp nut from the underside with an adjustable wrench, disconnect the LED UV lamp connector, remove the old LED UV lamp (Figure 1.3-4)
- Put the new LED UV lamp back into the tank and screw in with an adjustable wrench
- Check the connection of the new LED UV lamp connector and its gasket (to test for leaks, pour water from the container back into the lower tank), carefully insert and then fasten the screws the rear lower cover
- Reset the blinking filter warning – no. 7 (see "Reset the blinking filter warning", page 8)

Figure 1.3-1

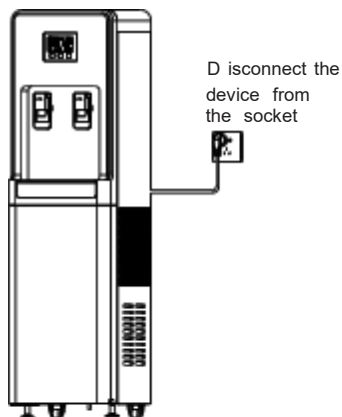


Figure 1.3-2

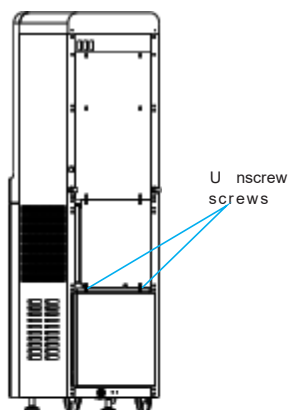


Figure 1.3-3


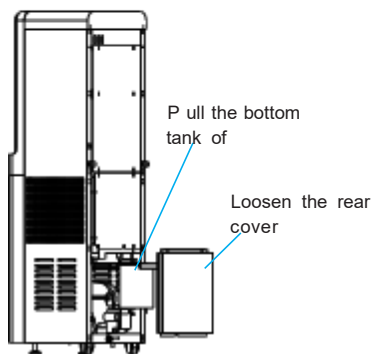


Figure 1.3-4

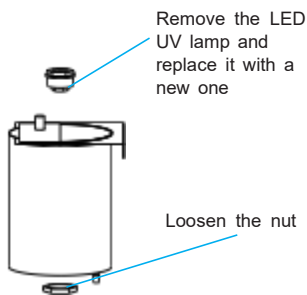

10.4 . Replacing ⑧ LED UV lamps top of the tank

- a) Unplug the device from the wall socket (Figure 1 .4- 1)
- b) Open the drain valve of the cold and hot water tanks and empty the water stored in the water tank (Figure 1.4-2)
- c) Loosen the screws with a screwdriver and remove the cover and rear baffle (Figure 1 .4- 3)
- d) Lift the lid of the tank up (Figure 1 .4- 4)
- e) Loosen the LED UV lamp nut from the underside with an adjustable wrench , disconnect the LED UV lamp connector, remove the old LED UV lamp (Figure 1 .4- 5)
- f) Put the new LED UV lamp back into the tank and screw in with an adjustable wrench
- g) Check the connection of the new LED UV lamp connector and its gasket (to test for leaks , pour water from the container back into the lower tank) , carefully insert and then fasten the screws the rear lower cover
- h) Reset the blinking filter warning – no . 8 (see "Reset the blinking filter warning" , page 8)
- j) Personal safety concerns require a professional replacement

Figure 1.4-1

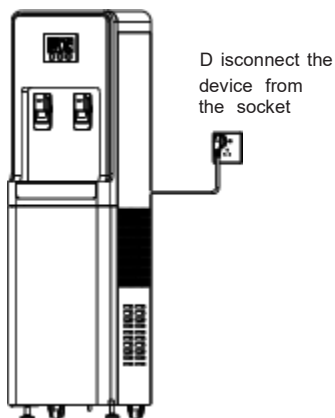


Figure 1.4-2

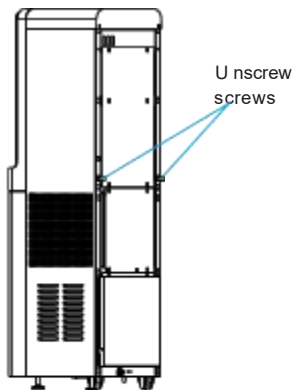


Figure 1.4-3

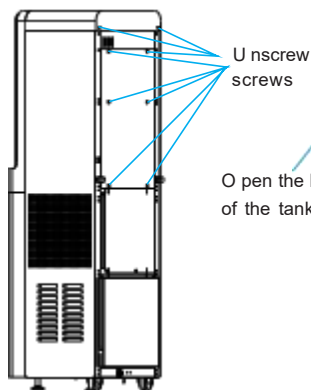


Figure 1.4-3


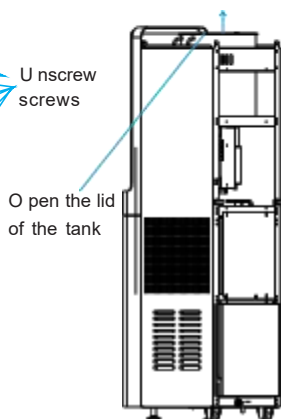


Figure 1.4-5

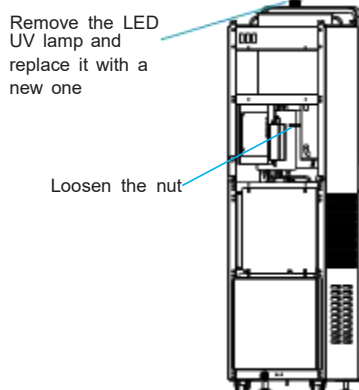

11 . THE FLUSH , CLEANING AND DISINFECTION

- Always wipe the device with clean , soft and damp cloth
- To clean stainless steel tanks use chemical cleaning agents
- If the device is switched off for more than two days , drain the water from all tanks and filters and then rinse before using it again
- If the device is switched off for longer than one week , replace water filters and device should be disinfected

Figure 2 . 1-1

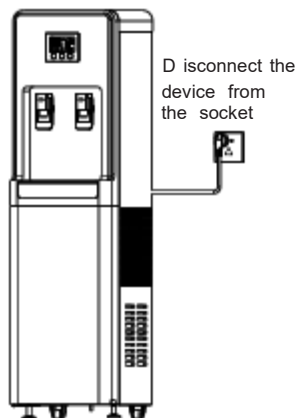


Figure 2 . 1-2


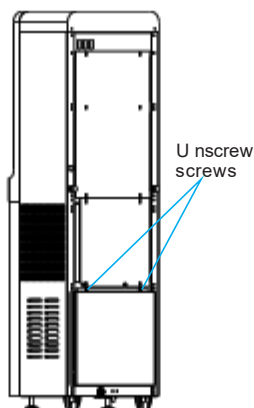


Figure 2 . 1-3

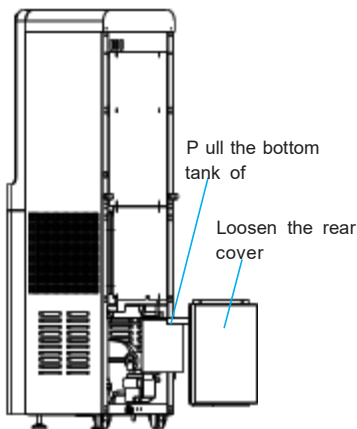

11 . 1 . Flushing the device

- This step will require 10 liters of purified or distilled water
- If the device is connected to an additional water supply, then turn the pressure valve lever to the "CLOSED" position and follow the next steps , otherwise leave the lever in the "OPEN" position and let the water automatically pour into the tank (the water level indicator icon will show one division) , then turn the valve to the "CLOSED" position , continue according to h) and then open the valve to the "OPEN" position , ending with and)
- Using a hand or a screwdriver, remove both screws from the back cover (Figure 2 . 1-2)
- Gasp the handle of the lower tank and slowly pull it towards you; do not disconnect the tube and connectors , pour the remaining water out of the tank by tilting it (Figure 2 . 1- 3)
- Slowly fill the bottom tank with clean or distilled water
- Let the pump drain the water from the bottom tank and then refill , repeat this step up to 10 liters of distilled or purified water
- Carefully insert the lower tank and fasten the rear lower cover bolts
- Allow the device to perform a water recirculation process , which may take up to three hours
- The device is now ready for use again

11 .2 . Cleaning the bottom tank

- Disconnect the device from the power supply (Figure 2 . 1- 1)
- Use a screwdriver or manually remove the two screws from the rear cover (Figure 2 . 1-2)
- Gasp the handle of the bottom tank and slowly pull it towards you; disconnect tubing and connectors , pour the remaining water from the tank by tilting (Figure 2 . 1- 3)
- Wipe the walls of the tank with a clean , soft , damp cloth
- Gently push the bottom tank inside and fasten bolts of the rear cover If required , reset the flashing filter warning - no . 7 (see "Resetting the flashing filter warning " , page 10)

11 .3 . Device disinfection

- Plug the appliance into the socket and make sure the water heating switch is in the "ON" position , leaving the water cooling switch in the "OFF" position (Figure 2 . 1-2)
- Using a screwdriver, remove both screws from the back plate (Figure 2 . 1-2)
- Gasp the handle of the lower tank and slowly pull it towards you halfway down; do not disconnect the tube and connectors (Figure 2 . 1-3)

- d) Prepare disinfectant solution in proportion: 200 g of hydrogen peroxide mix with 4 liters of water and pour the solution into the lower tank until the lower tank is completely full
- e) Wait until the solution has been pumped from the lower tank to the upper tank, refill the prepared solution until the device is completely drained, then attach the screws to the rear lower cover
- f) Drain 500 ml of warm water (discard this water)
- g) Store the remaining solution in the upper tank for at least three hours
- h) After the disinfection time, drain all water tanks (discard water), drain the water filters
- i) We recommend flushing the device before using it again (see "Flushing the device", page 12)

12 . CONNECTION OF ADDITIONAL WATER RESOURCES

Set contents: Pressure hose blue 4,5 m, pressure water valve 1/2"

- a) Remove the plug from the additional water supply at the back of the device by pushing the gray O-ring apart, if this plug is missing, contact the supplier
- b) Install the pressure valve into a 1/2" water supply outlet using a Teflon thread or tape keep in mind that the person's professional (plumber) is required for this step and some countries may require pressure test of installed valve, maximum permissible pressure in the pipeline is 4 bar
- c) Please note that the connection for the valve from the connection set may vary, it may be of a size other than 1/2", use a brass adapter or adapter (not included) Insert the supplied pressure blue hose into the inlet of the additional water supply and attach the other end of the hose by tightening the nut to the pressure valve
- e) Turn the pressure valve lever to the "OPEN" position, check the joints for leaks
- f) The appliance is now ready to take water from the additional water source. If you do not need to draw water from the additional water supply, turn the pressure valve lever to the "CLOSED" position and disconnect the hose from the additional water supply inlet at the back of the bottom of the device

13 . COMPLETE DRAINAGE

- a) If the device is connected to an optional water source, then rotate the pressure lever on the valve to "closed" position and disconnect the tubing from the supply of additional water source on the rear side of the bottom of the device
- b) Turn the heating and cooling of water to the "OFF" position
- c) Dispense all hot water using the hot water button
- d) Dispense all cold water using the cold water button
- e) Remove the device from the wall (Figure 3.1-1)
- f) Hold the vessel in the water tank hot water outlet
- g) Remove plastic cap, remove rubber stopper and completely empty the tank, the water that flows out can be used for consumption, it's not need to be disposed (Figure 3.1-2)
- h) Hold the vessel in the water drain tank of cold water and repeat step g)
- i) Replace the rubber stopper and screw the plastic caps back on each outlet
- j) Open the front door on the right hand side and gradually remove the filters by turning counter clockwise (according to the arrows on the filter) and pull downwards (Figure 1.2-3) Remove filters and close the front panel, keep in mind that filters are filled with water and when removing there may be a small water leak, this is not a problem
- l) Use a screwdriver or manually remove the two screws from the back cover, hold the handle of the tank bottom and slowly pull it towards you; disconnect tubing and connectors, pour the remaining water from the tank by tilting (Figure 3.1-4)
- m) Gently push the bottom tank inside and fasten bolts of the rear cover

Figure 3.1-1

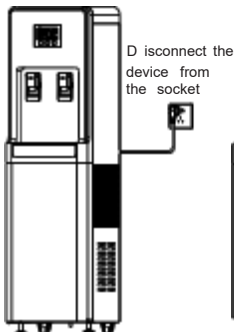


Figure 3.1-2

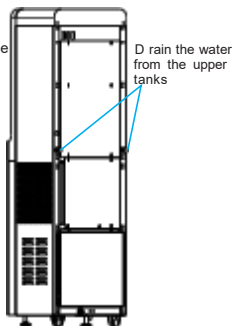


Figure 3.1-3



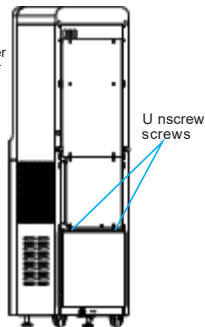



Figure 3.1-4

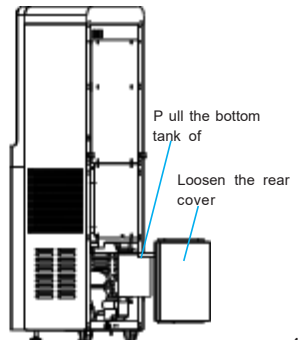


14 . TROUBLESHOOTING

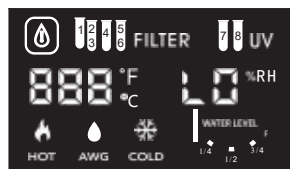


LO - Low humidity
around ($\geq$ working 20%)

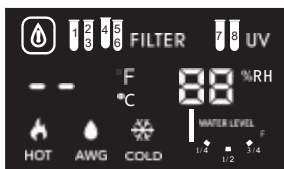


-- Error sensor
temperature

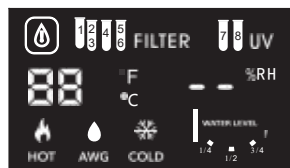


-- Error sensor
temperature and
humidity

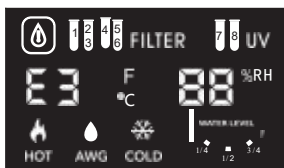


E3 - Error sensor
defrost

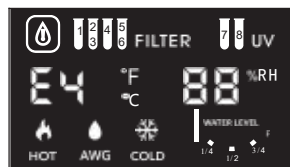


E4 - Error sensor
hot water

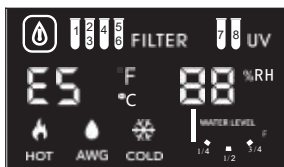


E5 - Error sensor
cold water

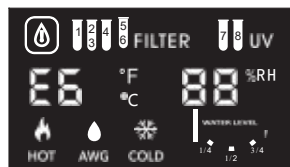

E6 - Error cooling
system
- Protection of low
pressure
- Possible refrigerant
leakage

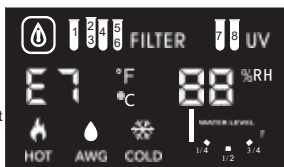

E7 - Possible water
leak

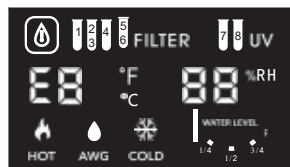

E8 - Waterway jam

15 . RESOLUTION OF OTHER PROBLEMS

The device has been tested many times to ensure quality service. Regardless might arise some problems. In this case, use the following list:

15 . 1 . The unit does not turn on

- Check that the device is connected to the power supply
- Check that the power plug is not damaged

15 . 2 . The unit turns on but does not generate water

- Check the room temperature - The device's operating temperature range is 15°C to 45°C
- Check humidity - Minimum relative humidity - 20 %
- Check air filter for contamination - Replace as necessary
- Check the heat exchanger fins for contamination - The device must be disassembled for this inspection; this can only be done at an authorized service center!

Disconnect the device from the power supply before carrying out any service or maintenance work!

15 .3 . T he device operates noisy, vibrates or seeps water

- a) C heck that the device is in a vertical position on a fl at surface
 - b) C heck that the internal condensate collector and adapter are clean - T he unit must be disassembled for this inspection; this can only be done at an authorized service center!
- If the unit still does not operate properly after performing the above steps , contact an authorized service center.
- O nly trained personnel can carry out work related to the cooling and electrical system .

16 . TECHNICAL SPECIFICATIONS

a . D imensions: 375mm (L) x 307mm (W) x 1154mm (H)

b . E lectrical

Power supply:	☐ 220V, 50Hz
	☐ 115V/60Hz
	☐ 100V/50-60Hz
Power input:	970W
Heating:	500W
Generating water:	470W

c . P roduction Data

Working Temperature	15°C - 38°C
Working Humidity	2 0 % - 9 5 %
Water Storage Capacity	2 0 liters
Temperature of H ot Water	82°C
Temperature of Cold Water	6°C