

Poutník — user guide: Hobby Optima OnTour Edition motorhome

Informative translation — the Czech version prevails.

Citroën Jumper 2.2 BlueHDi 103 kW (140 hp) · 6-speed manual · FWD

2021 · 4 seats · 3–4 berths

Diesel + AdBlue · GVW 3,500 kg (licence B)

6.78 × 2.16 × 2.70 m



Before you drive — entrance, cab, seats




A • STEP AND LIGHTS BY THE DOOR

- 1 Living-area lights (two sun symbols).
- 2 Light above the entrance.
- 3 **Electric step:** left arrow = extend, right arrow = retract. ALWAYS retract and check it before driving.



B • BLIND AND CAB LIGHTS


- 1 Pleated blackout blind for the windscreen (shown closed). **Open it fully before driving** — your view must be clear.
- 2 Two ceiling lights in the cab.

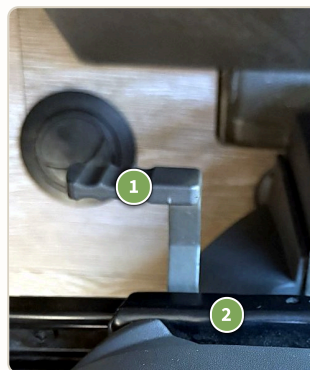

C • SWIVEL CAB SEATS

- 1 Lever under the seat — swivels the seat into the living area.
- 2 Seat slide rail.

Swivel the seats only when parked. Before driving, swivel the seat back to face forward and lock it.

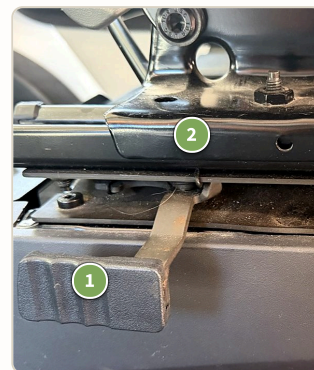

D • DRIVER'S CAB

- 1 Car radio.
- 2 Cab air conditioning.
- 3 Hazard warning lights.
- 4 Gear lever, 6 speeds. Reverse (R): lift the collar under the knob and move the lever left and forward.
- 5 12 V socket in the cab.

• Driving and weight


- A category **B** licence is enough (gross weight 3,500 kg). Rear garage max. 150 kg, roof 80 kg, load low and secured.
- **Payload only about 575 kg** (10 l water + 1 full cylinder) — four people and a full tank easily overload the vehicle. Fill the water tank to about 1/3 only.
- Dimensions 6.78 × 2.16 × 2.70 m — watch for low clearances and petrol-station canopies. **Automatic car washes are forbidden.**
- Fuel: **diesel only** (filler on the left behind the driver's door) — never petrol, and don't confuse it with the blue water filler. Tyre pressure **4.5–5 bar** per the sticker.
- Only **4 people on belted seats** may travel, never on a berth while driving; lock the swivel seats facing forward.
- **Always reverse with a spotter outside** (the camera misses height and branches); tall and long vehicle — crosswind on bridges, longer braking distance, enter sharp driveways slowly and at an angle (rear overhang).
- When parked: **handbrake + gear engaged**, chocks on a slope. Diesel tank 75 l, AdBlue next to the diesel filler.

• Checklist before every departure — walk around the vehicle “like a flight attendant”

1. **Step** retracted — check it by eye (photo A).
2. **Blind** fully open (photo B); windows and roof lights shut.
3. **Cab seats** facing forward and locked (photo C), seatbelts, mirrors.
4. **Gas:** both cylinder valves closed, cylinders strapped down; all three appliance taps closed — lever across (photo on page 2).
5. **Tank strap in the garage** tight, tank not hanging loose (page 2).
6. **Fridge** set to 12 V, door latched; liquids secured.
7. **Awning** fully retracted and latched, crank handle stowed inside.
8. **Cupboards, drawers, table, shower door** secured; heavy items low.
9. **230 V cable** unplugged (post first), stowed; CEE flap closed.
10. **Toilet:** cassette emptied and inserted (max. 3/4 full while driving); service hatch and garage locked.
11. **Tanks:** waste water drained, valve closed; fresh water 1/3 only.
12. **Chocks** collected, aerial/dish lowered; nothing under or behind the vehicle.
13. **Cab:** cooker, heating and lights off, doors locked.

STOP Gas always shut off while driving · front-wheel drive — the Hobby is not a 4x4, no off-road · height 2.70 m, mind low clearances.

Electrics and batteries

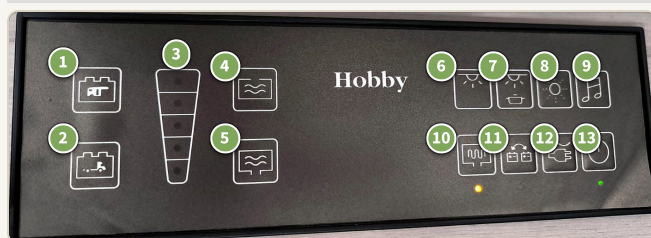

E · PANEL ABOVE THE ENTRANCE DOOR

- | | |
|---|--|
| 1 Leisure battery (habitation area). | 8 Outdoor light by the awning. |
| 2 Vehicle (starter) battery. | 9 Radio. |
| 3 LED column — status of the selected item. | 10 Electric heating booster. |
| 4 Fresh water. | 11 Charging / power source. |
| 5 Waste water. | 12 230 V mains (campsite hookup). |
| 6 Ceiling light. | 13 Main switch — green LED = on; short press = lights, 4 s = everything. |
| 7 Kitchen light. | |
- **Panel above the entrance door:** lights, batteries, tank levels, 230 V hookup status. Main switch: short press = lights off, hold 4 s = switches everything off (pump, toilet, 12 V).
 - **Leisure battery** AGM 95 Ah under the right-hand seat; the disconnect switch must be on.
 - **230 V hookup:** blue CEE socket behind the flap. Switch off the breaker → unwind the cable → plug it into the vehicle, then into the campsite post → switch the breaker back on.
 - **13 A breaker** with RCD (at the distribution board next to the entrance door — we'll show you at handover); if it trips again at once, don't reset it, call us. Mains max. approx. 3,000 W, campsite posts often only 6–10 A (6 A = EL 1 only) — never kettle + heating + air-con together.

12 V socket and solar — charging off-grid



F · SOCKETS IN THE LIVING AREA

- | | |
|---|----------------------------------|
| 1 12 V car socket (cigarette-lighter type); shown with a car charger. | 2 Aerial socket. |
| | 3 230 V socket (campsite mains). |
- Plug an **ordinary car charger** into the 12 V car socket; the TV is powered from it too. The energy comes from the **leisure battery**.
 - While parked, the leisure battery is charged by the **solar panels on the roof**. So the vehicle can charge **phones, a laptop and the TV without a 230 V hookup** at a campsite.
 - **Without a campsite hookup these work:** lights, pump, the 12 V socket (phones, laptop, TV), gas heating and gas fridge. **These do not:** air conditioning, electric heating and the 230 V sockets.
 - How long the energy lasts depends on the sun and on how many devices you connect. The leisure battery level is shown on the panel above the door (circle 1 in photo E).
 - **Do not cover** the roof panels. In shade and in winter they are not enough — plug in to 230 V.
 - **230 V appliances** (e.g. a kettle) do not belong in the 12 V socket.


Gas — taps, cylinders, safety



G · THREE GAS TAPS

- 1 Cooker (pot symbol).
- 2 Fridge (snowflake).
- 3 Heating (radiator symbol).

The taps are **under the cupboard above the kitchen worktop**. Lever **along the pipe = open**, lever **across = closed** (all closed in the photo). **Close all three when driving and refuelling.**

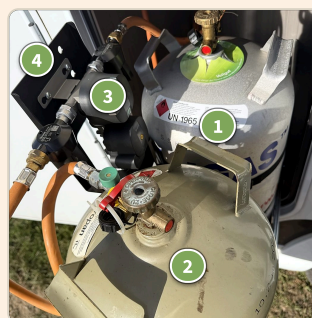

H · GAS LOCKER

- 1 Aluminium cylinder, 11 kg propane.
- 2 Steel cylinder.
- 3 Regulator with hose.
- 4 Metal holders.



I · TANK IN THE REAR GARAGE

- 1 Tank strap. Before driving, check that it is tight and the tank is not hanging loose.

Strap the cylinders down. **Close the cylinder valves while driving.**

- **Gas locker** on the side: two cylinders (aluminium 11 kg propane and steel) in metal holders, regulator with hose.
- **Gas always shut off** (valves and taps) **while driving**, when refuelling, in tunnels, on the ferry, in garages.
- **Never heat with the cooker or oven** — it produces carbon monoxide (CO), which has no smell and can cause unconsciousness and death. Only the Truma Combi is for heating.
- Smell gas or the **gas/CO detector** sounds (by the entrance door)? Close the valves, no flames, no switches, ventilate, leave the vehicle, call us.
- The **fire extinguisher** is by the entrance door; after an alarm **do not go back in**. Never leave the **cooker unattended**, even asleep; keep vents and flue clear, never heat in a garage.
- **Changing a cylinder:** valve off → unscrew the hose (left-hand thread, by hand) → replace → screw back on → open → check the joint with leak-detection spray, never with a flame.

Heating and hot water — Truma Combi 6



J · TRUMA CP PLUS

- 1 Display — temperature, water, error "E".
- 2 Dial: short press = switch on; turn = select, press = confirm, 4 s = switch off.
- 3 Back.

The gas for the heating is opened by the tap **with the heating symbol** (photo G above).

- **Room temperature** 5–30 °C (OFF = water heating only). **Hot water** OFF / 40 °C / 60 °C / BOOST (10 l boiler, heats in about 25 min).
- **FrostControl** (valve in the garage by the left-hand door) automatically drains the boiler below 3 °C; it can be closed again above 7 °C. If frost threatens and you're not heating, drain the boiler manually.
- **Combi 6 E power source:** GAS / EL 1 (900 W) / EL 2 (1,800 W) / MIX. Error "E"+number: restart with the dial; if it recurs, call us.

• Fridge — Dometic, approx. 130 l



K • CONTROLS ABOVE THE FRIDGE DOOR

- 1 Left rotary knob — power source: off / 230 V / 12 V / gas.
 - 2 Flame indicator — green = burning.
 - 3 Right rotary knob — thermostat.
 - 4 Piezo igniter (next to the thermostat).
- **Dometic fridge** (absorption type). Choose the source with the left knob: **12 V only while driving, 230 V at a campsite, gas when parked.**
 - **Never on gas** when refuelling or in a garage. The gas is shut off while driving (fridge tap with the snowflake) — switch the fridge to 12 V.
 - **The vehicle must stand level** (max. 3°) or the fridge won't cool — use chocks. Don't cover the side vents; keep it in the shade.
 - Close the **door** until it clicks — always locked while driving. Pre-cool 4–6 h before loading.

• Air conditioning — Dometic (230 V only)

- **The air conditioning runs on 230 V only** — at a campsite with a mains hookup. Never run it together with the kettle and heating (see Electrics).



L • REMOTE CONTROL

- 1 Display.
- 2 On / off.
- 3 Temperature – / +.
- 4 Fan (propeller symbol).
- 5 Mode (MODE).
- 6 Light in the unit (bulb); hold to dim.
- 7 Timer (clock symbol) — sets the switch-on and switch-off time.



M • CEILING UNIT

- 8 Air outlet and filter grille.
- 9 Strip on the edge: **on/off button** (long press = automatic), light switch and **status light**: orange = stand-by, green = running, red = no 230 V.



Close-up of the strip (9).

- Use the remote to set **temperature, mode, fan and timer**; moon = sleep mode, **SET** sends the setting.
- The ceiling grille covers the outlet and the **filter**; the **filter flips open**.

• Water

- **Fresh water 100 l** under the bench seat; filler on the left below the first window (blue cap), unlock with the key, fill with drinking water only.
- Before the first fill, close **FrostControl** (see Heating), otherwise the water drains out under the vehicle.
- The **pump** starts when you open a tap; run the hot side until it flows bubble-free, then the cold side. Tank levels: panel above the door.
- **Before driving, reduce the tank level** with the wheel valve on the tank under the bench seat — we'll show you at handover: $\frac{3}{4}$ turn left = travel level 10 l, all the way = empties completely.
- **Waste water 96 l**, drain under the vehicle on the left behind the driver; the gate valve must always be closed while driving. Drain only at campsite disposal points.

• Thetford toilet — cassette approx. 17.5 l

- **Chemical fluid** (Aqua Kem Blue) and **fast-dissolving paper** (Aqua Soft) are provided — never use any other paper or wipes.
- Open the **gate valve** with the lever and always close it again after use; flushing only works with the main switch on. **Red indicator** = cassette full, empty it straight away.
- **Removal** through the outside service hatch (only with the gate valve closed); empty only at a chemical-toilet disposal point and rinse with about 5 l of water.
- **New charge** through the cassette's own filler, never into the bowl: 1 tablet or 60 ml + 2–3 l water. Never dispose of the contents or the chemicals in nature.

▲ Awning — Thule Omnistor

- Turn the crank **clockwise** to extend it about 1 m, fold the legs down to the ground, only then extend it further.
- **Anchoring is mandatory** — use the straps and ground pegs; never extend the awning in wind without them.
- **Close it in wind above 25 km/h**, before a storm or rain, and always overnight and before driving — never leave it unattended.
- Close it **with two people**; damage caused by weather or by not closing it properly is charged to the renter.

• Return

- **Toilet cassette emptied and rinsed, waste water tank drained** — otherwise a fee applies per the price list.
- **Full diesel tank**, gas shut off, both cylinders in the locker.
- Interior cleaned, fridge empty and left ajar; awning dry and retracted.
- Chocks, cable, hoses, keys and documents complete; **photos of the vehicle** at handover and return.
- At campsites: **quiet hours 22:00–7:00**, park only where allowed. At the service point: waste water first, then the toilet, fresh water last — never mix up the hoses.