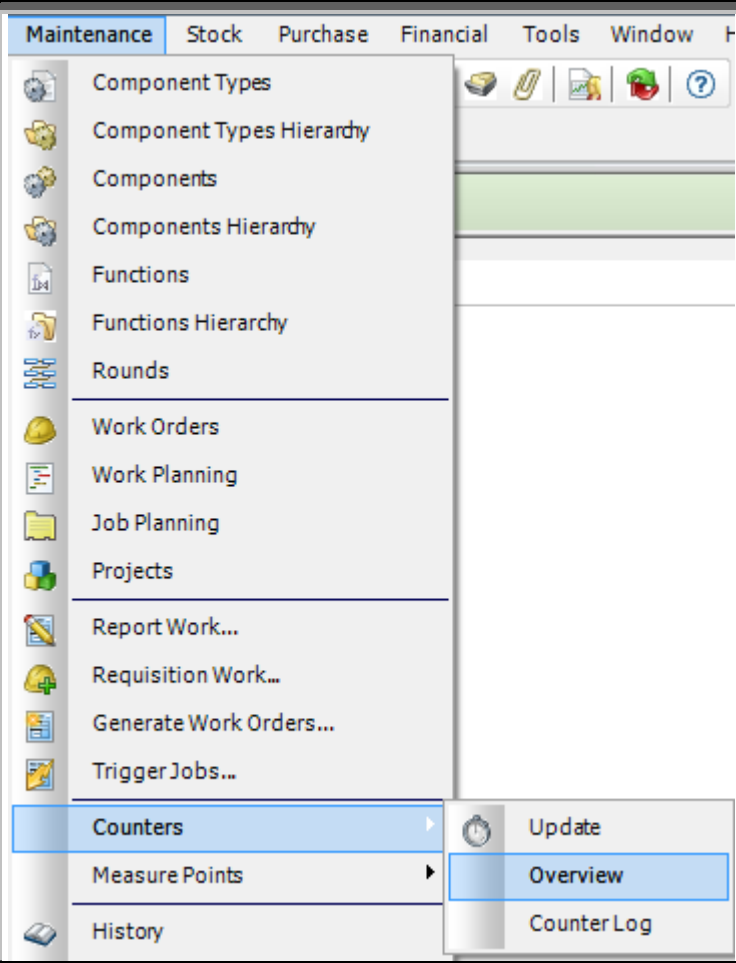
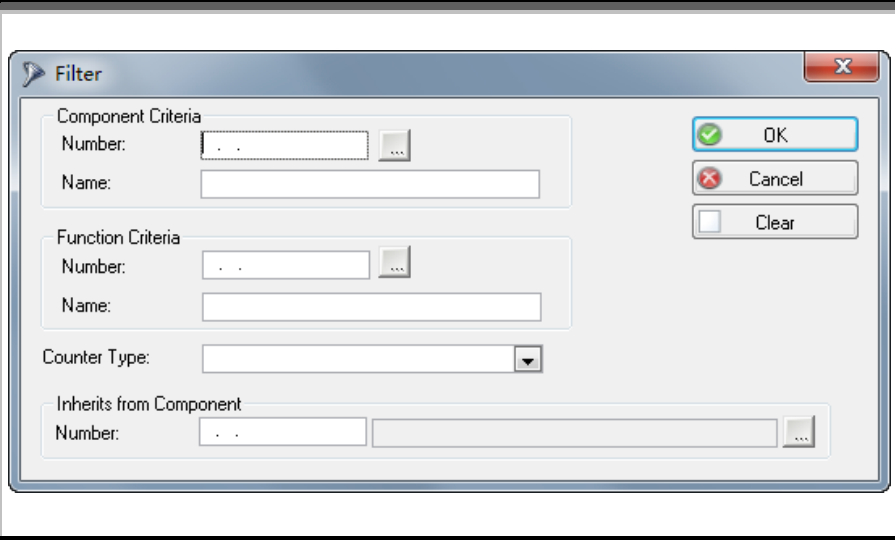


第 3 章 查看和更新设备计数器

3.1 查看计数器

图解	说明
 The screenshot shows the 'Maintenance' menu in a software application. The 'Counters' option is selected, and a sub-menu is displayed with the following options: 'Update', 'Overview' (highlighted), and 'Counter Log'. The 'Overview' option is the target for the first step in the instructions.	1. 要查看计数器(运行小时数)读数，请打开 Counter Overview 窗口： 选择菜单命令 “Maintenance”->☐ “Counters”-> “Overview”
 The screenshot shows the 'Filter' dialog box. It contains three sections for search criteria: 'Component Criteria', 'Function Criteria', and 'Inherits from Component'. Each section has a 'Number' field with a search icon and a 'Name' field. The 'Counter Type' is selected from a dropdown menu. The 'Inherits from Component' section has a 'Number' field. The dialog also has 'OK', 'Cancel', and 'Clear' buttons.	2. 系统弹出计数器查找窗口。 查找窗提供了 3 种查找条件： -Component Criteria (按部件查找) -Function Criteria (按功能位置查找) -Inherits from component (所继承部件查找)

Counter Overview										
Component No.	Component Name	Function No.	Function	Function Total	Counter Type	Date Read	Total Value	Average	Start Date	Start Value
302.001.001	Crown Block	302.001.001	Crown Block		Hour	2016/9/18	400.00	22.22	2016/9/1	0
303.001.001	Travelling Block	303.001.001	Travelling Block		Hour		0			0
313.002.001	Rotary Table	313.002.001	Rotary Table		Hour		0			0
312.001.001	Drawworks	312.001.001	Drawworks		Hour		0			0
326.006.001	Mud Cleaner	326.006.001	Mud Cleaner		Hour		0			0
326.001.004	Shale Shaker	326.001.004	Shale Shaker No 4		Hour		0			0
326.001.003	Shale Shaker	326.001.003	Shale Shaker No 3		Hour		0			0
326.001.002	Shale Shaker	326.001.002	Shale Shaker No 2		Hour		0			0
326.001.001	Shale Shaker	326.001.001	Shale Shaker No 1		Hour		0			0
325.001.003	Mud Pump	325.001.003	Mud Pump No 3		Hour		0			0
325.001.002	Mud Pump	325.001.002	Mud Pump No 2		Hour		0			0
325.001.001	Mud Pump	325.001.001	Mud Pump No 1		Hour		0			0
731.001.002	Screw Air Compressor	731.001.002	Main Screw Air Compressor		Hour		0			0
731.001.001	Screw Air Compressor	731.001.001	Main Screw Air Compressor		Hour		0			0
655.000.001	Diesel Generator Set	655.000.001	Diesel Generator Set No 1		Hour		0			0
654.000.001	Diesel Generator Set	654.000.001	Diesel Generator Set No 2		Hour		0			0
653.000.001	Diesel Generator Set	653.000.001	Diesel Generator Set No 3		Hour		0			0
652.000.001	Diesel Generator Set	652.000.001	Diesel Generator Set No 4		Hour		0			0
651.000.001	Diesel Generator Set	651.000.001	Diesel Generator Set No 5		Hour		0			0
312.062.001	Drawworks Disc Brake Hydraulic	312.062.001	Drawworks Disc Brake Hydraulic		Hour		0			0
312.011.001	Drawworks Disc Brake System	312.011.001	Drawworks Disc Brake System		Hour		0			0
313.001.001	Top Drive	313.001.001	Top Drive		Hour		0			0
666.001.002	Diesel Generator Set	666.001.002	Camp Generator Set No 2		Hour		0			0
666.001.001	Diesel Generator Set	666.001.001	Camp Generator Set No 1		Hour		0			0
665.001.001	Diesel Generator Set	665.001.001	Emergency Generator Set		Hour		0			0
454.001.021	Crane	454.001.021	Crane		Hour		0			0
454.001.031	Loading Wagon	454.001.031	Loading Wagon		Hour		0			0
454.001.041	Cherry Picker	454.001.041	Cherry Picker		Hour		0			0



3. Counter Overview(计数器清单):

本窗口只显示所选计数器的当前值，这里的字段都不能更新。

Average(平均值): 总的读数除以天数得出平均值(如果已输入了上次的归零日期，该平均值是清零前的值和归零后的累计值的总和除以总天数，详见第 3 章)

计数器类型：按运转小时计

3.2 更新计数器

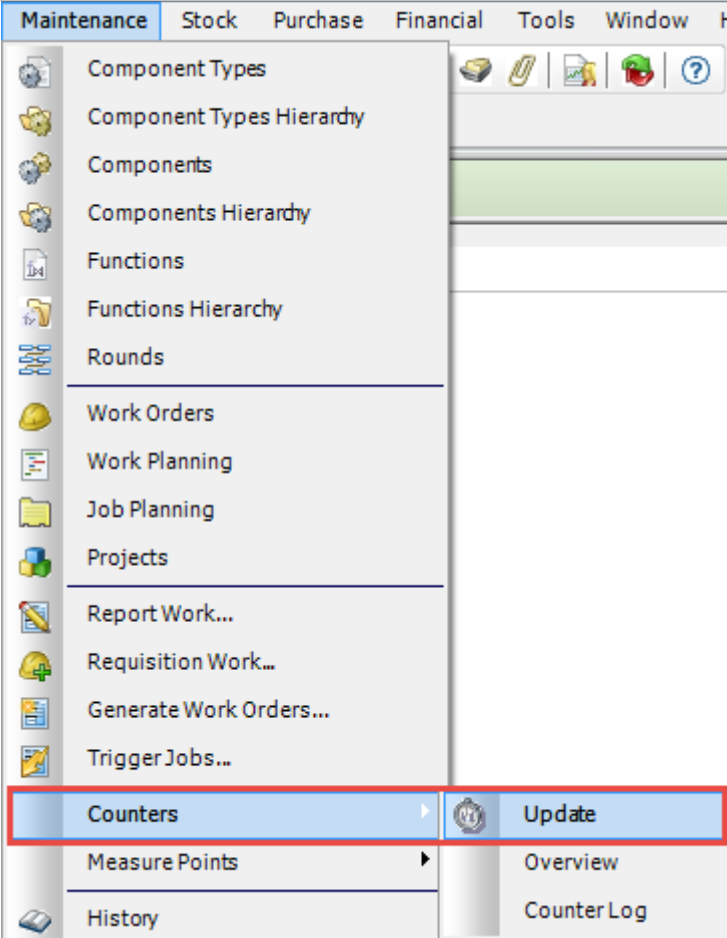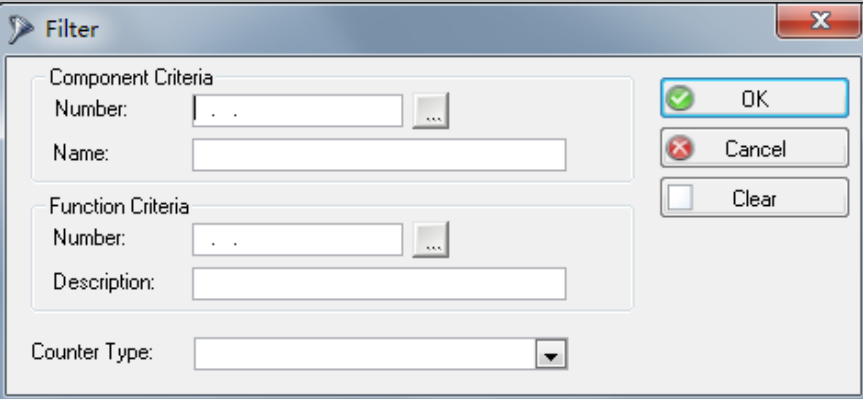图解	说明
	1. 更新计数器读数: 选择菜单命令 “Maintenance”-> ☐ “Counters” -> “Update”
	2. 弹出查找窗口，用户可按功能位置来查找部件的计数器。

Update Component Counters

Component No.	Component Name	Function No.	Function	Counter Type	Current Value	Date Read
302.001.001	Crown Block	302.001.001	Crown Block	Hour	400.00	
303.001.001	Travelling Block	303.001.001	Travelling Block	Hour	0.00	
313.002.001	Rotary Table	313.002.001	Rotary Table	Hour	0.00	
312.001.001	Drawworks	312.001.001	Drawworks	Hour	0.00	
326.006.001	Mud Cleaner	326.006.001	Mud Cleaner	Hour	0.00	
326.001.004	Shale Shaker	326.001.004	Shale Shaker No 4	Hour	300.00	016/9/18
326.001.003	Shale Shaker	326.001.003	Shale Shaker No 3	Hour	0.00	
326.001.002	Shale Shaker	326.001.002	Shale Shaker No 2	Hour	0.00	
326.001.001	Shale Shaker	326.001.001	Shale Shaker No 1	Hour	0.00	
325.001.003	Mud Pump	325.001.003	Mud Pump No 3	Hour	0.00	
325.001.002	Mud Pump	325.001.002	Mud Pump No 2	Hour	0.00	
325.001.001	Mud Pump	325.001.001	Mud Pump No 1	Hour	0.00	
731.001.002	Screw Air Compressor	731.001.002	Main Screw Air Compressor N-Hour		0.00	
731.001.001	Screw Air Compressor	731.001.001	Main Screw Air Compressor N-Hour		0.00	
655.000.001	Diesel Generator Set	655.000.001	Diesel Generator Set No 5	Hour	0.00	
654.000.001	Diesel Generator Set	654.000.001	Diesel Generator Set No 4	Hour	0.00	
653.000.001	Diesel Generator Set	653.000.001	Diesel Generator Set No 3	Hour	0.00	
652.000.001	Diesel Generator Set	652.000.001	Diesel Generator Set No 2	Hour	0.00	
651.000.001	Diesel Generator Set	651.000.001	Diesel Generator Set No 1	Hour	0.00	
312.062.001	Drawworks Disc Brake Hydrat	312.062.001	Drawworks Disc Brake Hydrat	Hour	0.00	
312.011.001	Drawworks Disc Brake System	312.011.001	Drawworks Disc Brake System	Hour	0.00	
313.001.001	Top Drive	313.001.001	Top Drive	Hour	0.00	
666.001.002	Diesel Generator Set	666.001.002	Camp Generator Set No 2	Hour	0.00	
666.001.001	Diesel Generator Set	666.001.001	Camp Generator Set No 1	Hour	0.00	
665.001.001	Diesel Generator Set	665.001.001	Emergency Generator Set	Hour	0.00	
454.001.021	Crane	454.001.021	Crane	Hour	0.00	
454.001.031	Loading Wagon	454.001.031	Loading Wagon	Hour	0.00	
454.001.041	Cherry Picker	454.001.041	Cherry Picker	Hour	0.00	

3. 计数器的更新:

Current Value(当前读数):
最新的读数需要船员定期手动输入，这样才能保持数据更新

Date Read(抄表日): 上一次更新当前读数的日期

为了预防计数器值填写错误，建议在每次更新前、将现有的计数器打印一份。当填写好本次更新值后，核对刚打印出来的上次计数器值、最后保存。

注意：此处的 Current Value 为总计值，AMOS 中任何只要与 HOUR 工单相关的地方都为总值。