23.Stepper_Motor

Introduction

Stepper motors, due to their unique design, can be controlled to a high degree of accuracy without any feedback mechanisms. The shaft of a stepper, mounted with a series of magnets, is controlled by a series of electromagnetic coils that are charged positively and negatively in a specific sequence, precisely moving it forward or backward in small "steps".

Hardware Required

- √ 1 * Raspberry Pi
- √ 1 * T-Extension Board
- √ 1 * Power Module (with 9VPower Adapter or 9V battery and buckle)
- √ 1 * Stepper Motor
- ✓ 1 * ULN2003
- √ 1 * 40-pin Cable
- ✓ Several Jumper Wires
- √ 1 * Breadboard

Principle

28BYJ-48 Stepper Motor

The 28BYJ-48 is a small, 5 volt geared stepping motors. These stepping motors are apparently widely used to control things like automated blinds, A/C units and are mass produced. stepper01 Due to the gear reduction ratio of *approximately* 64:1 it offers decent torque for its size at speeds of about 15 rotations per



minute (RPM). With some software "trickery" to accelerate gradually and a higher voltage power source (I tested them with 12 volts DC) I was able to get about 25+ RPM. These little steppers can be purchased together with a small breakout board for the Arduino compatible ULN2003 stepper motor driver. Quite a bargain, compared to the price of a

geared DC motor, a DC motor controller and a wheel encoder! The low cost and small size makes the 28BYJ-48 an ideal option for small robotic applications, and an excellent introduction to stepper motor control with Arduino. Here are the detailed specs of the 28BYJ-48 stepper motor.

Stepper motor 28BYJ-48 Parameters


- ✓ Model:28BYJ-48
- ✓ Rated voltage:5VDC
- ✓ Number of Phase:4
- ✓ Speed Variation Ratio:1/64
- ✓ Stride Angle:5.625°/64
- ✓ Frequency:100Hz
- ✓ DC resistance: $50\Omega\pm7\%(25^{\circ}C)$
- ✓ Idle In-traction Frequency:>600Hz
- ✓ Idle Out-traction Frequency:>1000Hz
- ✓ In-traction Torque >34.3mN.m(120Hz)
- ✓ Self-positioning Torque >34.3mN.m
- ✓ Friction torque:600-1200 gf.cm
- ✓ Pull in torque:300 gf.cm
- ✓ Insulated resistance >10M Ω (500V)
- ✓ Insulated electricity power:600VAC/1mA/1s
- ✓ Insulation grade:A
- ✓ Rise in Temperature <40K(120Hz)
- ✓ Noise<35dB(120Hz,No load,10cm)</p>

ULN2003 Driver Board

The ULN2003 stepper motor driver board allows you to easily control the 28BYJ-48 stepper motor from a microcontroller, like the Arduino Uno. One side of the board side has a 5 wire socket where the cable from the



stepper motor hooks up and 4 LEDs to indicate which coil is currently powered. The motor cable only goes in one way, which always helps. UNL2003 board On the side you have a motor on / off jumper (keep it on to enable power to the stepper). The two pins below the 4 resistors, is where you provide power to the stepper. Note that powering the stepper from the 5 V rail of the Arduino is not recommended. A separate 5-12 V 1 Amp power supply or battery pack should be used, as the motor may drain more current than the microcontroller can handle and could potentially damage it. In the middle of the board we have the ULN2003 chip. At the bottom are the 4 control inputs that should be connected to four Arduino digital pins.

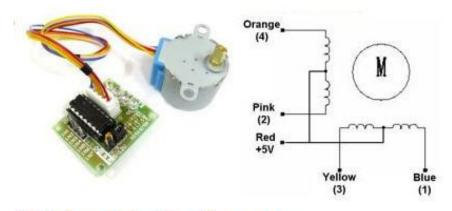


Half-Step Switching Sequence

| Lead Wire Color | > CW Direction (1-2 Phase) | | | | | | | |
|--------------------|----------------------------|-----|----|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| 4 Orange | - | - | | | | | | - |
| 3 Yellow | | - | | | | | | |
| 2 Pink | | 100 | | | | | | |
| 1 Blue | | | Ÿ. | | | - | - | |


Schematic Diagram

| T-Board Name | physical | wiringPi | всм |
|--------------|----------|----------|-----|
| GPIO18 | Pin 12 | 1 | 18 |
| GPIO23 | Pin 16 | 4 | 23 |
| GPIO24 | Pin 18 | 5 | 24 |
| GPIO25 | Pin 22 | 6 | 25 |

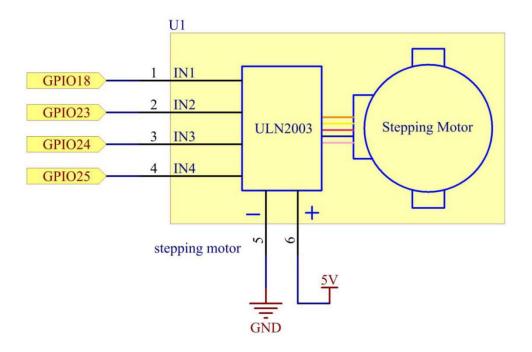

Experimental Procedures

Step 1: Build the circuit.

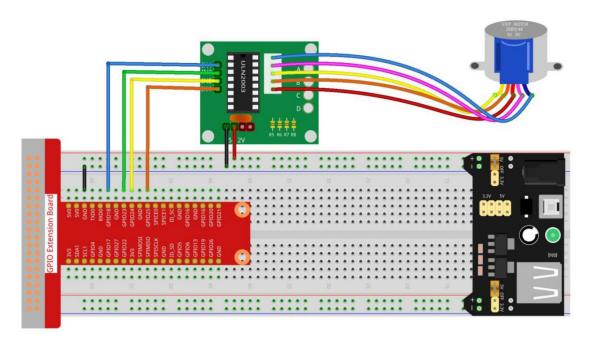

For C Language Users

Step 2: Get into the folder of the code.

cd /home/pi/REXQualis_Raspberry_Pi_Complete_Starter_Kit/C/23.Stepper_Motor

Step 3: Compile the code.

Step 4: Run the executable file.

```
sudo ./Stepper_Motor.out
```

As the code runs, the stepper motor first turns clockwise for a round then stop for a second, after that, it rotates anticlockwise for a round; subsequently, the motor stops for a second. This series of actions will be executed repeatedly..

Code

```
#include <stdio.h>
#include <wiringPi.h>
const int motorPins[]={1,4,5,6}; //pins connected to four phase
const int antiClk[]={0x01,0x02,0x04,0x08};
const int clk[]={0x08,0x04,0x02,0x01};
void moveSteps(int direction, int steps){
    int step;
    int i=0,j=0;
    for(step=0;step<steps;step++){</pre>
         for (j=0;j<4;j++){ //cycle according to power supply order
         for (i=0;i<4;i++){ //assign to each pin, a total of 4 pins
             if(direction == 1)
                                   //clockwise
                  digitalWrite(motorPins[i],antiClk[j] == (1<<i));</pre>
              else //anticlockwise
                  digitalWrite(motorPins[i],clk[j] == (1<<i));</pre>
         }
         delay(3);
    }
    }
void motorStop(){
                     //function used to stop rotating
    int i;
```

```
for(i=0;i<4;i++){
        digitalWrite(motorPins[i],LOW);
    }
int main(void){
    int i;
    if(wiringPiSetup() == -1){ //when initialize wiring failed,print message to screen
        printf("setup wiringPi failed !");
        return 1;
    }
    for(i=0;i<4;i++){
        pinMode(motorPins[i],OUTPUT);
    }
    while(1){
        moveSteps(1,512);
        delay(1000);
        moveSteps(0,512);
        delay(1000);
    }
    return 0;
```

Code Explanation

```
const int antiClk[]={0x01,0x02,0x04,0x08};
const int clk[]={0x08,0x04,0x02,0x01};
```

These two values are used to indicate the rotation of the Stepper Motor, and the values of them are 0001,0010, 0100, and 1000 respectively that correspond to the electrification condition of four-phase motor when it rotates.

```
for (j=0;j<4;j++){ //cycle according to power supply order
    for (i=0;i<4;i++){ //assign to each pin
        digitalWrite(motorPins[i],antiClk[j] == (1<<i));
    }
}</pre>
```

This two-layer cycle means that the stepper motor runs for a complete cycle (four steps of the four-phase stepper motor is one cycle).

This function is used to control the work of the stepper motor, the variable "direction" is used to determine the rotation direction, and the variable "steps" is used to determine the times of the work of stepper motor.

```
moveSteps(1,512);
```

It takes 2048 steps for the output shaft to turn a circle, and 2048/4=512 times for the stepper motor to work.

For Python Language Users

Step 2: Get into the folder of the code.

```
cd /home/pi/REXQualis_Raspberry_Pi_Complete_Starter_Kit/Python
```

Step 3: Run the executable file.

```
sudo python3 23.Stepper_Motor.py
```

As the code runs, the stepper motor first turns clockwise for a round then stop for a second, after that, it rotates anticlockwise for a round; subsequently, the motor stops for a second. This series of actions will be executed repeatedly.

Code

```
import RPi.GPIO as GPIO
import time
motorPins = (12, 16, 18, 22)
                             #pins connected to four phase
antiClk = (0x01,0x02,0x04,0x08)
clk = (0x08,0x04,0x02,0x01)
def setup():
    GPIO.setmode(GPIO.BOARD)
                                        # Numbers GPIOs by physical location
    for pin in motorPins:
        GPIO.setup(pin,GPIO.OUT)
def moveSteps(direction, steps):
    for step in range(steps):
        for j in range(0,4,1): #cycle according to power supply order
            for i in range(0,4,1): #assign to each pin
                if (direction == 1):#clockwise
                     GPIO.output(motorPins[i],((antiClk[j] == 1<<i) and GPIO.HIGH or
                     GPIO.LOW))
                else
                                     #anticlockwise
                     GPIO.output(motorPins[i],((clk[j] == 1<<i) and GPIO.HIGH or
GPIO.LOW))
                time.sleep(0.003)
                                     #the delay can not be less than 3ms
                #function used to stop rotating
```

```
def motorStop():
    for i in range(0,4,1):
        GPIO.output(motorPins[i],GPIO.LOW)
def loop():
    while True
        moveSteps(1,512)
        time.sleep(1)
        moveSteps(0,512)
        time.sleep(1)
def destroy():
                        # Release resource
    GPIO.cleanup()
if __name__ == '__main__': # Program start from here
    setup()
    try.
        loop()
    except KeyboardInterrupt: # When 'Ctrl+C' is pressed, the program destroy()
will be executed.
destroy()
```

Code Explanation

```
antiClk = (0x01,0x02,0x04,0x08)
clk = (0x08,0x04,0x02,0x01)
```

These two values are used to indicate the rotation of the Stepper Motor, and the values of them are 0001,0010, 0100, and 1000 respectively that correspond to the electrification condition of four-phase motor when it rotates.

```
for j in range(0,4,1): #cycle according to power supply order

for i in range(0,4,1): #assign to each pin

GPIO.output(motorPins[i],((antiClk[j] == 1<<i) and GPIO.HIGH or

GPIO.LOW))
```

This two-layer cycle means that the stepper motor runs for a complete cycle (four steps of the four-phase stepper motor is one cycle).

This function is used to control the work of the stepper motor, in which direction is used to determine the rotation direction, and steps are used to determine the times of the work of stepper motor.

```
moveSteps(1,512)
```

It takes 2048 steps for the output shaft to turn a circle, and 2048/4=512 times for the stepper motor to work.

Phenomenon Picture

