


# How to connect 6.4" TFT-LCD connector

There are the connector of two types for 6.4" TFT-LCD.

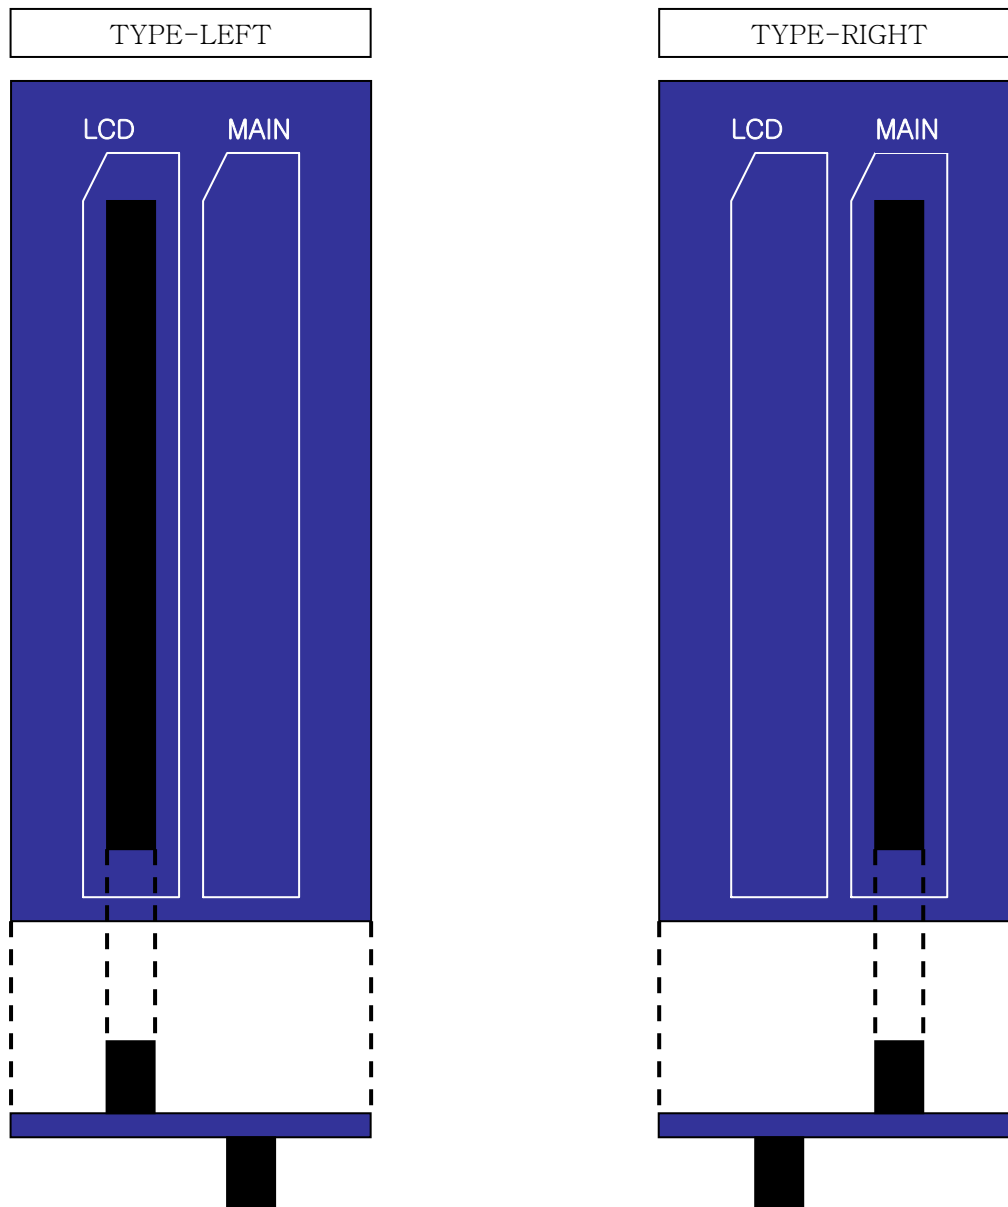


TYPE-LEFT MUST BE connected to the left extension connector of MBA2440.  
TYPE-RIGHT MUST BE connected to the right extension connector of MBA2440

When you make a distinction between two types,  
See carefully the position of string “LCD” and “MAIN” and 50 pin header(black)

**CAUTION!!!**

If the connection of 6.4 TFT-LCD connector is wrong,  
MBA2440 will be damaged a fatal.

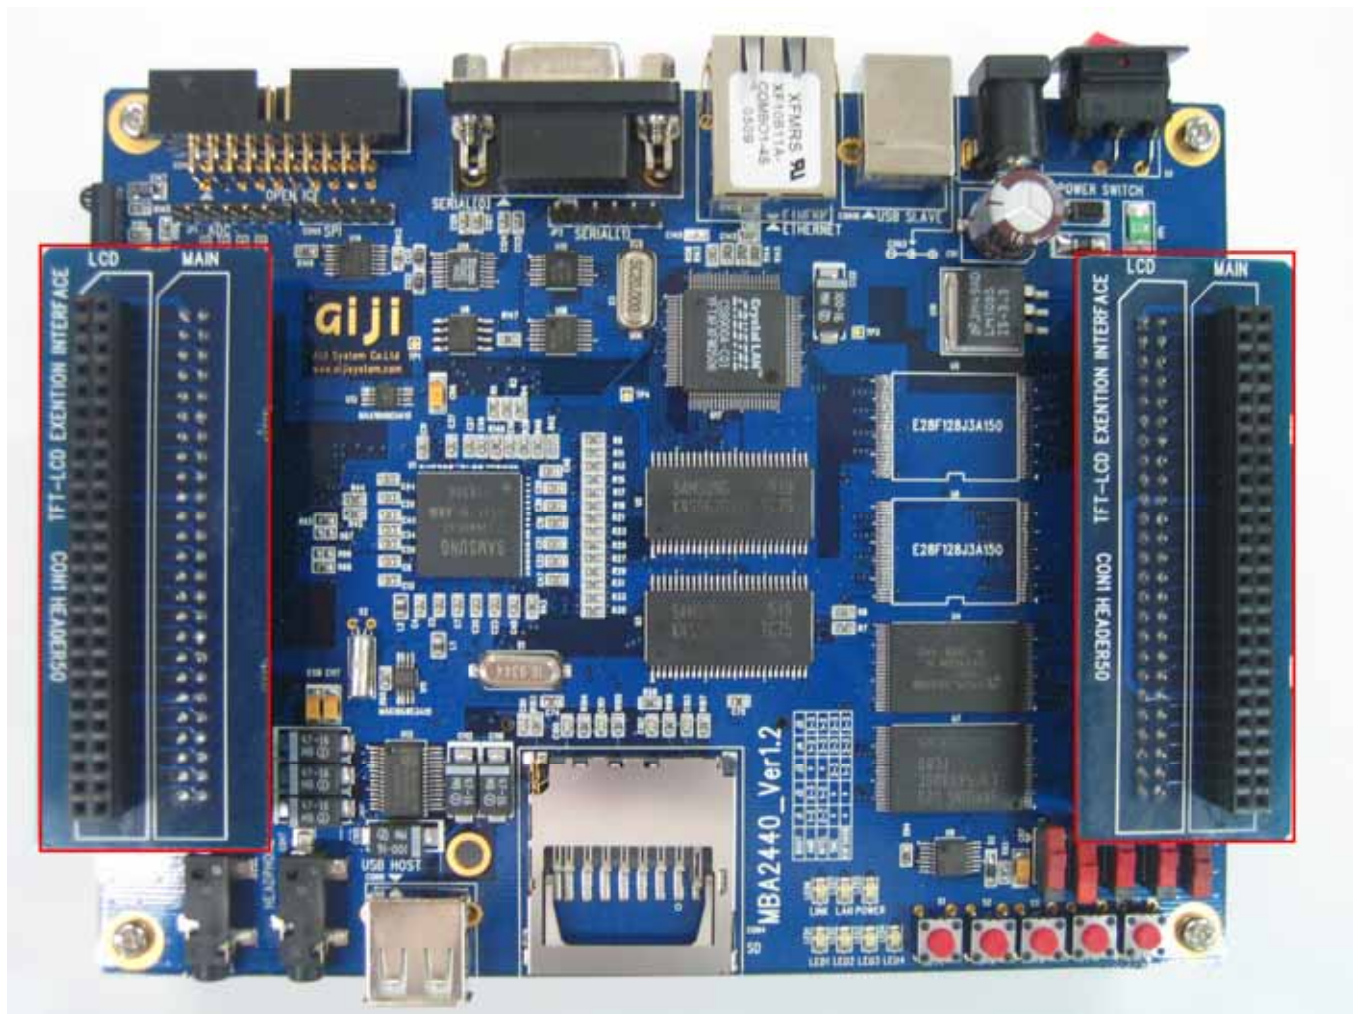

6.4" TFT-LCD connector MUST BE connected to MBA2440 like upper picture.