

Jumper List (EVB111-ISA)
Last Revised – 11-01-2004

Assy 6173 Rev C
Page 1 of 4

The purpose of this jumper list is to ensure the proper operation of the EVB111-ISA Evaluation Board (Assy. 6173, Rev C).

Note: Special consideration must be given when installing all on-board jumpers. Some jumpers may need to be changed when evaluation board is used with other devices and peripherals.

The following table describes the default settings and jumper descriptions for the EVB111-ISA; these defaults are the recommended configurations for evaluation of the EVB111-ISA. These settings may be changed as needed, however, any deviation from the default settings should be approached with care and knowledge of the schematics. An incorrect jumper setting may disable the board.

Note: The dashed line --- shown in the *Settings* column indicates the board's default jumper setting.

Jumper Settings

Jumper/Header	Description	Settings
JP1	ISA Bus Interrupt Select	1 2 Selects IRQ11
		3-----4 Selects IRQ10
		5 6 Selects IRQ9

Test Points

TP	Description	Connection
TP1	Ground Test Point	Ground
TP2	Ground Test Point	Ground
TP3	+5V Test Point	+5V from ISA connector on board
TP4	+3.3V Test Point	+3.3V from on-board regulator
TP5	nLDEV (IOCS16~) Test Point	nLDEV of LAN91C111 (pin 45)

Test Headers

	Description	Connection
J2	LNK# Signal Header	1 Ground 2 LNK#
JP3	Unused Control Signals	1 +3.3V 2 +3.3V 3 nCNTRL 4 LBK 5 DATACS~ 6 CYCLE~ 7 W/R~ 8 ADS~ 9 ARDY 10 VLBUS~ 11 LCLK 12 SRDY~ 13 RDYRTN~ 14 X25OUT 15 CSOUT~ 16 BE3~ 17 BE2~ 18 No Connect 19 Ground 20 Ground

Switch Settings

Switch	Description	Default
S1-1	Enable on-board EEPROM	Open (signal high)
S1-2	ISO2	Closed (signal low)
S1-3	ISO1	Closed (signal low)
S1-4	ISO0	Closed (signal low)


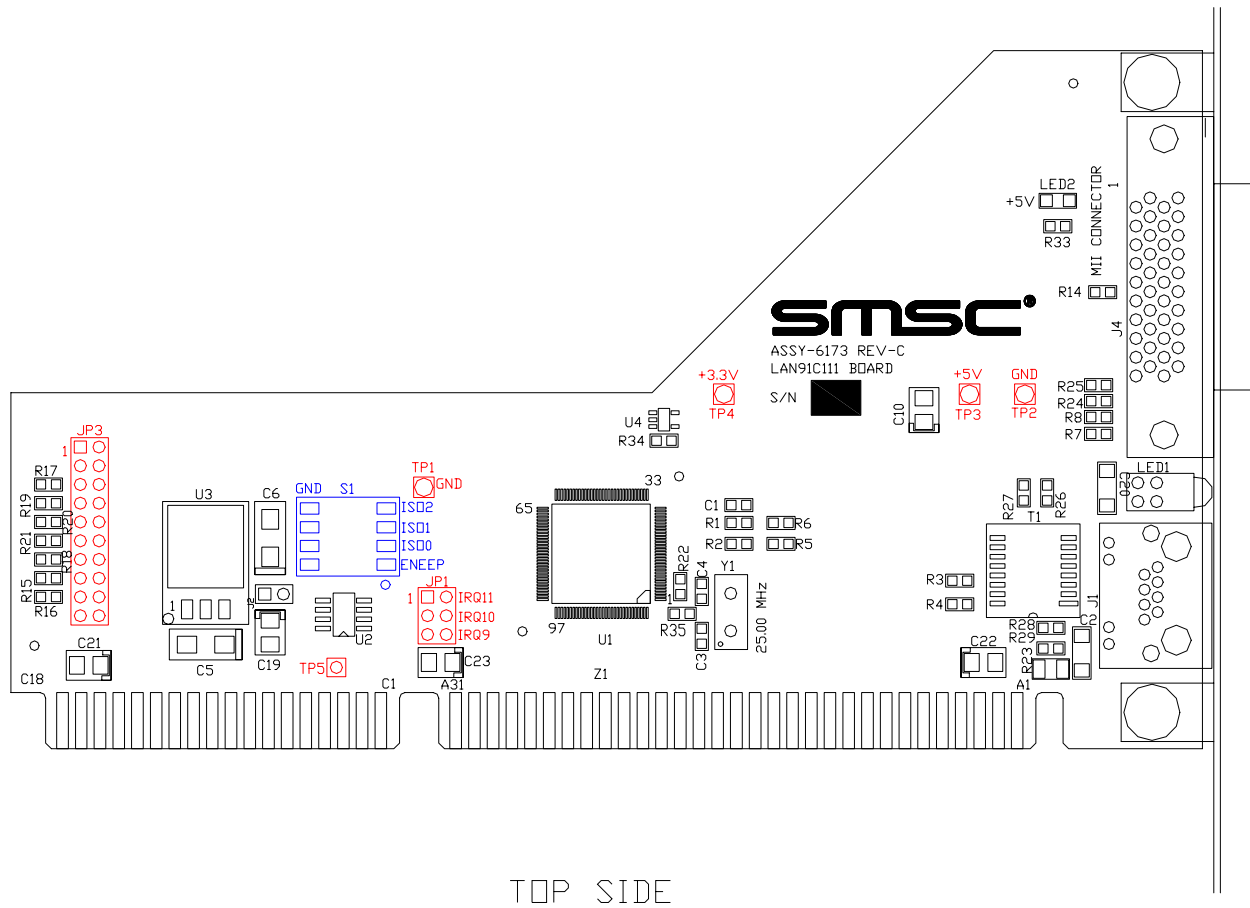


Figure Showing Jumper, Test Point, Test Header & Switch Location

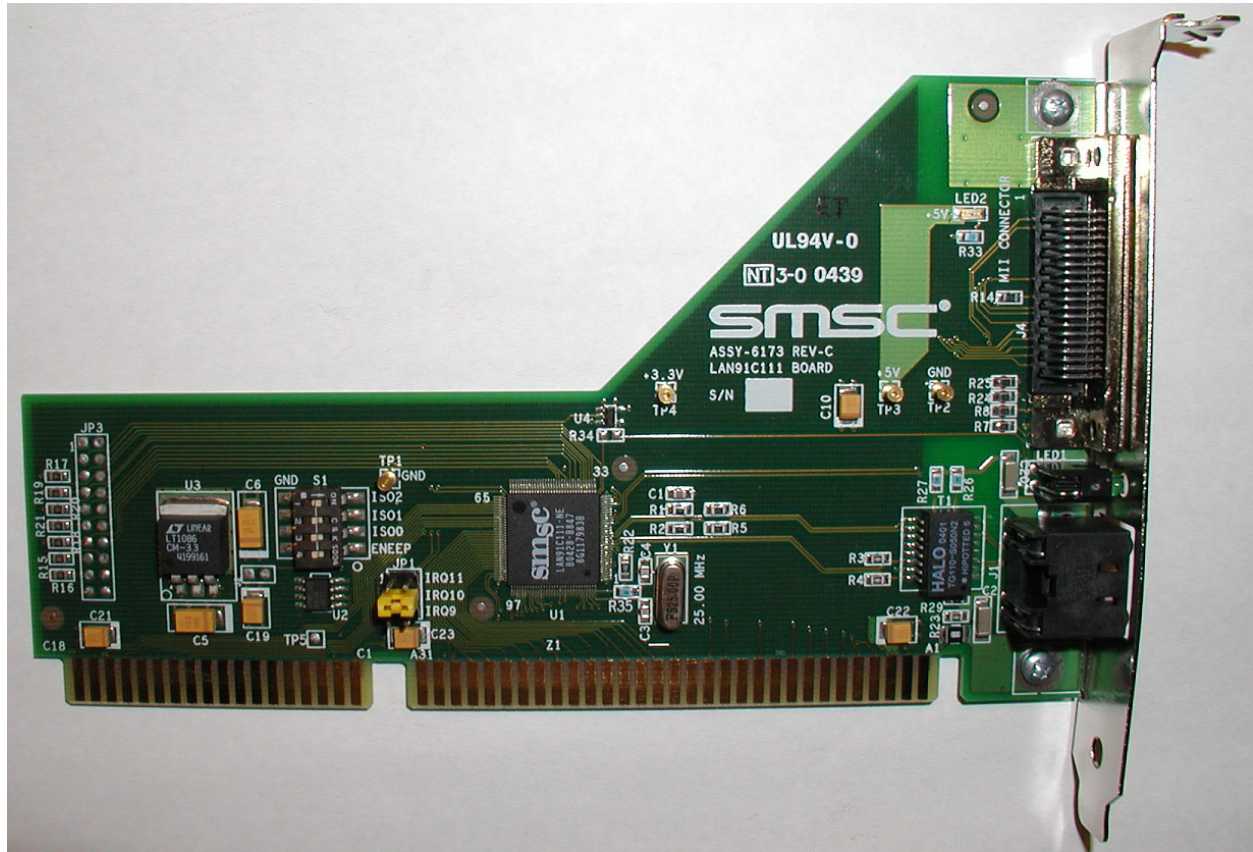

**SMSC Assembly No. 6173 Revision C
LAN91C111 Evaluation Board
EVB111-ISA**