


Jumpers on a Harlequin 4A board

All RAM Mode:

J7 select how to config contend ram, default is as in +2A/+3.

If you want to select as is in 128/+2 you have to cut short wire between 1-2, 3-4 and make short wire between 1-3 and 2-4

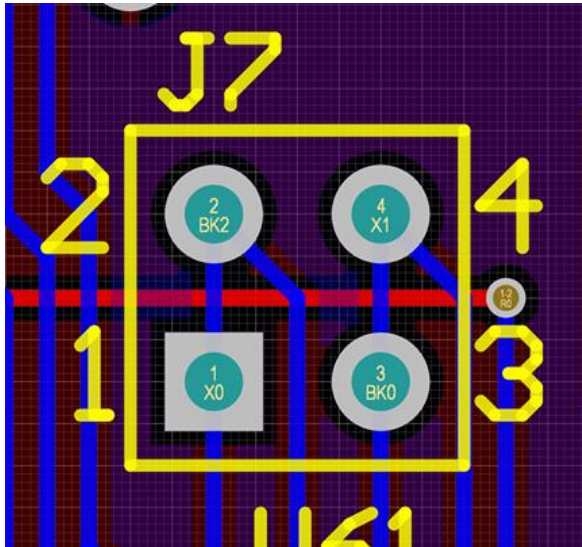

Joystick port:

J10 connect pin 5 of DB9 to 5V so you can use wireless joystick.

No jumper to disable Kempston Joystick, if you want to disable just remove 74HC540

J11 connect pin 7 of 0V so you can select another of mode of some game pad

J18 Select what signal to connect to PIN 4 of miniDIN 9,

1-2 = Select composite video,

2-3 = Select Sync. Normally jump 2-3 for RGB or SCART monitor.

