


6.9 Visual Programming System (VPS)

VPS lets you quickly build programs from program templates. To access VPS, press **[EDIT]** and then select the **VPS** tab.

F6.14: VPS Starting Screen. [1] Recently Used Templates, [2] Template Directory Window, [3] **[ENTER]** to Load a Template, [4] **[F4]** to Switch Between Recently Used and Template Directory.

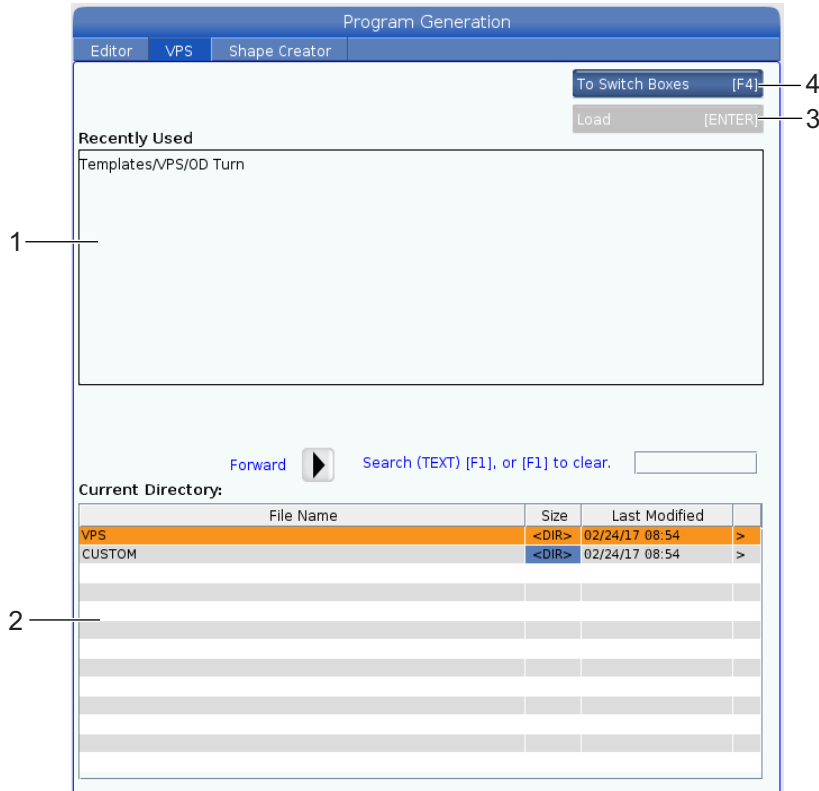

In the template directory window, you can choose from the **VPS** or **CUSTOM** directories. Highlight a directory name and press the **[RIGHT]** cursor arrow to see the directory's contents.

The VPS starting screen also lets you choose templates you have recently used. Press **[F4]** to change to the Recently Used window and highlight a template from the list. Press **[ENTER]** to load the template.

6.9.1 VPS Example

When you use VPS, you choose a template for the function you want to program, and then enter variables to create a program. The default templates include probing and part features. You can also create custom templates. Contact the Applications department at your HFO for help with custom templates.

In this example, we use a VPS template to program the OD **ROUGH PROFILING**. VPS templates all work in the same way: You first fill in values for the template variables, and you then output a program.

- 1. Press **[EDIT]**, and then select the **vps** tab.
- 2. Use the cursor arrow keys to highlight the **vps** menu option. Press the **[RIGHT]** cursor arrow key to select the option.
- 3. Highlight and select the **OD Rough Profiling** option from the next menu.

F6.15: VPS Engraving Program Generation Window Example. [1] Variable Illustration, [2] Variables Table, [3] Variable Description Text, [4] Default value was changed indicator, [5] Template Illustration, [6] Clear **[ORIGIN]**, [7] Generate G-code **[F4]**, [8] Run in MDI **[CYCLE START]**.

Variable	Value	Ranges
WORK_OFFSETS	55.	*
TOOL_NUMBER	2	[1 - 12]
SHAPE		[ENTER] to select file
STOCK_DIAMETER	3.0	[0.1 - 9.0]
TOOL_COMP	40	40 42
DOC	0.05	[Min: 0.0]
X_FINISH_STOCK	0.005	[0.00 - 0.05]
Z_FINISH_STOCK	0.005	[0.00 - 0.05]
MAX_RPM	1800	[1 - 5000]
SURFACE_SPEED_MINUTE	500	[50 - 2000]
FEEDRATE	0.01	[0.001 - 0.277778]

- 4. In the Program Generation window, use the **[UP]** and **[DOWN]** cursor arrow keys to highlight the variable rows.