
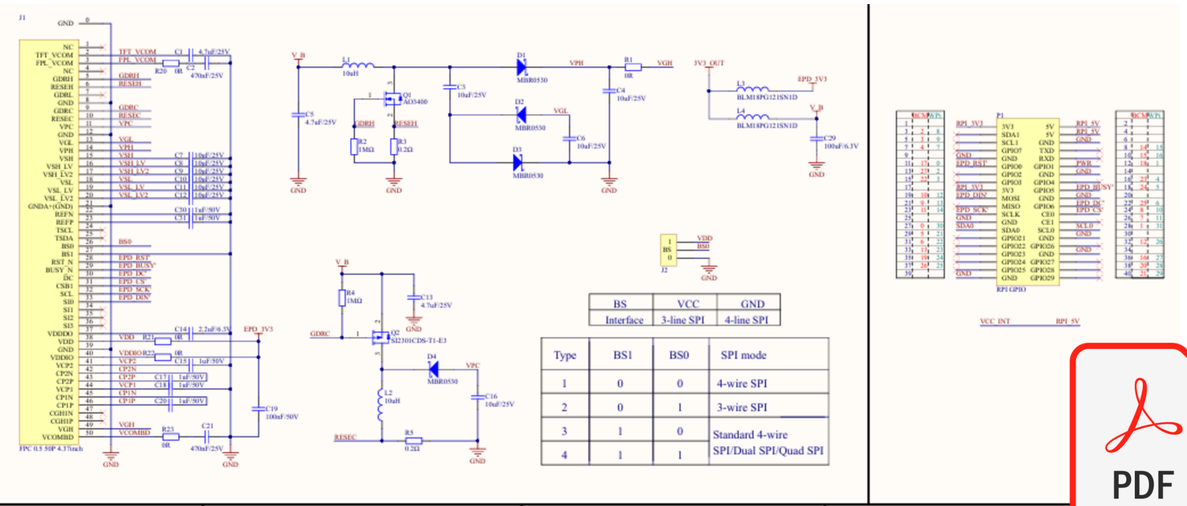


BS	VCC	GND
Interface	3-line SPI	4-line SPI

Type	BS1	BS0	SPI mode
1	0	0	4-wire SPI
2	0	1	3-wire SPI
3	1	0	Standard 4-wire SPI/Dual SPI/Quad SPI
4	1	1	

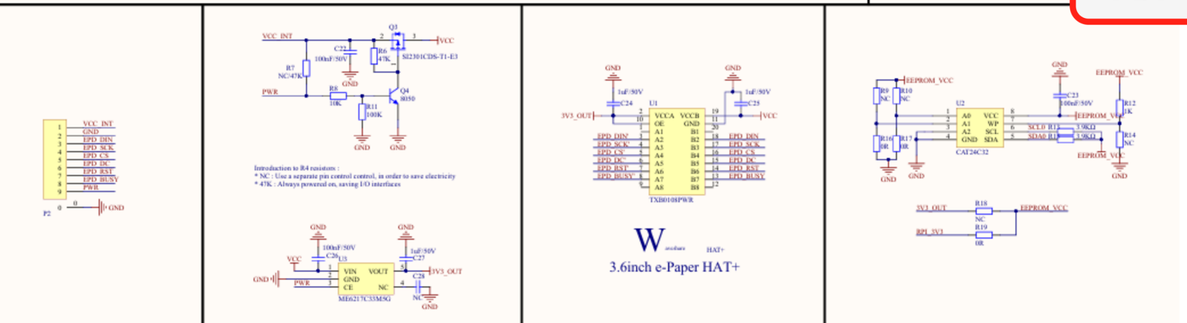

PDF

KiCad