



1 • TURN THEM ON

There is no power button. The case is the switch.

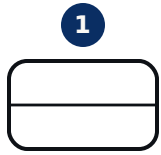

Glasses in, lid shut

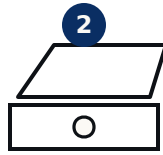

Open the lid — they wake up

3



White — charged and ready



Orange — still charging, or seated wrong

Flashing orange — they are not sitting on the charging pins. Take them out and reseal them.

2 • PAIR THEM, ONCE

Only the first time. After that they connect themselves.



The Even app

1

Open the Even app and sign in.

2

Take the glasses out of the open case.

They are only discoverable while awake.

3

Pick your G2 from the list the app finds.

4

Wait for it to say Connected.

Then open Cue.

3 • CONTROL IT

Use the ring. Your temple does the same things — but reaching up is a tell, and the customer sees it.

NOBODY IN FRONT OF YOU



Press

Ask a question out loud



Press twice

Puts the glasses away



Scroll up

Type size check (for us, not you)



Scroll down

The floor — messages, and replies

WITH A CUSTOMER



Scroll

Move through their cards



Press

Back to the cue. Again to finish



Press twice

Ask a question out loud



Press on an urgent message

Takes it — replies On my way

Their cards, in order:

CUE

SIZES

CART

HISTORY


SHIP

CONTACT

PICKS

4 • WHAT YOU SEE

Only you can see it. It is not a screen the customer can read over your shoulder.

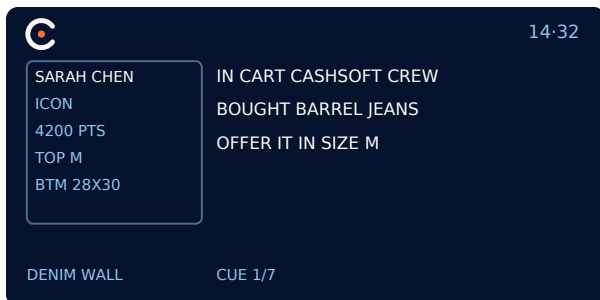

Who they are

Stays put on the left while you scroll.

What to say

Three lines. Never more — you are talking, not reading.

Where you are

CUE 1/7 means card one of seven.

IF SOMETHING IS WRONG

Nothing on the glass

Cue will not open

A tap did something odd

Still wrong

Take them off and put them back on.

Check the Even app says Connected.

You were in Even's own menu, not Cue. Press twice to come back.

Tell your manager. Do not factory reset them.