


## ES02 SBUS connect


### 1. ES02Interface

ES02 has 3 lines, namely GND, 5V, and sbus.

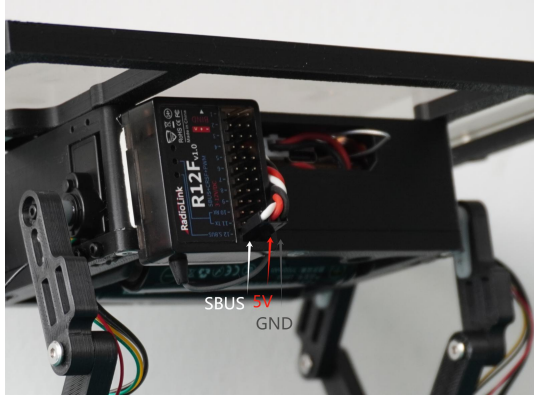

### 2. Receiver Interface

The remote control receiver may have multiple interfaces. It is necessary to confirm the sbus output port by yourself. The following picture shows the wiring ports of the RadioLink receiver.

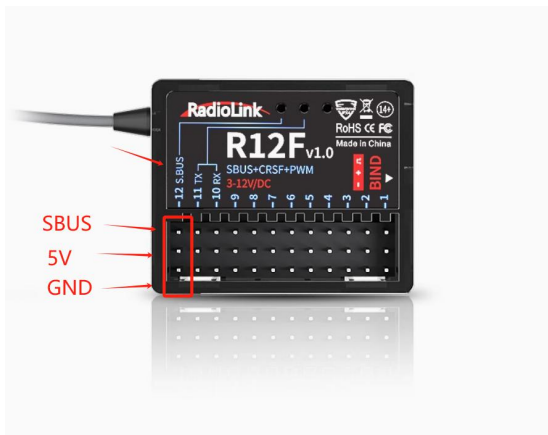

### 3. Remote Controller Channel Function

The channels of the joystick are generally defaulted to ch1-4. Besides, six auxiliary channels are needed to switch on some functions. Each remote control is different, and they should be set according to personal habits.

The corresponding functions of ch6-10 can be referred to as follows:

**CH5 : 3-section switch, 0:stop, 1:start, 2:start and touch tablet enable.**

**CH6 : 2-section switch, 0:posture mode, 1:mark mode.**

**CH7 : 2-section switch, manual or auto roll, 0>manual , 1:auto .**

**CH8 : 3-section switch, 0:default, 1:pitching adjust, 2:ball poise.**

**CH9 : The x-coordinate of the small ball .**

**CH10:The y-coordinate of the small ball.**