Bing feeder-V3（Magnetic） assembly manual

8-2mm&8-4mm

2025-12-08

一．Assembly the feeder

1:The difference between 8-2mm and 8-4mm:

--Sprocket hole distance.

2: Get the kits : www.microsmt.com.cn

3: Watch the installation video: https://youtu.be/MxgC0LLmq8A

4 : If the direction of the motor is incorrect, just swap its two wires.

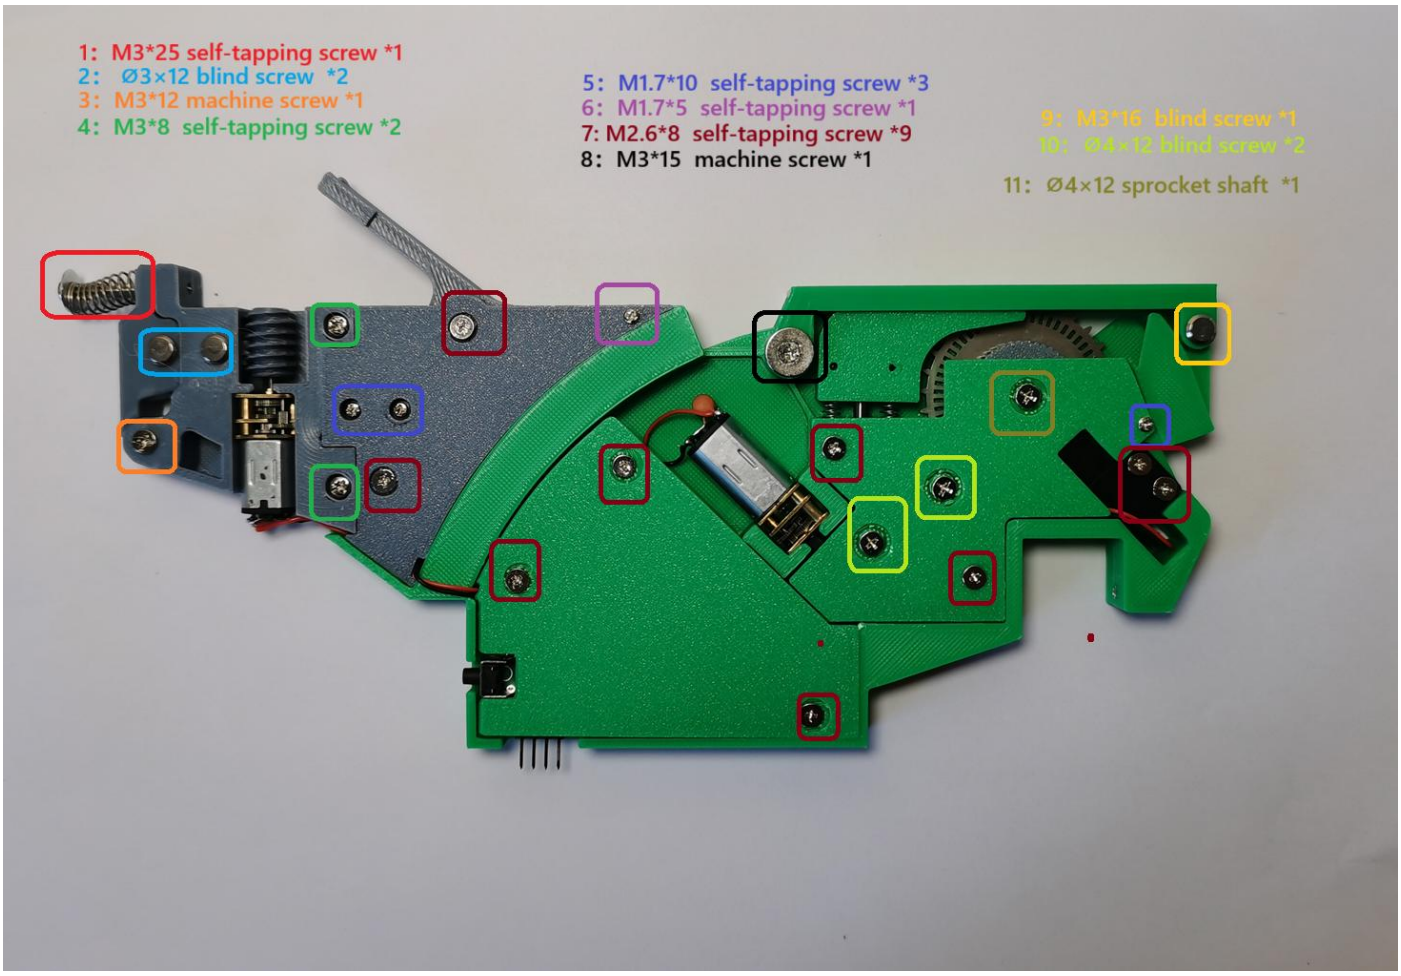
6: Connect the three wires of the photoelectric switch according to the pin identification of the control board and photoelectric switch, which are + - out .

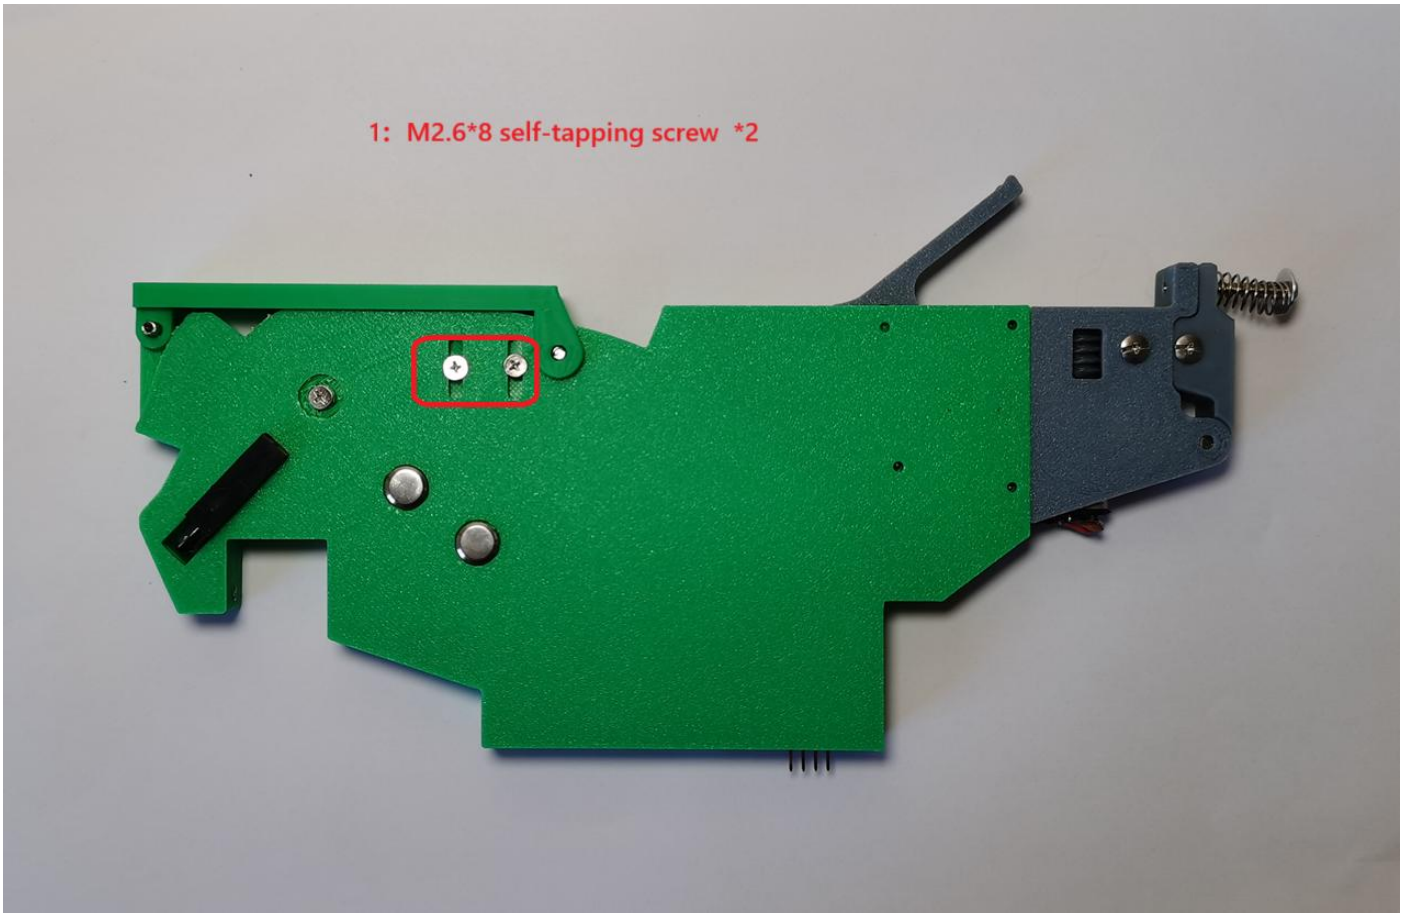
7: The L pin on the photoelectric switch does not need to be connected.

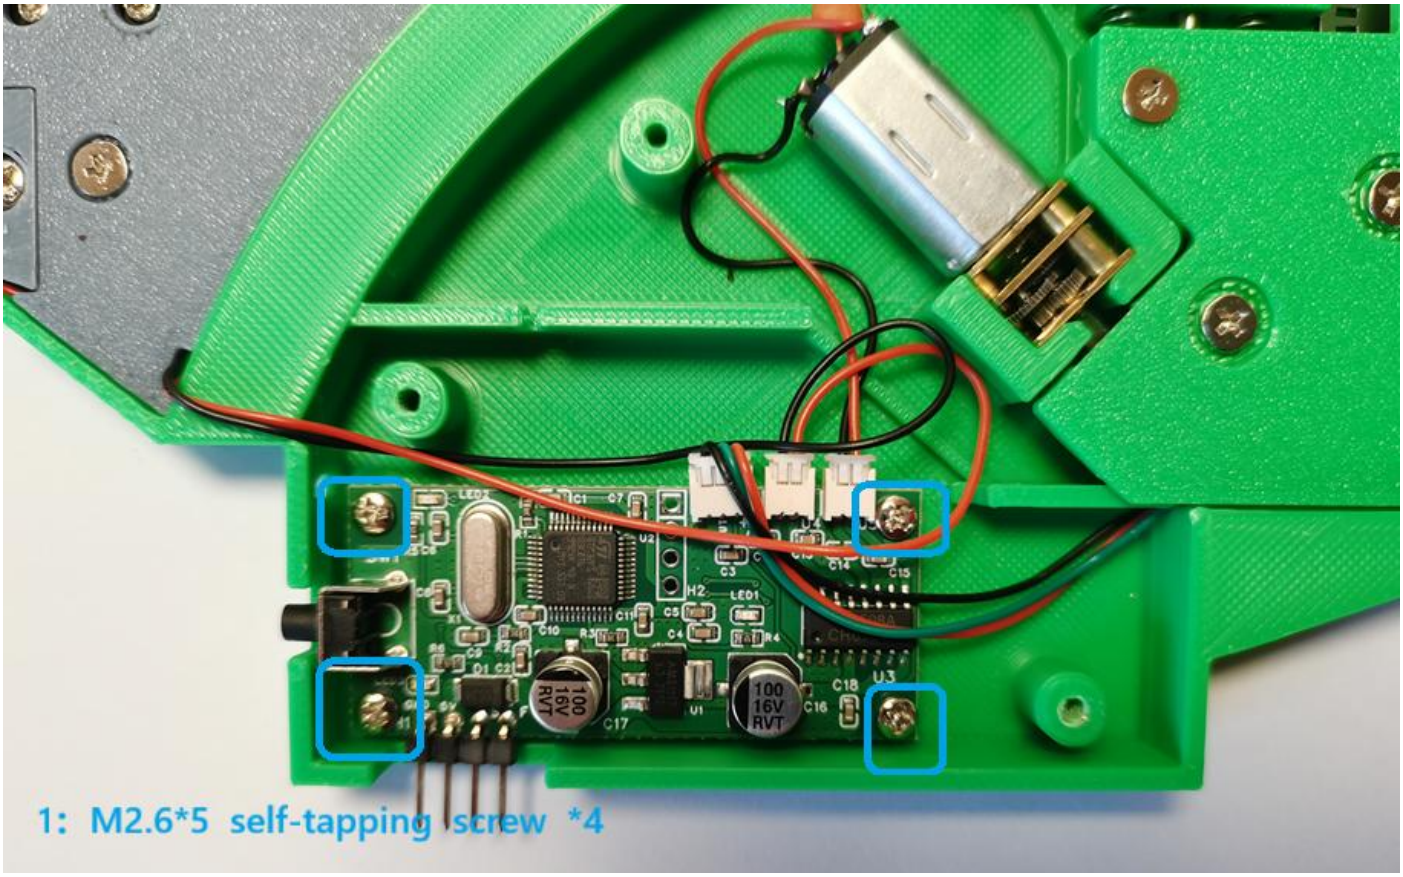
8: 8-2mm/4mm PCB button for manual feeding.

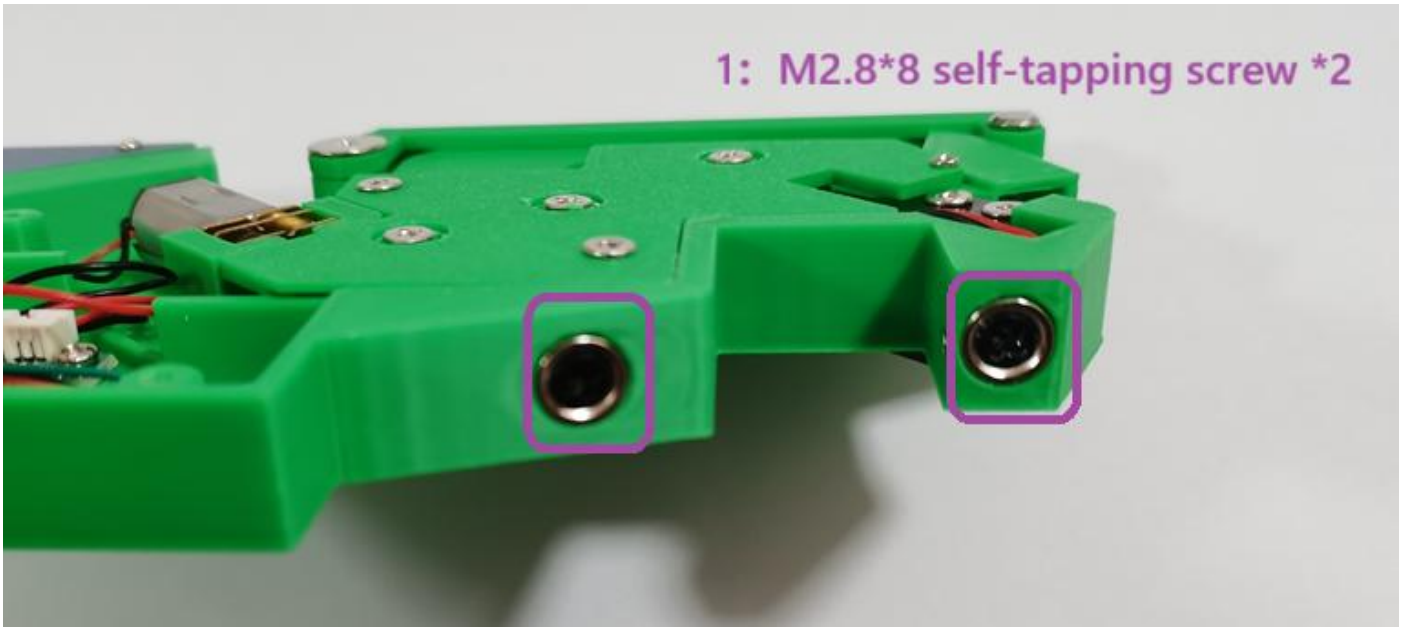
9: 12mm/16mm/24mm 3-in- 1 PCB button is Used to switch the number of steps forward, with a minimum of 1 step forward and a maximum of 6 steps forward. The number of steps will be stored in flash, and the set number of steps will not change when the PCB is powered off.

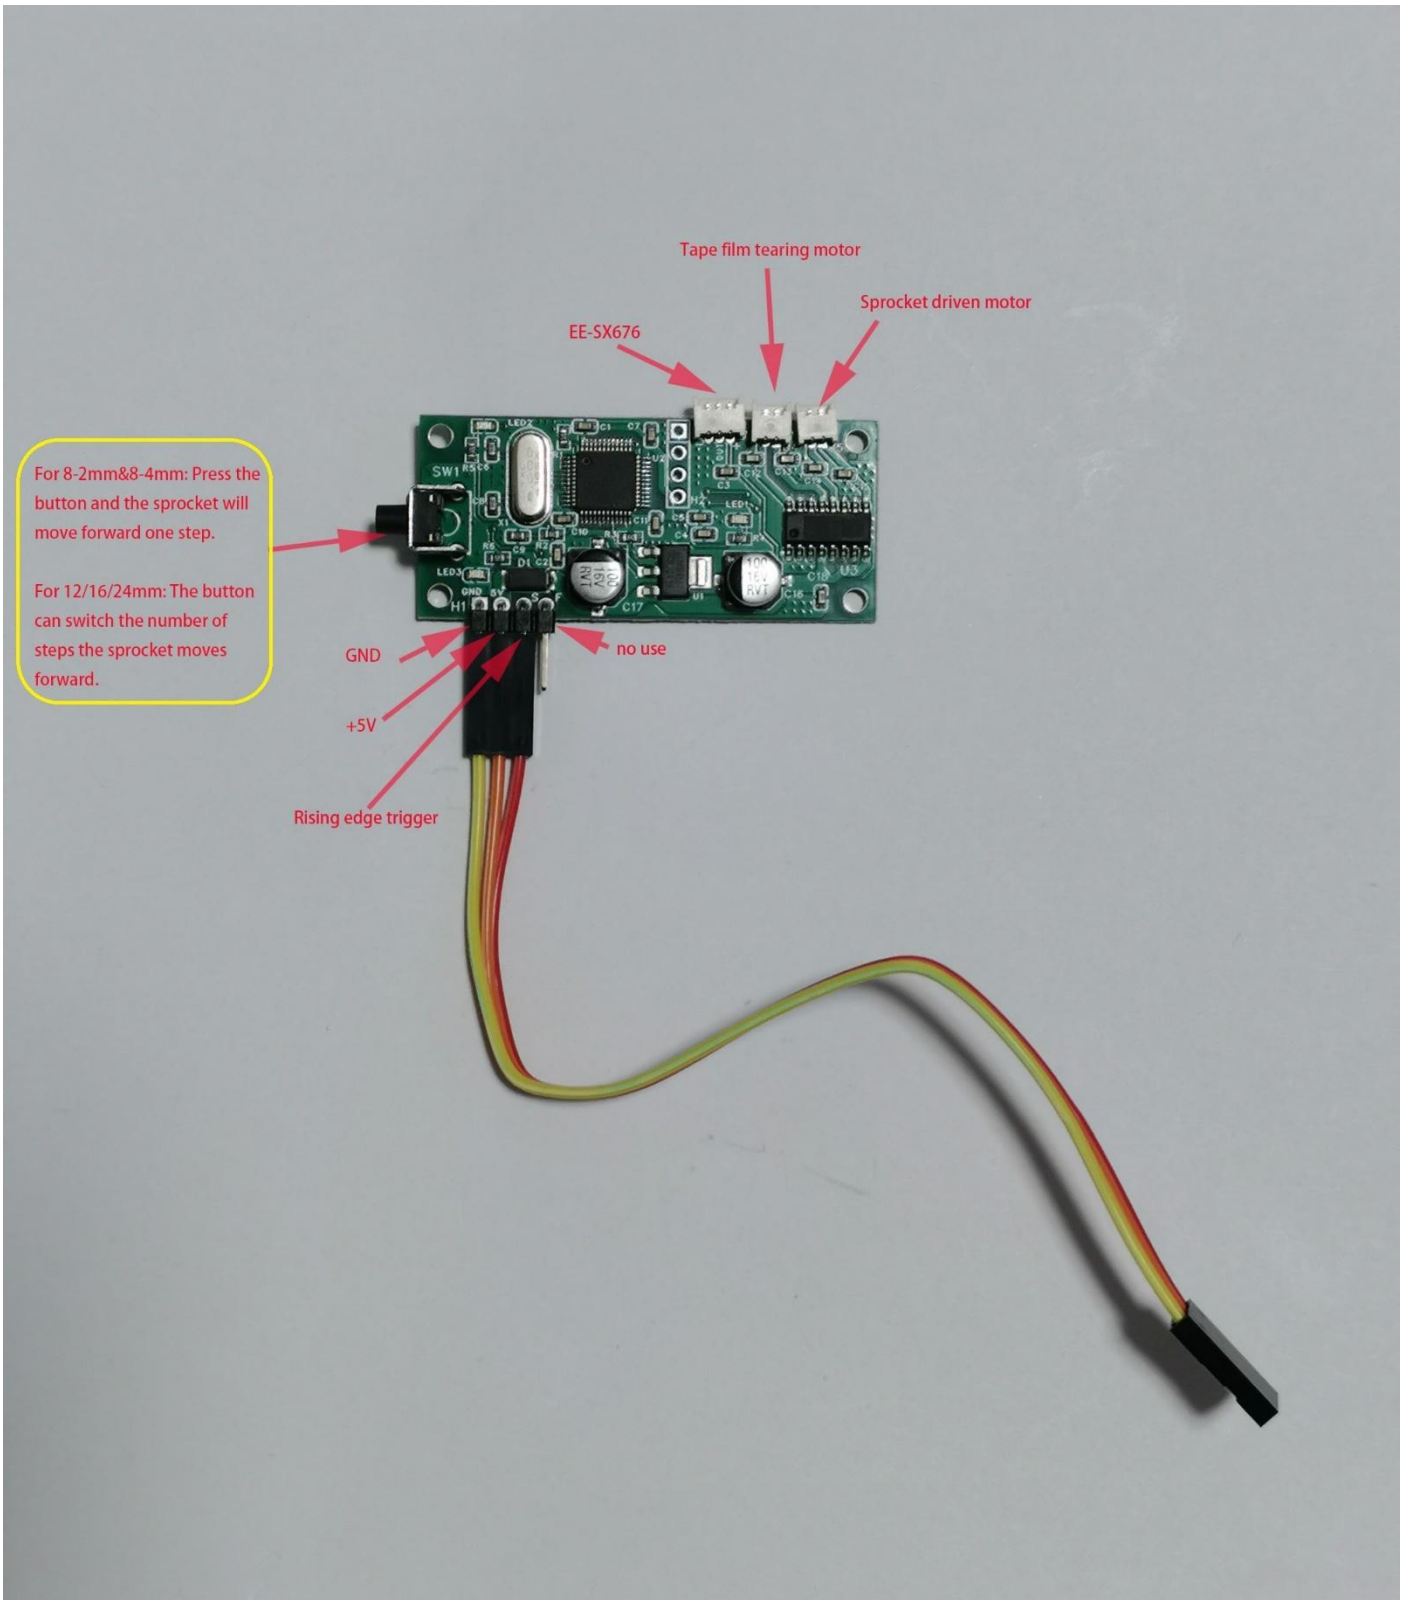
Watch the installation video: https://youtu.be/vMMxd3sDfT4.


1: M3*25 self-tapping screw *1
2: Ø3×12 blind screw *2
3: M3*12 machine screw *1
4: M3*8 self-tapping screw *2
5: M1.7*10 self-tapping screw *3
6: M1.7*5 self-tapping screw *1
7: M2.6*8 self-tapping screw *9
8: M3*15 machine screw *1
9: M3*16 blind screw *1
10: Ø4×12 blind screw *2
11: Ø4×12 sprocket shaft *1


1: M2.6*8 self-tapping screw *2

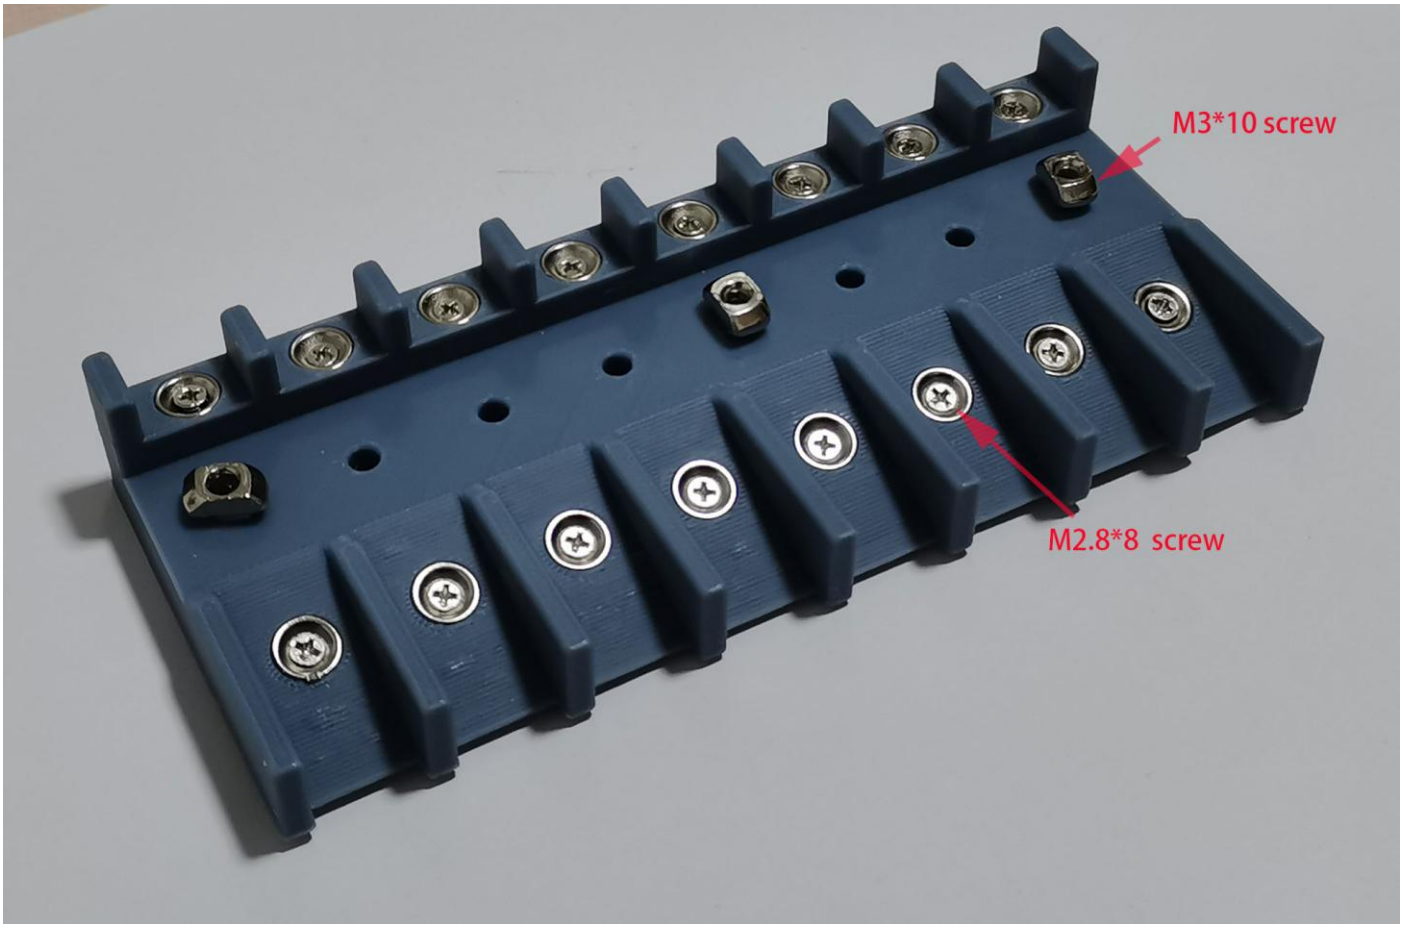

1: M2.6*5 self-tapping screw *4


1: M2.8*8 self-tapping screw *2


Tape film tearing motor
Sprocket driven motor
EE-SX676
For 8-2mm&8-4mm: Press the button and the sprocket will move forward one step.
For 12/16/24mm: The button can switch the number of steps the sprocket moves forward.
GND
no use
+5V
Rising edge trigger

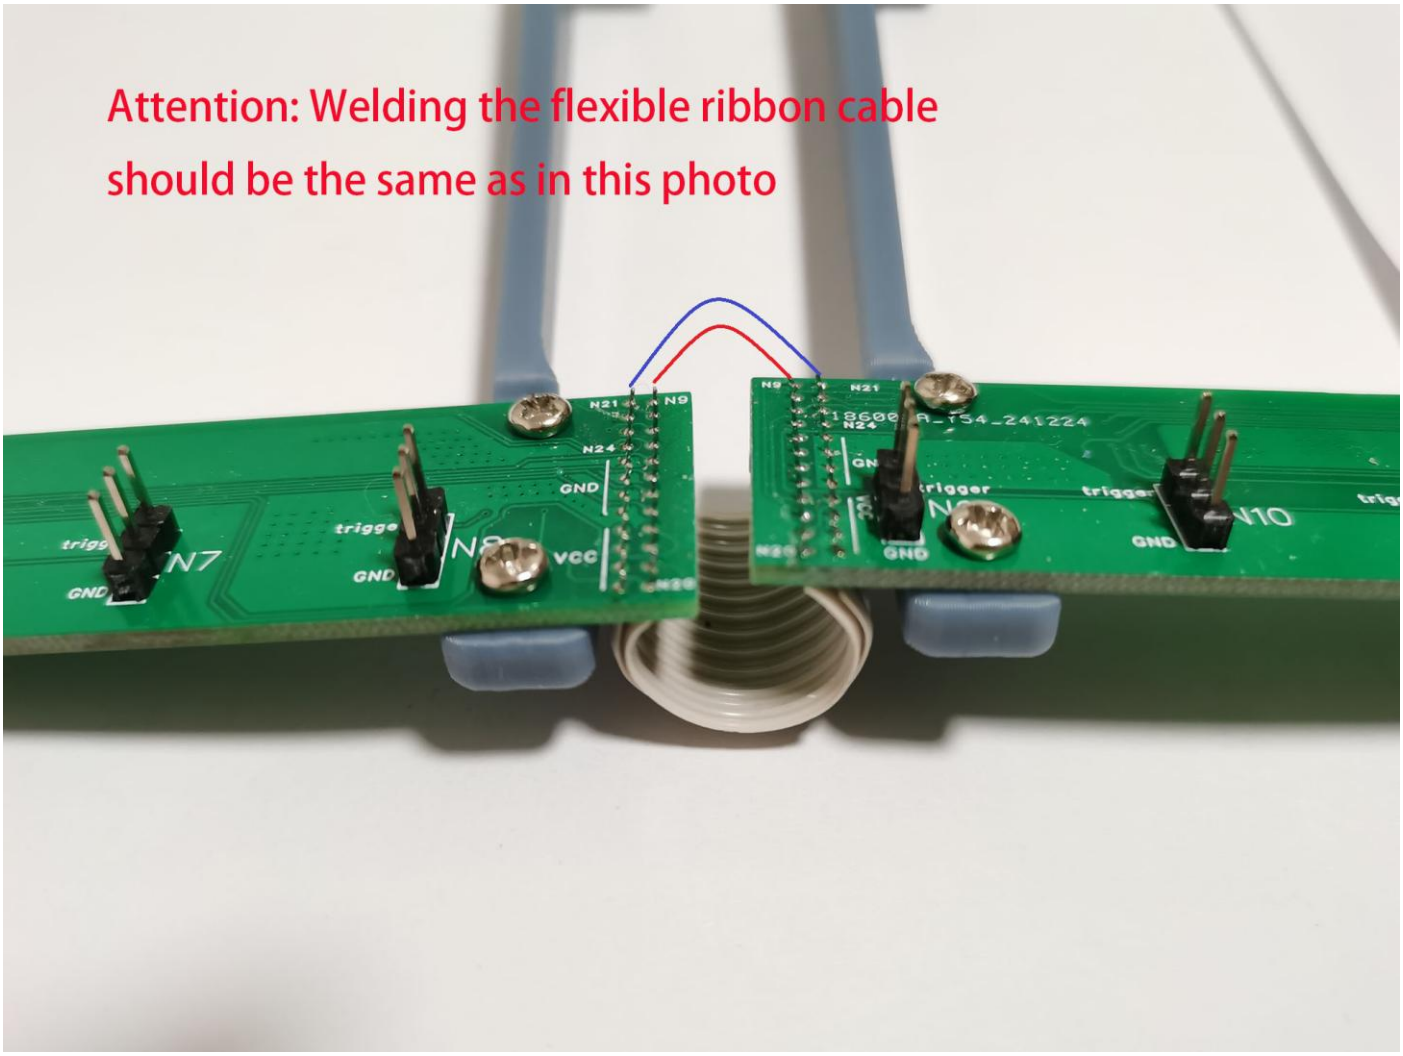
二．Install the feeder controller

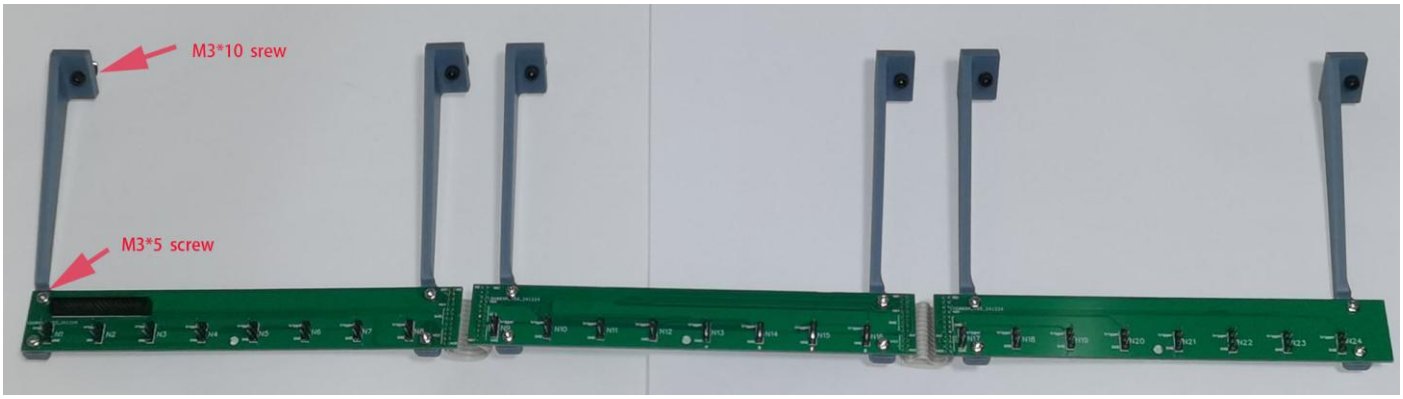
1. Install magnetic slot.





2. Installation of Busbar PCB.





3. Connect the feeder controller and Busbar PCB.



4．Complete installation

