Bing feeder-V3（Magnetic） assembly manual

8-2mm&8-4mm

2026-09-14

一．Assembly the feeder

1: Get the kits : www.microsmt.com.cn

2: Watch the installation video: https://youtu.be/MxgC0LLmq8A

3 : If the direction of the motor is incorrect, just swap its two wires.

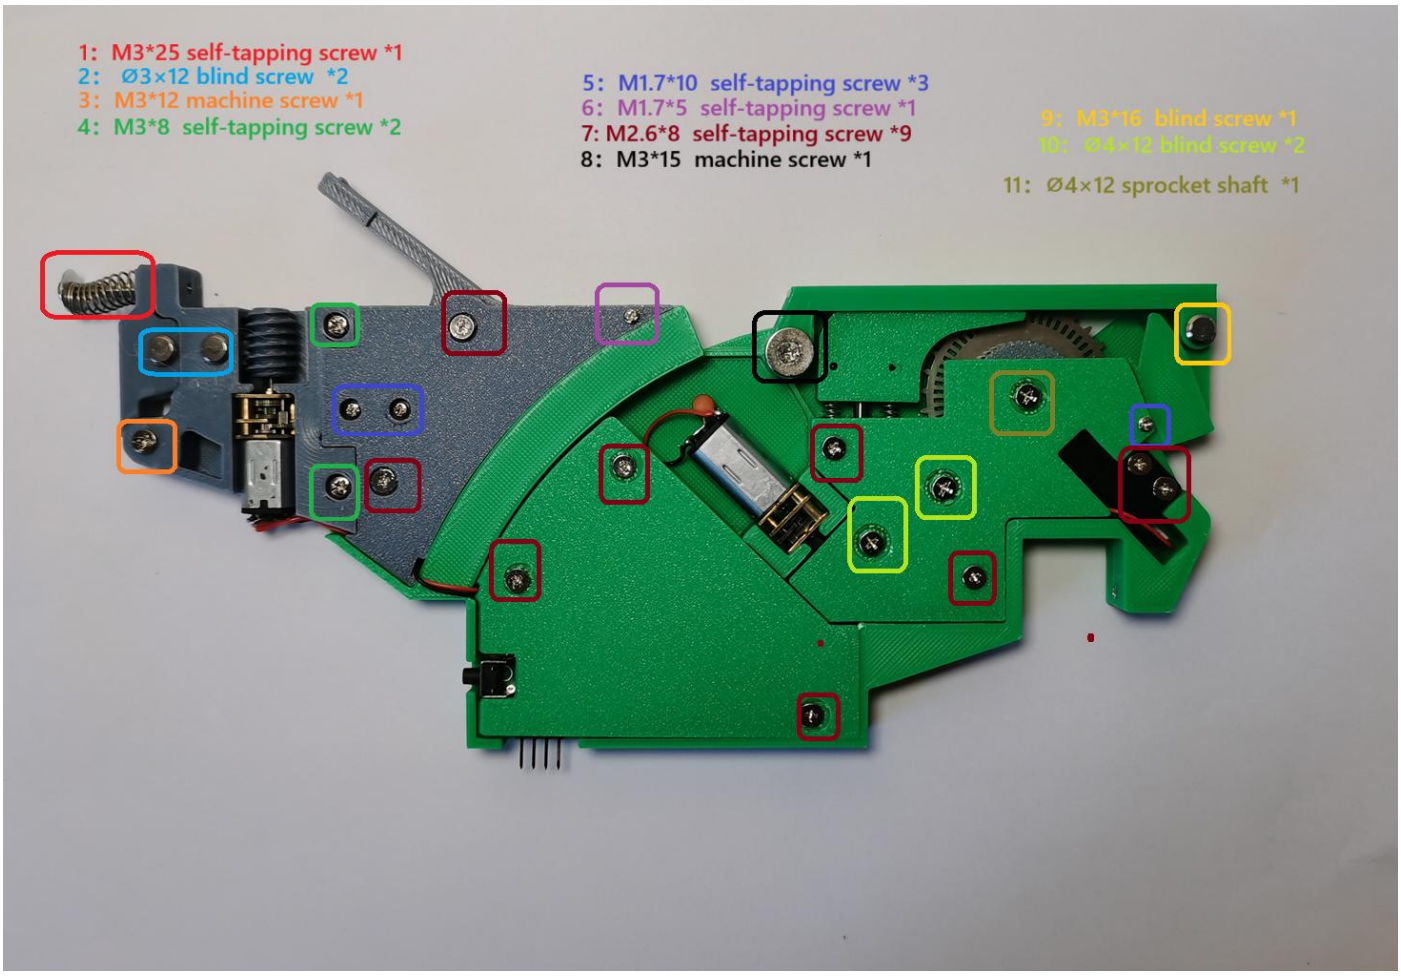
4: Connect the three wires of the photoelectric switch according to the pin identification of the control board and photoelectric switch, which are + - out .

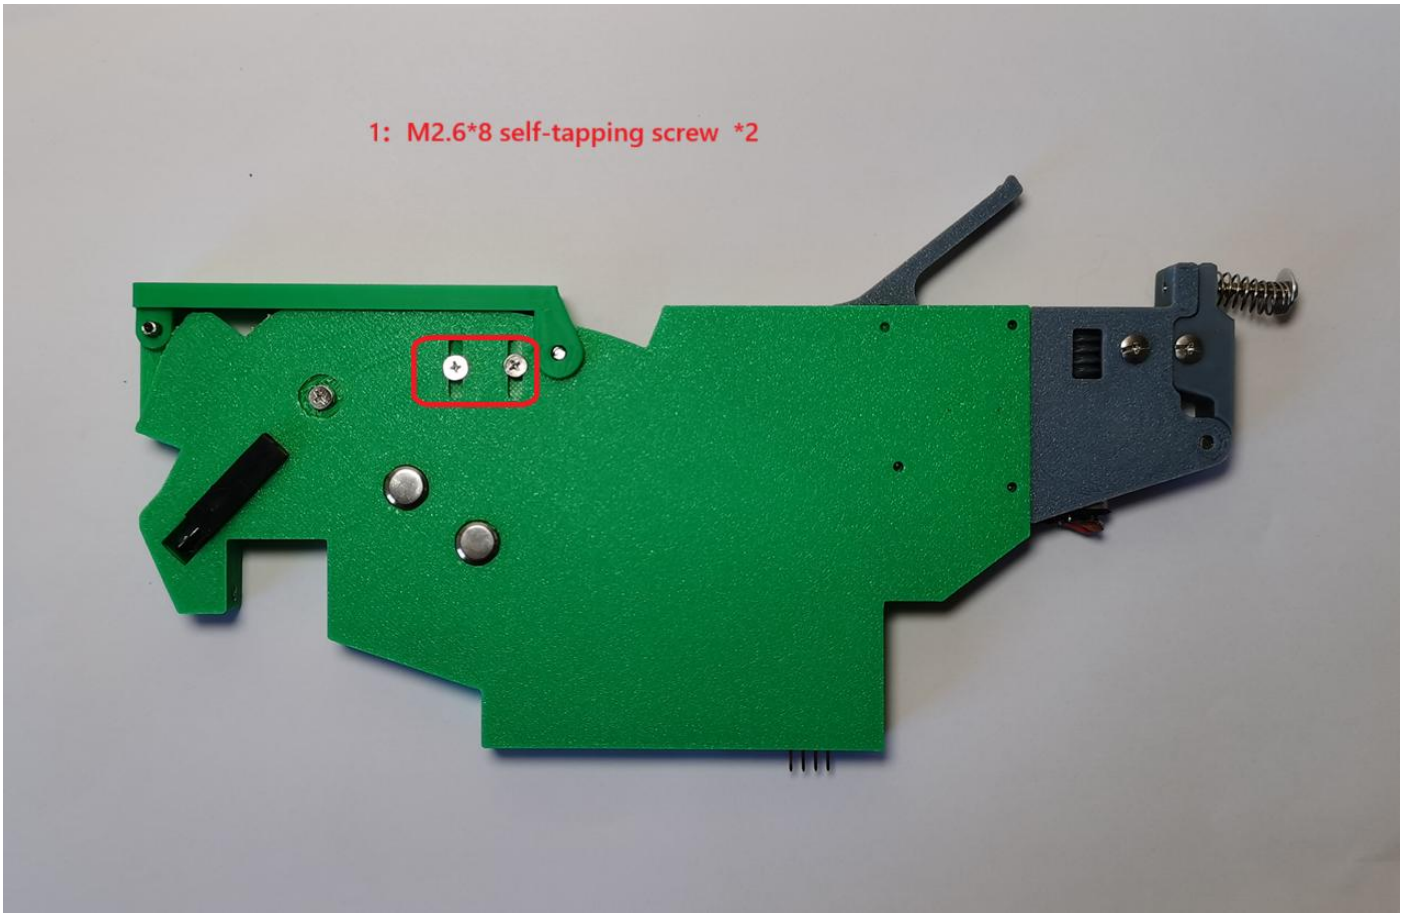
5: The L pin on the photoelectric switch does not need to be connected.

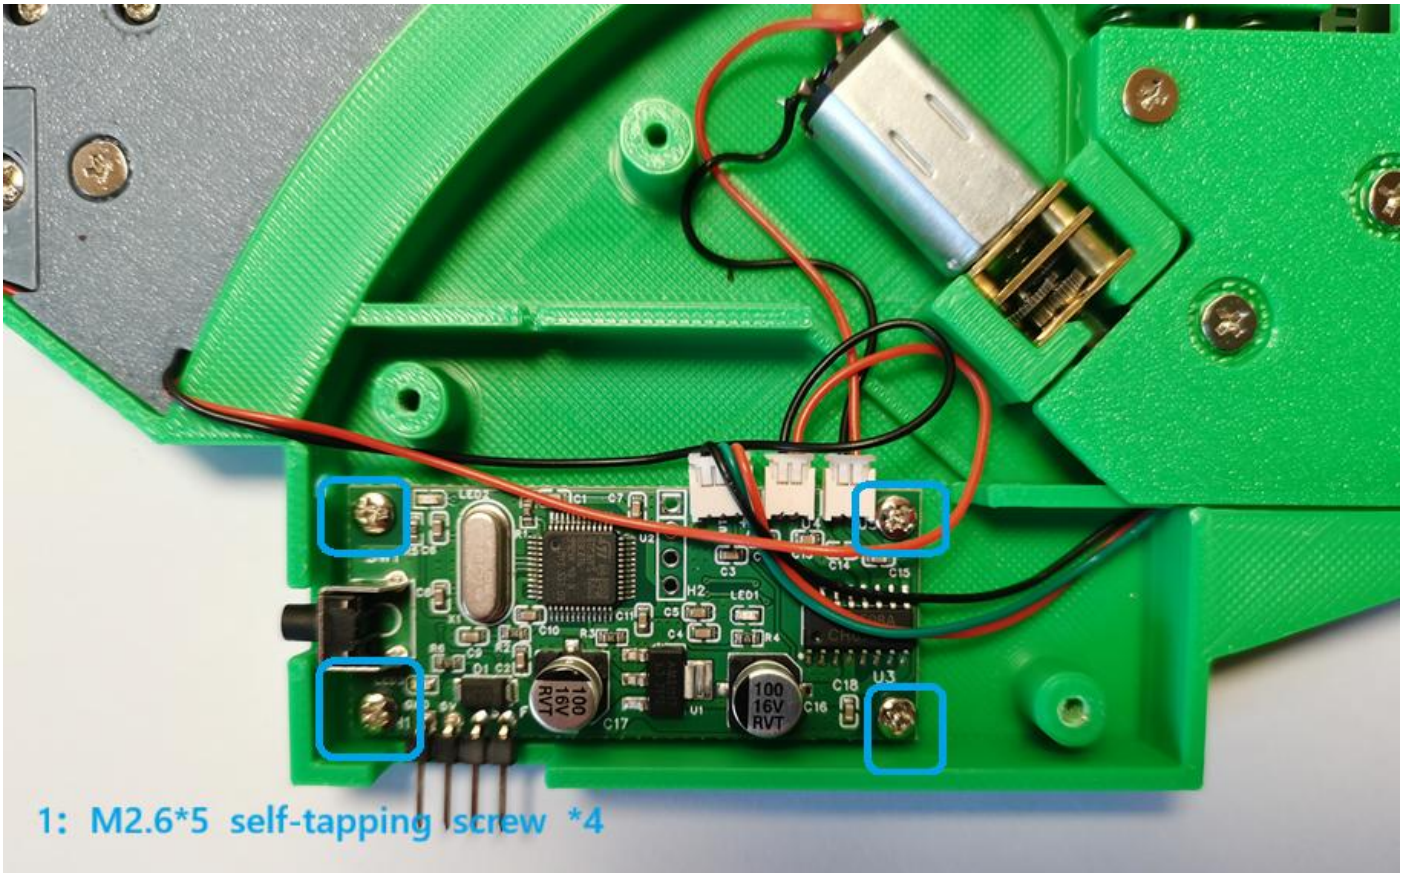
6: Latest 8mm feeder firmware update: If the button is pressed for less than 1 second, the sprocket advances by one step. If the button is pressed for more than 3 seconds, the LED flashes, and the sprocket step distance toggles between 2 mm and 4 mm.

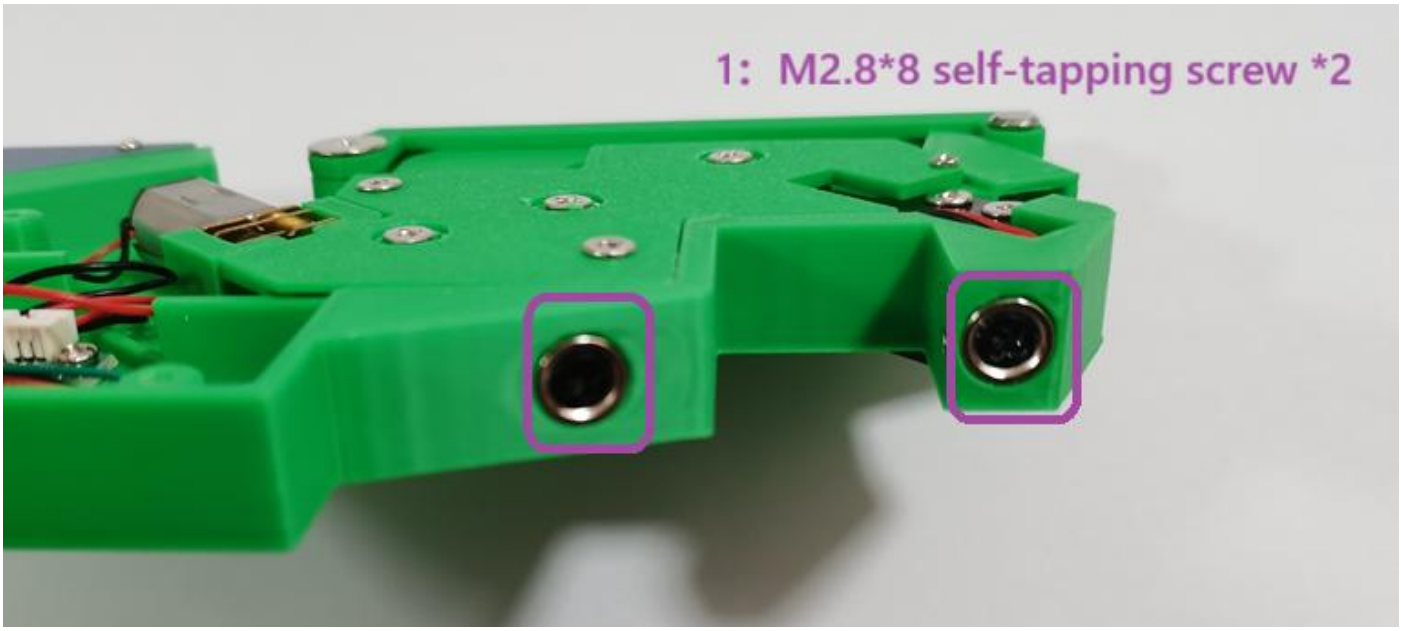
7: 12mm/16mm/24mm 3-in- 1 PCB button is Used to switch the number of steps forward, with a minimum of 1 step forward and a maximum of 6 steps forward. The number of steps will be stored in flash, and the set number of steps will not change when the PCB is powered off.

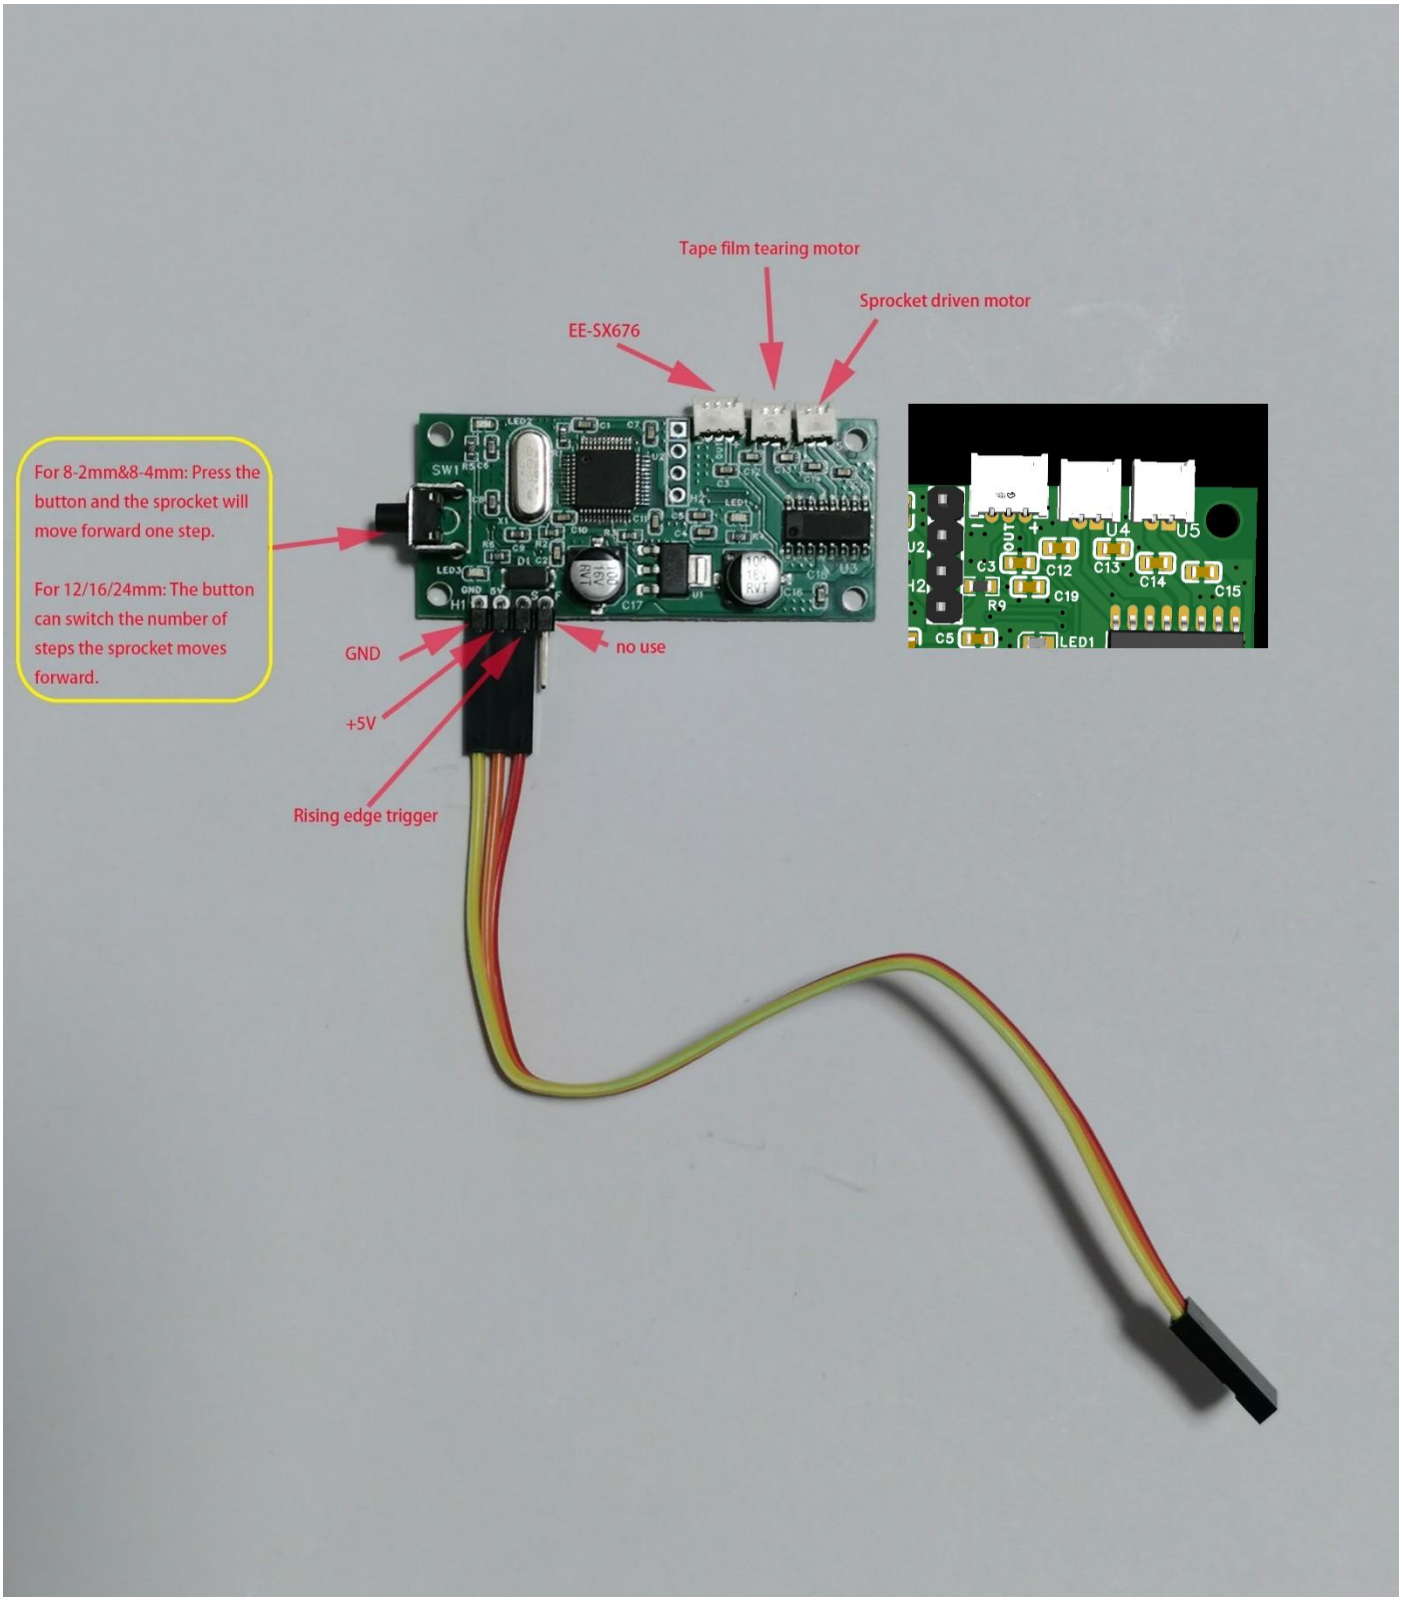
Watch the installation video: https://youtu.be/vMMxd3sDfT4.


1: M3*25 self-tapping screw *1
2: Ø3×12 blind screw *2
3: M3*12 machine screw *1
4: M3*8 self-tapping screw *2
5: M1.7*10 self-tapping screw *3
6: M1.7*5 self-tapping screw *1
7: M2.6*8 self-tapping screw *9
8: M3*15 machine screw *1
9: M3*16 blind screw *1
10: Ø4×12 blind screw *2
11: Ø4×12 sprocket shaft *1


1: M2.6*8 self-tapping screw *2

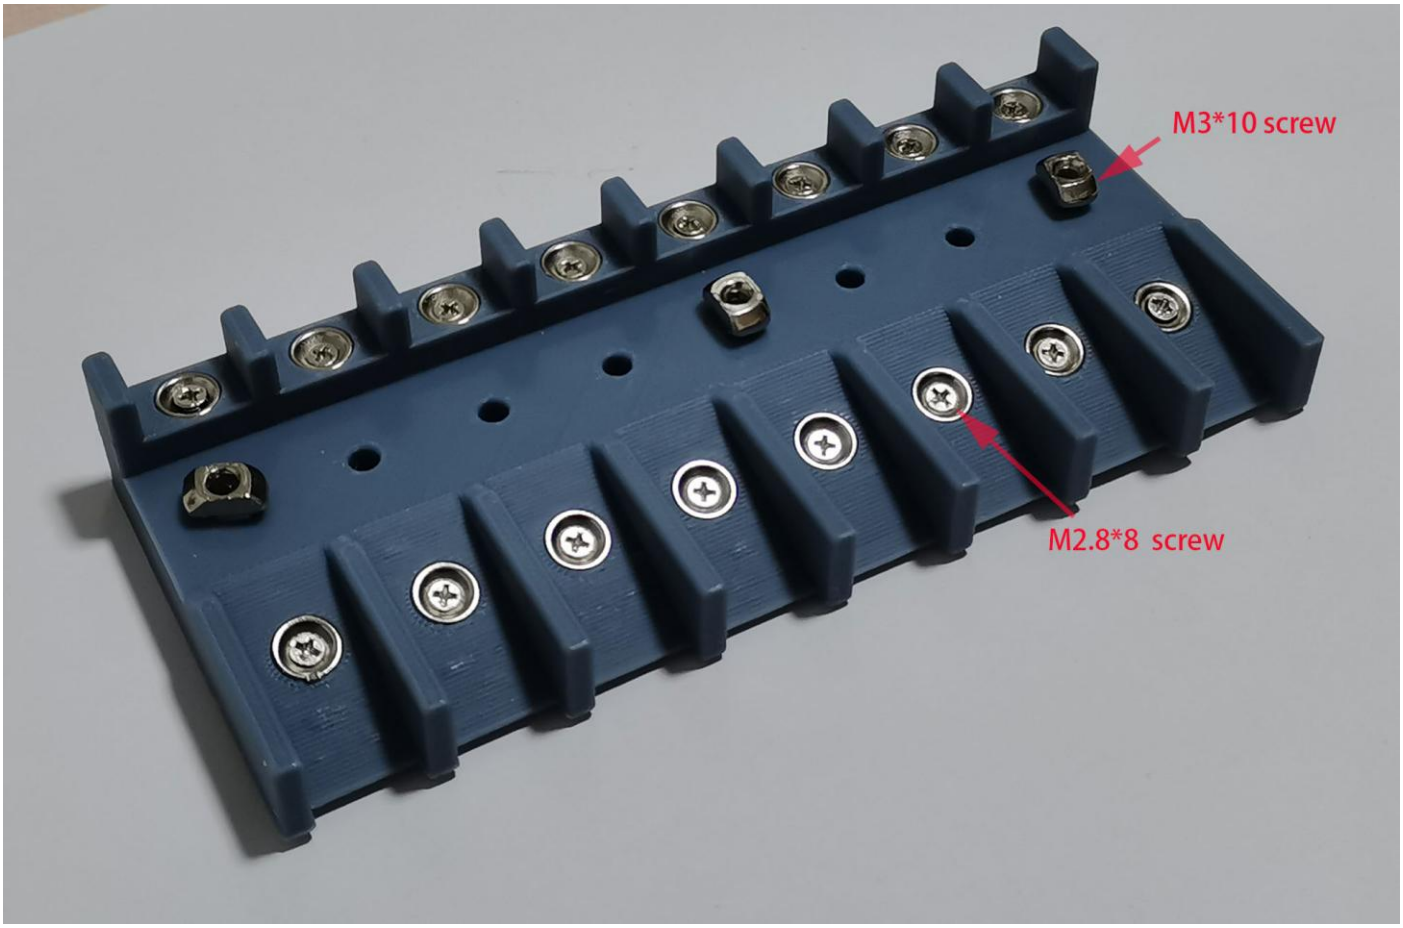

1: M2.6*5 self-tapping screw *4


1: M2.8*8 self-tapping screw *2


Tape film tearing motor
Sprocket driven motor
EE-SX676
For 8-2mm&8-4mm: Press the button and the sprocket will move forward one step.
For 12/16/24mm: The button can switch the number of steps the sprocket moves forward.
GND
+5V
Rising edge trigger
no use

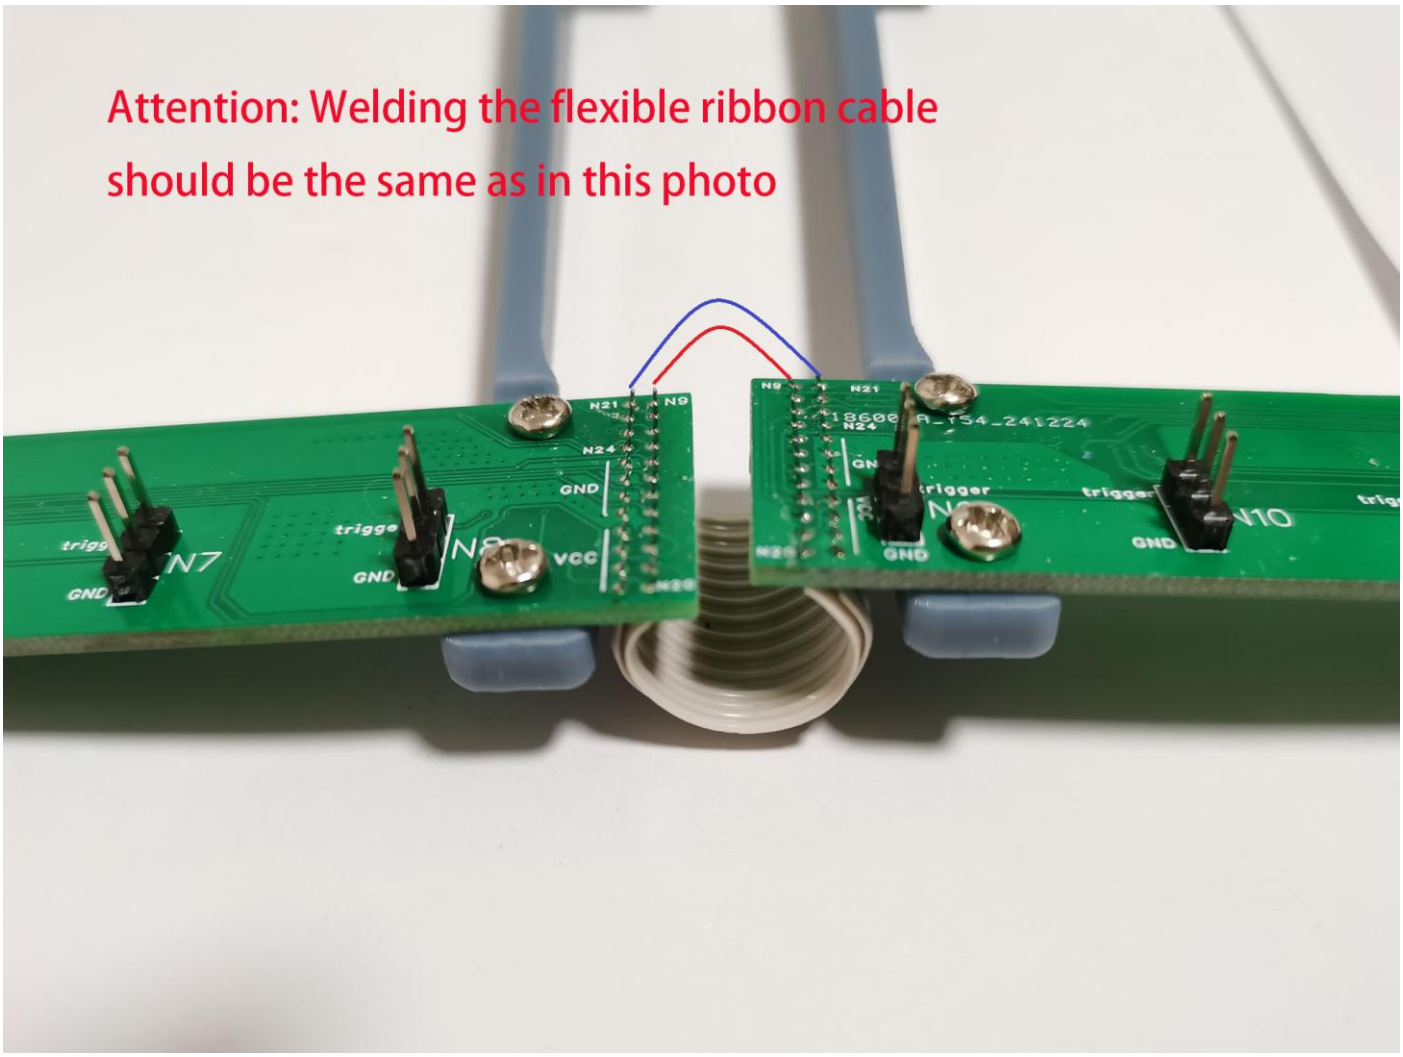
二．Install the feeder controller

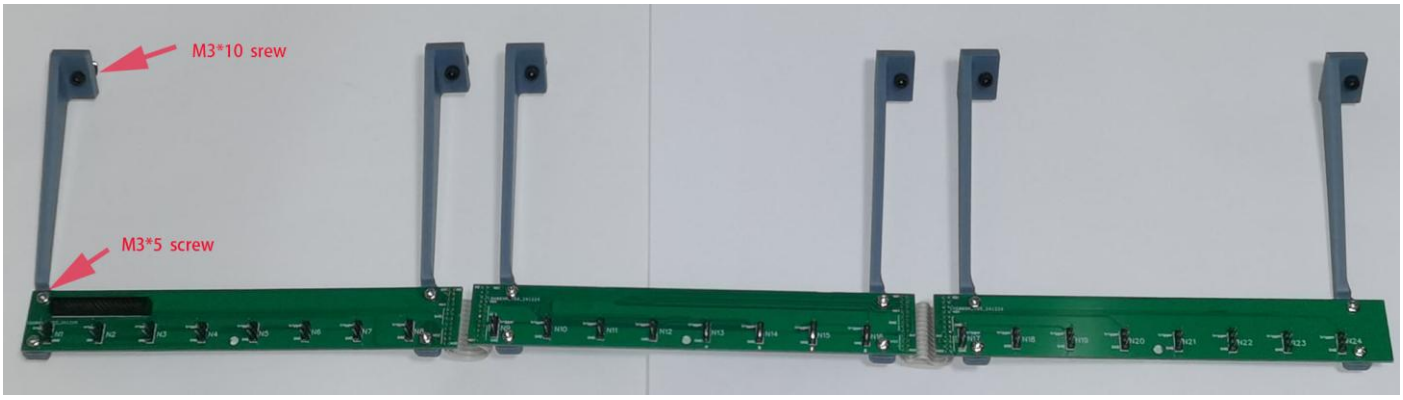
1. Install magnetic slot.





2. Installation of Busbar PCB.

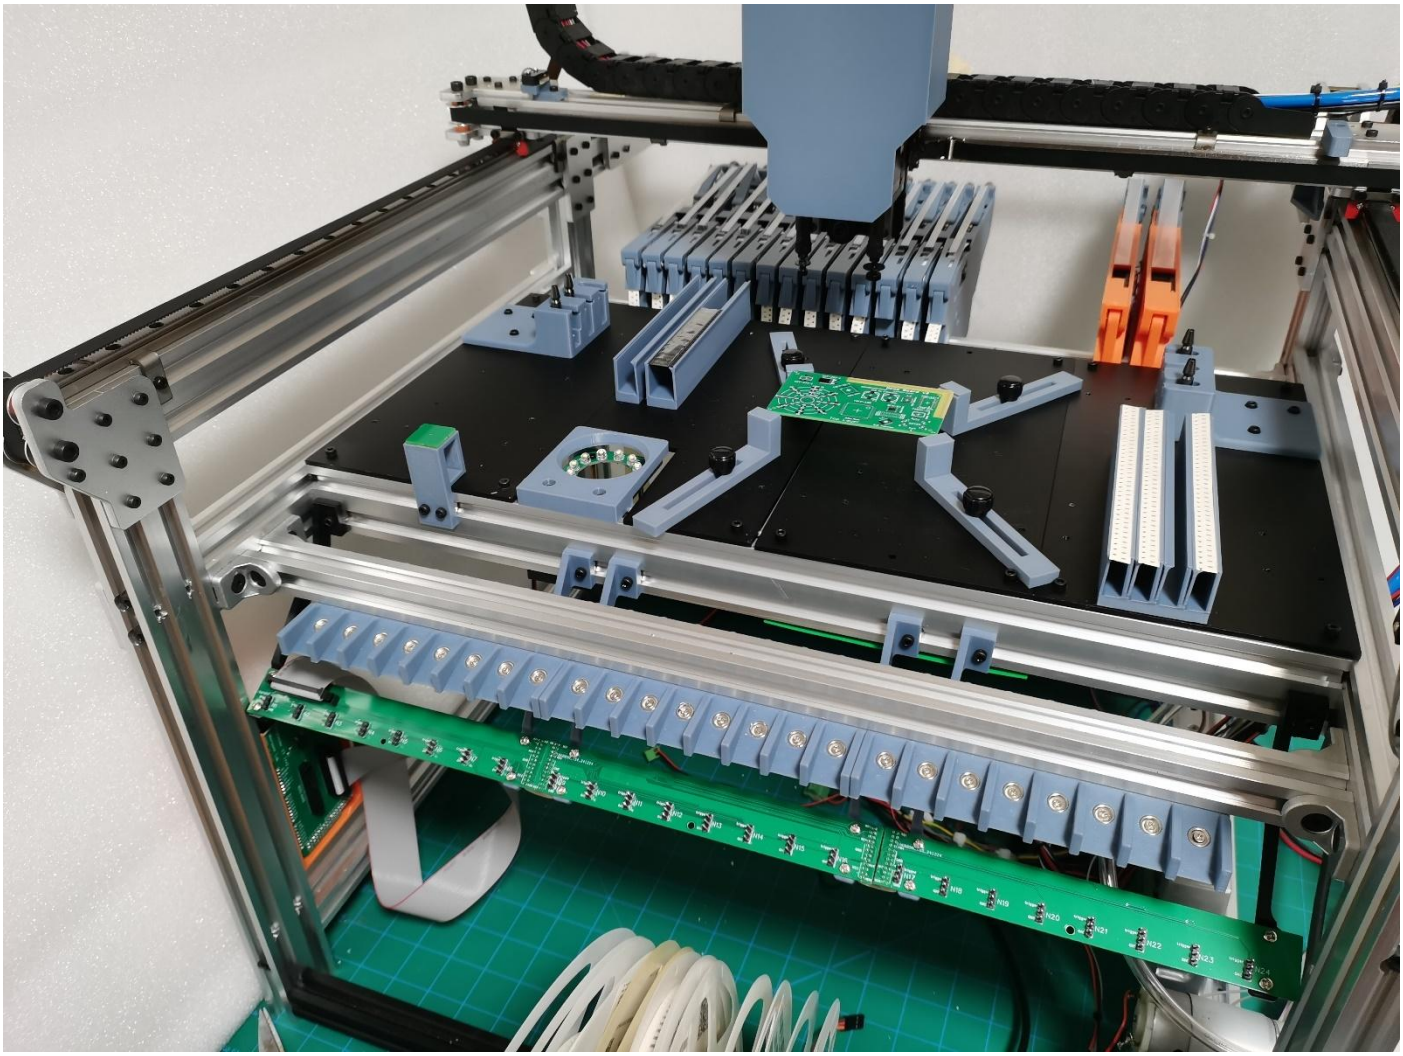


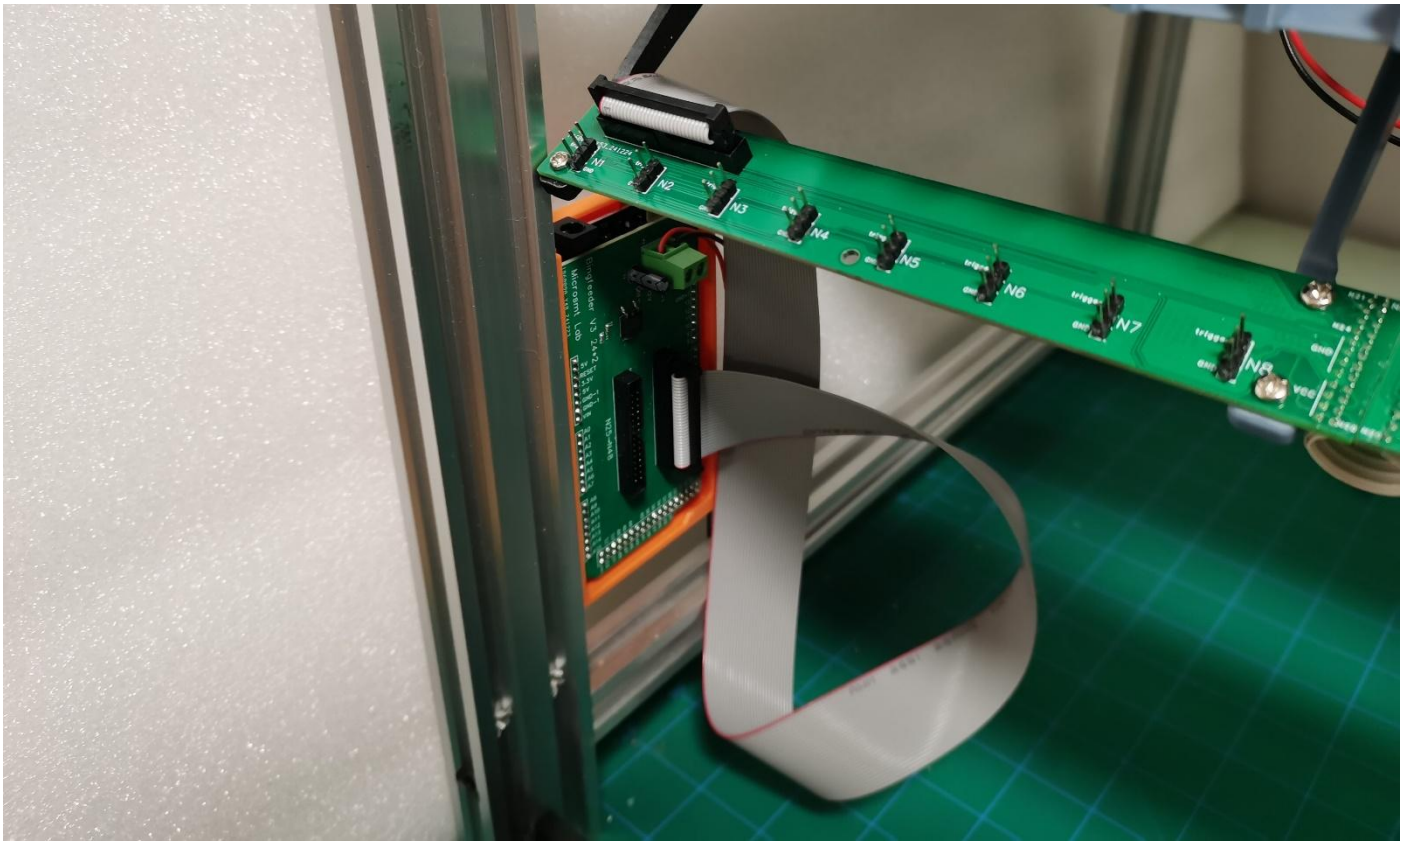


3. Connect the feeder controller and Busbar PCB.



4．Complete installation




N1
N2
N3
N4
N5
N6
N7
N8
trigger
gnd
vcc