

Enter the Vehicle Docker

Enter the Vehicle Docker

1. Course Content
2. Basic Operations
 - 2.1 Start the m3pro container
 - 2.2 Enter the m3pro container terminal
 - 2.3 Shut down the m3pro container

1. Course Content

- This section of the course is only for reference by users of **Raspberry Pi 5** mainboard and **Jetson-Nano** mainboard

[!NOTE]

- Raspberry Pi 5 and Jetson Nano cannot directly install the `ros2 humble` environment due to system version limitations, so the `ros2 humble` environment is placed in `Docker`. The host machine does not have a ros2 environment.


2. Basic Operations

2.1 Start the m3pro container

- If you need to run the example programs in the tutorial, you must first start the `m3pro Docker` container

```
bringup_m3pro
```

Display `container rosmaster-m3pro Started` indicates successful startup

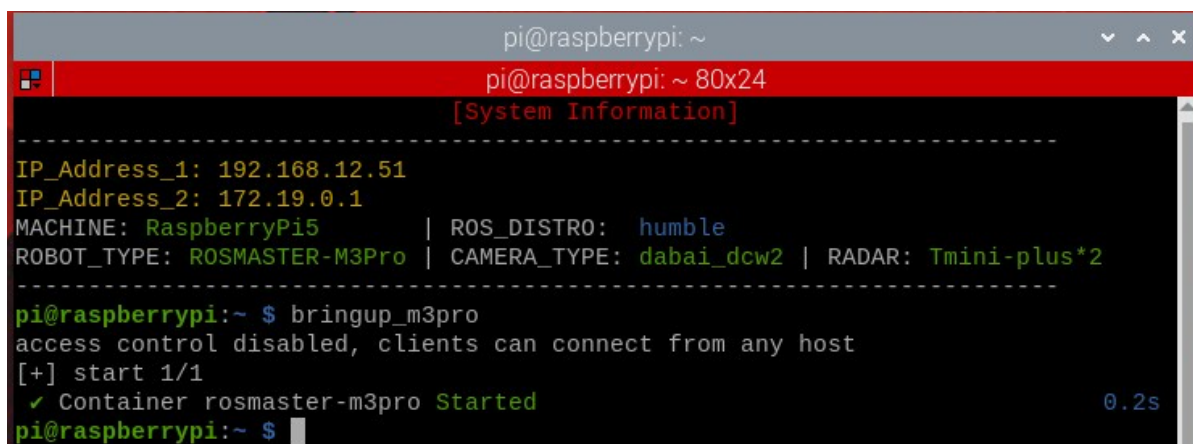


```
pi@raspberrypi: ~  
pi@raspberrypi: ~ 80x24  
[System Information]  
-----  
IP_Address_1: 192.168.12.51  
IP_Address_2: 172.19.0.1  
MACHINE: RaspberryPi5 | ROS_DISTRO: humble  
ROBOT_TYPE: ROSMASTER-M3Pro | CAMERA_TYPE: dabai_dcw2 | RADAR: Tmini-plus*2  
-----  
pi@raspberrypi:~ $ bringup_m3pro  
access control disabled, clients can connect from any host  
[+] start 1/1  
✓ Container rosmaster-m3pro Started 0.2s  
pi@raspberrypi:~ $
```

2.2 Enter the m3pro container terminal

- The commands in subsequent tutorials need to be operated within the container. Open the container terminal command:

```
exec_m3pro
```

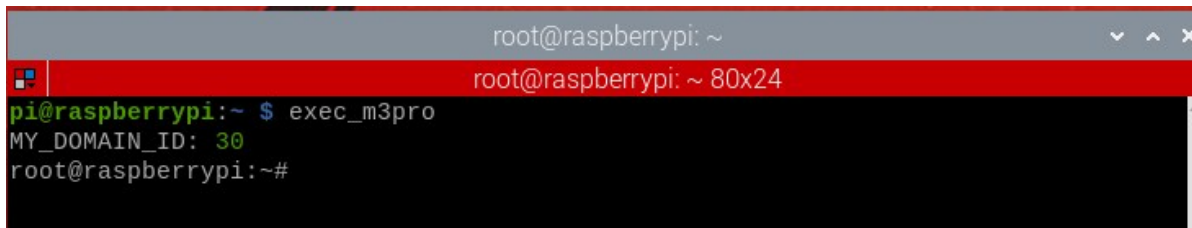

A terminal window titled 'root@raspberrypi: ~' with a red header bar. The prompt is 'pi@raspberrypi:~ \$'. The user enters 'exec_m3pro'. The output shows 'MY_DOMAIN_ID: 30' and the prompt changes to 'root@raspberrypi:~#', indicating a root shell inside the container.

- If you need to exit the container terminal, press `ctrl+D`




A terminal window showing the exit process. The prompt is 'root@raspberrypi:~#'. The user enters 'exit'. The prompt returns to 'pi@raspberrypi:~ \$'.

2.3 Shut down the m3pro container

- When you really need to manually shut down the m3pro container (generally no need to shut down):

```
shut_m3pro
```

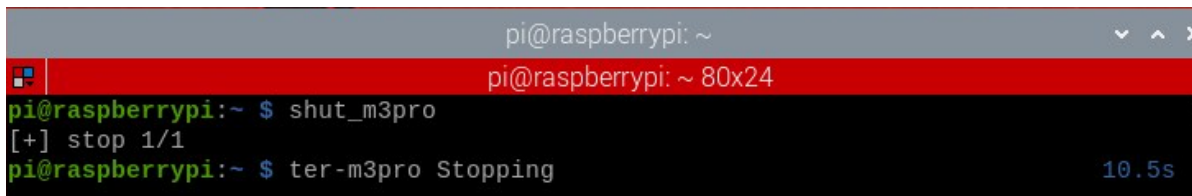

A terminal window titled 'pi@raspberrypi: ~' with a red header bar. The prompt is 'pi@raspberrypi:~ \$'. The user enters 'shut_m3pro'. The output shows '[+] stop 1/1' and 'pi@raspberrypi:~ \$ ter-m3pro Stopping' with a duration of '10.5s'.