TP Link Router

1. Connect to the Router


- Make sure your device (PC or laptop) is connected to the router via Ethernet cable. The ethernet cable should be connected from your laptop or PC into a yellow LAN port on the back of the router.

2. Open a Web Browser

- Open Chrome, Firefox, Edge, or Safari.

3. Enter the Router's IP Address

- In the address bar, type: 192.168.1.1
- Then press Enter, you should see the screen below

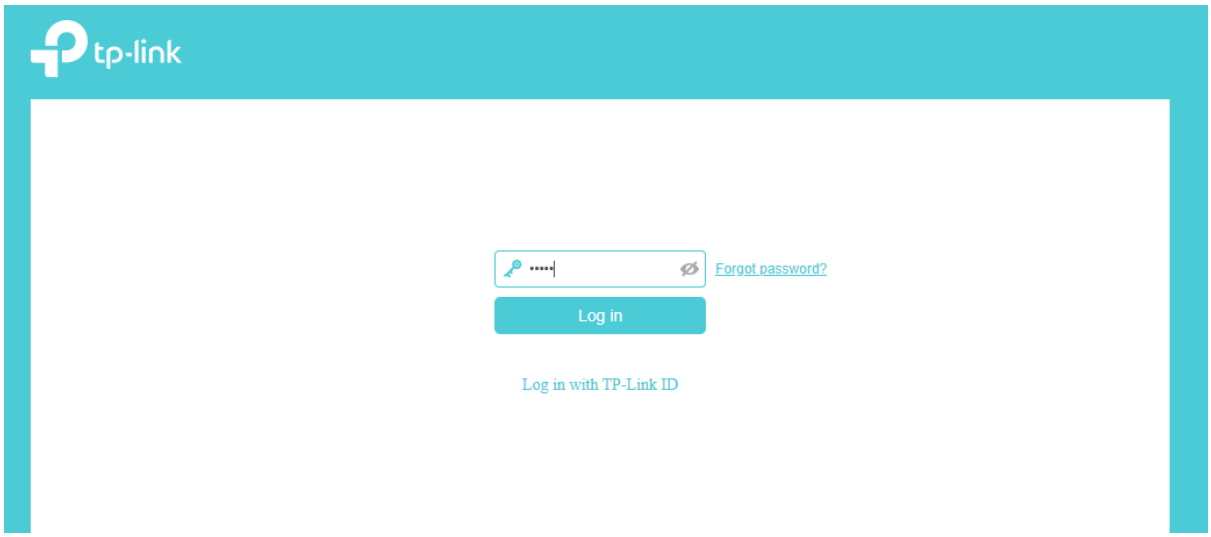

4. Log In to the Router Interface

- On login screen will appear you may be asked for a username and password both will be **admin** if you only receive one box like the image above enter **admin**
- Click **Login**.

5. Check for updates

- Look for an update icon (which may appear in the upper right corner) or navigate to **Advanced** → **System Tools** → **Firmware Upgrade**



5. Upgrade

- If a new firmware is available, you will be prompted to upgrade. Click the Upgrade button to start the process

5. Reboot

- The router will automatically reboot to complete the upgrade
- Once the reboot is complete please close your web browser