How to change Wifi connection on Yealink AX83H


1) Take your Yealink handset and press the middle ‘OK’ button



2) Navigate to the Wi-Fi settings on the top row 3rd icon from the left.



3) Scroll Down to Number 4. Wi-Fi Network.

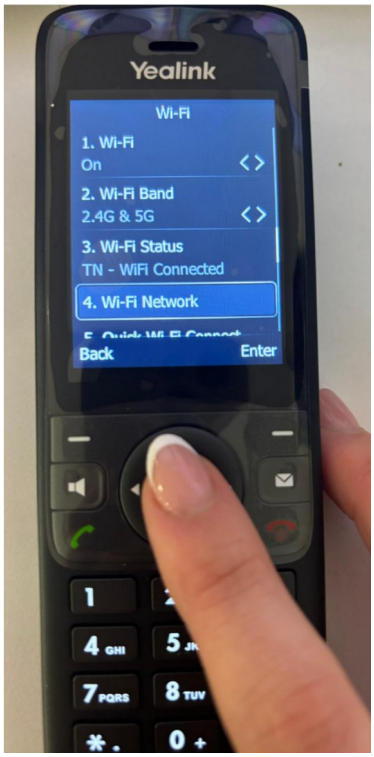

4) Select Relevant Wi-Fi Network and use number/letter keys to input Wi-Fi password.

