

MK2 Control Map

BROWSE
toggle browser

SAMPLING
(unused)

<>

LEFT + RIGHT DISPLAY
boots to 'Stems Full Mix'
screen layout follows the Group button (see screen maps)

VOL
master

SWING
-

TEMPO
Load Deck A

< / > (master)
browser tree select

ENTER
Load Deck B

DIAL
turn = browse
push = LOAD focus

DISPLAY SECTION (b1-b8 buttons / k1-k8 knobs — change with the Group)

b1b2b3b4b5b6b7b8

k1k2k3k4k5k6k7k8

GROUP BUTTONS (pad page + screen)

A
Stems Pads

B
Loops

C
Beatjump

D
Remix C

E
Pitch/Key

F
Loop Station

G
FX1 Select

H
Transport

LAYER + UTILITY BUTTONS

SCENE
layer 2 (hold)

PATTERN
layer 3 (hold)

SOLO
FX1 engage

MUTE
mute all stems

VOLUME
Dial = deck vol

NOTE REPEAT
Cruise/Auto-DJ

TRANSPORT

RESTART
jump start A+B

STEP <
beatjump -4

STEP >
beatjump +4

GRID
focus A<->B

PLAY
play focus

REC
recorder

16 PADS (4x4)

13141516

9101112

5678


1234

top rows = DECK A - bottom rows = DECK B

BASE — Group A



BASE — Group B

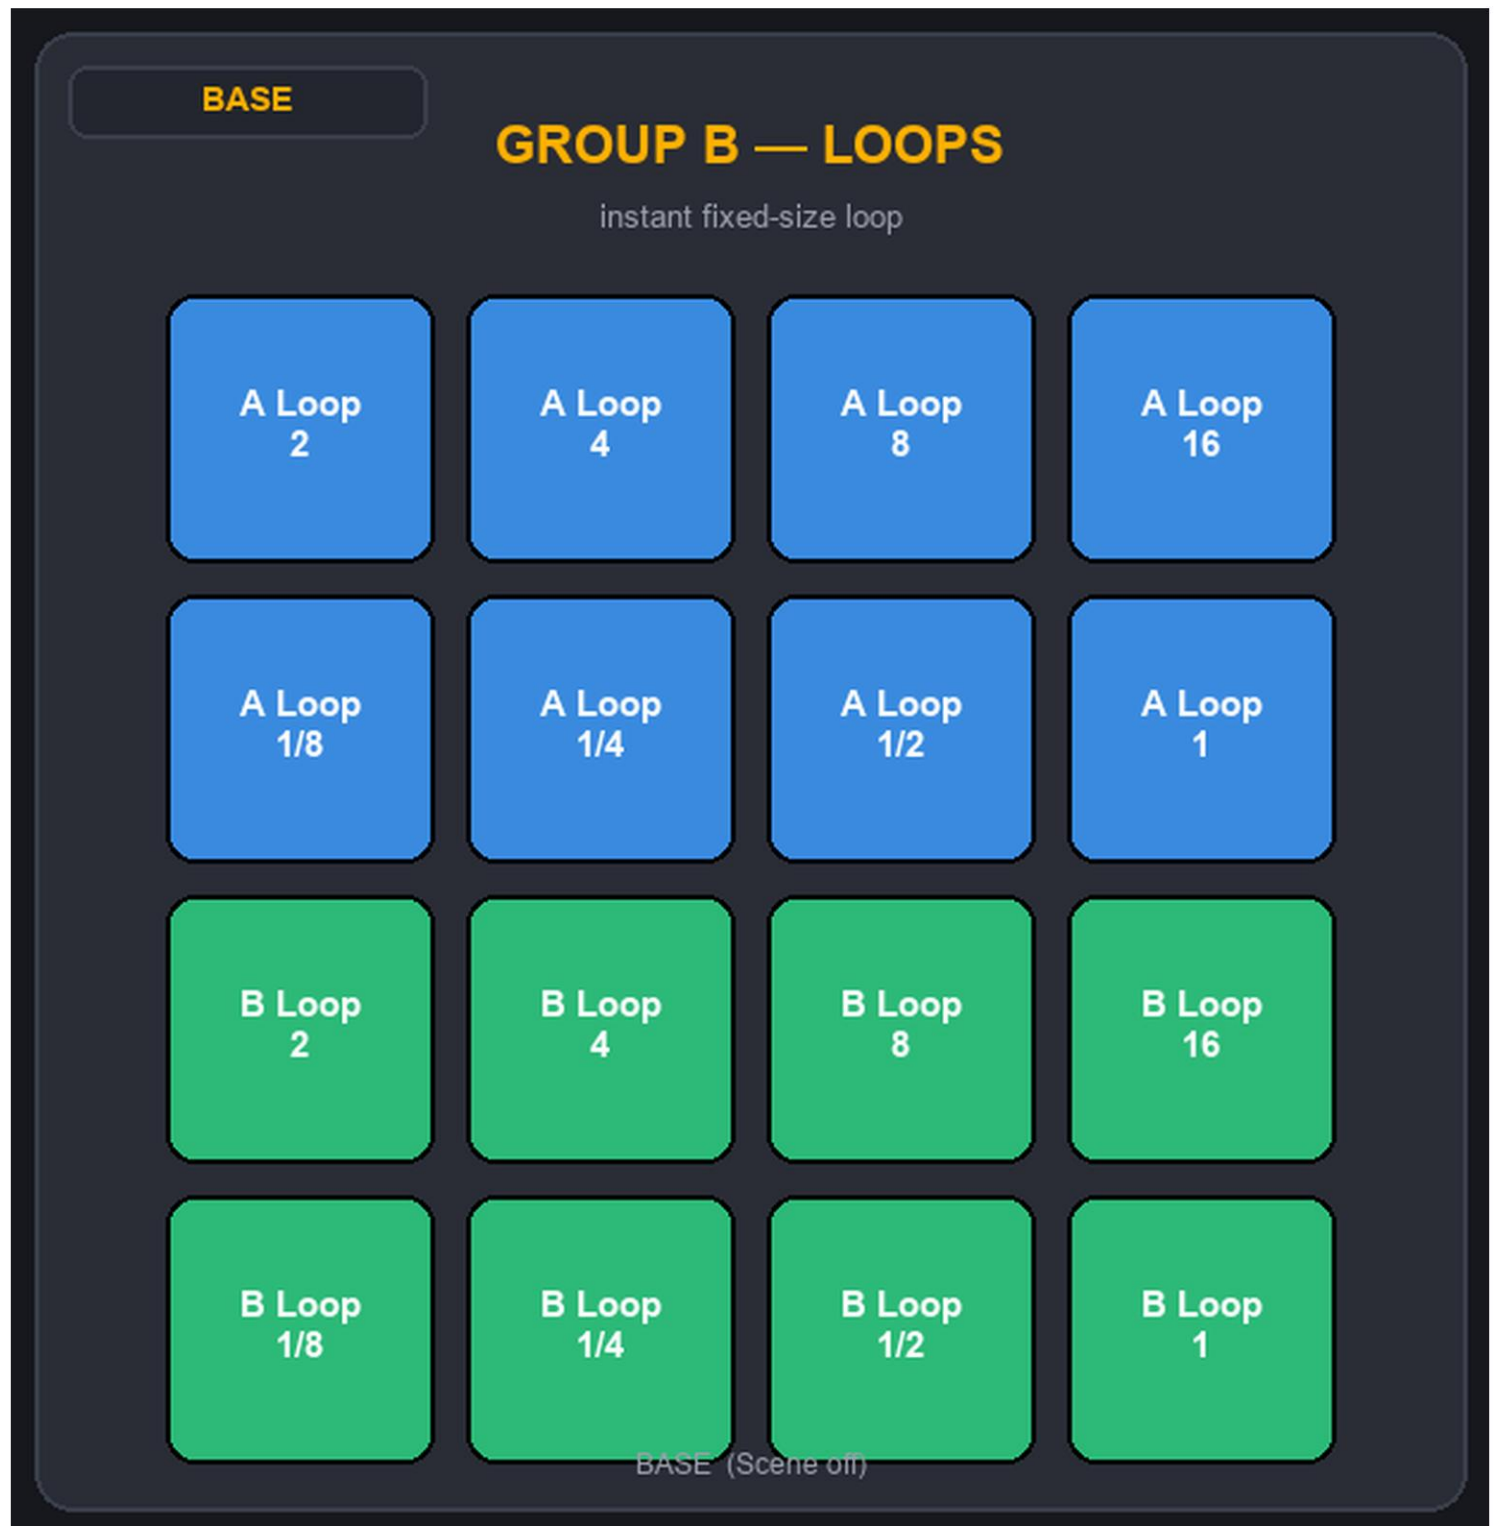

BASE — Group C


BASE

GROUP C — BEATJUMP
jump by beats


A -16	A +16	A -32	A +32
A -4	A +4	A -8	A +8
B -16	B +16	B -32	B +32
B -4	B +4	B -8	B +8

BASE (Scene off)


BASE — Group D

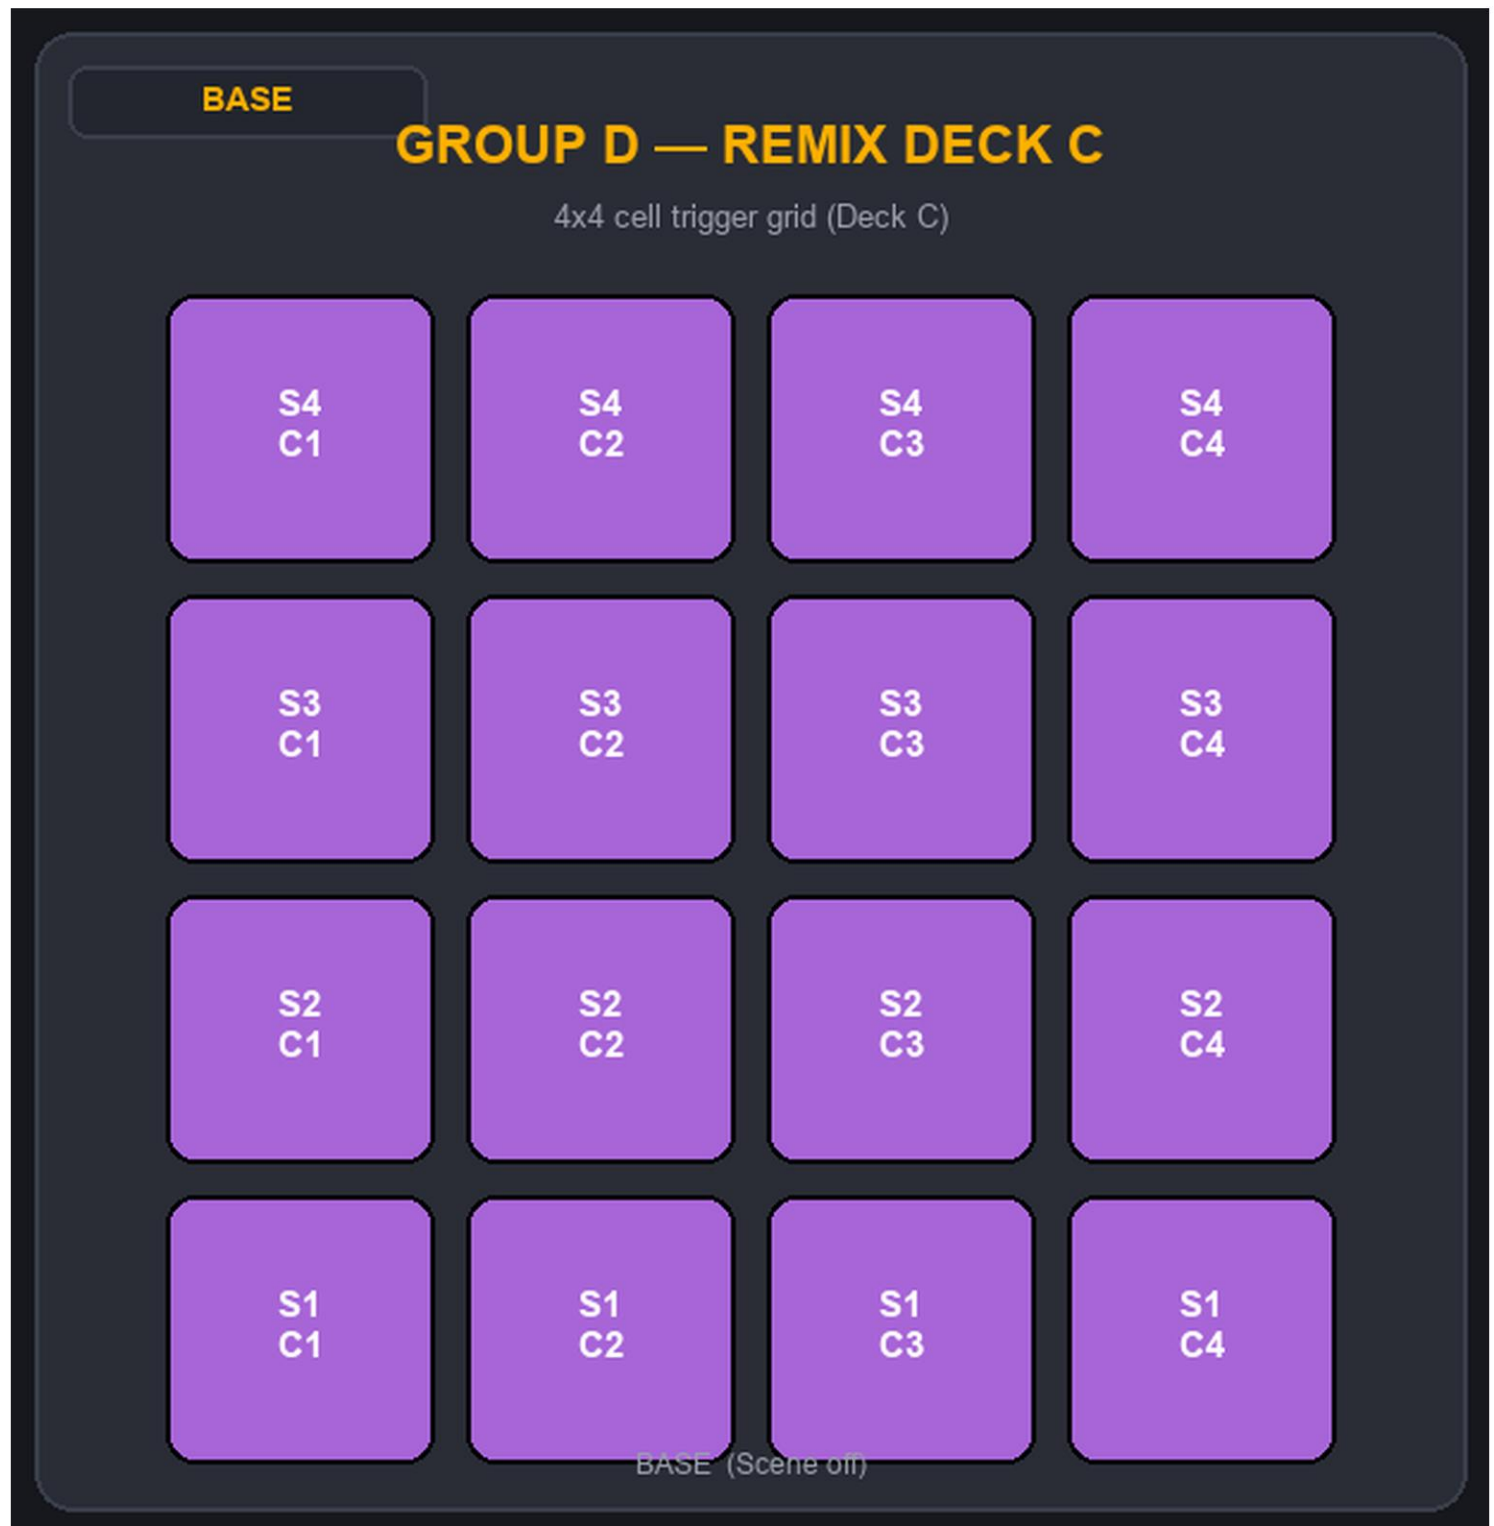

BASE — Group E

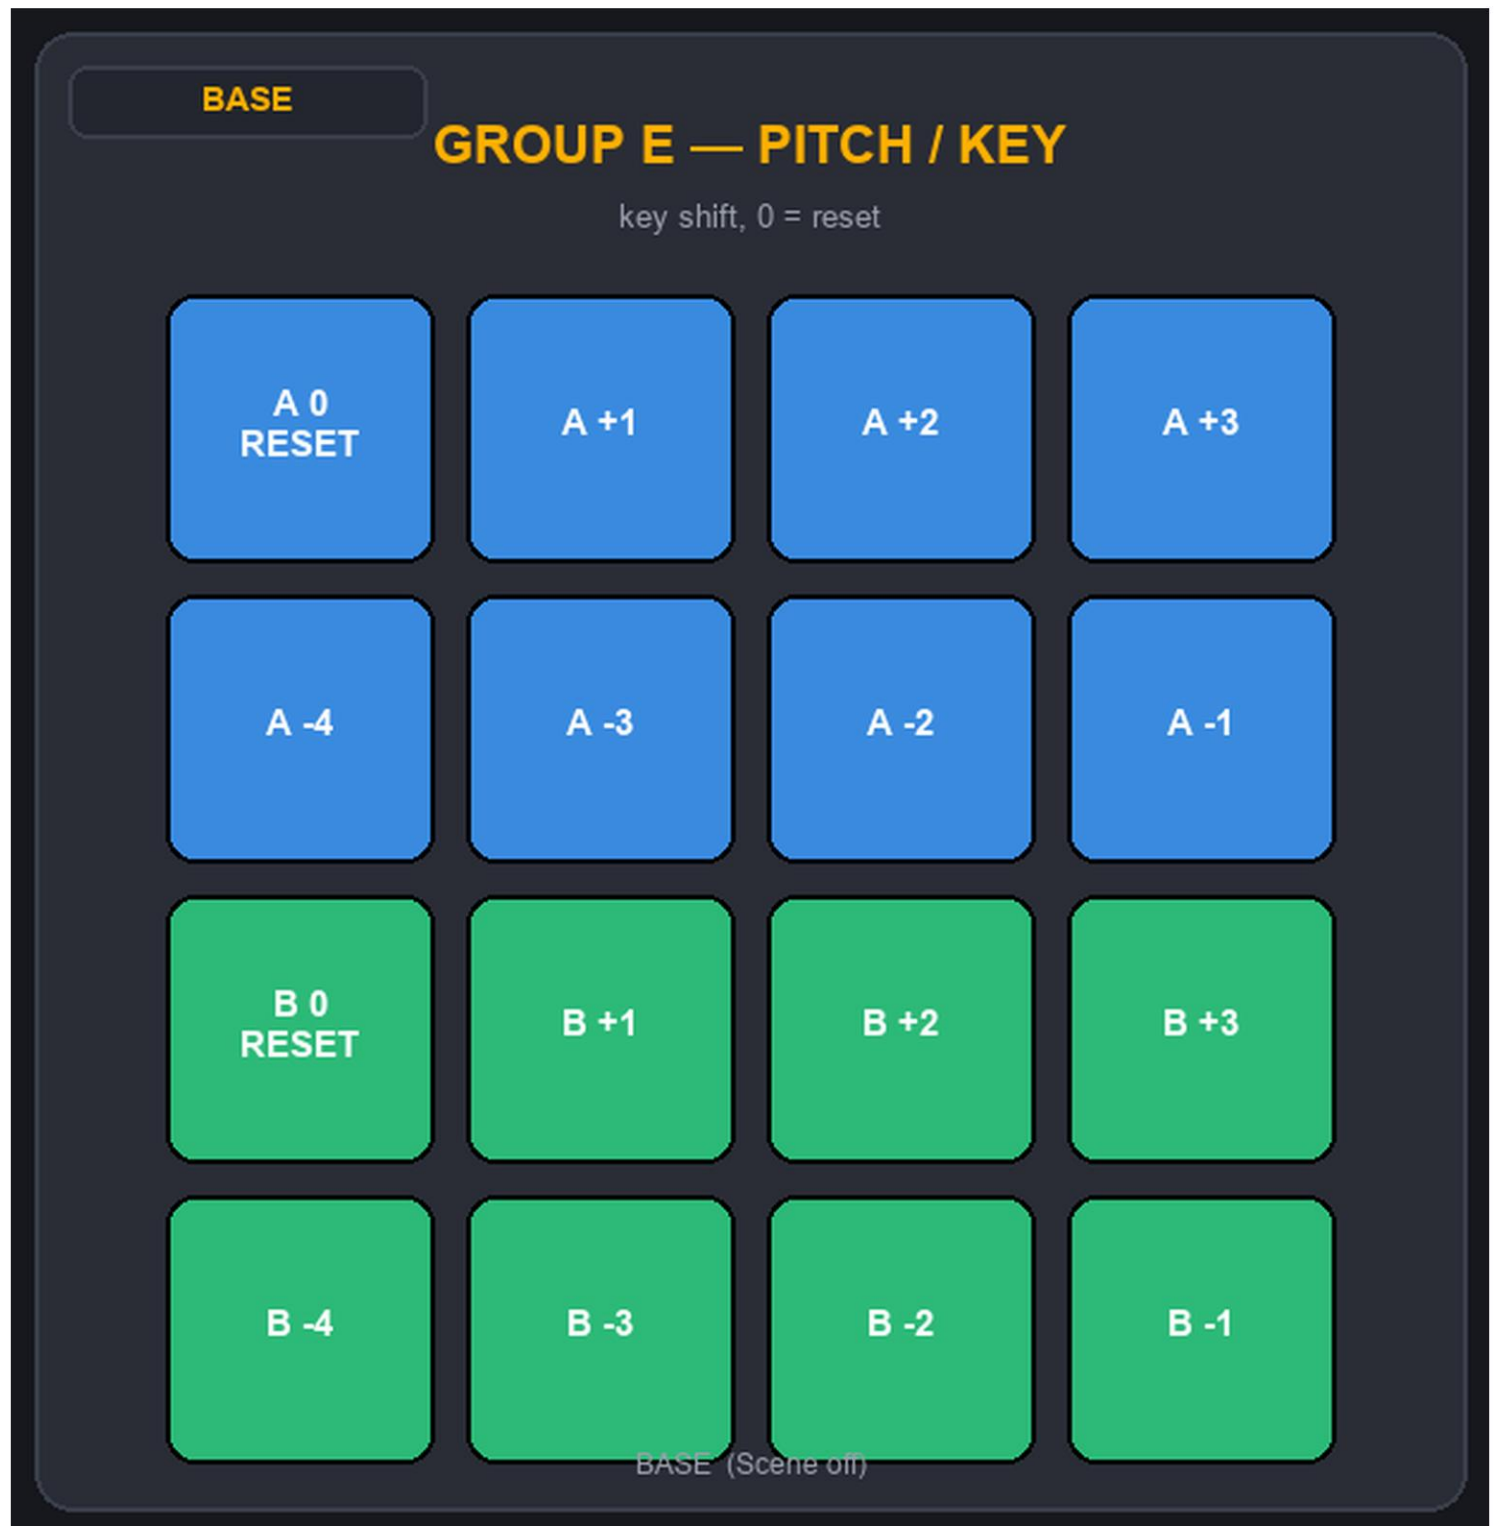

BASE — Group F

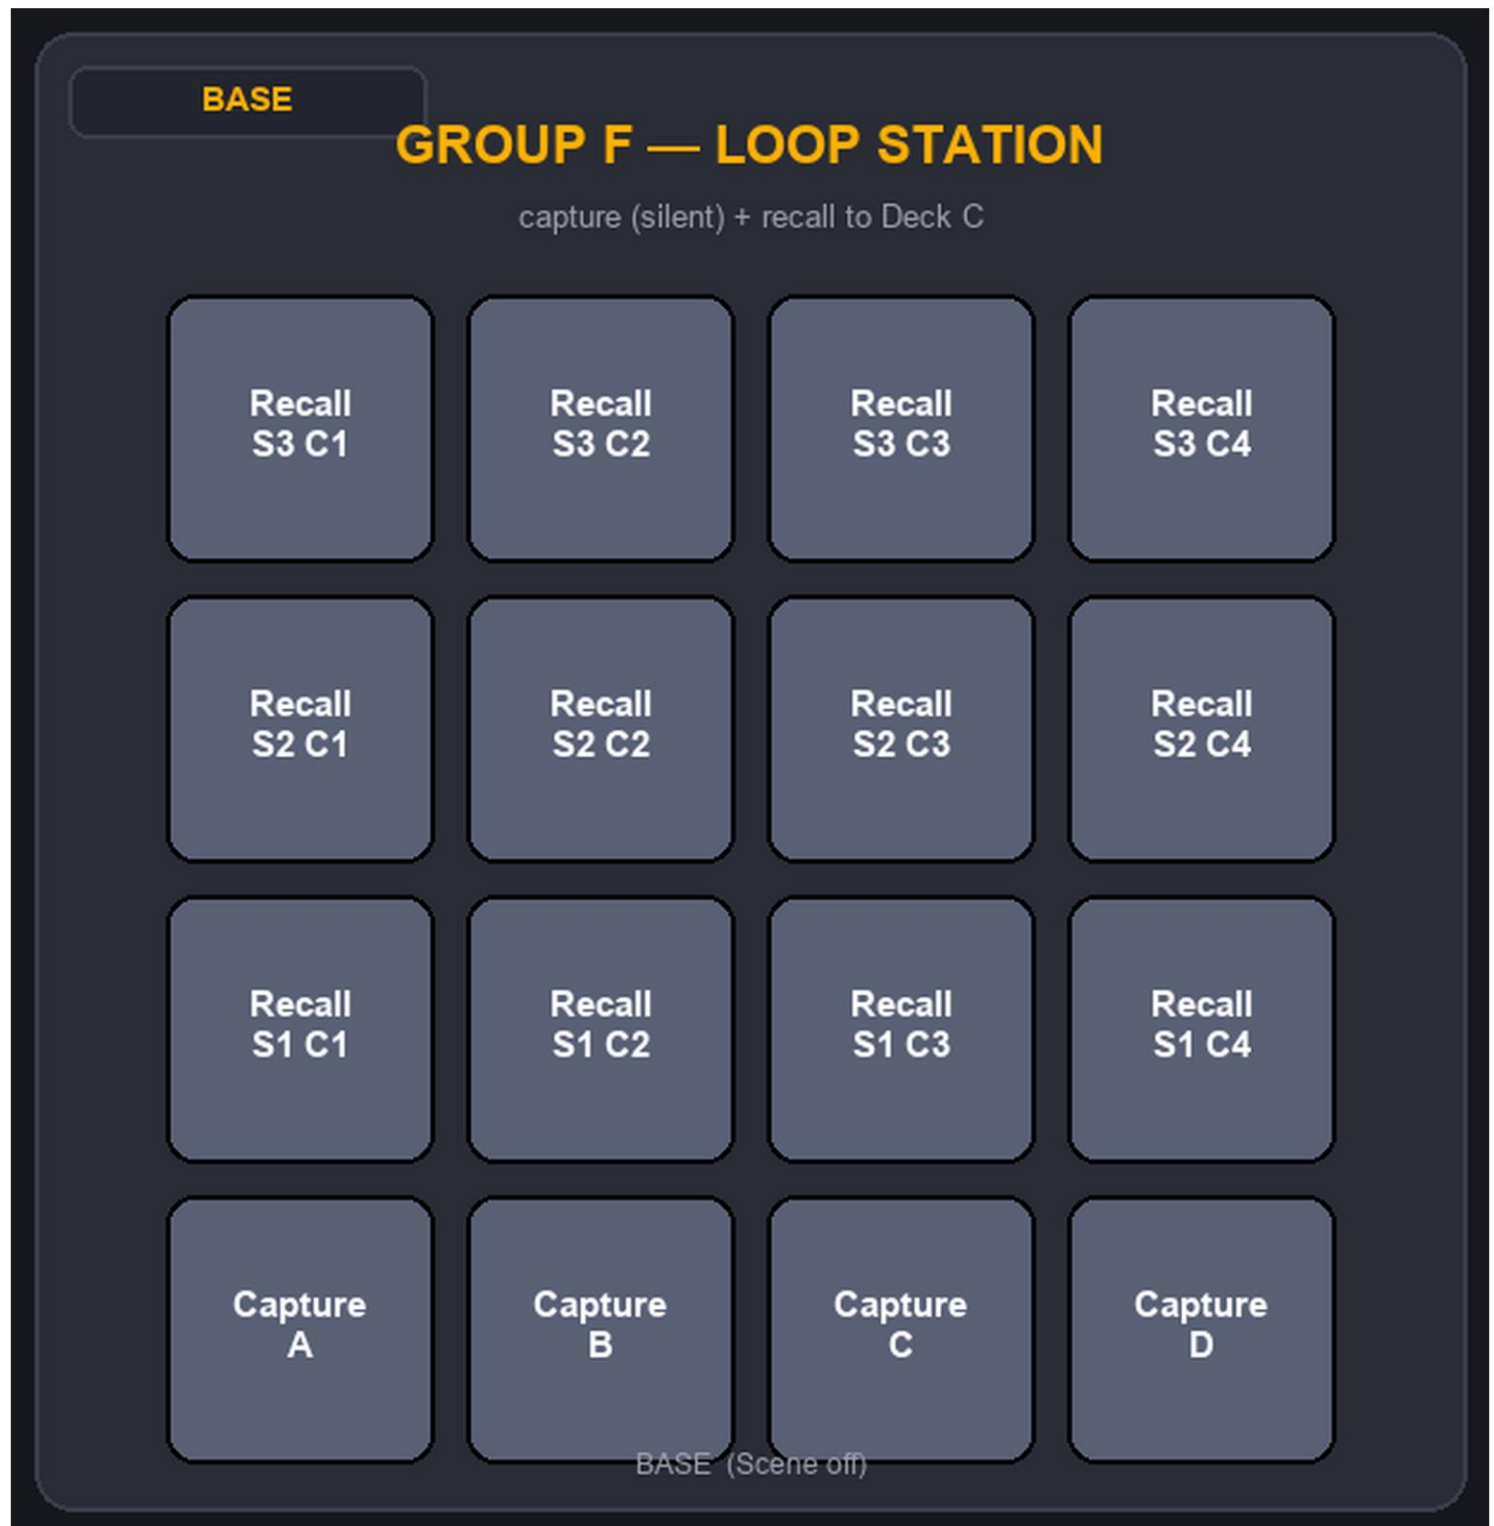


BASE — Group G



BASE — Group H



SCENE — Group A2

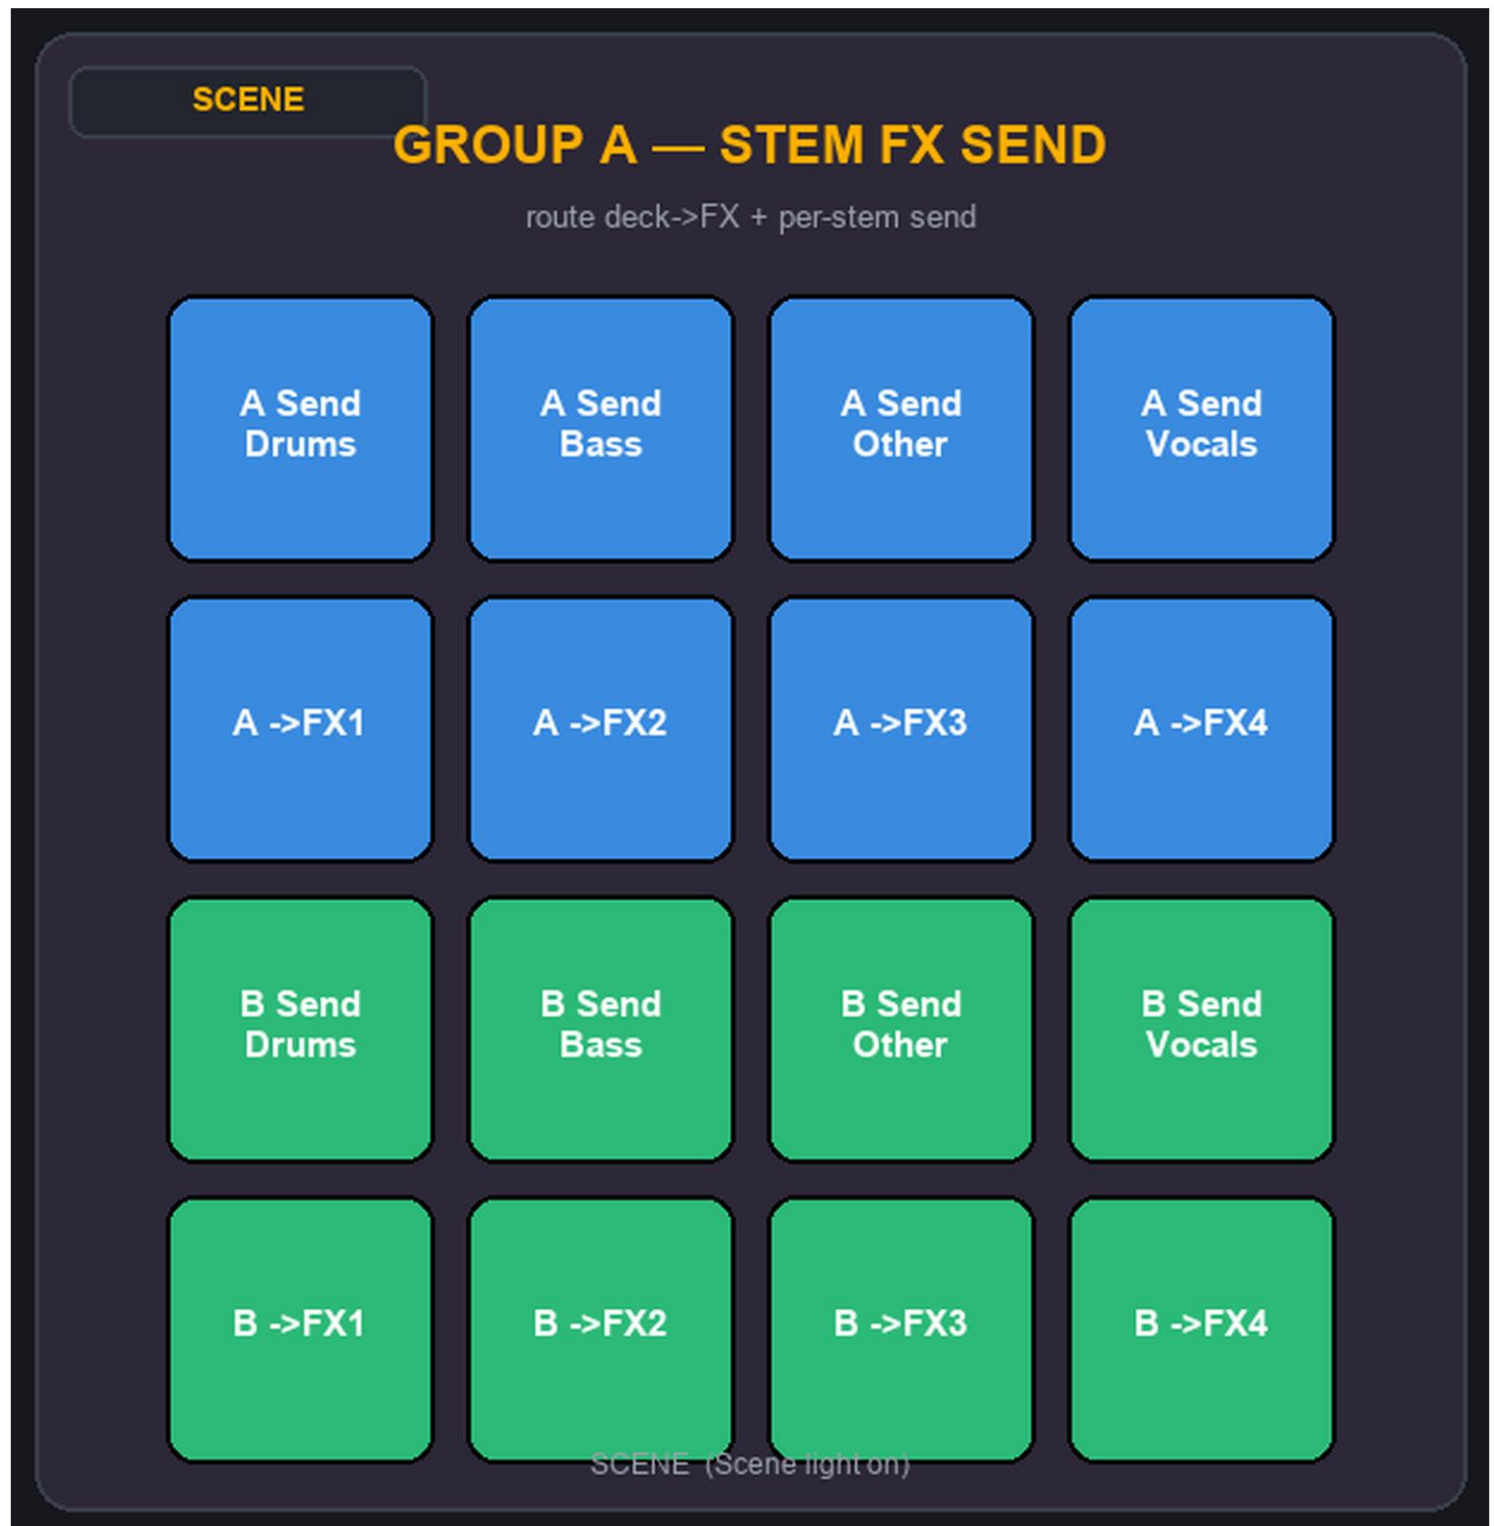

SCENE — Group B2

SCENE

GROUP B — LOOP ROLL

momentary roll size

A Roll 1	A Roll 2	A Roll 4	A Roll 8
A Roll 1/16	A Roll 1/8	A Roll 1/4	A Roll 1/2
B Roll 1	B Roll 2	B Roll 4	B Roll 8
B Roll 1/16	B Roll 1/8	B Roll 1/4	B Roll 1/2

SCENE (Scene light on)

SCENE — Group C2

SCENE

GROUP C — PHRASE JUMP

big jumps by beats

A -64	A +64	A -128	A +128
A -16	A +16	A -32	A +32
B -64	B +64	B -128	B +128
B -16	B +16	B -32	B +32

SCENE (Scene light on)

SCENE — Group D2

SCENE


GROUP D — REMIX DECK C 5-8

4x4 cells 5-8 (Deck C)


S4 C5	S4 C6	S4 C7	S4 C8
S3 C5	S3 C6	S3 C7	S3 C8
S2 C5	S2 C6	S2 C7	S2 C8
S1 C5	S1 C6	S1 C7	S1 C8

SCENE (Scene light on)

SCENE — Group E2

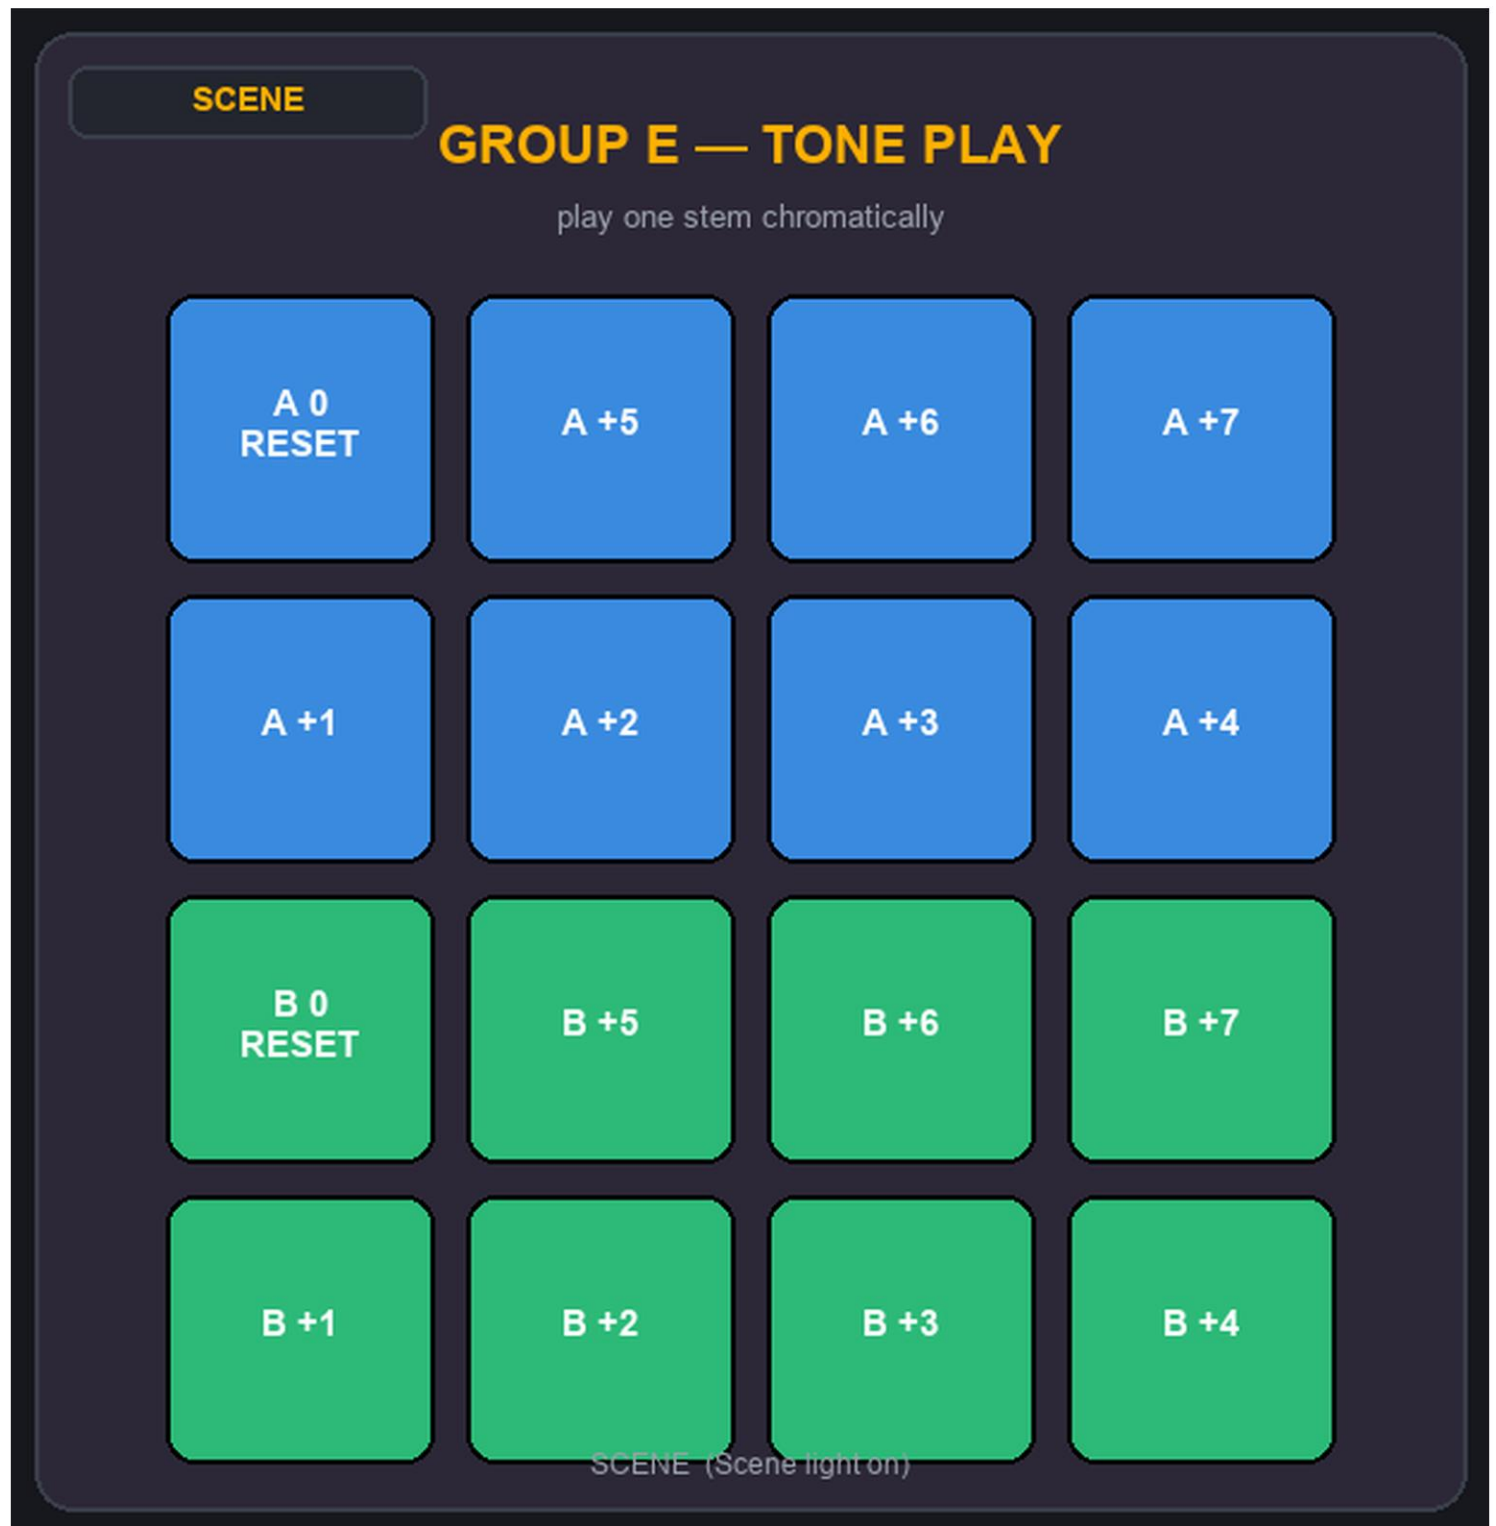

SCENE — Group F2

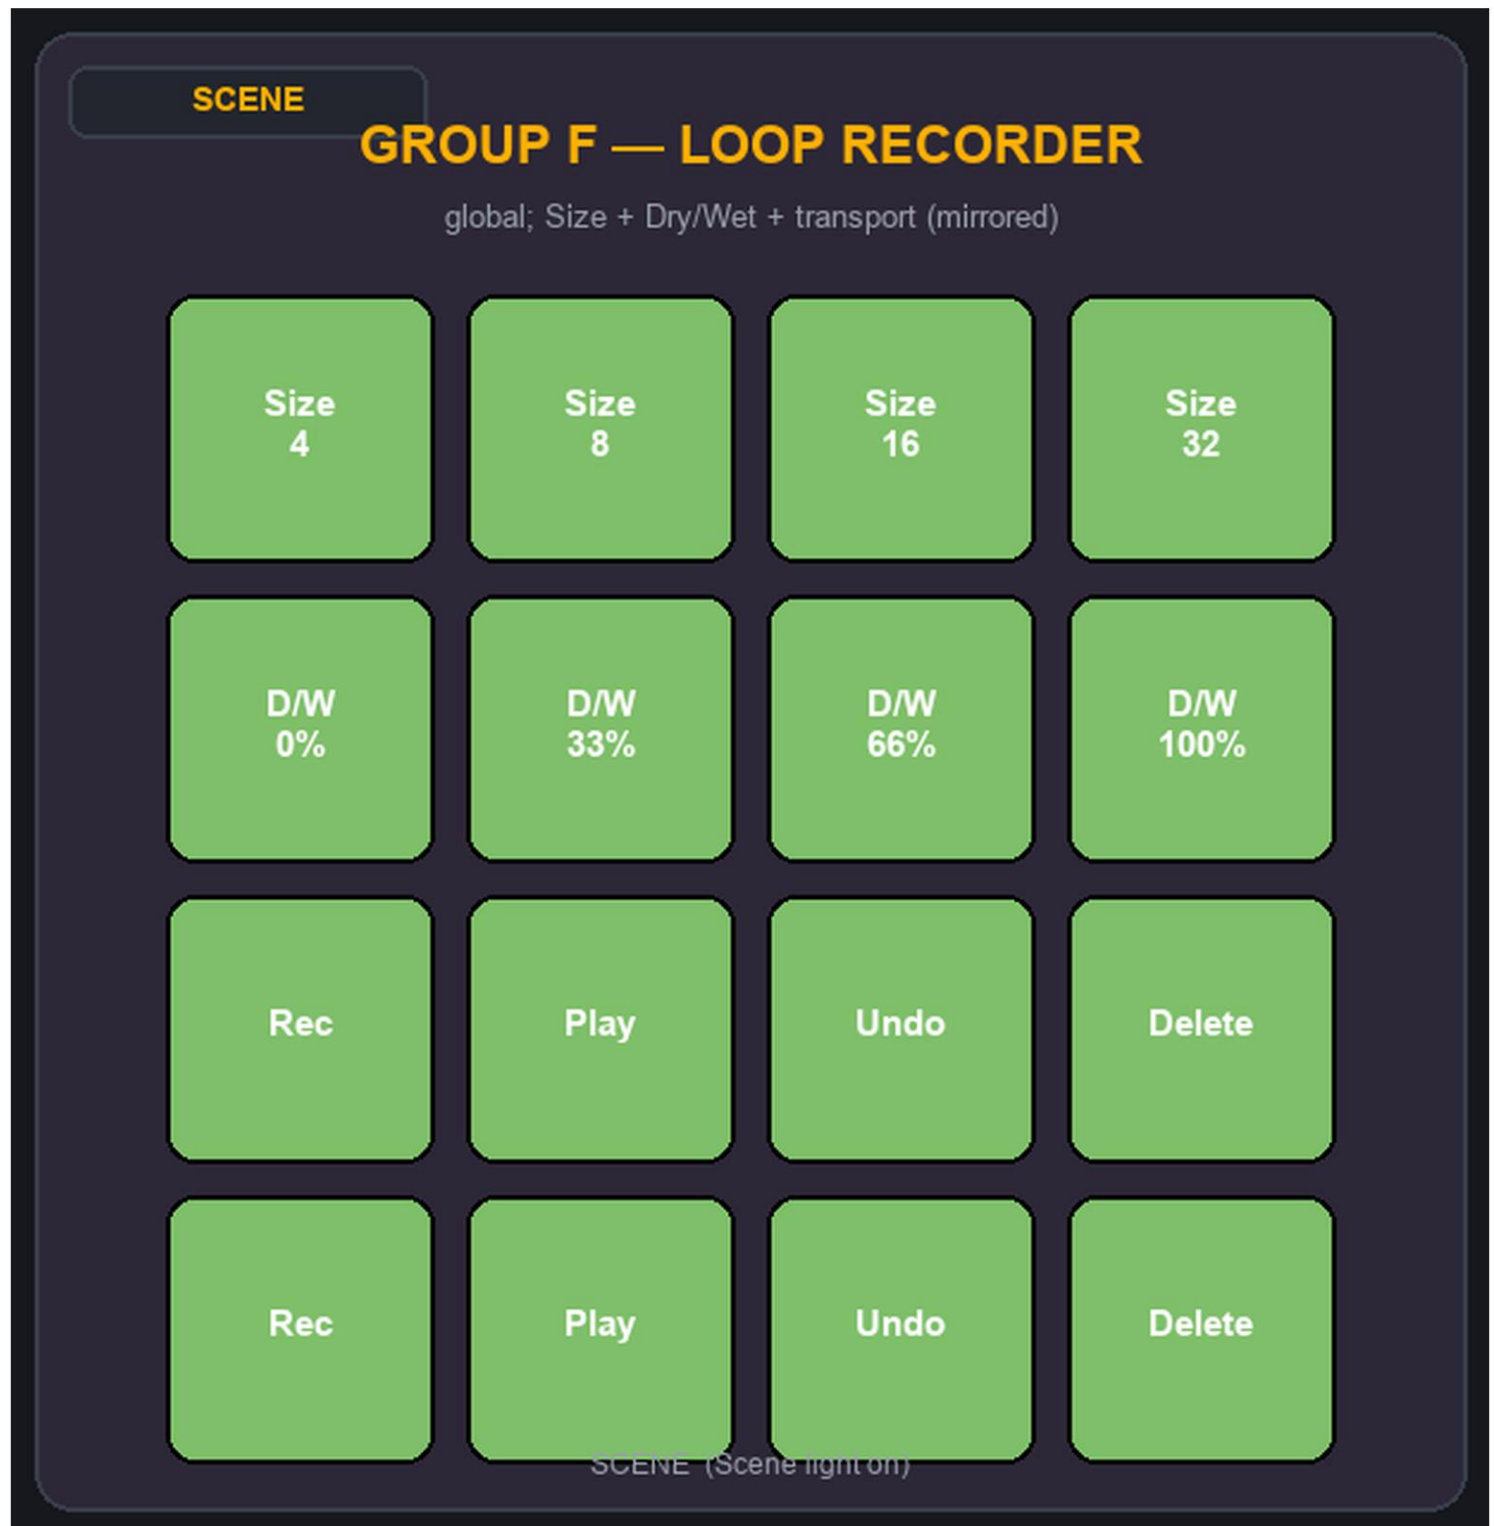


SCENE — Group G2




SCENE — Group H2



PATTERN — Group A3

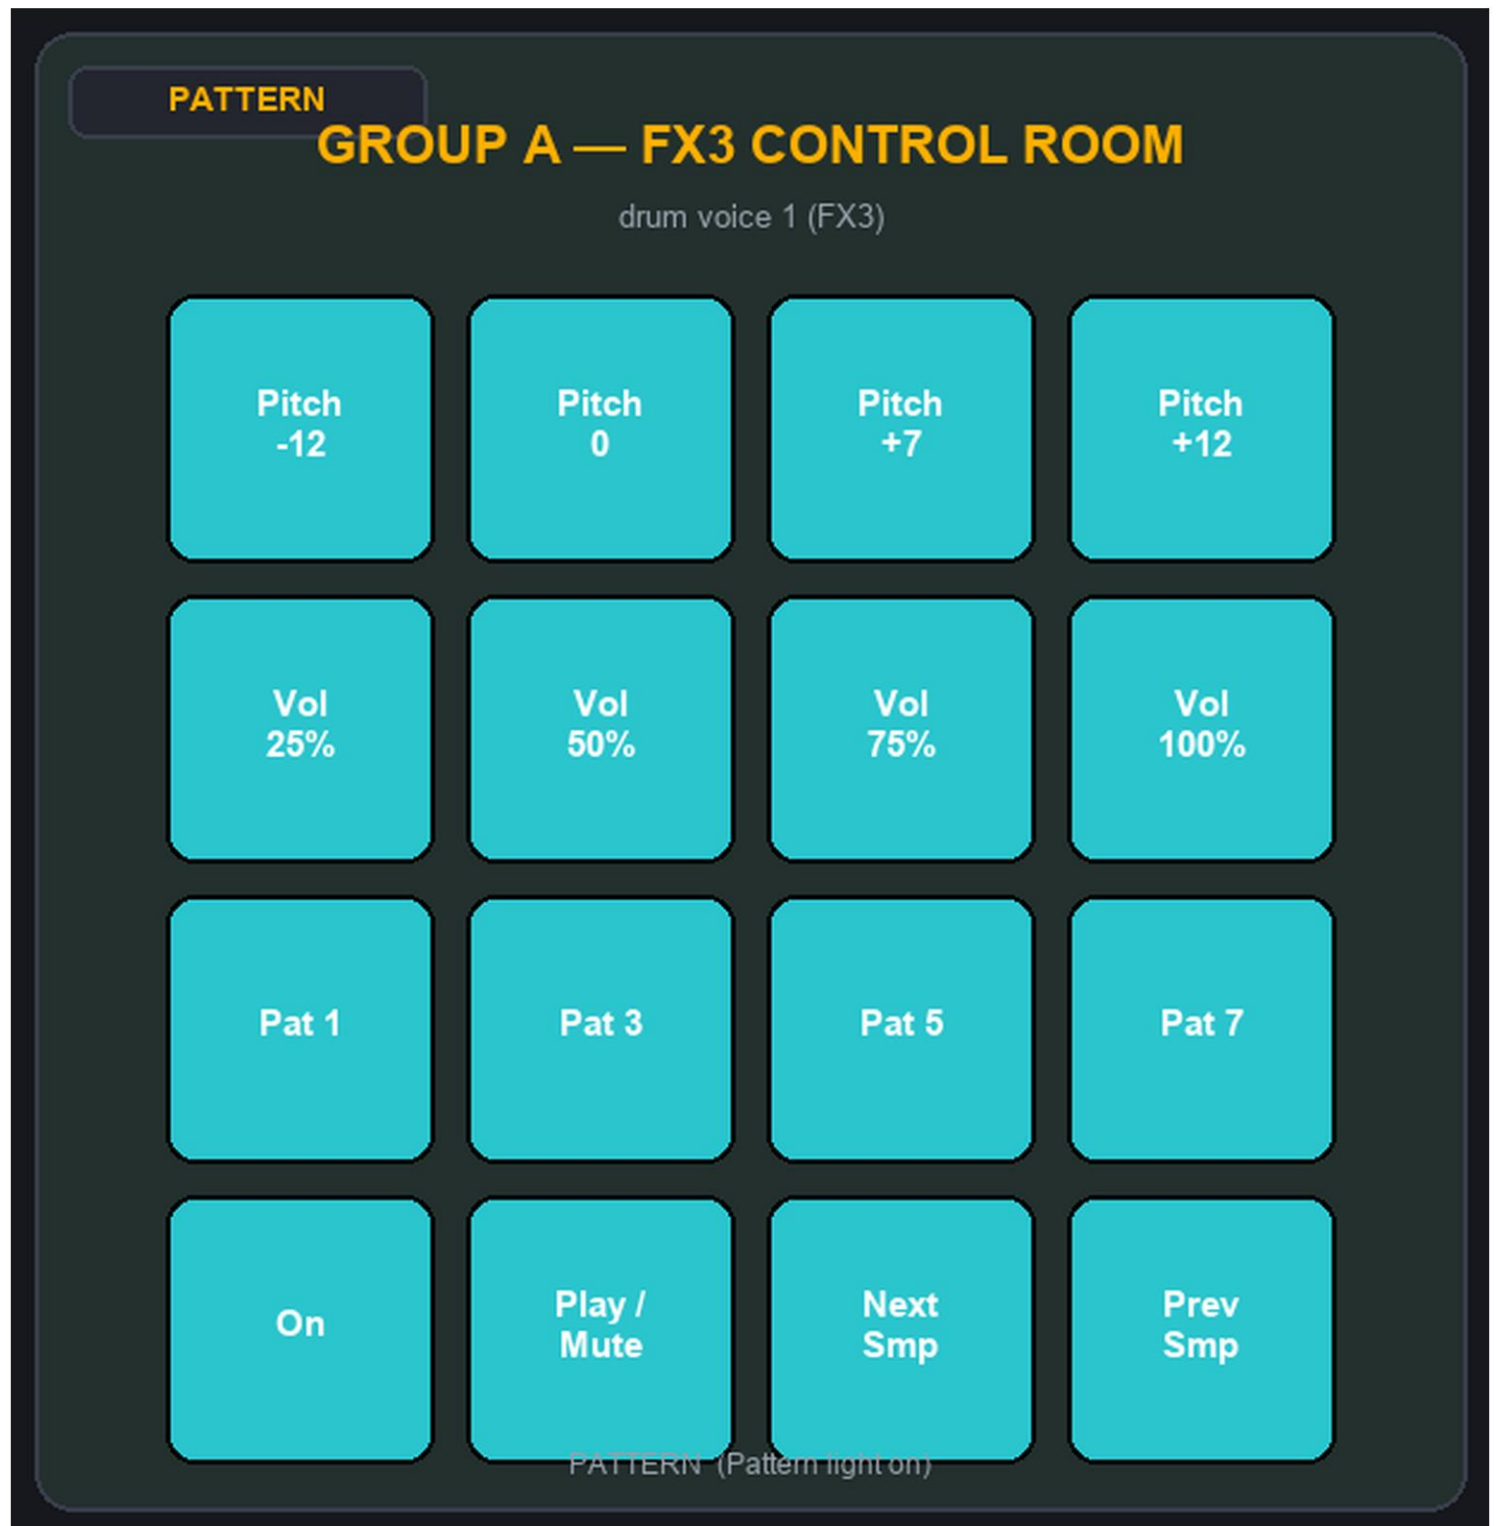

PATTERN — Group B3

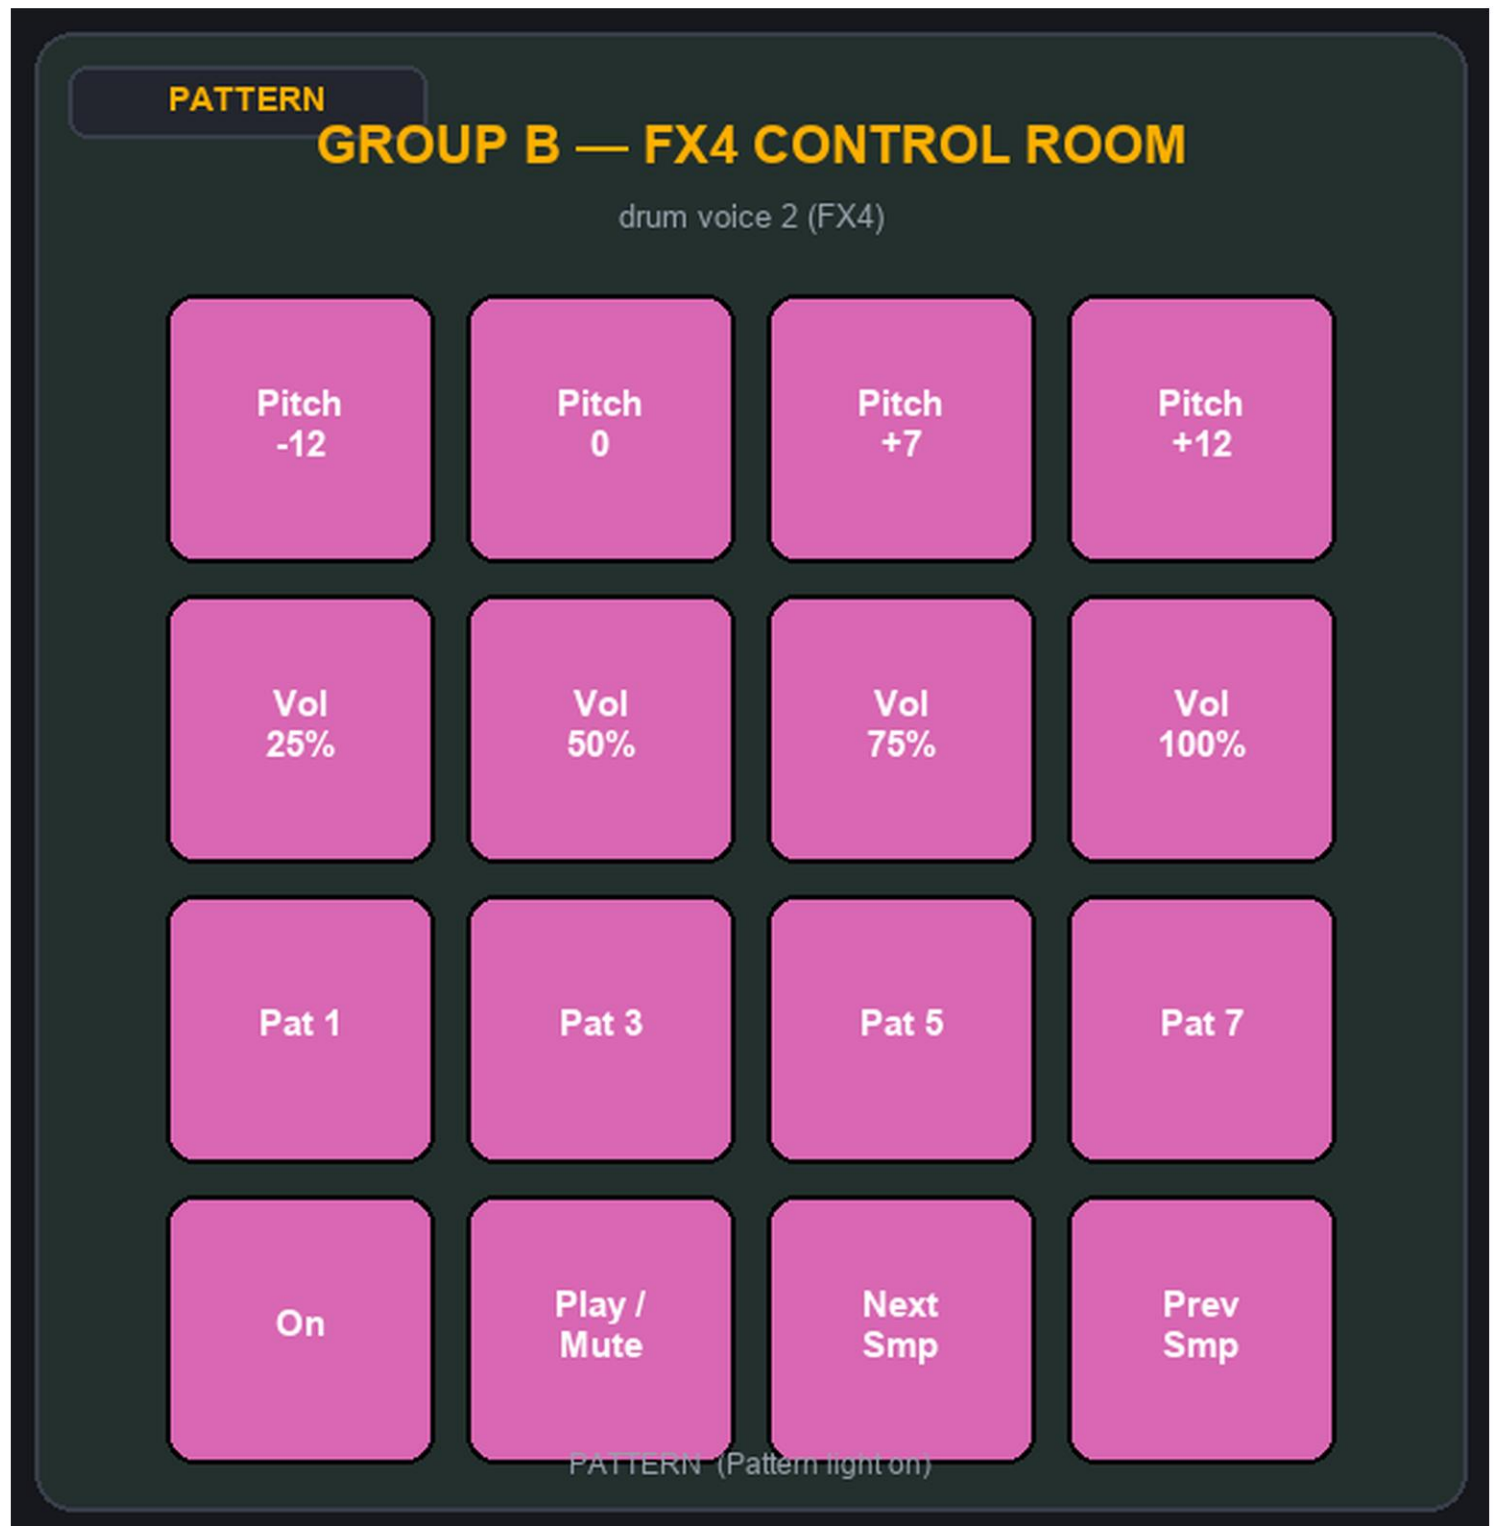

PATTERN — Group C3



PATTERN — Group D3

PATTERN


GROUP D — TONE PLAY DRUMS

play drums chromatically

FX4 +4	FX4 +5	FX4 +6	FX4 +7
FX4 +0	FX4 +1	FX4 +2	FX4 +3
FX3 +4	FX3 +5	FX3 +6	FX3 +7
FX3 +0	FX3 +1	FX3 +2	FX3 +3

PATTERN (Pattern light on)

PATTERN — Group E3

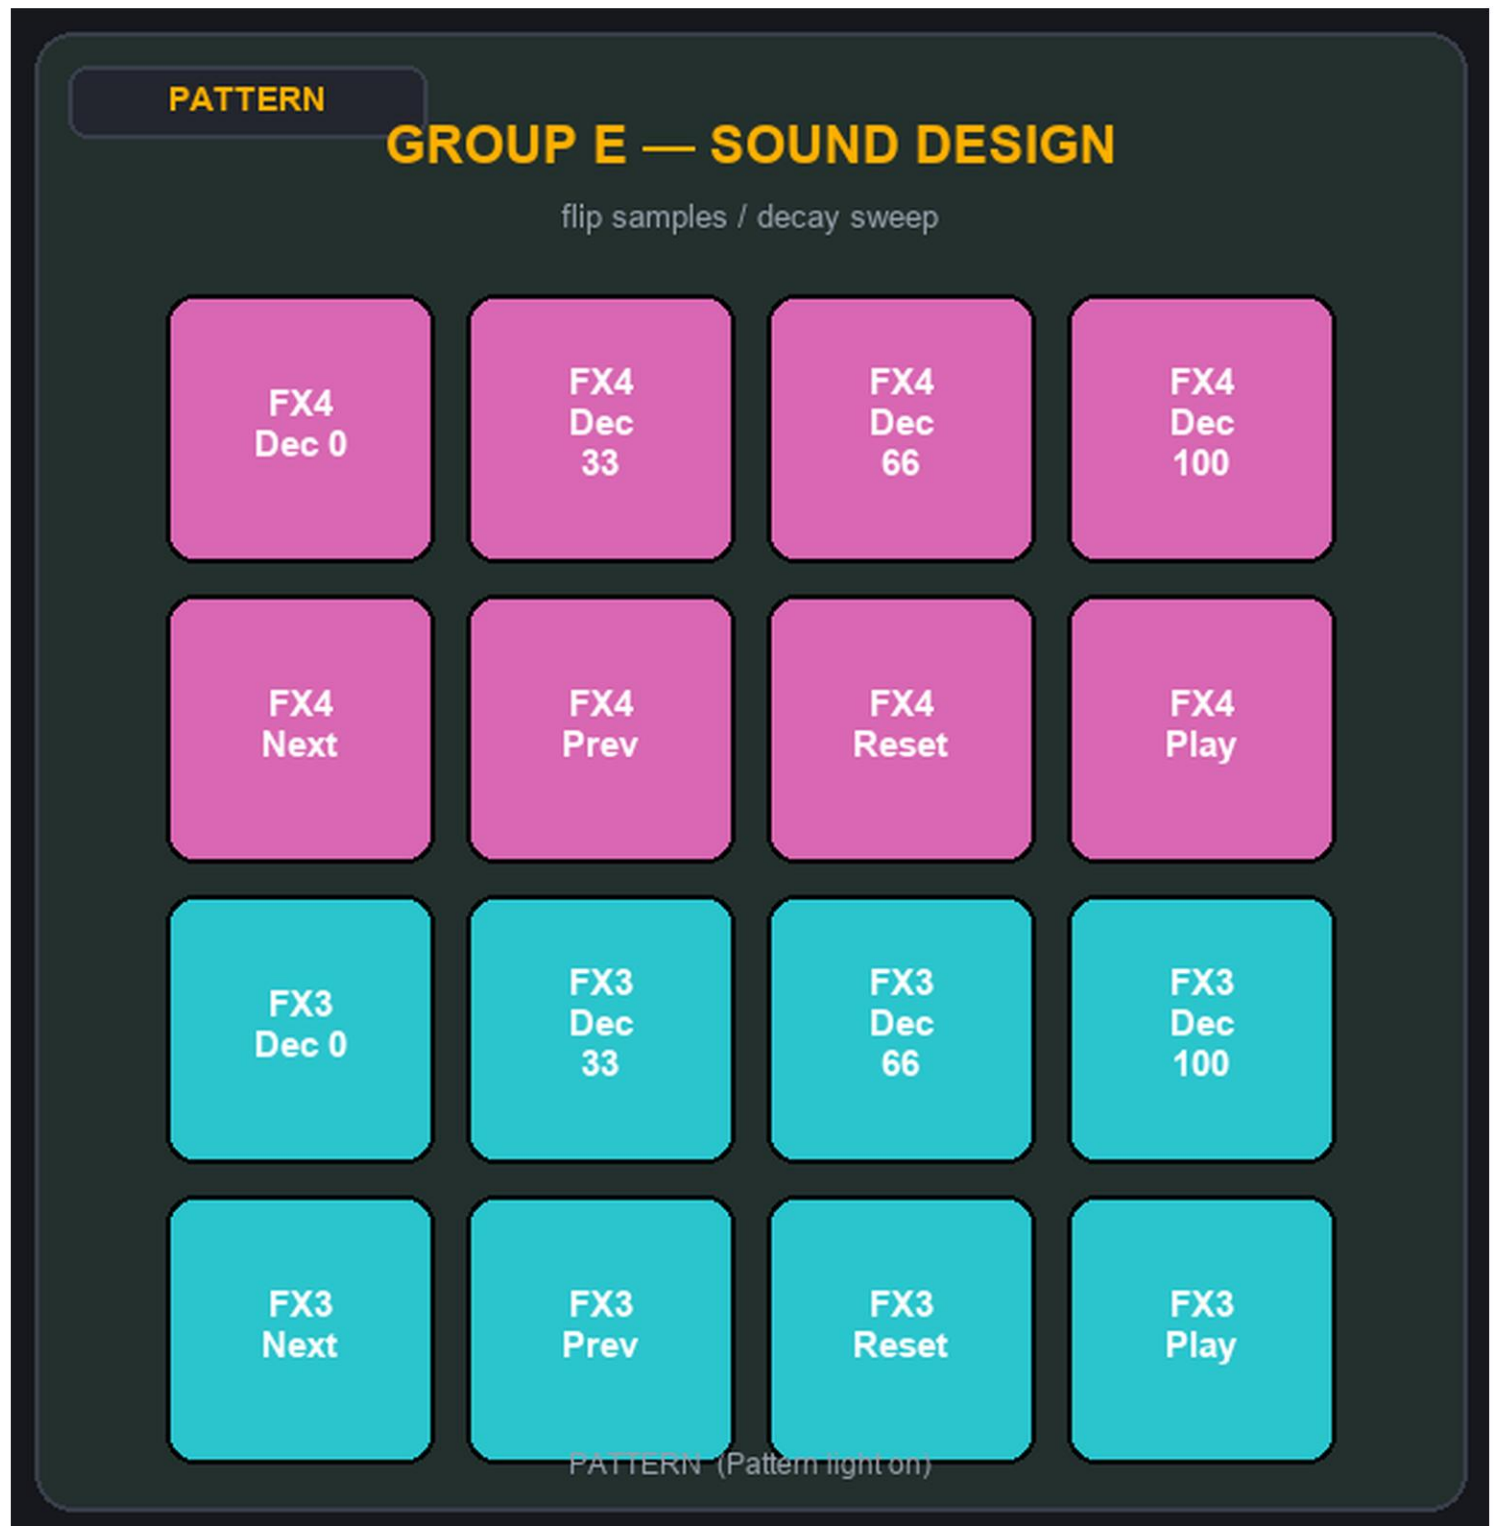

PATTERN — Group F3

PATTERN

GROUP F — GATE & VOLUME

mute-gate stutter + volume

FX4 Vol 0	FX4 Vol 33	FX4 Vol 66	FX4 Vol 100
FX4 Gate	FX4 Gate	FX4 Play	FX4 Reset
FX3 Vol 0	FX3 Vol 33	FX3 Vol 66	FX3 Vol 100
FX3 Gate	FX3 Gate	FX3 Play	FX3 Reset

PATTERN (Pattern light on)

PATTERN — Group G3

PATTERN


GROUP G — MACROS

one-tap combos across both voices

FX3 Play	FX4 Play	FX3 Vol+	FX4 Vol+
FX4 Pat 1	FX4 Pat 3	FX4 Pat 5	FX4 Pat 7
FX3 Pat 1	FX3 Pat 3	FX3 Pat 5	FX3 Pat 7
DROP	BUILD	FILL	CLEAR

PATTERN (Pattern light on)

PATTERN — Group H3

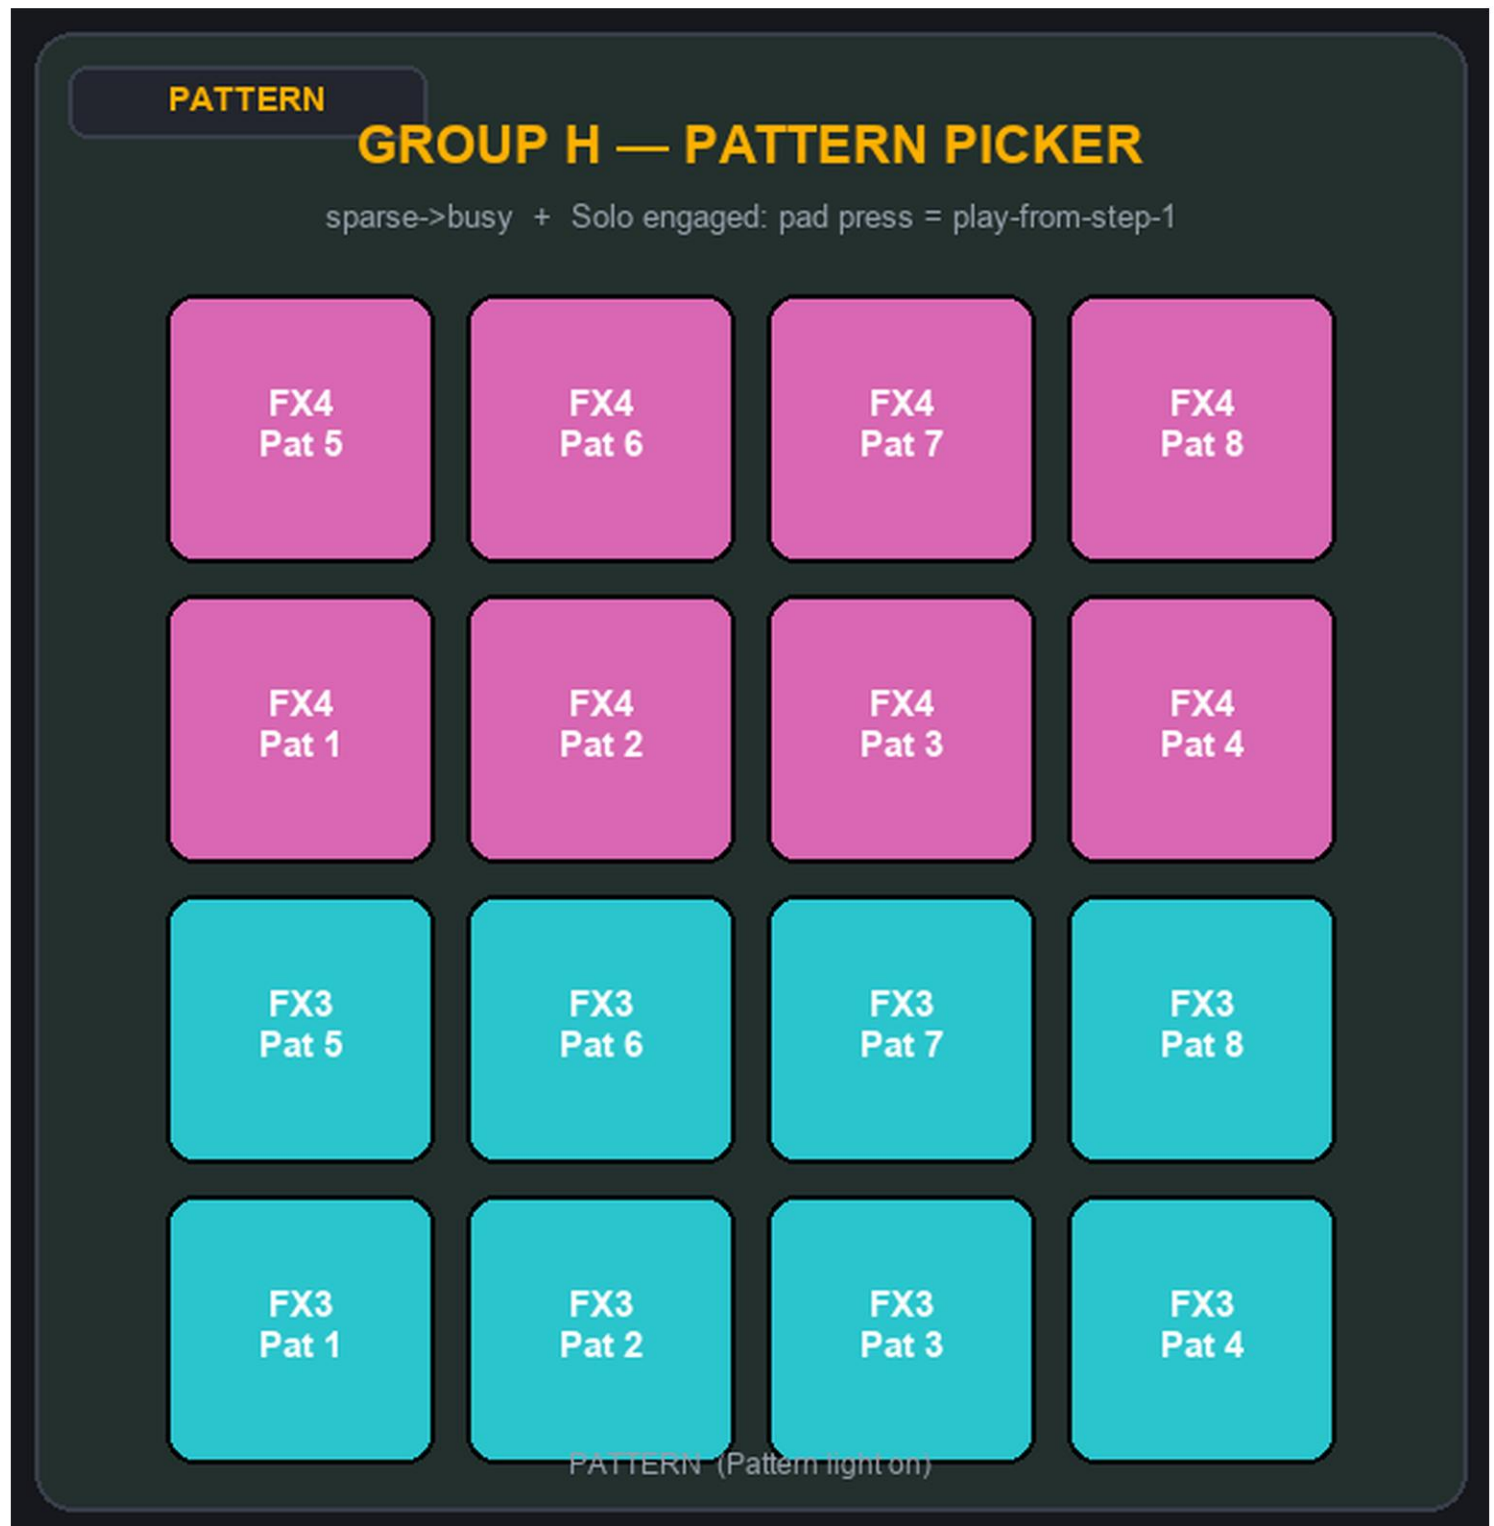

SCREEN — Group A

GROUP A SCREEN — STEMS FULL MIX (boot screen)

display buttons (b1-b8) + display knobs (k1-k8)

b1

A Mute
Drums

b2

A Mute
Bass

b3

A Mute
Other

b4

A Mute
Vocals

b5

B Mute
Drums

b6

B Mute
Bass

b7

B Mute
Other

b8

B Mute
Vocals

k1

A Vol
Drums

k2

A Vol
Bass

k3

A Vol
Other

k4

A Vol
Vocals

k5

B Vol
Drums

k6

B Vol
Bass

k7

B Vol
Other

k8

B Vol
Vocals

SCREEN — Group B

GROUP B SCREEN — STEMS ENCODERS

display buttons (b1-b8) + display knobs (k1-k8)

b1

push = mute

b2

push = mute

b3

push = mute

b4

push = mute

b5

push = mute

b6

push = mute

b7

push = mute

b8

push = mute

k1

A Vol Drums

k2

A Vol Bass

k3

A Vol Other

k4

A Vol Vocals

k5

B Vol Drums

k6

B Vol Bass

k7

B Vol Other

k8

B Vol Vocals

SCREEN — Group C

GROUP C SCREEN — STEMS MIX CTRL

display buttons (b1-b8) + display knobs (k1-k8)

b1

A Mute
Drums

b2

A Mute
Bass

b3

A Mute
Other

b4

A Mute
Vocals

b5

B Mute
Drums

b6

B Mute
Bass

b7

B Mute
Other

b8

B Mute
Vocals

k1

A Filt
Drums

k2

A Filt
Bass

k3

A Filt
Other

k4

A Filt
Vocals

k5

B Filt
Drums

k6

B Filt
Bass

k7

B Filt
Other

k8

B Filt
Vocals

SCREEN — Group D

GROUP D SCREEN — STEMS FINE VOL

display buttons (b1-b8) + display knobs (k1-k8)

b1

A Mute
Drums

b2

A Mute
Bass

b3

A Mute
Other

b4

A Mute
Vocals

b5

B Mute
Drums

b6

B Mute
Bass

b7

B Mute
Other

b8

B Mute
Vocals

k1

A Fine
Drums

k2

A Fine
Bass

k3

A Fine
Other

k4

A Fine
Vocals

k5

B Fine
Drums

k6

B Fine
Bass

k7

B Fine
Other

k8

B Fine
Vocals

SCREEN — Group E

GROUP E SCREEN — STEMS FILTER

display buttons (b1-b8) + display knobs (k1-k8)

b1

A FiltOn
Drums

b2

A FiltOn
Bass

b3

A FiltOn
Other

b4

A FiltOn
Vocals

b5

B FiltOn
Drums

b6

B FiltOn
Bass

b7

B FiltOn
Other

b8

B FiltOn
Vocals

k1

A Filt
Drums

k2

A Filt
Bass

k3

A Filt
Other

k4

A Filt
Vocals

k5

B Filt
Drums

k6

B Filt
Bass

k7

B Filt
Other

k8

B Filt
Vocals

SCREEN — Group F

GROUP F SCREEN — FX 1 + 2

display buttons (b1-b8) + display knobs (k1-k8)

b1

FX1 On

b2

FX1 Btn1

b3

FX1 Btn2

b4

FX1 Btn3

b5

FX2 On

b6

FX2 Btn1

b7

FX2 Btn2

b8

FX2 Btn3

k1

FX1 D/Wet

k2

FX1 Knob1

k3

FX1 Knob2

k4

FX1 Knob3

k5

FX2 D/Wet

k6

FX2 Knob1

k7

FX2 Knob2

k8

FX2 Knob3

SCREEN — Group G

GROUP G SCREEN — FX 3 + 4

display buttons (b1-b8) + display knobs (k1-k8)

b1

FX3 On

b2

FX3 Btn1

b3

FX3 Btn2

b4

FX3 Btn3

b5

FX4 On

b6

FX4 Btn1

b7

FX4 Btn2

b8

FX4 Btn3

k1

FX3 D/Wet

k2

FX3 Knob1

k3

FX3 Knob2

k4

FX3 Knob3

k5

FX4 D/Wet

k6

FX4 Knob1

k7

FX4 Knob2

k8

FX4 Knob3

SCREEN — Group H

GROUP H SCREEN — FX ALL

display buttons (b1-b8) + display knobs (k1-k8)

b1

FX1 On

b2

FX2 On

b3

FX3 On

b4

FX4 On

b5

FX1 Btn1

b6

FX2 Btn1

b7

FX3 Btn1

b8

FX4 Btn1

k1

FX1 D/Wet

k2

FX2 D/Wet

k3

FX3 D/Wet

k4

FX4 D/Wet

k5

FX1 Knob1

k6

FX2 Knob1

k7

FX3 Knob1

k8

FX4 Knob1