
TEAL: Multi-Interactive Board Room Documentation

Getting Ready to Use the Room

- In most cases, the room should be operated using the buttons on the podium.



- Push the "On" button to turn on all the screens in the room
- Connect the USB-Cto your laptop; this will share your laptop screen with the large displays behind the podium)

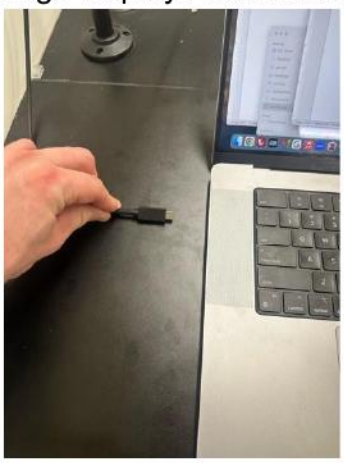

- The podium microphone is on by default. If you do not wish to use the podium microphone, press the microphone mute button. (second button from the top)
- By default, your laptop's sound is shared with the room's speaker system. To turn off your laptop's sound, press the sound mute button. (third button from the top)

Troubleshooting:

- I am using a MacBook, and I can only share one screen (i.e., I can't extend my screen).
    - This is a normal functioning of MacBooks
- When I connect the USB-C connector to my laptop, my screen doesn't share.
    - This happens with some laptops. In this case, disconnect the "HDMI Left" cable from the back of the splitter and connect it directly to your laptop. This will only share the image to the left screen behind the podium, but you will still be able to share your screen. To get audio, connect the USB-C cable to your laptop as well and select "Shure Intelimix" as the output for your audio.





- Some of the Flipboards didn't turn on when I pressed the "On" button.
    - This happens when the Flipboards are turned off manually rather than with the podium's "Off" button. To turn the Flipboards that didn't turn on with the podium button directly, push the button at the bottom right of the board.



Using the Room

Sharing your screen

- To share the screen from the front of the room with all the boards in the room, press the "Share" button.
- To stop sharing the screen, press the "Share" button again.


Having Students Annotate Work

- To have students save their work/annotations on documents, first have the students connect their laptops' HDMI and USB-B ports to the cables on the table.




Some laptops may need to use a dongle for this.

- Have the students open the document that you want them to annotate in a program with annotation capabilities (e.g., Microsoft Word). In Word, the tools for annotation and board writing are in the “Draw” tab of the ribbon

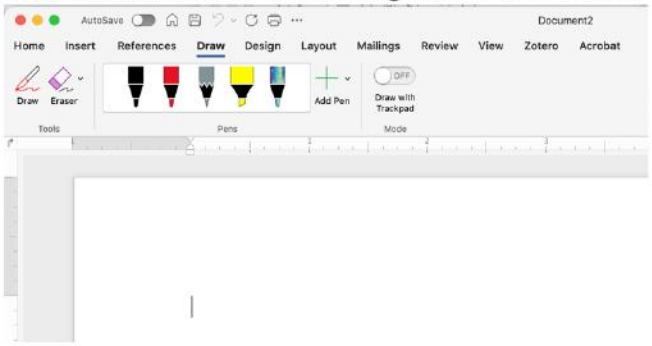

- Once connected, the flipboards can act as an input for the laptop. This allows students to write on the boards using the Flipboard pen like regular whiteboards, and the annotations will be saved in the document on their laptops. They can then reaccess these annotations, reassess, and edit them or submit them to their professor.
    - NOTE: Submitting the annotated document is the same as submitting any other Word document.
- While connected, the Flipboard acts as a touchscreen interface with the students’ laptops. The students can interact with their laptops (e.g., by clicking, selecting documents, etc.) using the Flipboard.

Using the Flipboards and Whiteboards

- Students can use the Flipboards as regular whiteboards without connecting their laptops to the screens.
- The screen should open up to a new whiteboard by default. If it doesn’t, push the “Whiteboard” button on the Homescreen. In the Whiteboard interface, students can write on the boards as if they were regular whiteboards.
- NOTE: work done in this mode is not saved. If you want students to submit this work, we recommend they take a photo and submit that.

Shutting Down the Room

- When the class is done, push the “Off” button on the podium to turn off all of the technology in the room.