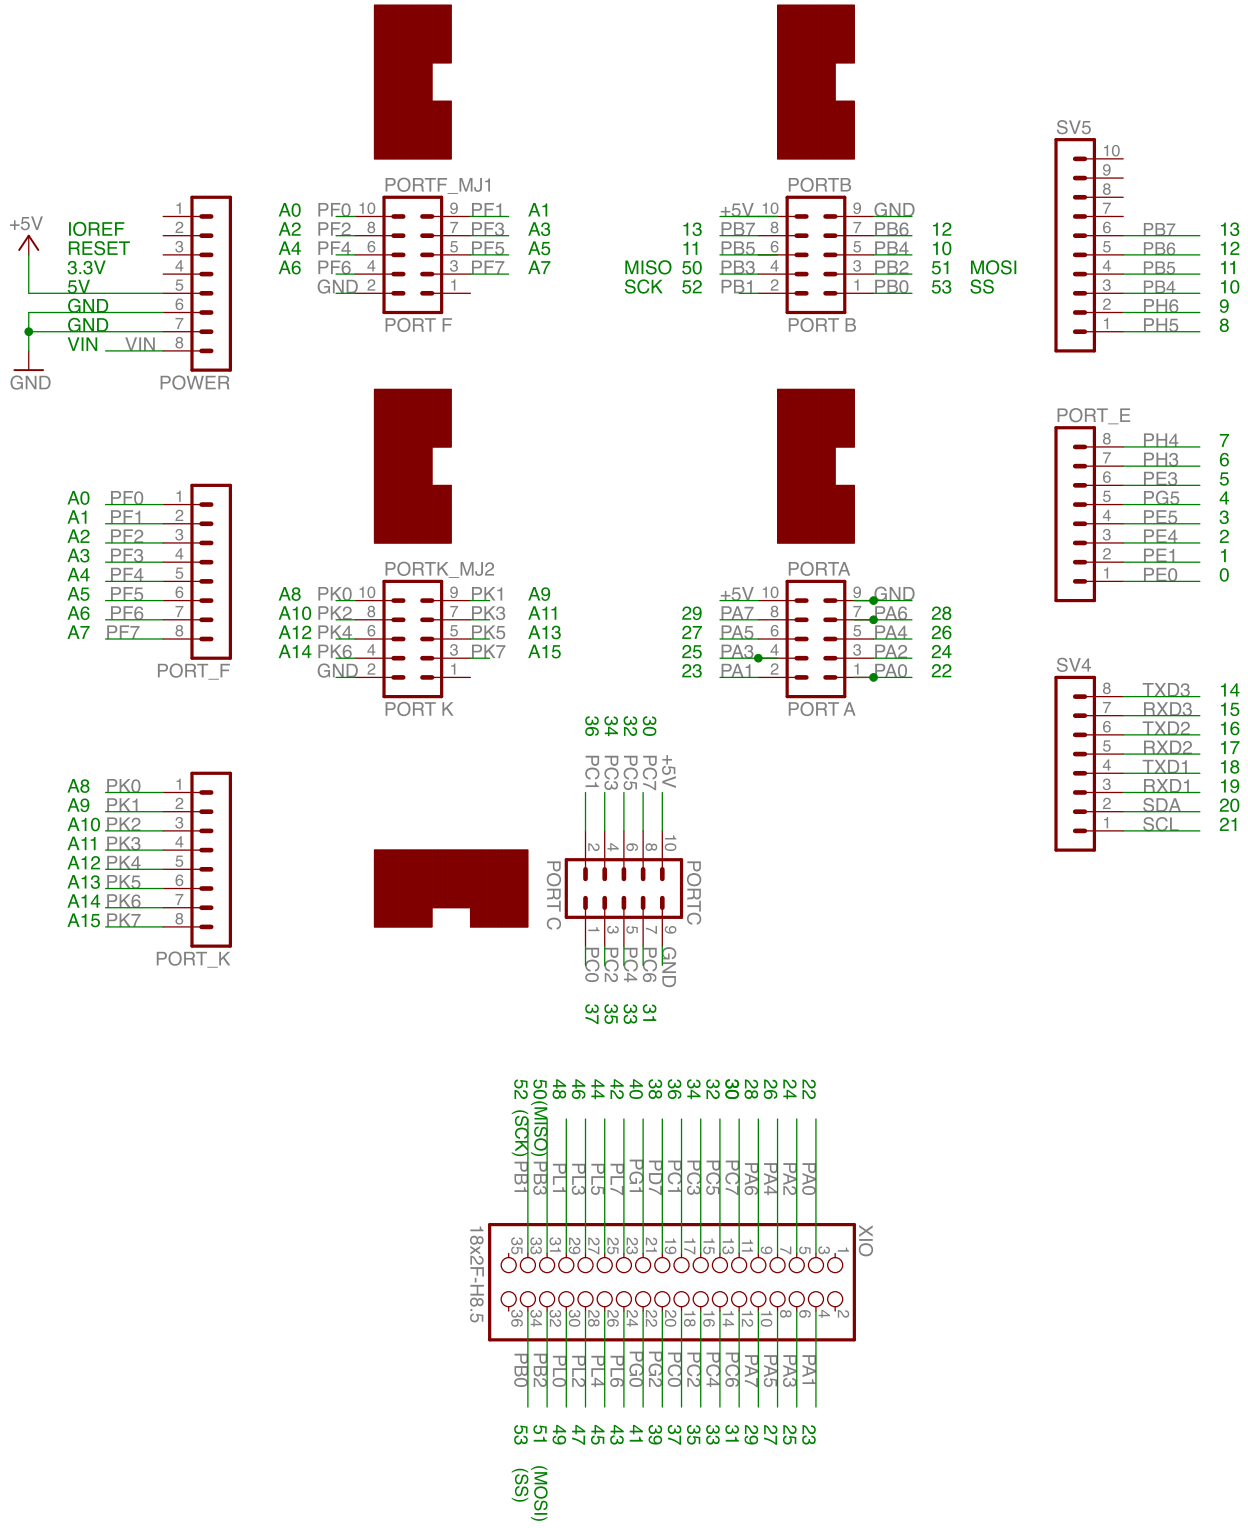
PORTF_MJ1
PORTB
SV5
PORT F
PORT B
POWER
IOREF
RESET
3.3V
5V
GND
VIN
+5V
MISO
MOSI
SCK
SS
PORTK_MJ2
PORTA
PORT_E
PORT_F
PORT K
PORT A
PORT_K
PORTC
PORT C
SV4
XIO
18x2F-H8.5