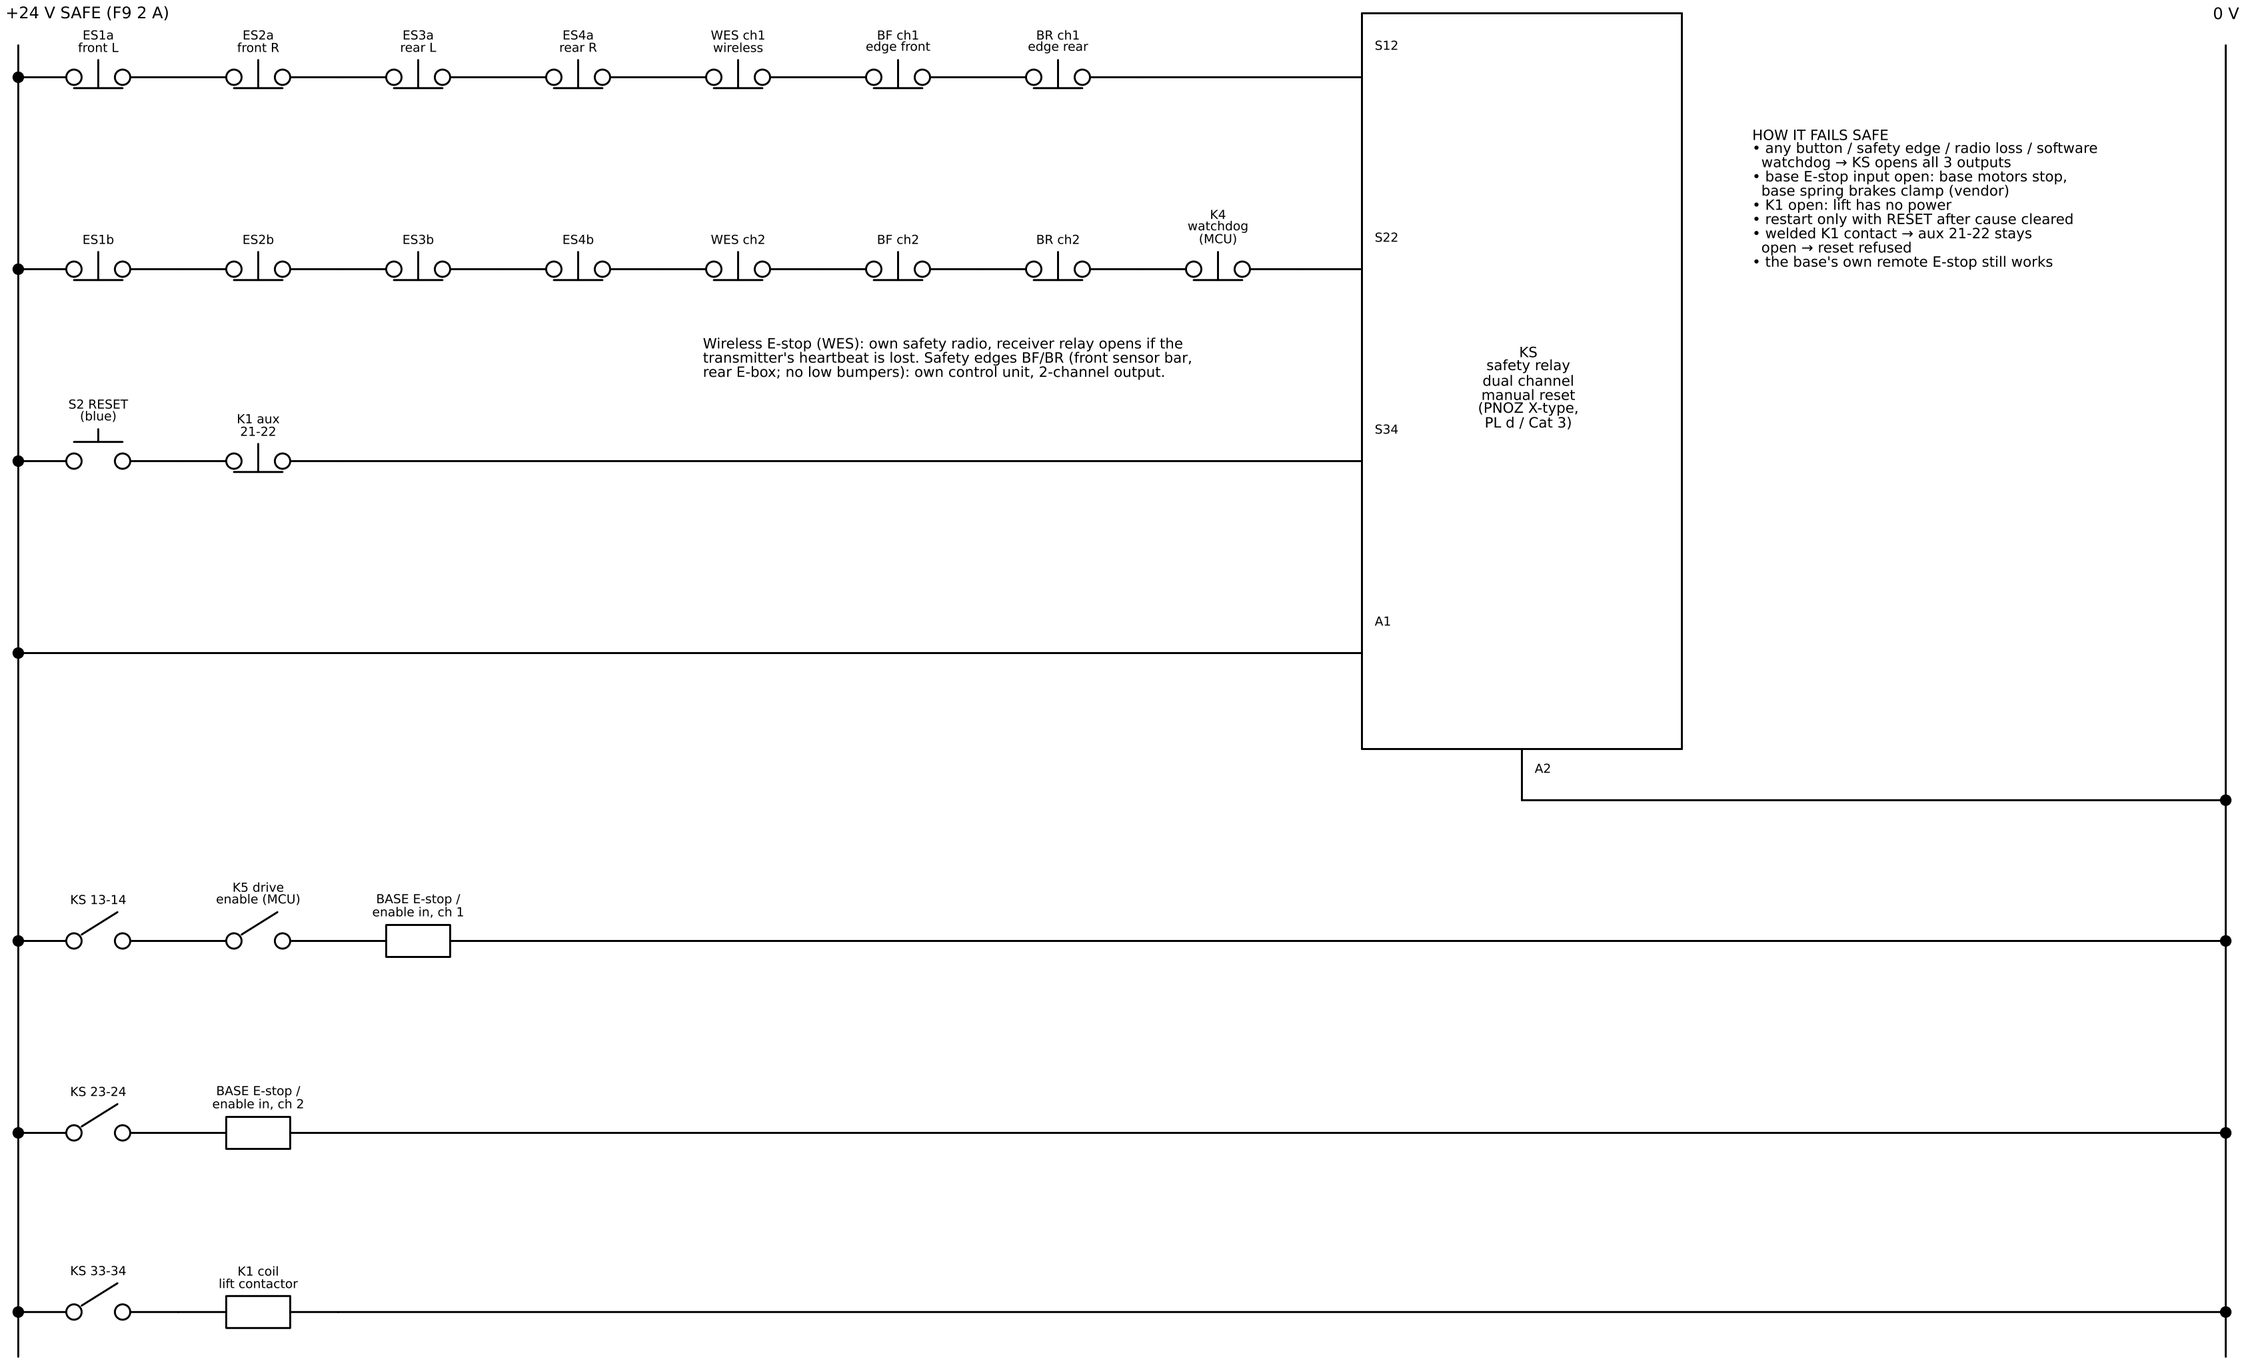

Shown generic. On PNOZ X-type relays the chains run S11→S12, S21→S22, S33→S34 (relay-supplied test voltage) instead of from +24 V. E-stops: 2 NC contact blocks each (a/b). The base's E-stop input type (NC loop / enable / 1 or 2 ch) must be read from the vendor manual; if it has only 1 channel, wire ch 1 and ch 2 in series. Check against ISO 13849 by a qualified person.

BINBOT — autonomous olive bin carrier

SAFETY CIRCUIT — E-STOP, BASE ENABLE, LIFT

DWG E-02 REV C BP-04 electronics

PRELIMINARY — check against vendor datasheets 2026-10-28