


Change SNBC Ethernet Printer IP

Change the IP Address for SNBC Ethernet/Triple Interface Printers

Whether you need to set an IP for a new printer before it leaves the office or incorporate a printer that has been repurposed from another site or kitchen area, the steps are basically the same. The only real difference is these steps will be performed on your machine if the printer is in hand; as apposed to performing them through Bomgar remotely.

1. Ensure printer is mechanically functioning by performing a self test.
 - A. Ensure the printer is online by checking the lights on the ethernet port.
 - B. Power printer off and back on while holding the feed button.
 - C. Once the self test starts printing, you may release the feed button. Once self test is completed, power cycle the printer again without holding the feed button to return to normal function.
 - D. The current IP address will be printed on the self test. This IP address can be used to help distinguish a new printer at a remote site or can be compared to the settings in hardware devices to confirm we are working with the right printer.

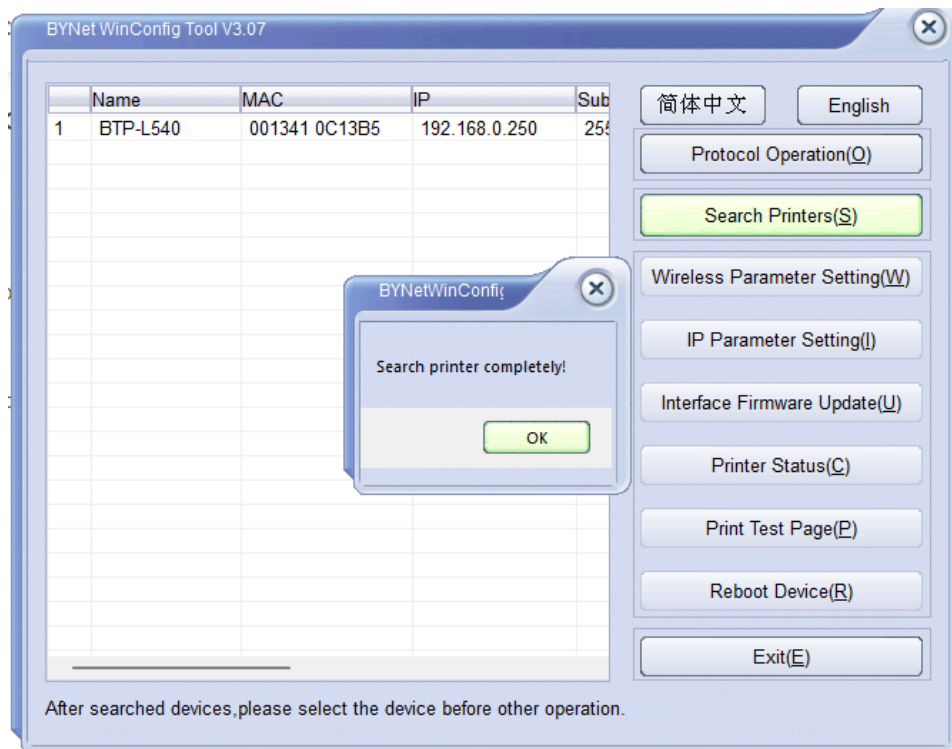

2. Use the SNBC BYNetWinconfig app to locate the printer in question by opening the app on a computer/terminal that is on the same network and clicking "Search Printers."

A. From factory, SNBC printers are set to 192.168.0.251, if this does not match the IP scheme of the site, the printer will not communicate.


B. Select the correct printer based on model and current ip address from the list then click "IP Parameter Settings."

C. Change to the desired IP address
 - if replacement, use old "kitchen, bar remote" etc. IP address. Ex - Old Bar printer is x.x.x.211,

replacement bar printer should be x.x.x.211.

- If new, use new IP address that follows the onePOS setup scheme or the scheme of the site. Ex. - Kitchen is x.x.x.221, Bar remote is x.x.x.221, new printer should be x.x.x.223.

D. Confirm other IP settings by typing "ipconfig" in command shell in Bomgar, or in command prompt on the machine. Match subnet and gateway to current network scheme.

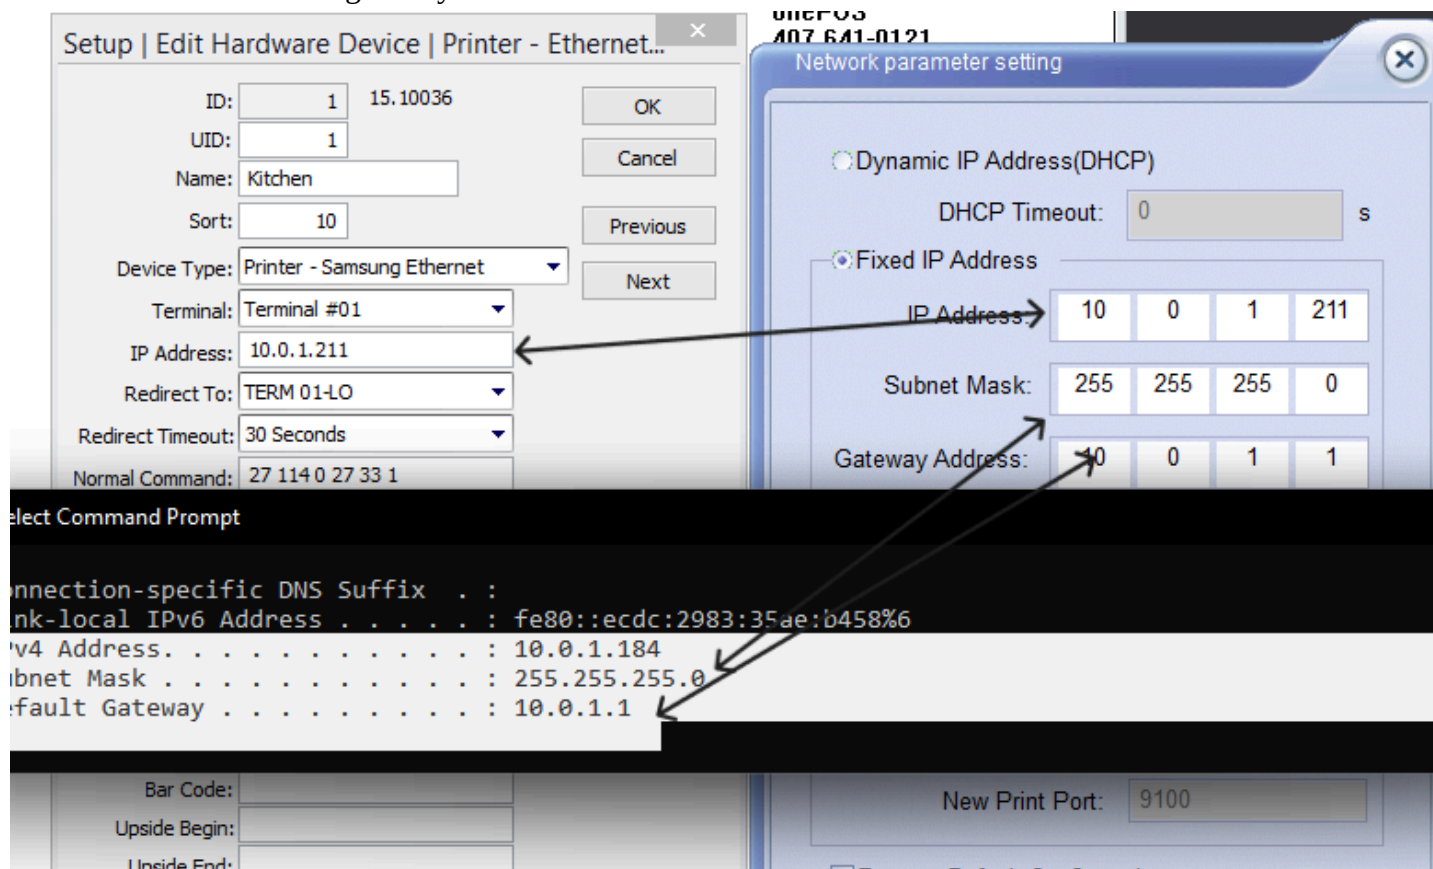

3. Select OK, reboot device, and test.

- A. Checking "printer status" should show all green bubbles.
- B. Test pages should print from SNBC BYNetWinconfig app.
- C. Relaunching terminal on term01 should result in "printer active" chit on the new printer.
- D. Test orders should now print, provided this printer is configured in hardware devices and is a destination for items in a print route/scheme.

Notes*

- The netconfig app is usually located in C:\INSTALL or C:\onePOS\INSTALL on terminals with our image. It's recommended to keep a copy on your machine.
- SNBC is the most common printer we deal with, other apps are available for Epson, Bixolon, etc.
- Ensure the new ip isn't shared with any other devices. "arp -a" in command prompt/shell is a useful command that reveals a list of currently taken ip addresses (unless they are hidden/non-pingable).
- The IP change should be evident by the printer working now, but can be confirmed with another self test when troubleshooting.
- Confirm the changes you make match the settings under hardware devices in Management Console.
- If the printer does not show up in the search printer list, it is:
 - Not powered on, plugged in, etc.
 - Not on the correct network
 - Still in self-test mode

- Not an ethernet printer