

INSTALLATION GUIDE

ONEPOS HARDWARE



powered by
payroc

Welcome to the onePOS family.

Welcome to the setup guide for your new onePOS hardware system. This guide will walk you through everything you need to get your terminal, printer, card reader, and cash drawer up and running quickly and cleanly.

Installation Overview

onePOS hardware is built restaurant-tough—ready to handle spills, heat, grease, and the chaos of a dinner rush. With streamlined setup, intuitive design, and high performance, your system is made to keep your business moving.

Setup should take around 30 minutes with minimal tools, color-coded cables, and smart packaging that makes installation a breeze!

If you're pre-live, contact the onePOS Implementation team. If you're post-live, contact onePOS Support. See [Page 9](#) for contact information.

Before Getting Started

- ✓ Clear Your Workspace: Wipe down and clear your counter where the new terminal will sit.
- ✓ Remove Old Equipment: If you're replacing existing hardware, disconnect and remove it completely.
- ✓ Clean the Area: Use an alcohol wipe or damp cloth to clean the surface before placing your onePOS hardware.

Preparation is key to making installs smooth!

Your Bundle Includes:



HISENSE HK568

[Go to Page 4](#)



SNBC R880/R180

[Go to Page 5](#)



MS CASH DRAWER
(Shipped Separately)

[Go to Page 6](#)



INGENICO LANE 3000


[Go to Page 7](#)

- 1 x RJ45 to DB9 adapter (from COM 1 on terminal to printer)
- 1 x 15' Ethernet Cable
- 1 x 4-pin DIN power cable (terminal)
- 1 x 3-pin DIN power cable (printer)
- 1 x Serial Printer Cable (DB9 Male to Female)
- 1 x USB Cable w/ 12V Power (Lane 3000 EMV Reader)
- 1 x Cash Drawer Cable
- 1 x Welcome Kit
- 1 x Philips Head Screwdriver




⚠ Note: This diagram provides a clear visual of how many cables connect to each device and where they should be routed. It also highlights some of the more unique connections you'll encounter during setup.


As you follow this guide, we'll walk you step by step through setting up each device properly.

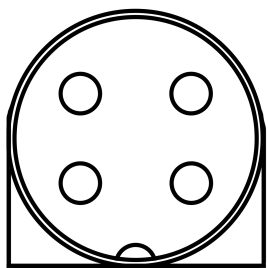


4-Pin DIN (to terminal)

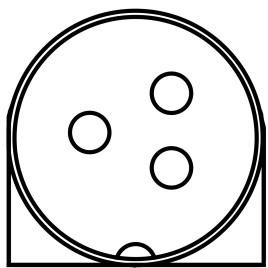


3-Pin DIN (to printer)

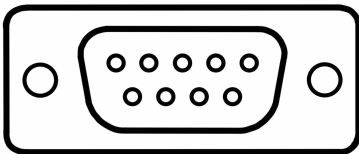


DB9 9 Pin Serial Connection



HDMI Type A

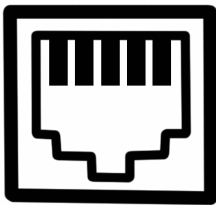

RJ45

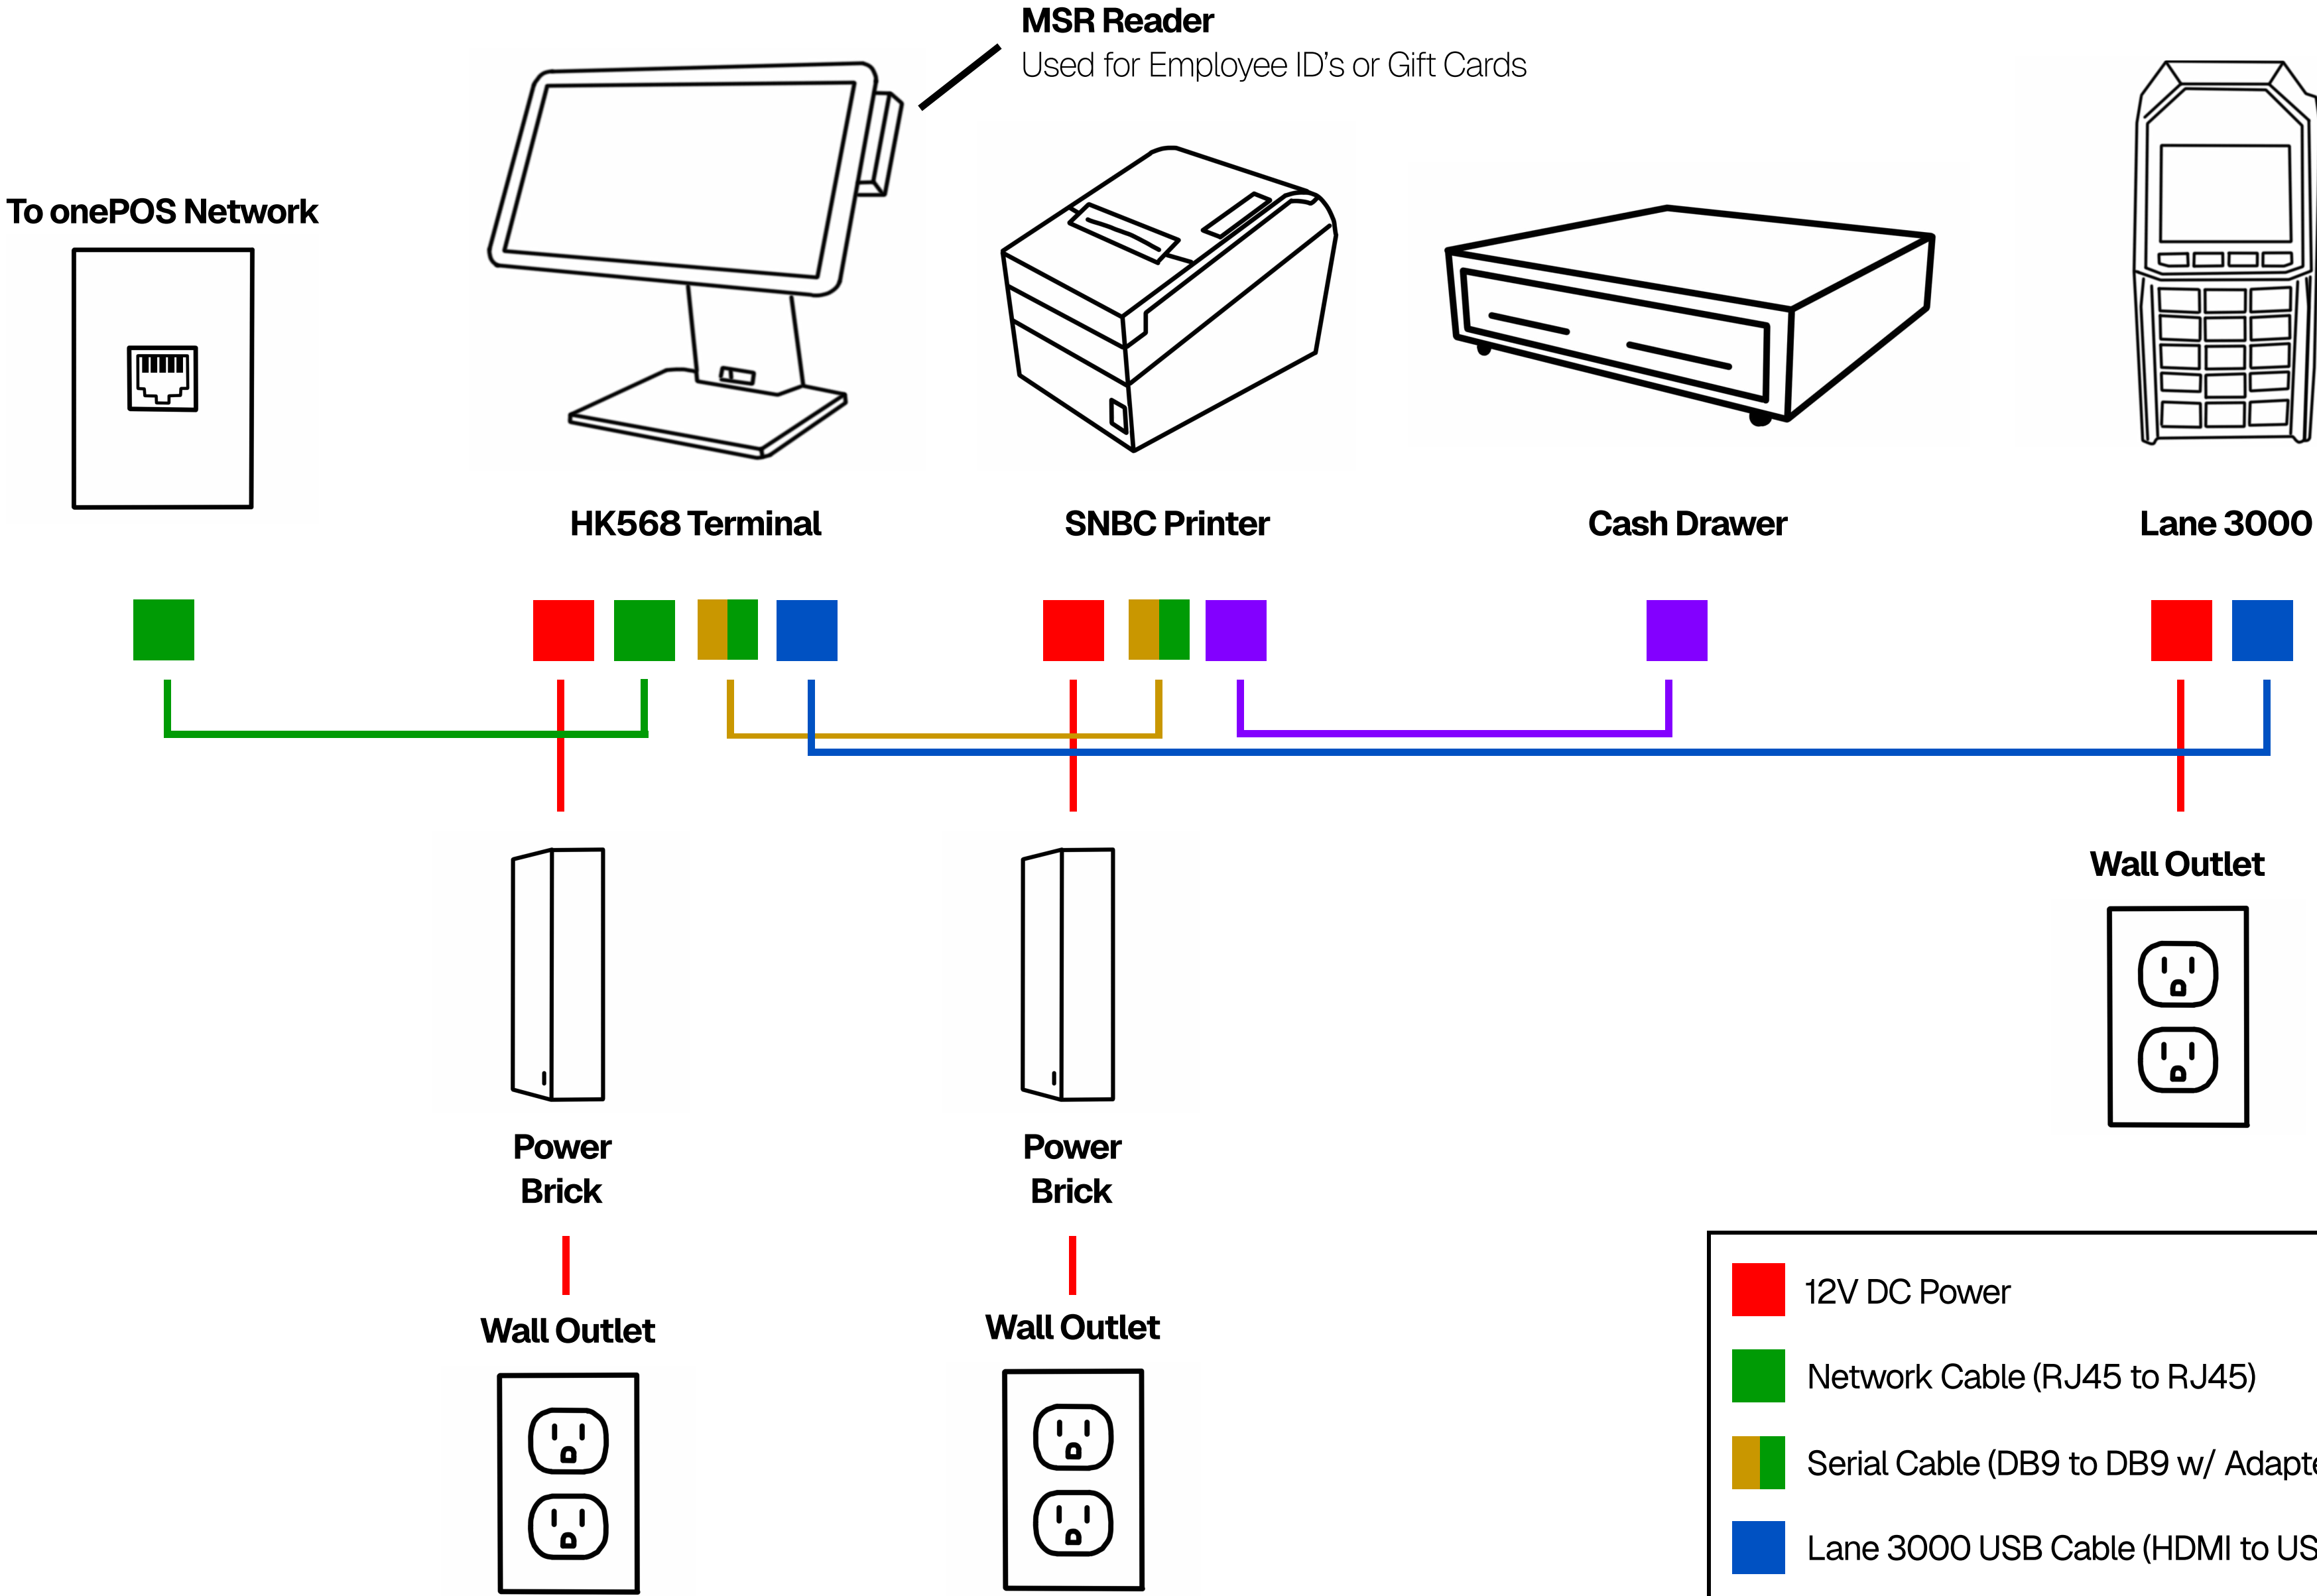



12V DC Power



Network Cable (RJ45 to RJ45)



Serial Cable (DB9 to DB9 w/ Adapter)



Lane 3000 USB Cable (HDMI to USB A)



Cash Draw Cable (RJ11 to RJ12)



1 Setting up your HK568

Your bundle will contain your HK568 terminal, along with the necessary cables needed to set it up.

2 Removing rear panel

The rear panel needs to be removed so the wires can be ran and remain hidden. Remove the two Philips head screws on the back of the terminal to loosen the plastic panel.

Secure the terminal with one hand. With your other hand, place two fingers behind the plastic panel and pull straight out.

⚠ Note: The plastic is rigid and may snap loudly when released. That's normal—don't panic. Give it a firm, confident pull.

3 Connecting network

Using the supplied 15ft, green ethernet cable, connect one end to the Ethernet / LAN port on your terminal. The other end will be connected to your dedicated onePOS network.

4 Connecting power





Locate your 4-pin DIN power supply and connect it to the Power / DC IN port on your terminal.

Do not power on device yet.

5 Connecting your printer to the terminal

The printer connects to the terminal using COM Port 1 (see diagram showing ports on terminal)

- Use the RJ-45 to DB9 adapter provided (flat cable)
 - The RJ-45 end plugs into COM Port 1 on the terminal.
 - The DB9 (9-pin) end connects to the serial cable that goes to the printer.
- Plug the other end of the serial cable into the printer.

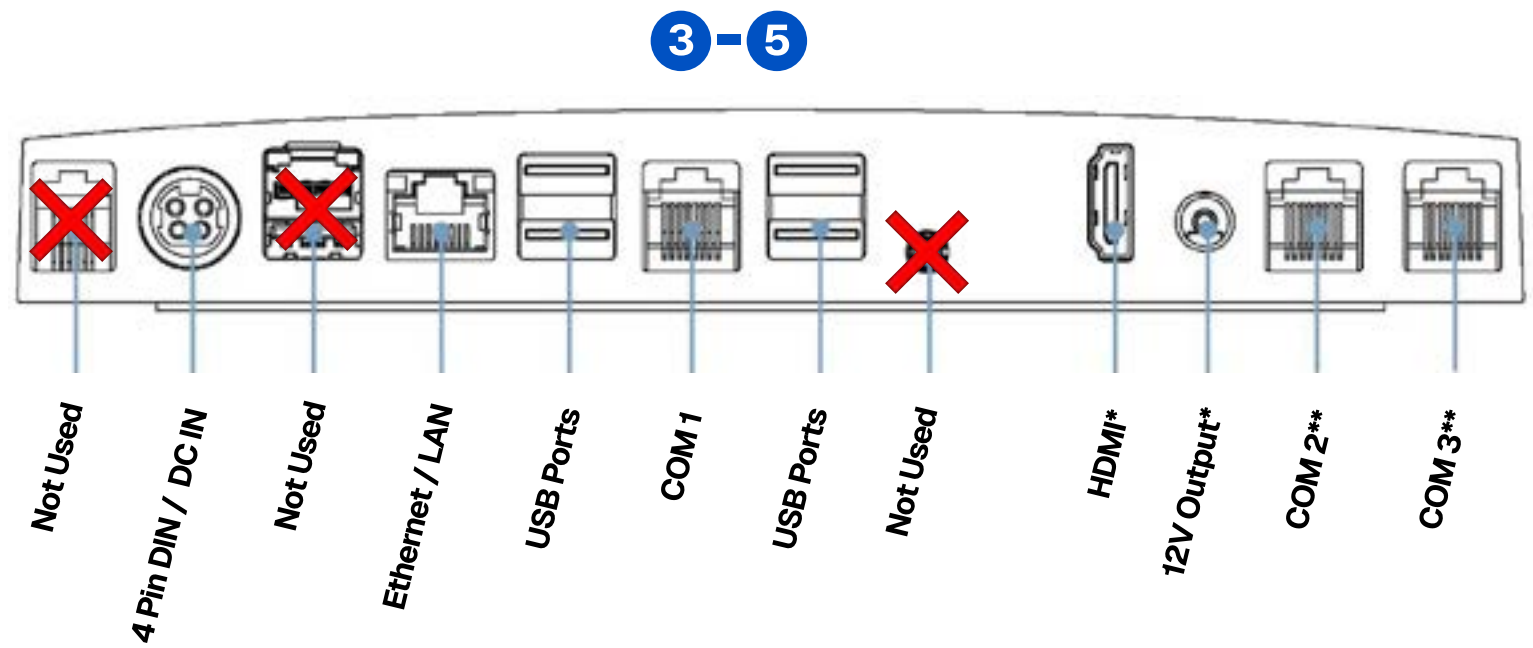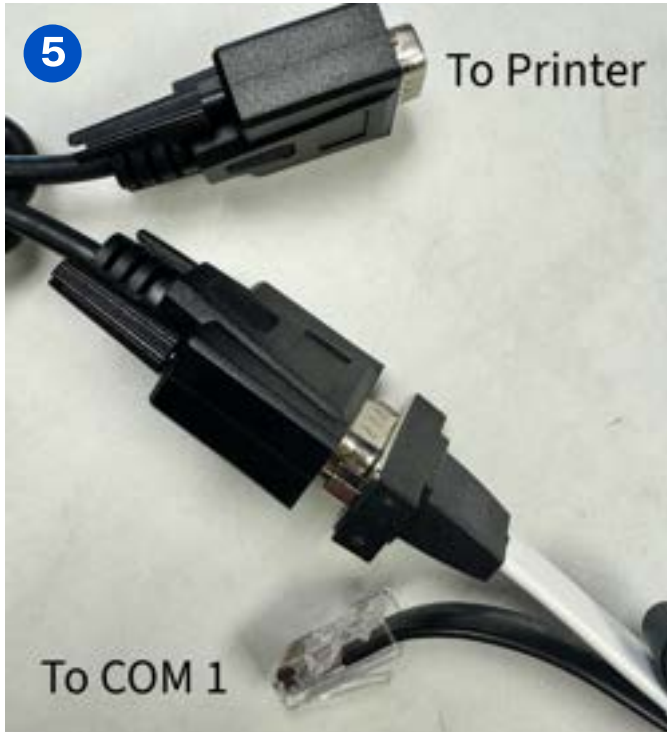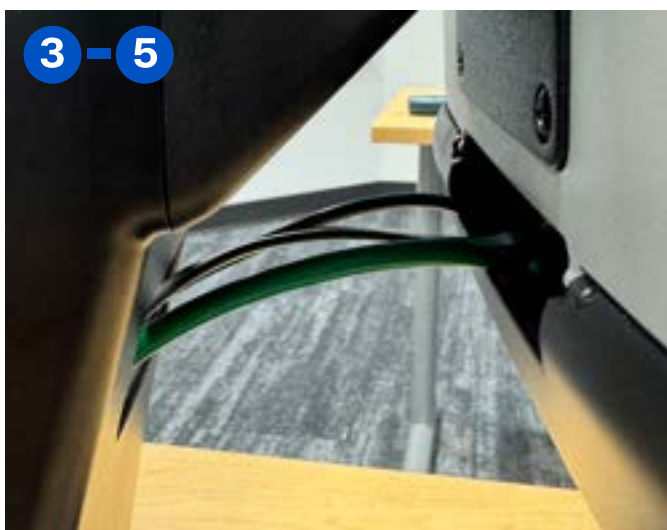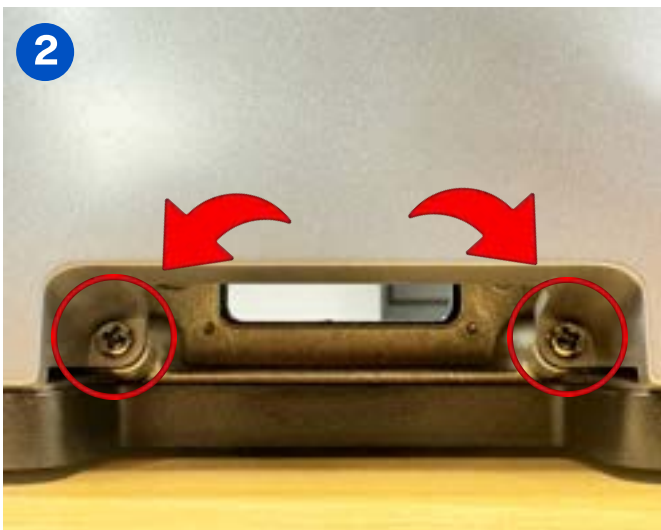

6 Re-installing rear panel

Tuck the wires to the desired length and secure them with cable ties as needed.

Insert the top of the panel first, then work your way down until it snaps firmly into place.

Finally, insert and tighten the two Phillips head screws to lock everything in.

7 Turning on HK568

Locate the power button at the bottom-right corner behind the screen. Press it—you should hear a beep and see the device begin to boot up.

*The HDMI and 12V Output is used for our customer facing display. If you ordered from us, this display will come pre-installed.

**If multiple printers are being connected to the terminal, or if COM 1 fails, you can use COM 2 and COM 3 instead.

⚠ Note: Ensure cables have enough slack to prevent stress and tension that could cause damage.



1 Setting up your SNBC thermal printer

Your bundle will contain your SNBC printer, along with the necessary cables needed to set it up.

2 Connecting the printer to the terminal

Plug the cable and adapter from COM Port 1 on the terminal into the printer's serial (DB9) port.

3 Connecting power

Locate your 3-pin DIN power supply and connect it to the Power / DC IN port on your printer. Do not power on device yet.

⚠ Note: Insert the power cable into the printer with the flat side facing down. It only fits one way—do not force it.

4 Verifying the baud rate

Printer Self-Test & Baud Rate Check

1. Press and hold the Feed button.
2. Turn on the printer while holding the Feed button.
3. Release the button once the self-test page prints.
4. On the printout, confirm the Baud Rate is set to 115200.

⚠ Note: Power cycle the printer (turn it off, then back on) before continuing. The printer will not function correctly without this step.



5 Connecting cash drawer cable

The cash drawer is printer-driven and connects directly to your SNBC thermal printer.

1. Locate the supplied cash drawer cable.
2. Find the end labeled "Printer".
3. Plug that end into the cash drawer port on the back of the printer.

🔧 Troubleshooting Tip:

Double-check that you're using the correct cables and that the baud rate matches the settings in onePOS—mismatches here are a common culprit.

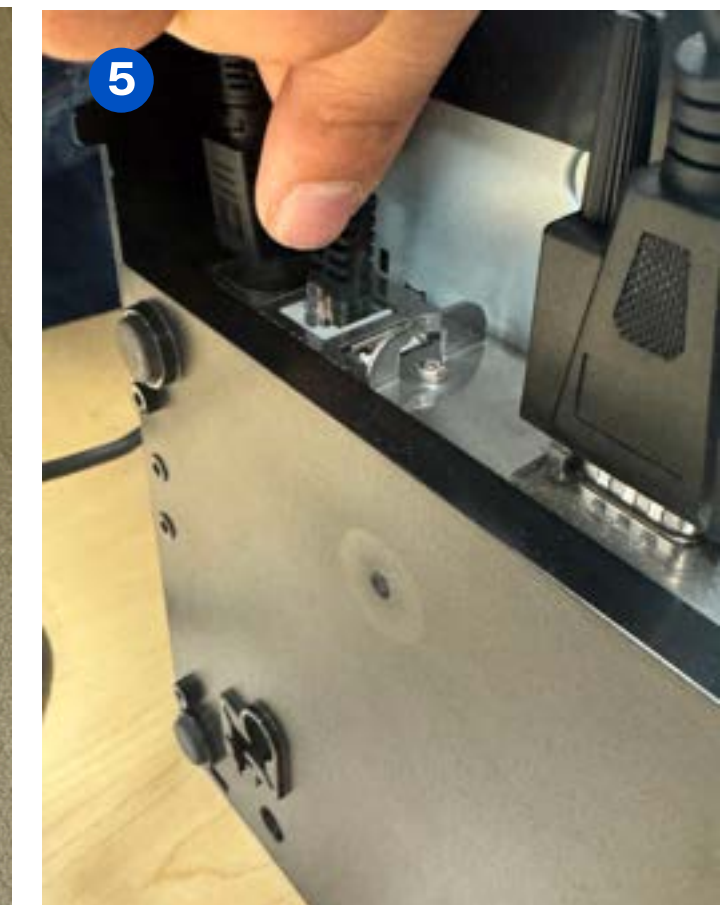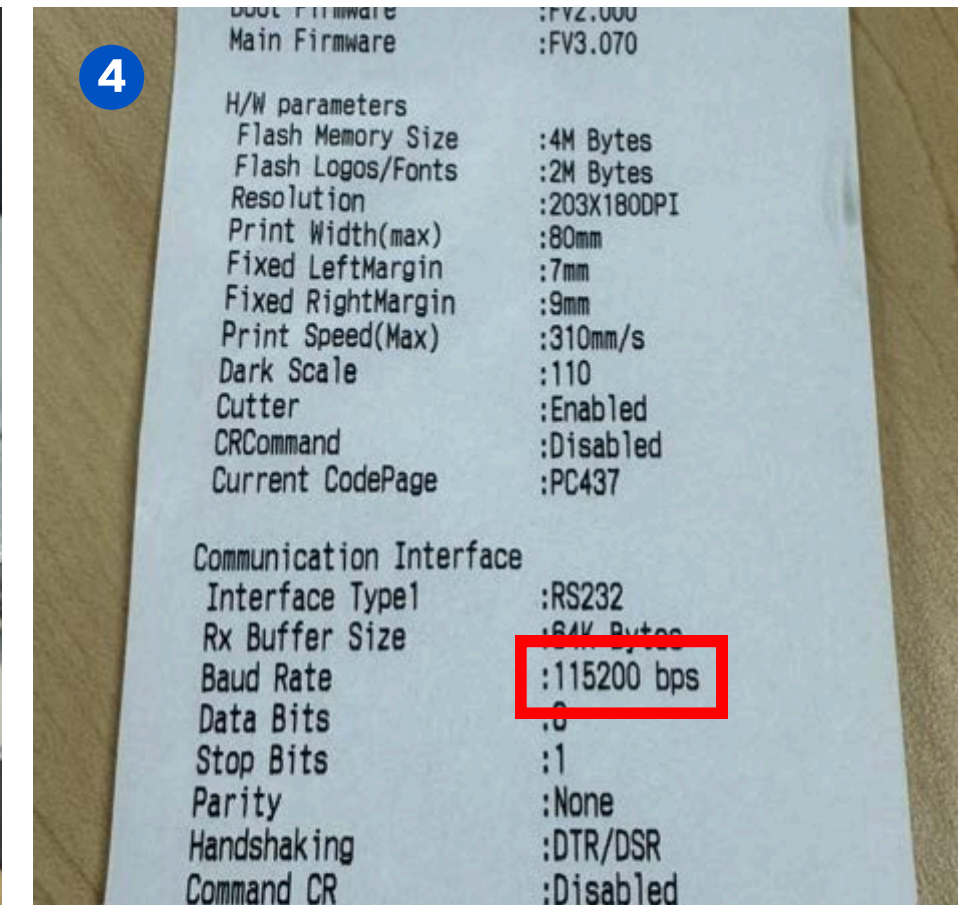

⚠ Note: Proper paper orientation is crucial to prevent error messages or indicator lights on the printer. Be sure the paper feeds under the guide, not over it.

⚠ Note: USB connections are currently not supported.



1 Setting up your cash drawer

Your bundle will contain your MS Cash Drawer, along with the necessary cables needed to set it up.

2 Connecting RJ11 to RJ12

One end of this cable should already be connected to your SNBC printer. The cable has two ends labeled "Printer" and "Cash Drawer"—do not mix them up.

Even though the connectors look identical, they're wired differently. Make sure you plug the "Cash Drawer" end into the cash drawer.

3 Readiness check

Remove all tape from the cash drawer. Then, using the included keys, unlock the drawer to ensure it's ready for use.

⚠ Note: Since your cash drawer is printer-driven, it won't open unless the printer is set up correctly.

🧐 Fun Fact: Most of the time, a "cash drawer problem" is actually just a printer setup issue—or the cash drawer cable is plugged in backwards





1 Setting up your Lane 3000

Your bundle will contain your Lane 3000, along with the necessary cables needed to set it up.

2 Connecting USB cable to reader

One end of this cable resembles an HDMI connector. Insert this end into the Lane 3000 device and secure it using the two attached screws.

Plug the other end into an available USB port on the terminal.

3 Connecting reader to power

Take a look at the USB cable for the Lane 3000. You'll notice an extra port—this is where the Lane 3000 power supply connects.

We recommend tying a loose knot in the power cable before plugging it in. This helps prevent the connection from coming loose. (See pictures)

Do not plug the power supply into the wall yet.


4 Tucking the cables (optional)

Depending on the placement of your EMV reader, you may need to remove the rear panel of the terminal again to neatly tuck the wires and maintain a clean, organized appearance.

5 Turning device on

The Lane 3000 does not have a power button. Once it is plugged into a power outlet, the device will automatically power on.

Typically, the device boots up within 30 seconds.

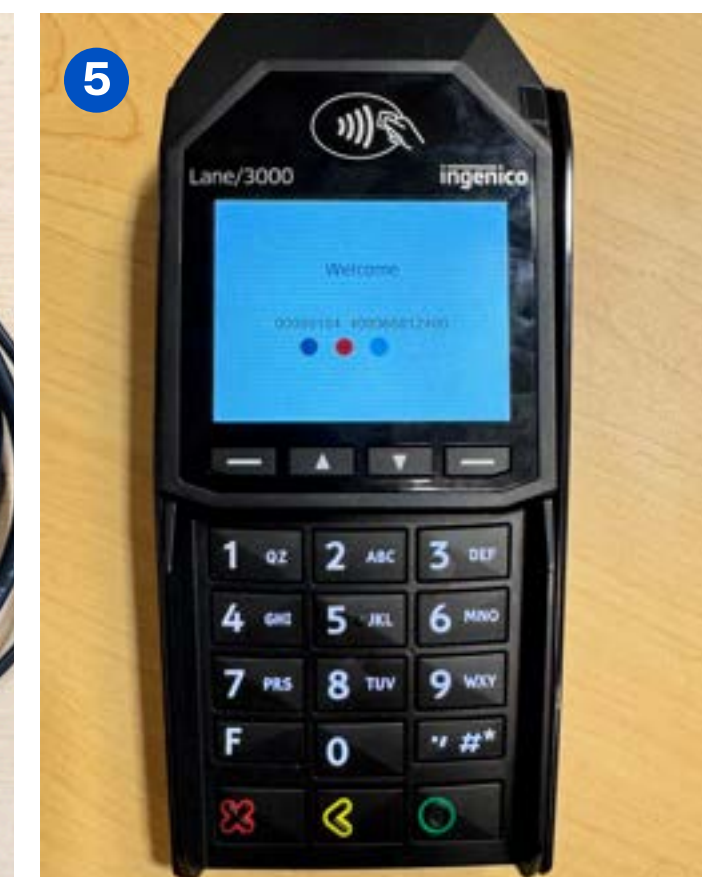

⚠ Note: Reader Placement: Position the Lane 3000 where customers can easily access it, but where it's still protected from spills and rough handling.

⚠ Note: Do Not Force Connectors: All connectors should fit smoothly. If you feel resistance, double-check the orientation before applying force.



Terminal

The main touchscreen hardware used in the POS system. It hosts the onePOS software and connects to peripherals like printers, cash drawers, and EMV devices.

FOH Terminal (Front-of-House Terminal)

This is the onePOS point of sale software interface that servers, bartenders, and other staff use to enter orders, send tickets to the kitchen, process payments, and manage checks. It runs on the main terminal hardware.

Printer (Receipt Printer)

A thermal printer used to print customer receipts or kitchen tickets. Usually triggered by the FOH terminal after an order is placed or payment is processed.

Cash Drawer

A secure metal drawer connected to the printer. It automatically opens when a cash transaction is completed. Note: It is printer-driven and won’t open if the printer is misconfigured.

Drawer Cable

A cable that connects the cash drawer to the printer. Labeled ends: “Printer” and “Cash Drawer.” While the connectors may look the same, they are wired differently—make sure they’re plugged in correctly.

Power Adapter (Terminal/Printer/EMV)

Each device requires its own power source. Ensure the correct adapter is plugged into the correct device to avoid damage or power failure.

Baud Rate

A setting that controls the speed of data communication—particularly between the terminal and printer. For SNBC printers, the standard is 115200. Both the printer and onePOS settings must match for it to function properly.

EMV Device (Chip Reader / Card Reader)

A payment device that accepts EMV chip cards, tap-to-pay (NFC), and magnetic stripe cards. Often connected via USB or network and works in tandem with the FOH terminal for payment processing.

COM Port / Serial Port

A hardware interface (often on the terminal) used to connect devices like receipt printers. Must be set correctly in the onePOS Management Console to match the physical port.

Ethernet / Network Cable

Used to connect devices like terminals to the local network. Required for payment processing and cloud-based features.

Restart / Power Cycle

Turning a device off and back on to reset it. Often used during troubleshooting to resolve communication or power issues.

onePOS Management Console

The back-end configuration tool for onePOS. Used by installers and managers to set up terminals, printers, drawer settings, COM ports, and more.



Need Help? We've Got You.

If you're in the setup phase (pre-live):

Contact our Implementation Team to keep things moving smoothly.


Already live and need support?

Our Support Team is on standby and ready to assist with anything from troubleshooting to general system questions.

“Una” our AI Chatbot - A 24/7 support agent trained on our entire knowledge base, ready to answer any questions you submit.

Knowledge Base Articles - An online knowledge base with easy-to-access guides—perfect for mobile use or printing for quick staff reference.

onePOS University - For a more classroom-style experience, explore our courses on server training, menu building, upselling, and more!

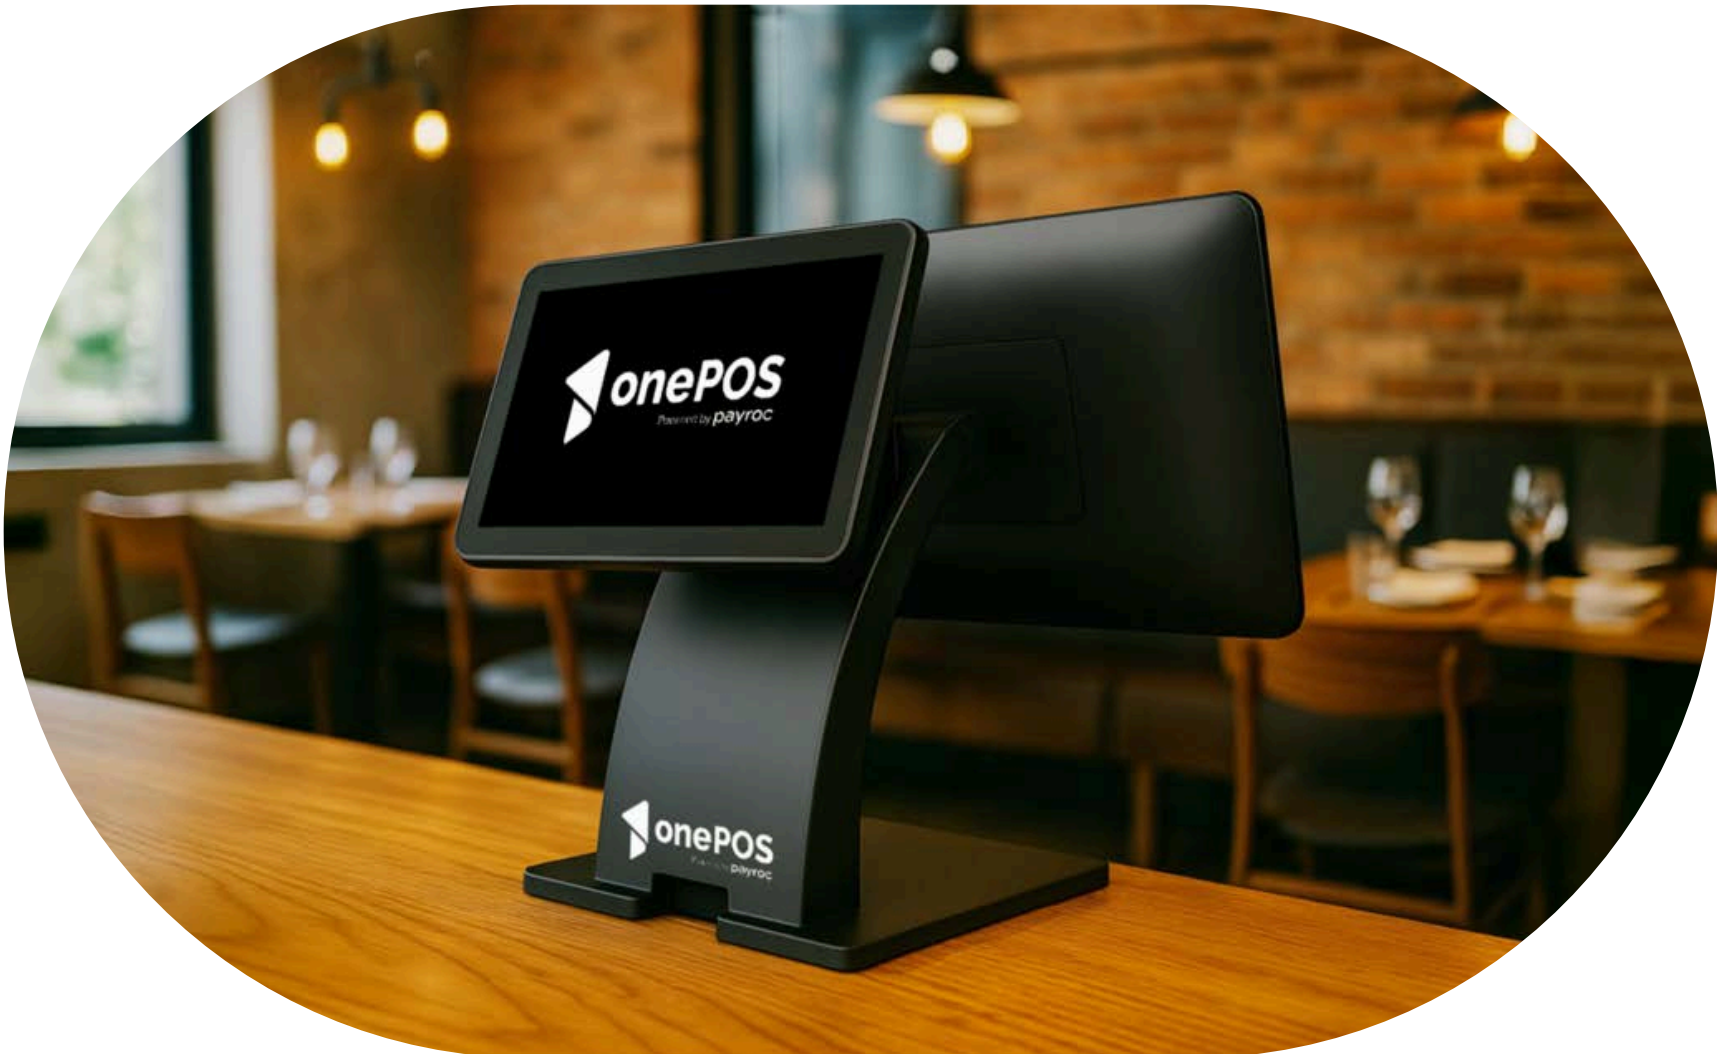

“Una” AI Support



Knowledge
Base Articles



onePOS
University



Support Contacts

Phone: 888-663-7671
Email: support@onepos.com

Implementation Contacts

Phone: 888-663-7671
Email: POSProjects@payroc.com