

Quick Setup Guide


EdgeIPS™ LE

Support
hardware bypass
(Fail-Open only)


EdgeIPS LE is a Transparent Security Box equipped with dual Ethernet LAN ports. Users can efficiently adapt the palm-sized EdgeIPS LE into a flexible solution for the challenges of Ethernet communications.

1


Opening and Inspecting the Package

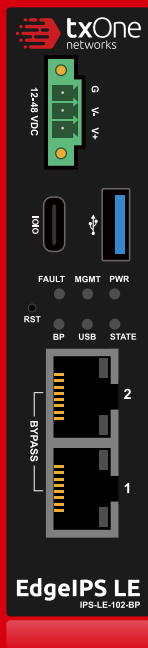

EdgeIPS LE Appliance

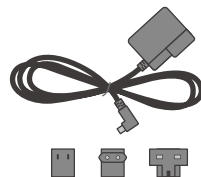


Adapter x1
only for this product



Terminal Block x1



DIN Rail Kit x1



Console Cable x1
(USB-Type-C)



Rubber Feets x4



RJ45 Dust Covers x2 &
USB Dust Covers x2
(USB Type-A, Type-C)



Quick Setup Guide x1 &
Hardware Warranty Paper x1

2

Examining the EdgeIPS LE



Front Panel




Top Panel

3 Deployment Checklist

Requirement	Details
Ethernet Cables	- Connect to port 1 to access web management console. - Connect switches or field assets to port 2.
Default IP Address of Web Console	Default web console access information: https://192.168.127.254  User name: admin Password: txone
Laptop with Ethernet Port (RJ-45 Type)	The computer must have one of the following browsers installed: - Microsoft Edge (version 15 or above) - Firefox (version 53 or above) - Safari (version 10.1 or above) - Google Chrome (version 63 or above)

4 Deployment Scenarios and System Operation Modes

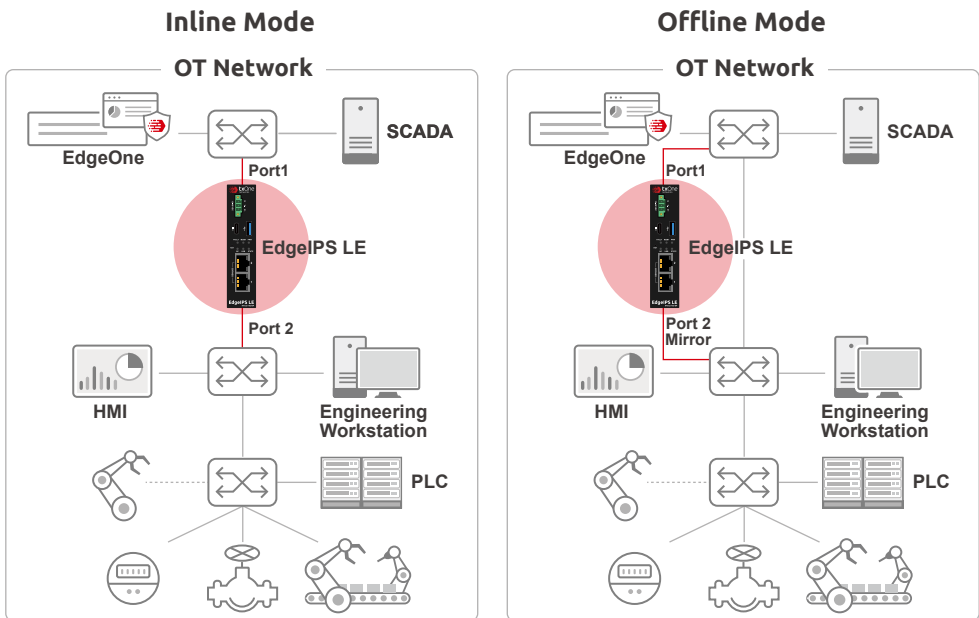

Inline mode In inline mode, EdgelPS LE is deployed directly on the traffic path.

Offline mode In offline mode, EdgelPS LE is connected to a mirror port of network switch and mirrors traffic to itself.


5 LED Indicators

The function of each LED is described in the table below.

PWR	● Green ● Off	Power is on, and the device is functioning normally. Power is off.
STATE	● Green ● Off	The system is running normally. The system failed, and the FAULT LED will also be turned on.
MGMT	● Green ● Off	EdgeOne sync is enabled and EdgeOne is connected. EdgeOne sync is disabled. Note: EdgeIPS LE will support EdgeOne sync if it is upgraded to V2.
USB	● Green ● Blinking ● Off	LED will be turned on when a USB flash drive is plugged in. USB data transmission is in progress. No USB flash drive is plugged in.
FAULT	● Blinking ● Off	A hardware or system fault occurs. The system is operating normally.
BP	● Green ● Red ● Off	The system and packet scanning are operating normally. Hardware Bypass is enabled. Hardware Bypass is disabled.

6 Resetting to Factory Default Settings


The reset button for the EdgeIPS LE is located on the front panel.

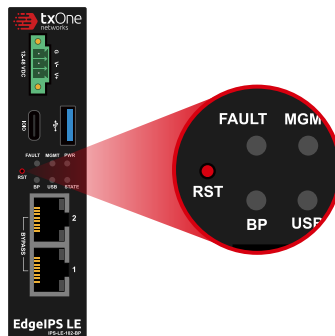

Reset Type	Description
Reboot System	Press and hold the reset button for 2 to 10 seconds. The MANAGED LED will begin to blink every one second, indicating the system is rebooting.
Restore Factory Default Settings	Press and hold the reset button for more than 10 seconds. The MANAGED LED will begin to blink every half second, indicating the system is resetting itself to factory defaults.

7 Mounting the EdgeIPS LE to a DIN Rail

The aluminum DIN rail attachment plate should already be fixed to the back panel of the EdgeIPS LE when you take it out of the box. If you need to reattach the DIN rail attachment plate to the EdgeIPS LE, make sure the stiff metal spring is oriented towards the back, as shown in the following picture.

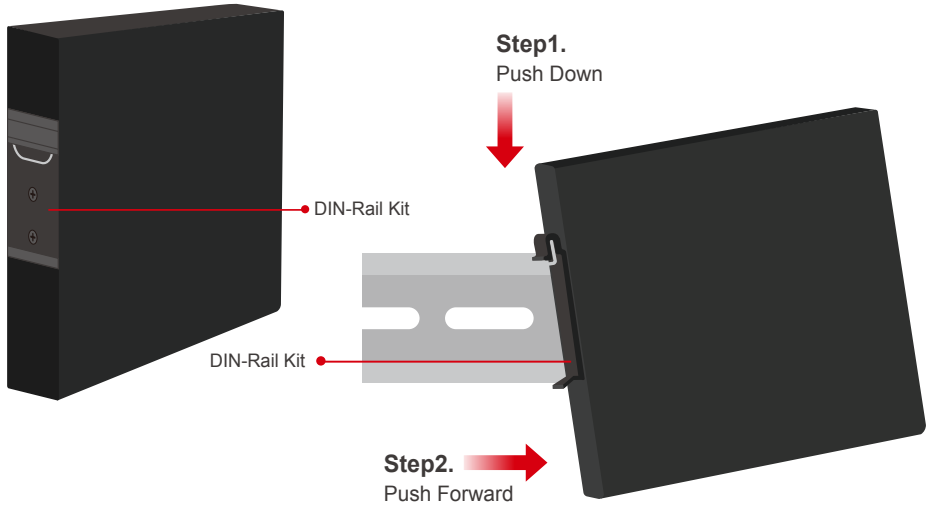


8 Wiring the Power Input

The EdgeIPS LE has two types of power inputs. Use the provided power adapter (DC-IN Jack) or other 12-48V DC power supply (terminal block). The power input location and pin definition are shown in the following diagram.

Connecting the Power with a DC Power Adapter

Insert the provided adapter into the DC-IN jack connector on the top side of EdgeIPS LE.

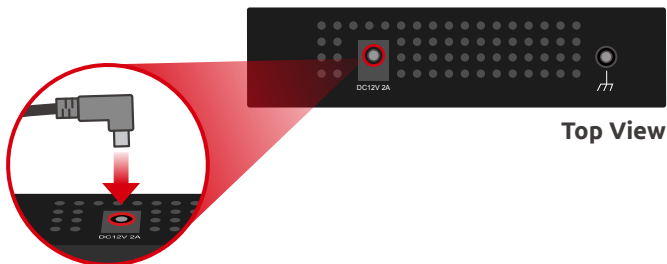

Connecting the Power with a DC Wires

Step 1.

Open the terminal block's wire locks by pushing the buttons down.


Step 2.

Insert a positive/negative DC wire into the V+/V- terminals respectively.

Step 3.

When the wire is properly seated, the wire lock will be forced shut around it. Check whether the wire is properly fixed.



- ⚠ Consult with your electrician engineer before connecting EdgeIPS LE to a DC power source.
- ⚠ Electrostatic discharge (ESD) can damage your EdgeIPS LE.

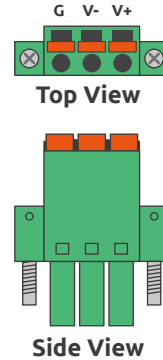

9 Connecting the Power and Network

If the power is supplied properly, the PWR LED will glow steadily.


When deploying the Edge device to your OT network, make sure that the network switch is connected to Port 1 and the production assets are connected to Port 2.

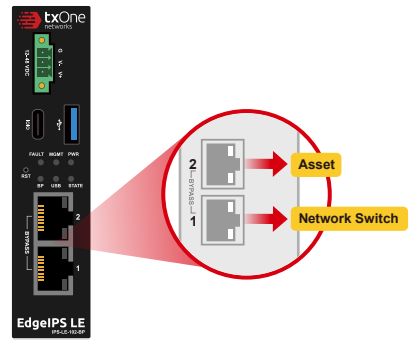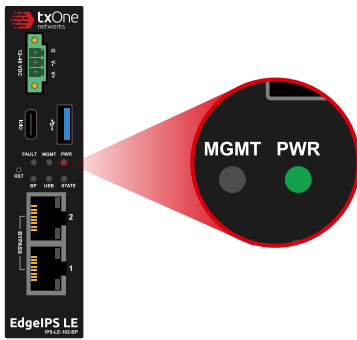

10 Grounding the Unit


Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the terminal block connector to the grounding surface prior to connecting the power. Please note that this product is intended to be mounted on a well-grounded mounting surface, such as a metal panel. The minimum cross-sectional area of the conductor must be equal to the input wiring cable's width/circumference.

11 Software Configuration

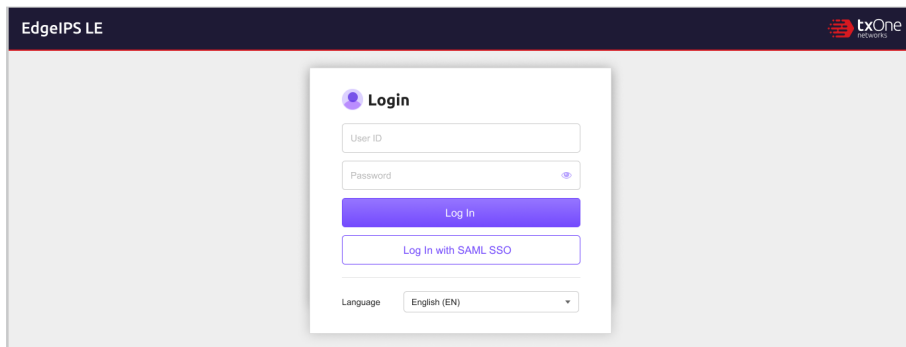

Before you connect the PC/laptop to EdgeIPS LE, the PC's IP address should be set to 192.168.127.100. After that, connect the PC and EdgeIPS LE using an Ethernet cable. Open a web browser on your PC and type "<https://192.168.127.254>" into the address bar. A pop-up window will be opened to ask for user name and password. Please type the default username, "admin", and password, "txone".

Now, the main screen will pop up so you can configure EdgeIPS LE.

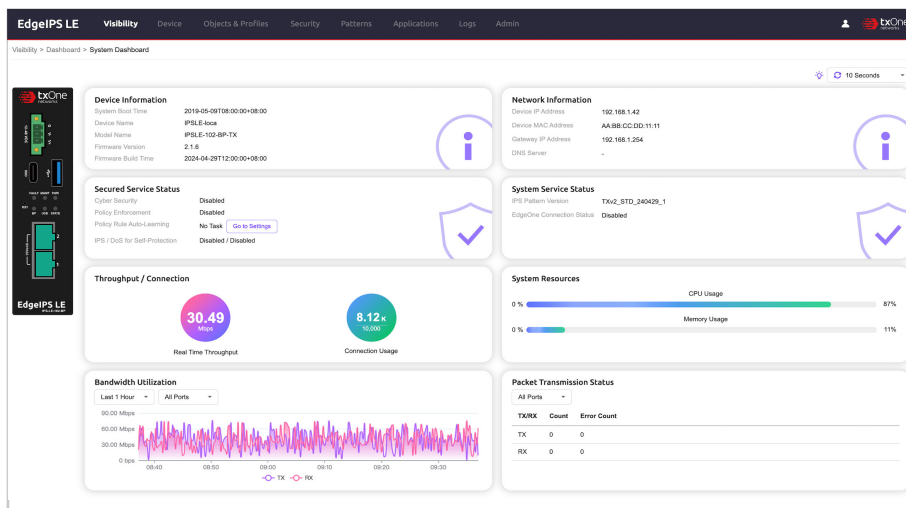

12 Configuring the Management Network Interface

1. Go to [Device] > [Network & Ports] > [Network Settings].

Network Settings

Connection Types

Single IP

Device IP Address*

192.168.1.42

Netmask*

255.255.255.0

Gateway*

192.168.1.1

DNS

8.8.8.8

☒ VLAN ID

42

LLDP Setting

Transmit LLDP

☒

2. In the [Network Settings] pane, configure the management network interface for EdgeIPS LE.

Task	Action
Device IP Address	Configure Management IP Address of the EdgeIPS LE.
Netmask	Configure Netmask of the EdgeIPS LE.
Gateway	Configure Gateway Address of the EdgeIPS LE.
DNS	Configure DNS setting of the EdgeIPS LE.
Network VLAN ID	Configure Network VLAN ID of the EdgeIPS LE.

13 Connecting to the Network

EdgeIPS LE's Ports 1 and 2 make up a network segment.

1. Port 1 is a "mixed" port design, functioning both as a management console port and a connecting port to a network node, so EdgeIPS LE's Port 1 can be connected either to your network switch/hub or to a laptop. Connecting this port to the network enables remote management of the device.
2. EdgeIPS LE's Port 2 links the IPS to an asset or small production zone you are targeting for protection.



EdgeIPS LE supports a fail-open hardware bypass mechanism, ensuring that network traffic continues to flow even if the device experiences a failure.

14 Checking the LED to Confirm Status


The LEDs on the Ethernet port show the deployment status.

 RJ45	 Off	The EdgeIPS LE cannot communicate with the network.
	 Left: Amber	10Mbps LINK/ACT (off = no link, on = 10 Mbps, blinking = activity)
	 Right: Green	100Mbps LINK/ACT (off = no link, on = 100 Mbps, blinking = activity)
	 Left: Amber & Right: Green	GE LINK/ACT (Both LED ON = 1 Gbps link, blinking = activity)

Appendix: Connecting to the Console Port

The EdgeIPS LE console port is a USB Type-C Port located on the front panel of the case. It is designed for connecting to serial console terminals to view messages during a boot sequence or to debug system boot issues. To connect to a serial console terminal using a console cable, remove the protective cover from the port.

Serial Console Port, Cable, & Pinouts

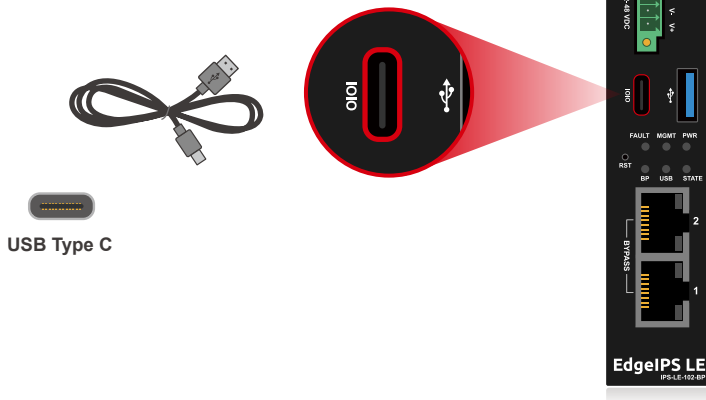

The initial configuration for the EdgeIPS LE using the command line interface (CLI) on a serial terminal client will use the following default settings:

- Baud Rate: 115200 bps
- Stop Bits: 1
- Character Size: 8 bits
- Flow Control: None
- Parity: None

Other Resources

Website

<https://www.txone.com/>

MyTXOne Portal

<https://my.txone.com/>

EdgeIPS LE Landing Page



EULA

<https://www.txone.com/legal/license-agreements/>

Contact Information

Email

 support@txone.com

Phone

 US: +1 3465867975

 Netherland: +31 402310122

 Taiwan: +886 277275120

Call Center

<https://help.txone.com/>



⚠ Warning

Ensure that the grounding screw is securely fastened and that the product is properly grounded.

- ⚠ Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:
 1. manually resetting the product to factory settings, or
 2. handing the product to the TXOne support team, who will help you clear all stored data and configurations.
- ⚠ The power cord adapter should be connected to a socket outlet with an earthing connection.
- ⚠ The power cord and adapter must comply with Class II construction.
- ⚠ This product is intended to be supplied by a UL Listed Power Adapter or DC power source marked 'L.P.S' or 'Limited Power Source', rated 12 to 48 VDC, 0.605 A (min.)
- ⚠ Do not replace batteries of the device. Risk of explosion may occur if the batteries are replaced with incorrect types.
- ⚠ Ne remplacez pas les piles de l'appareil. Un risque d'explosion peut survenir si les piles sont remplacées par des types incorrects.
- ⚠ Dispose of used batteries according to the instructions.
- ⚠ The equipment is intended to be installed in the restricted access location.