

Quick Setup Guide

EdgeIPS™ Pro 212F Rugged

Support
configurable
hardware
bypass




EdgeIPS Pro 212F Rugged is a Transparent Security Appliance, supporting up to 6 pairs of IPS segments. Users can efficiently adapt the rack mounted EdgeIPS Pro 212F Rugged into a flexible solution for the challenges of Ethernet communications.

1 Opening and Inspecting the Package



EdgeIPS Pro 212F Rugged
Appliance x1




Terminal Block x1 &
DC in Jack to Terminal x1




Rubber
Feet x4




DIN-Rail Kit x1

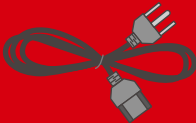

Power Cords x4
(US, UK, EU, JP)
*(The power cords are only
for this product)

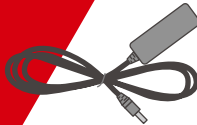

Power Adapter x1
*(The power adapter is only
for this product)



Console Cable x1
(USB Type-C)



Quick Setup Guide x1 &
Hardware Warranty Paper x1


2 Examining the EdgeIPS Pro 212F Rugged



3 Deployment Checklist

Requirement	Details
Ethernet Cables	Connect to the Management Port to access web management console.
Default IP Address of Web Console	Default web console access information: https://192.168.127.254
	 User Name: admin Password: txone
Laptop with Ethernet Port (RJ-45 Type)	The computer must have one of the following browsers installed: - Microsoft Edge (version 15 or above) - Firefox (version 53 or above) - Safari (version 10.1 or above) - Google Chrome (version 63 or above)

4 Deployment Scenario

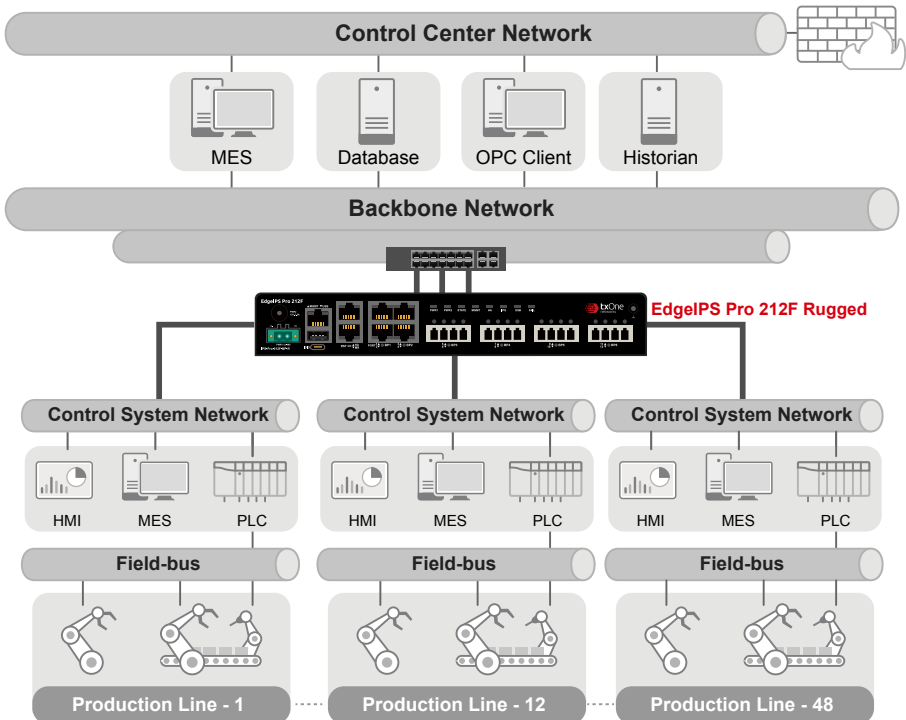


5 LED Indicators

The function of each LED is described in the table below.

PWR1		Power 1 is on, and the device is functioning normally.
		Power 1 is off.
PWR2		Power 2 is on, and the device is functioning normally.
		Power 2 is off.
STATE		The system is running normally.
		The system failed, and the FAULT LED will also be turned on.
MGMT		EdgeOne sync is enabled and EdgeOne is connected.
		EdgeOne sync is disabled. Note: EdgeIPS Pro 212F Rugged will support EdgeOne sync if it is upgraded to V2.
HA		High Availability feature is enabled.
		High Availability feature is disabled.
IPS		IPS or IDS is enabled. (Reserved)
		IPS or IDS is disabled. (Reserved)
USB		LED will be turned on when a USB flash drive is plugged in.
		USB data transmission is in progress.
		No USB flash drive is plugged in.
FAIL		A hardware or system fault occurs.
		The system is operating normally.

6 Resetting to Factory Default Settings


The reset button for EdgeIPS Pro 212F Rugged is located on the front panel.

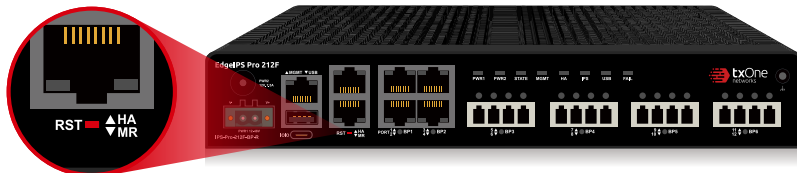

Reset Type	Description
Reboot System	Press and hold the reset button for 2 to 10 seconds. The STATE LED will begin to blink every one second, indicating that the system is rebooting.
Restore Factory Default Settings	Press and hold the reset button for more than 10 seconds. The STATE LED will begin to blink every half second, indicating that the system is resetting itself to factory defaults.

7 Mounting the EdgeIPS Pro 212F Rugged to a DIN Rail

The aluminum DIN rail attachment plate should already be fixed to the back panel of EdgeIPS Pro 212F Rugged when you take it out of the box. If you need to reattach the DIN rail attachment plate to EdgeIPS Pro 212F Rugged, make sure the stiff metal spring is oriented towards the back, as shown in the following picture.

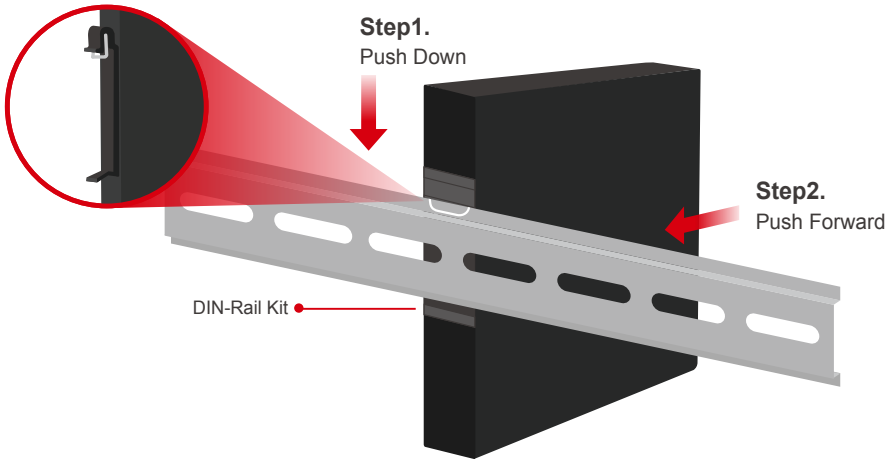

8 Wiring the Power Input

The EdgeIPS Pro 212F Rugged has two types of power inputs. Use the provided power adapter (DC-IN Jack) or other 12V DC power supply (terminal block). The power input location and pin definition are shown in the following diagram.

Connecting the Power with a DC Power Adapter

Insert the provided adapter into the DC-IN jack connector on the front panel of EdgeIPS Pro 212F Rugged.



Connecting the Power with the Terminal Block

Step 1.


Open the terminal block's wire locks by pushing the buttons down.

Step 2.

Insert the positive and negative points of a DC wire into the V+ and V- terminals respectively.

Step 3.

When the wire is properly seated, the wire lock will be forced shut around it. Check whether the wire is properly fixed.

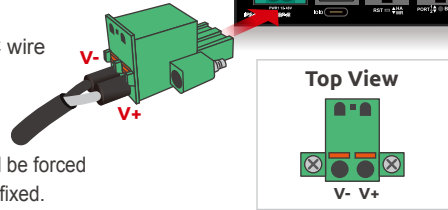

⚠ Consult with your electrician engineer before connecting EdgeIPS Pro 212F Rugged to a DC power source.

⚠ Electrostatic discharge (ESD) can damage your EdgeIPS Pro 212F Rugged.

9 Connecting the Power


If the power is supplied properly, the "POWER" LED will glow steadily.



10 Grounding the Unit


Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the terminal block connector to the grounding surface prior to connecting the power. Please note that this product is intended to be mounted on a well-grounded mounting surface, such as a metal panel. The minimum cross-sectional area of the conductor must be equal to the input wiring cable's width/circumference.

11 Software Configuration

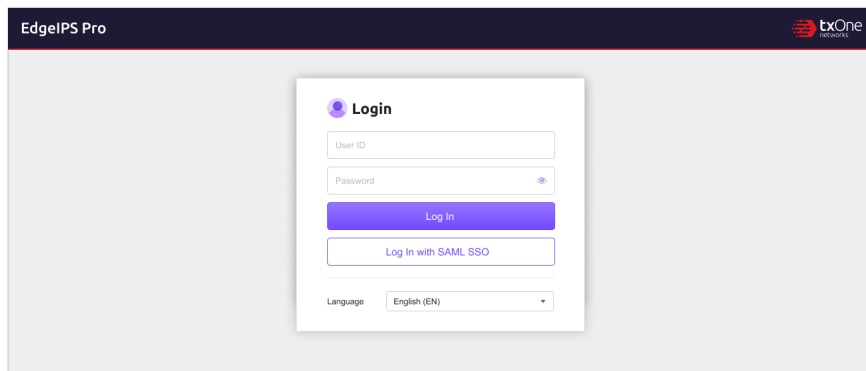

Before you connect the PC/laptop to EdgeIPS Pro 212F Rugged, the PC's IP address should be set to 192.168.127.100. After that, connect the PC and EdgeIPS Pro 212F Rugged using an Ethernet cable. Open a web browser on your PC and type "<https://192.168.127.254>" into the address bar. A pop-up window will open to ask for user name and password. Please type the default username, "admin", and password, "txone".

Now, the main screen will pop up so you can configure EdgeIPS Pro 212F Rugged.

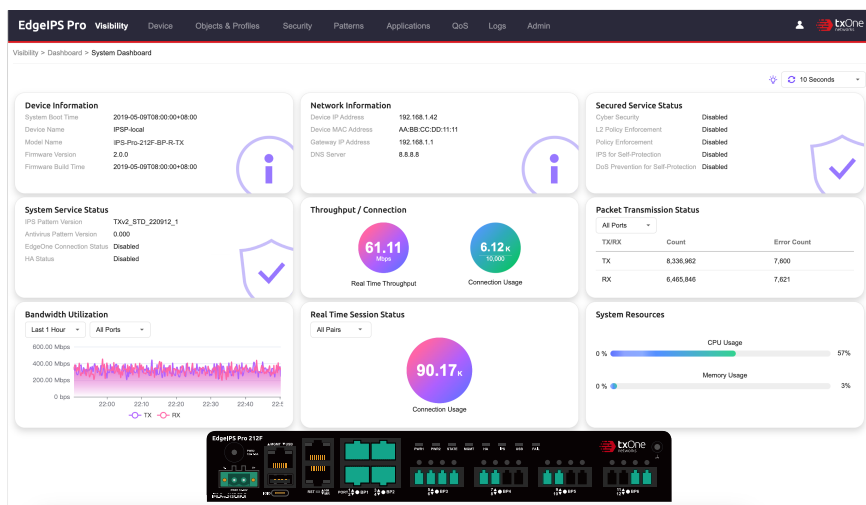

12 Configuring the Management Port

1. Go to [Device] > [Network & Ports] > [Network Settings].

Network Settings

Connection Types

Single IP

Device IP Address*

192.168.1.42

Netmask*

255.255.255.0

Gateway*

192.168.1.1

DNS

8.8.8.8

☒ VLAN ID

42

LLDP Setting

Transmit LLDP

☒

2. In the [Network Settings] pane, configure the management port for EdgeIPS Pro 212F Rugged.

Task	Action
Device IP Address	Configure Management IP Address of the EdgeIPS Pro 212F Rugged.
Netmask	Configure Netmask of the EdgeIPS Pro 212F Rugged.
Gateway	Configure Gateway Address of the EdgeIPS Pro 212F Rugged.
DNS	Configure DNS setting of the EdgeIPS Pro 212F Rugged.
Network VLAN ID	Configure Network VLAN ID of the EdgeIPS Pro 212F Rugged.

13 Connecting to the Network

Use the management port to access the EdgeIPS Pro 212F Rugged web console from another computer on your network.

1. Connect one end of a Category 5e (Cat-5e) Ethernet cable to the MGMT port located on the front panel.
2. Connect the other end of the cable to an Ethernet port connected to your network.

14 Checking LED Indicators to Confirm Status

The LEDs on each Ethernet port show the deployment status.

 MGMT/MR	 Off	The EdgeIPS Pro 212F Rugged appliance cannot communicate with a network.
	 Left: Green	GE LINK/ACT (off = no link, on = activity)
	 Right: Amber	1 Gbps LINK/ACT (on = 1 Gbps link)
	 Right: Green	100 Mbps LINK/ACT (on = 100 Mbps link)
	 Right: Off	10 Mbps LINK/ACT (off = 10 Mbps link)
 HA	 Off	The EdgeIPS Pro 212F Rugged appliance cannot communicate with a network.
	 Left: Green	GE LINK/ACT (off = no link, on = activity)
	 Right: Amber	1 Gbps LINK/ACT (on = 1 Gbps link)
	 Right: Green	100 Mbps LINK/ACT (on = 100 Mbps link)
	 Right: Off	10 Mbps LINK/ACT (off = 10 Mbps link)
 RJ45	 Off	The EdgeIPS Pro 212F Rugged appliance cannot communicate with a network.
	 Left: Green	GE LINK/ACT (off = no link, on = activity)
	 Right: Amber	1 Gbps LINK/ACT (on = 1 Gbps link)
	 Right: Green	100 Mbps LINK/ACT (on = 100 Mbps link)
	 Right: Off	10 Mbps LINK/ACT (off = 10 Mbps link)
 Fiber	 Off	The EdgeIPS Pro 212F Rugged appliance cannot communicate with a network.
	 Left: Green	GE LINK/ACT (off = no link, on = activity)
	 Right: Green	1 Gbps LINK/ACT (on = 1 Gbps link)
	 Right: Amber	100 Mbps LINK/ACT (on = 100 Mbps link)
	 Right: Off	10 Mbps LINK/ACT (off = 10 Mbps link)

15 Hardware Bypass LED Indicators


The Bypass LED states and device statuses of each IPS port pair are shown below.

Bypass LED Indication	Status
 Off	Hardware Bypass of the port pair is disabled.
 Red	Hardware Bypass of the port pair is enabled.
 Green	Hardware Bypass of the port pair is functioning normally.

Appendix: Connecting to the Console Port

The EdgeIPS Pro 212F Rugged console port is a USB Type-C port located on the front panel of the case. It is designed for connecting to serial console terminals to view messages during a boot sequence or to debug system boot issues. To connect to a serial console terminal using a console cable, remove the protective cover from the port.

Serial Console Port, Cable & Pinouts

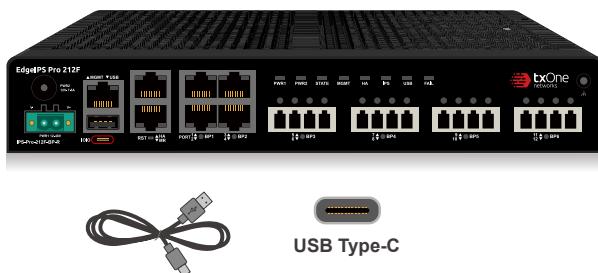

The initial configuration for EdgeIPS Pro 212F Rugged using the command line interface (CLI) on a serial terminal client will use the following default settings:

- Baud Rate: 115200 bps
- Character Size: 8 bits
- Parity: None
- Stop Bits: 1
- Flow Control: None

Other Resources

Website

<https://www.txone.com/>

MyTXOne Portal

<https://my.txone.com/>

EdgeIPS Pro Landing Page



EULA

<https://www.txone.com/legal/license-agreements/>

Contact Information

Email

 support@txone.com

Call Center

<https://help.txone.com/>

Phone

 US: +1 3465867975

 Netherland: +31 402310122

 Taiwan: +886 277275120



⚠ Warning

Ensure that the grounding screw is securely fastened and that the product is properly grounded.

- ⚠ Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:
 1. manually resetting the product to factory settings, or
 2. handing the product to the TXOne support team, who will help you clear all stored data and configurations.
- ⚠ The wiring of input terminal block shall be installed by a skilled person.
- ⚠ Wire type: Cu Use only 12-28 AWG wire size.
- ⚠ This product is intended to be supplied by a UL Listed Power Adapter with rated output 12-48 VDC, 7.5-1.87 A (for Terminal Block) and 12 VDC, 7.5 A (for DC Jack) and Tma 65°C (min.).
- ⚠ Do not replace batteries of the device. Risk of explosion may occur if the batteries are replaced with incorrect types.
- ⚠ Ne remplacez pas les piles de l'appareil. Un risque d'explosion peut survenir si les piles sont remplacées par des types incorrects.
- ⚠ Dispose of used batteries according to the instructions.
- ⚠ The equipment is intended to be installed in the restricted access location.