


Quick Setup Guide


EdgeFire™ 1012 Rugged

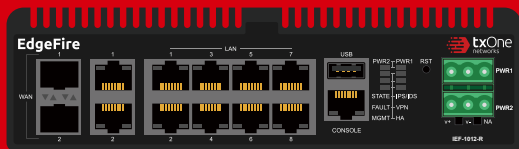

The EdgeFire 1012 Rugged is a highly integrated industrial multiport secure router with firewall, NAT, VPN, IPS and managed Layer 2 switch functions. Designed for Ethernet-based security applications, it provides critical remote control or monitoring networks and also offers an electronic security perimeter for the protection of critical cyber assets, including pump-and-treat systems in water stations, DCS systems in oil and gas applications, and PLC/SCADA systems in factory automation.

1

Opening and Inspecting the Package



EdgeFire 1012 Rugged Appliance



Terminal Block x1



Console Cable x1
(RJ-45)



DIN Rail Kit x1



Rubber Feets x4



USB Dust Cover x1




RJ45 Dust Covers x11 &
SFP Dust Covers x2




Quick Setup Guide x1 &
Hardware Warranty Paper x1

2

Examining the EdgeFire 1012 Rugged

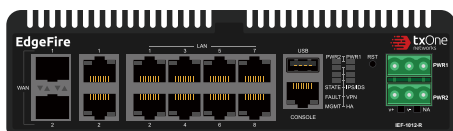

Front Panel

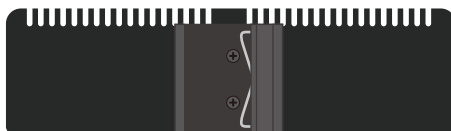


Back Panel

3 Deployment Checklist

Requirement	Details
Ethernet Cables	- Connect to LAN port to access web management console. - Connect to WAN port to access external network.
Default IP Address of Web Console	Default web console access information: https://192.168.127.254  User name: admin Password: txone • IP address must be configured for WAN or LAN usage.
Laptop with Ethernet Port (RJ-45 Type)	The computer must have one of the following browsers installed: - Microsoft Edge (version 15 or above) - Firefox (version 53 or above) - Safari (version 10.1 or above) - Google Chrome (version 63 or above)

4 Deployment Scenarios and Security Operation Modes

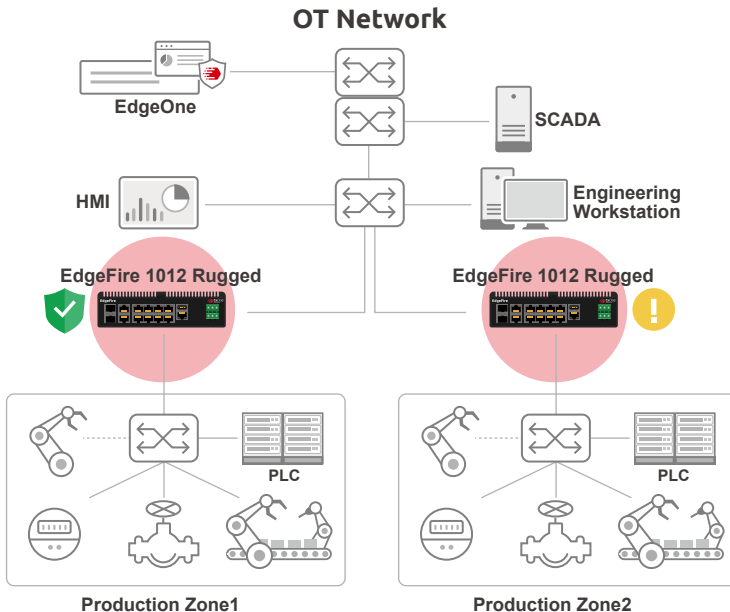

 **Prevention Mode** EdgeFire 1012 Rugged is placed inline (in the direct communication between source and destination device), where it actively analyzes traffic flow, records event logs and takes automated actions to prevent malicious events.

 **Monitor Mode** EdgeFire 1012 Rugged is placed inline (in the direct communication between source and destination device), where it actively analyzes traffic flow and only records event logs without taking action when malicious events are detected.


5 LED Indicators

The function of each LED is described in the table below.

PWR1	- Green: Power 1 is on, and the device is functioning normally. - Off: Power 1 is off.
PWR2	- Green: Power 2 is on, and the device is functioning normally. - Off: Power 2 is off.
STATE	- Green: The system is running normally. - Off: The system failed, and the FAULT LED will also be turned on.
FAULT	- Blinking: A hardware or system fault occurs. - Off: The system is operating normally.
MGMT	- Green: EdgeOne sync is enabled and EdgeOne is connected. - Off: EdgeOne sync is disabled. Note: EdgeFire 1012 Rugged will support EdgeOne sync if it is upgraded to V2.
HA	- Green: High Availability is enabled. - Off: High Availability is disabled.
IPS/IDS	- Green: IPS or IDS is enabled. - Off: IPS or IDS is disabled.
VPN	- Green: VPN tunnel is established. - Off: No VPN tunnel is connected.

6 Resetting to Factory Default Settings



The reset button for the EdgeFire 1012 Rugged is located on the front panel.

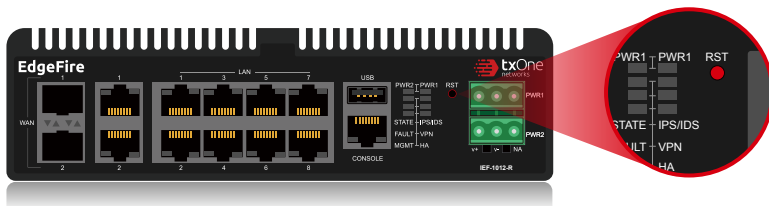

Reset Type	Description
Reboot System	Press and hold the reset button for 2 to 10 seconds. The STATE LED will begin to blink every one second, indicating the system is rebooting.
Restore Factory Default Settings	Press and hold the reset button for more than 10 seconds. The STATE LED will begin to blink every half second, indicating the system is resetting itself to factory defaults.

7 Mounting the EdgeFire 1012 Rugged to a DIN Rail

The aluminum DIN rail attachment plate should already be fixed to the back panel of the EdgeFire 1012 Rugged when you take it out of the box. If you need to reattach the DIN rail attachment plate to the EdgeFire 1012 Rugged, make sure the stiff metal spring is oriented towards the back, as shown in the following pictures.

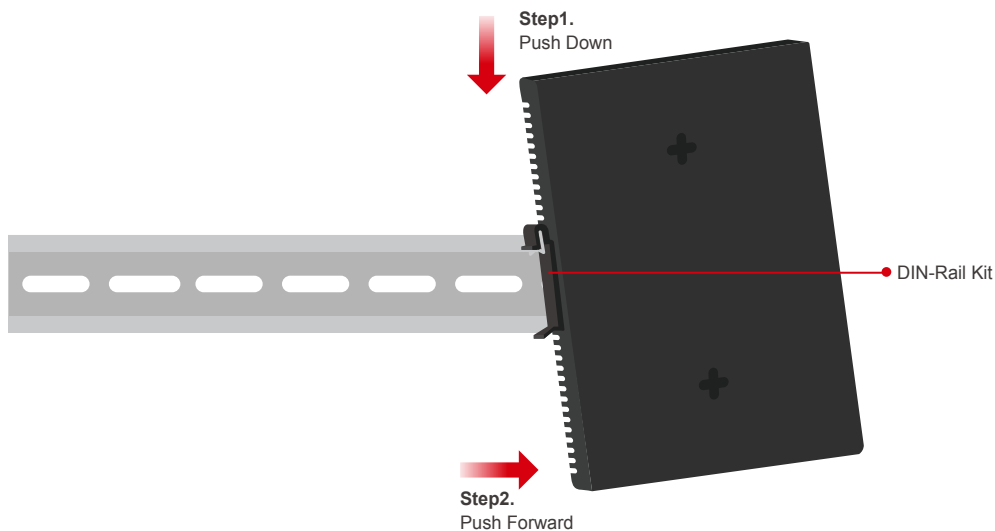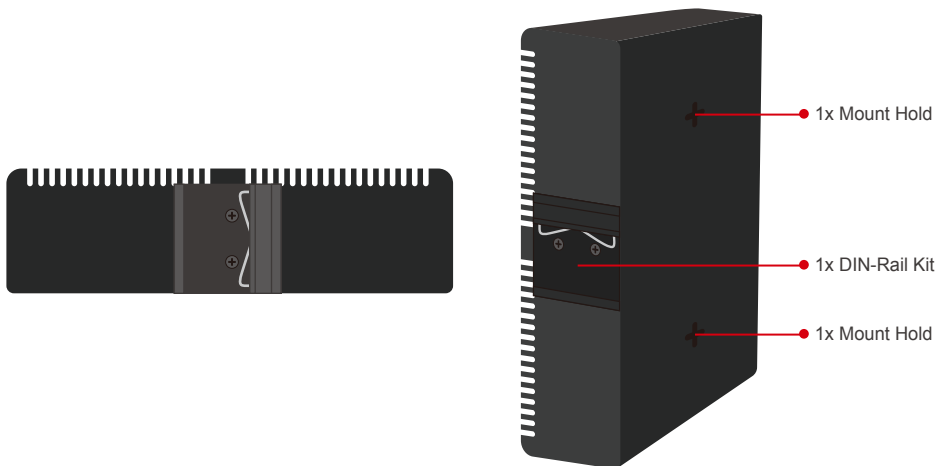

8 Wiring the Redundant Power Inputs

The EdgeFire 1012 Rugged has two sets of power inputs – power input 1 and power input 2. The top and side views of the terminal block connector are shown below.

Step 1.


Use a small flathead screwdriver to open the locks on the terminal block.

Step 2.

Insert positive / negative DC wires into the V+/V- terminals respectively.


Step 3.

Check whether the wires are firmly seated in the terminal block, then tighten the screws to secure the wires.

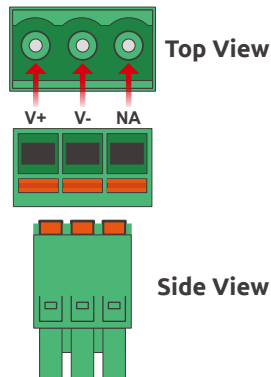

9 Connecting the Power

Connect the 12 to 48 VDC power line to the terminal block, which is connected to the EdgeFire 1012 Rugged device. If the power is supplied properly, the “PWR1” or “PWR2” LED will glow steadily. The power input location and pin definition are shown on the front panel.

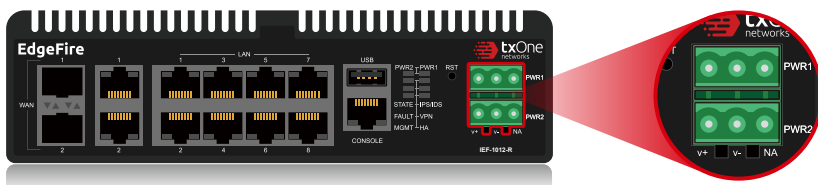


10 Grounding the Unit


Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the terminal block connector to the grounding surface prior to connecting the power. Please note that this product is intended to be mounted on a well-grounded mounting surface, such as a metal panel. The minimum cross-sectional area of the conductor must be equal to the input wiring cable's width/circumference.

11 Connecting the Network

When deploying the Edge device to your OT network, make sure that the network switch is connected to WAN1 port and the production assets are connected to LAN ports.

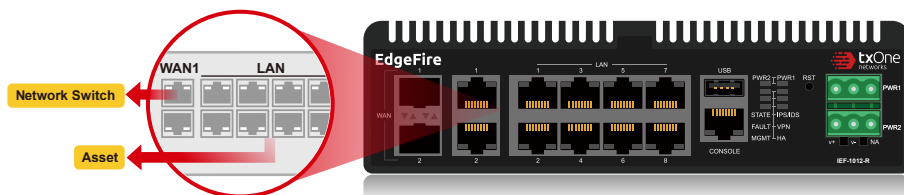


12 Software Configuration

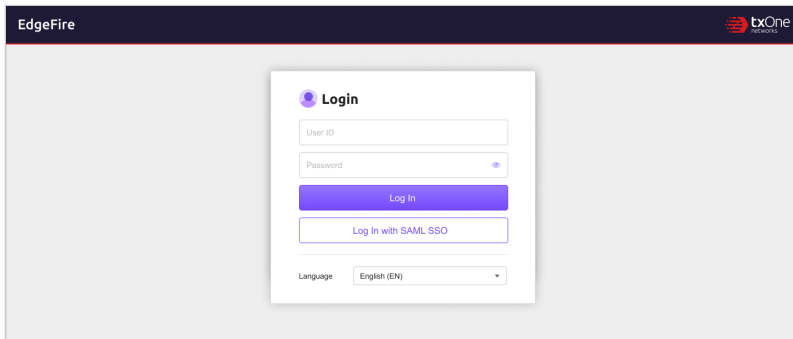

Before you connect the PC/laptop to the EdgeFire 1012 Rugged, the PC's IP address should be set to 192.168.127.100. After that, connect the PC to the LAN port of the EdgeFire 1012 Rugged using an Ethernet cable. Open a web browser on your PC and type "<https://192.168.127.254>" into the address bar. A pop-up window will be opened to ask for user name and password. Please type the default username, "admin", and password, "txone".

Now, the main screen will pop up so you can configure EdgeFire 1012 Rugged.

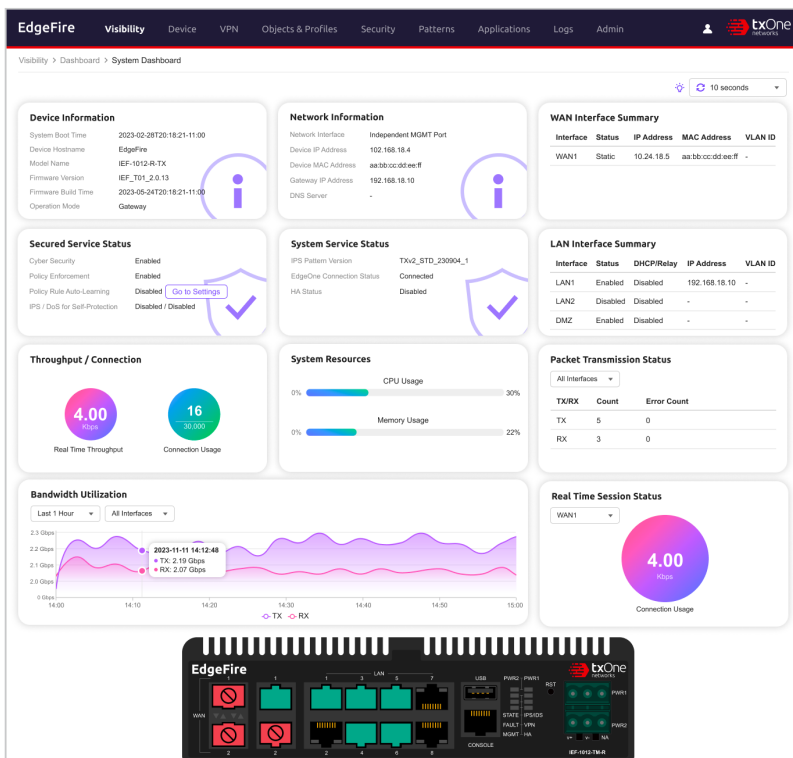


13 Configuring the Management Network Interface

1. Go to [Device] > [Network & Ports] > [Network Interface].

Network Interface	Status	Connection Type	IP Address	Netmask	VLAN ID	Description
WAN1	Enabled	Static IP	10.24.18.3	255.255.0.0	-	
LAN1	Enabled	DHCP Service	192.168.127.1	255.255.255.0	-	
LAN2	Enabled	DHCP Service	192.168.18.10	255.255.255.0	-	
DMZ	Enabled	DHCP Service	192.168.127.1	255.255.255.0	-	

2. Click a LAN interface, and the [Edit Network Interface] screen will appear.

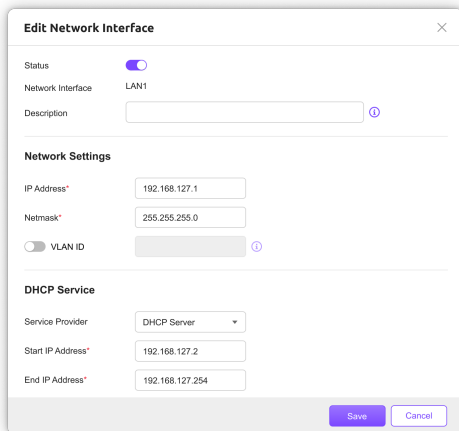

The dialog box titled "Edit Network Interface" contains the following fields and controls:

- Status:** A toggle switch is currently turned on.
- Network Interface:** A dropdown menu showing "LAN1".
- Description:** An empty text input field with an information icon.
- Network Settings:**
 - IP Address*:** A text input field containing "192.168.127.1".
 - Netmask*:** A text input field containing "255.255.255.0".
 - VLAN ID:** A toggle switch is turned off, followed by an empty text input field with an information icon.
- DHCP Service:**
 - Service Provider:** A dropdown menu showing "DHCP Server".
 - Start IP Address*:** A text input field containing "192.168.127.2".
 - End IP Address*:** A text input field containing "192.168.127.254".
- Buttons:** "Save" and "Cancel" buttons at the bottom right.

3. In the [Network Interface] pane, configure the management network interface for the EdgeFire 1012 Rugged.

Task	Action
IP Address	Configure Management IP Address of the EdgeFire 1012 Rugged.
Subnet Mask	Configure Netmask of the EdgeFire 1012 Rugged.
Network VLAN ID	Configure Network VLAN ID of the EdgeFire 1012 Rugged.

14 Connecting to the Network

1. Connect the EdgeFire 1012 Rugged WAN1 port to a wide area network. (E.g., the internet or external network)
2. Connect the EdgeFire 1012 Rugged LAN1 port to a local area network. (E.g., a segment of your network)

15 Checking the LED to Confirm Status


The LED on the Ethernet port shows the deployment status.

		No Light	The EdgeFire 1012 Rugged cannot communicate with a network.
		Left LED	10Mbps LINK/ACT (off = no link, on = 10 Mbps, blinking = activity)
		Right LED	100Mbps LINK/ACT (off = no link, on = 100 Mbps, blinking = activity)
		Both Left & Right LEDs	GE LINK/ACT (Both LED ON = 1 Gbps link, blinking = activity)

Appendix: Connecting to the Console Port

The EdgeFire 1012 Rugged console port is an RJ45 port located on the front panel of the case. It is designed for connecting to serial console terminals to view messages during a boot sequence or for debugging system boot issues. To connect to a serial console terminal using a console cable, remove the protective cover from the port.

Serial Console Port, Cable, & Pinouts

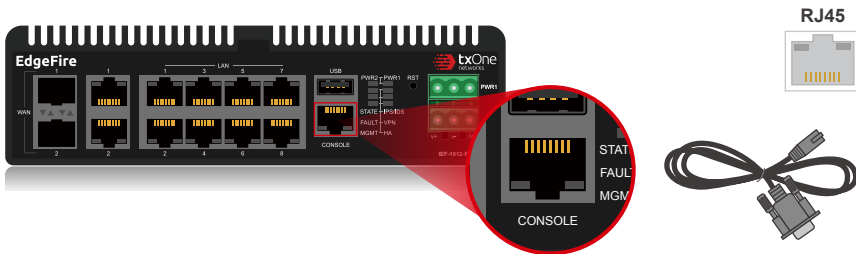

The default settings upon the initial configuration for the EdgeFire 1012 Rugged using the command line interface (CLI) on a serial terminal are listed below.

- Baud Rate: 115200 bps
- Stop Bits: 1
- Character Size: 8 bits
- Flow Control: None

Other Resources

Website

<https://www.txone.com/>

MyTXOne Portal

<https://my.txone.com/>

EdgeFire Landing Page



EULA

<https://www.txone.com/legal/license-agreements/>

Contact Information

Email

 support@txone.com

Call Center

<https://help.txone.com/>

Phone

 US: +1 3465867975

 Netherland: +31 402310122

 Taiwan: +886 277275120



⚠ Warning

Ensure that the grounding screw is securely fastened and that the product is properly grounded.

- ⚠ Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:
 1. manually resetting the product to factory settings, or
 2. handing the product to the TXOne support team, who will help you clear all stored data and configurations.
- ⚠ The means of power cord of adapter should be connected to a socket outlet with earthing connection.
- ⚠ The power for this product is intended to be supplied by a Listed Power Supply, with output marked LPS or PS2, and rated to deliver 12 to 48 VDC at a Minimum of 2.3 A.
- ⚠ Do not replace batteries of the device. Risk of explosion may occur if the batteries are replaced with incorrect types.
- ⚠ Ne remplacez pas les piles de l'appareil. Un risque d'explosion peut survenir si les piles sont remplacées par des types incorrects.
- ⚠ Dispose of used batteries according to the instructions.
- ⚠ The equipment is intended to be installed in the restricted access location.