


Quick Setup Guide

EdgeFire™ 1014 Rugged

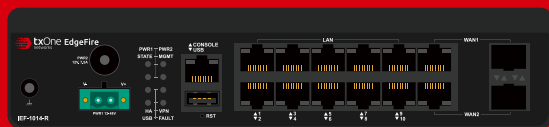

1

Opening and Inspecting the Package

The EdgeFire 1014 Rugged is a highly integrated industrial multiport secure router with firewall, NAT, VPN, IPS and managed Layer 2 switch functions. Designed for Ethernet-based security applications, it provides critical remote control or monitoring networks and also offers an electronic security perimeter for the protection of critical cyber assets, including pump-and-treat systems in water stations, DCS systems in oil and gas applications, and PLC/SCADA systems in factory automation.



EdgeFire 1014 Appliance



DIN Rail Kit x1




Rubber Feets x4




USB Dust Cover x1



RJ45 Dust Covers x13 &
SFP Dust Covers x2



Terminal Block x1 &
DC in Jack to Terminal x1

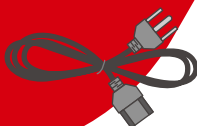

Power Cords x4
(US, UK, EU, JP)
*(The power adapter is only
for this product)



Power Adapter x1
*(The power adapter is only
for this product)




Console Cable x1
(RJ-45)



Quick Setup Guide x1 &
Hardware Warranty Paper x1

2

Examining the EdgeFire 1014 Rugged



Front Panel




Back Panel

3 Deployment Checklist

Requirement	Details
Ethernet Cables	- Connect to LAN port to access web management console. - Connect to WAN port to access external network.
Default IP Address of Web Console	Default web console access information: https://192.168.127.254  User name: admin Password: txone • IP address must be configured for WAN or LAN usage.
Laptop with Ethernet Port (RJ-45 Type)	The computer must have one of the following browsers installed: - Microsoft Edge (version 15 or above) - Firefox (version 53 or above) - Safari (version 10.1 or above) - Google Chrome (version 63 or above)

4 Deployment Scenarios and Security Operation Modes

OT Network

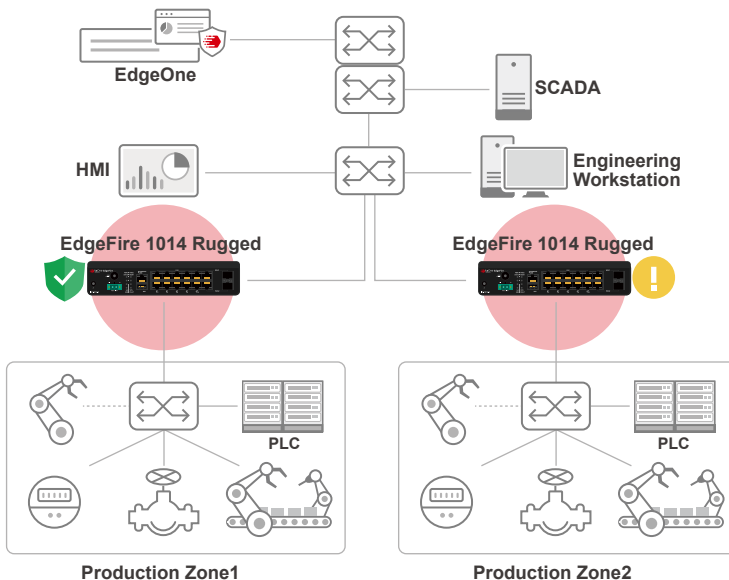

Prevention Mode

EdgeFire 1014 Rugged is placed inline (in the direct communication between source and destination device), where it actively analyzes traffic flow, records event logs and takes automated actions to prevent malicious events.



Monitor Mode

EdgeFire 1014 Rugged is placed inline (in the direct communication between source and destination device), where it actively analyzes traffic flow and only records event logs without taking action when malicious events are detected.


5 LED Indicators

The function of each LED is described in the table below.

PWR1	● Green ● Off	Power 1 is on, and the device is functioning normally. Power 1 is off.
PWR2	● Green ● Off	Power 2 is on, and the device is functioning normally. Power 2 is off.
STATE	● Green ● Off	The system is running normally. The system failed, and the FAULT LED will also be turned on.
FAULT	● Blinking ● Off	A hardware or system fault occurs. The system is operating normally.
MGMT	● Green ● Off	EdgeOne sync is enabled and EdgeOne is connected. EdgeOne sync is disabled. Note: EdgeFire 1014 Rugged will support EdgeOne sync if it is upgraded to V2.
HA	● Green ● Off	High Availability is enabled. High Availability is disabled.
IPS/IDS	● Green ● Off	IPS or IDS is enabled. IPS or IDS is disabled.
VPN	● Green ● Off	VPN tunnel is established. No VPN tunnel is connected.

6 Resetting to Factory Default Settings


The reset button for the EdgeFire 1014 Rugged is located on the front panel.

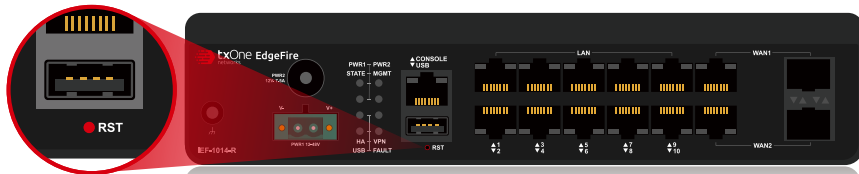

Reset Type	Description
Reboot System	Press and hold the reset button for 2 to 10 seconds. The STATE LED will begin to blink every one second, indicating the system is rebooting.
Restore Factory Default Settings	Press and hold the reset button for more than 10 seconds. The STATE LED will begin to blink every half second, indicating the system is resetting itself to factory defaults.

7 Mounting the EdgeFire 1014 Rugged to a DIN Rail

The aluminum DIN rail attachment plate should already be fixed to the back panel of EdgeFire 1014 Rugged when you take it out of the box. If you need to reattach the DIN rail attachment plate to EdgeFire 1014 Rugged, make sure the stiff metal spring is oriented towards the back, as shown in the following picture.

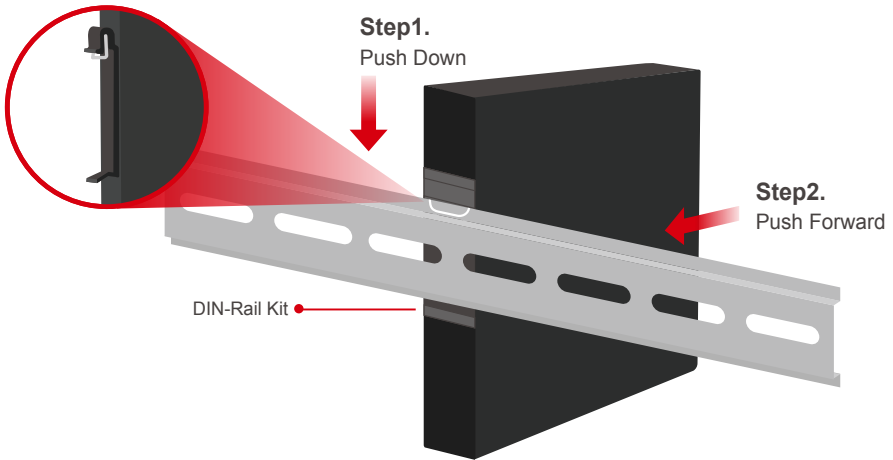


8 Wiring the Power Input

The EdgeFire 1014 Rugged has two types of power inputs. Use the provided power adapter (DC-IN Jack) or other 12V DC power supply (terminal block). The power input location and pin definition are shown in the following diagram.

Connecting the Power with a DC Power Adapter

Insert the provided adapter into the DC-IN jack connector on the front panel of EdgeFire 1014 Rugged.

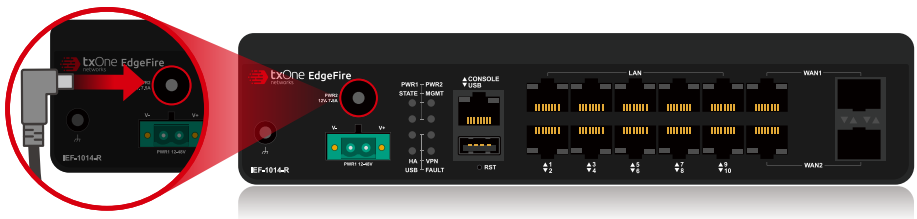

Connecting the Power with Terminal Block

Step1.

Open the terminal block's wire locks by pushing the buttons down.


Step2.

Insert the positive and negative points of a DC wire into the V+ and V- terminals respectively.

Step3.


When the wire is properly seated, the wire lock will be forced shut around it. Check whether the wire is properly fixed.

- ⚠ Consult with your electrician engineer before connecting EdgeFire 1014 Rugged to a DC power source.
- ⚠ Electrostatic discharge (ESD) can damage your EdgeFire 1014 Rugged.

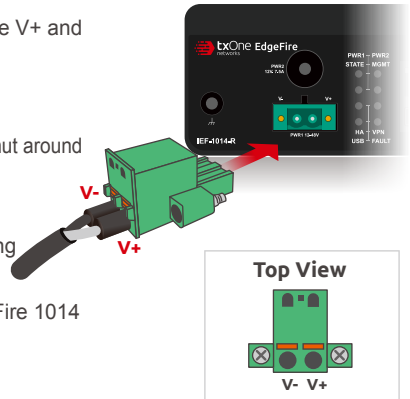

9 Connecting the Power

If the power is supplied properly, the “POWER” LED will glow steadily.

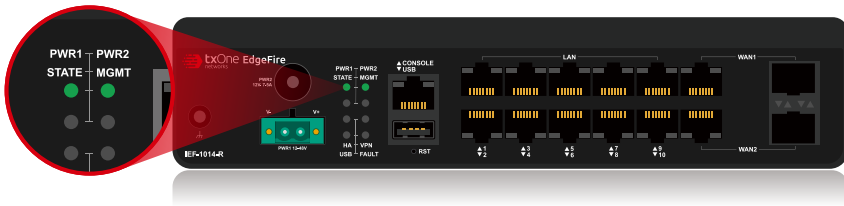


10 Grounding the Unit


Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the terminal block connector to the grounding surface prior to connecting the power. Please note that this product is intended to be mounted on a well-grounded mounting surface, such as a metal panel. The minimum cross-sectional area of the conductor must be equal to the input wiring cable’s width/circumference.

11 Connecting the Network

When deploying the Edge device to your OT network, make sure that the network switch is connected to WAN1 port and the production assets are connected to LAN ports.

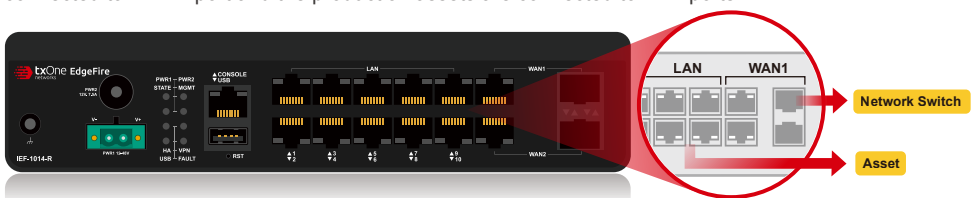


12 Software Configuration

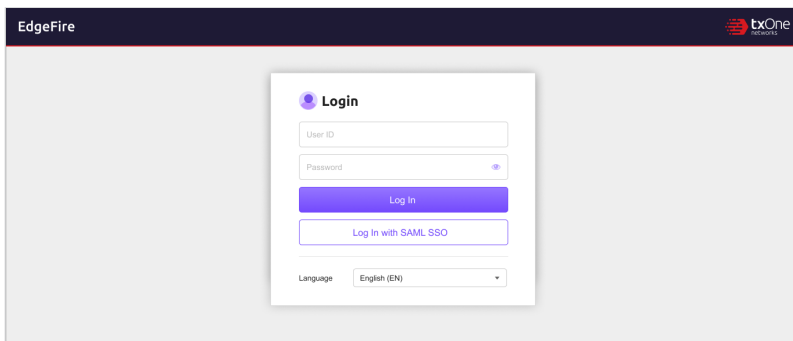

Before you connect the PC/laptop to the EdgeFire 1014 Rugged, the PC's IP address should be set to 192.168.127.100. After that, connect the PC to the LAN port of the EdgeFire 1014 Rugged using an Ethernet cable. Open a web browser on your PC and type “<https://192.168.127.254>” into the address bar. A pop-up window will be opened to ask for user name and password. Please type the default username, “admin”, and password, “txone”.

Now, the main screen will pop up so you can configure EdgeFire 1014 Rugged.

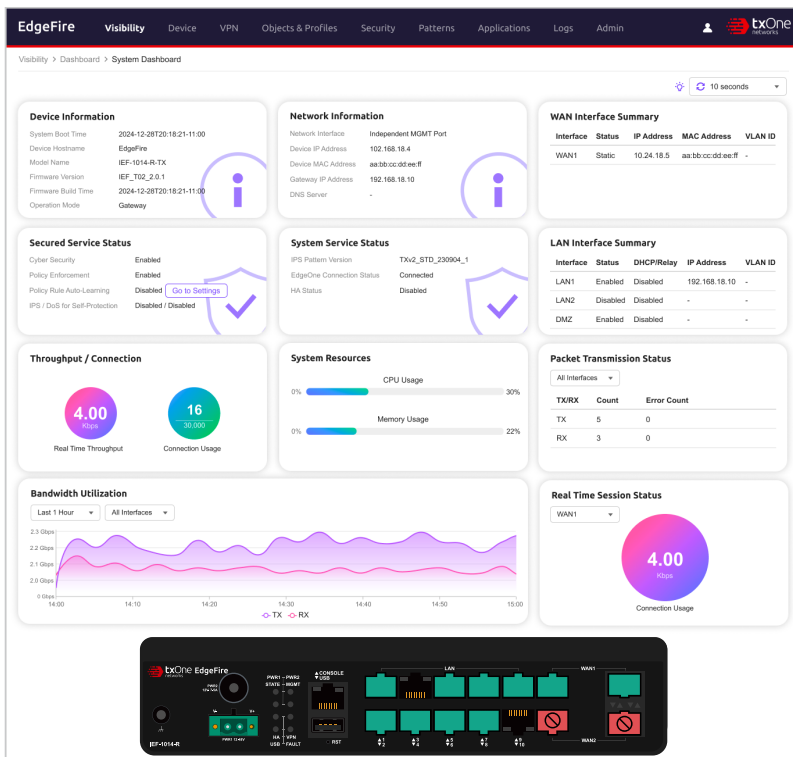

13 Configuring the Management Network Interface

1. Go to [Network] > [Network Interface].

Network Interface						
Network Interface	Status	Connection Type	IP Address	Subnet Mask	VLAN ID	Description
WAN1	Enabled	DHCP Client	211.248.20.108	255.255.255.0	-	
LAN1	Enabled	DHCP Service Disabled	192.168.10.12	255.255.255.0	-	
LAN2	Enabled	DHCP Relay	192.168.2.254	255.255.255.0	-	
DMZ	Enabled	DHCP Service Disabled	192.168.254.254	255.255.255.0	-	

2. Click a LAN interface, and the [Edit Network Interface] screen will appear.

Edit Network Interface

Status

☒

Network Interface

LAN1

Description

Network Settings

IP Address*

192.168.10.12

Subnet Mask*

255.255.255.0

☐ VLAN ID

DHCP Service

DHCP Service

Disabled

Save

Cancel

3. In the [Network Settings] pane, configure the management network interface for the EdgeFire 1014 Rugged.

Task	Action
IP Address	Configure Management IP Address of the EdgeFire 1014 Rugged.
Subnet Mask	Configure Netmask of the EdgeFire 1014 Rugged.
Network VLAN ID	Configure Network VLAN ID of the EdgeFire 1014 Rugged.

14 Connecting to the Network

1. Connect the EdgeFire 1014 Rugged WAN1 port to a wide area network.
(E.g., the internet or external network)
2. Connect the EdgeFire 1014 Rugged LAN1 port to a local area network.
(E.g., a segment of your network)

15 Checking the LED to Confirm Status

The LED on the Ethernet port shows the deployment status.

 RJ45		No Light	The EdgeFire 1014 Rugged cannot communicate with a network.
		Left LED	10Mbps LINK/ACT (off = no link, on = 10 Mbps, blinking = activity)
		Right LED	100Mbps LINK/ACT (off = no link, on = 100 Mbps, blinking = activity)
		Both Left & Right LEDs	GE LINK/ACT (Both LED ON = 1 Gbps link, blinking = activity)

Appendix: Connecting to the Console Port

The EdgeFire 1014 Rugged console port is an RJ45 port located on the front panel of the case. It is designed for connecting to serial console terminals to view messages during a boot sequence or for debugging system boot issues. To connect to a serial console terminal using a console cable, remove the protective cover from the port.

Serial Console Port, Cable, & Pinouts



The default settings upon the initial configuration for the EdgeFire 1014 Rugged using the command line interface (CLI) on a serial terminal are listed below.

- Baud Rate: 115200 bps
- Character Size: 8 bits
- Parity: None
- Stop Bits: 1
- Flow Control: None

Other Resources

Website

<https://www.txone.com/>

MyTXOne Portal

<https://my.txone.com/>

EdgeFire Landing Page



EULA

<https://www.txone.com/legal/license-agreements/>

Contact Information

Email

 support@txone.com

Call Center

<https://help.txone.com/>

Phone

 US: +1 3465867975

 Netherland: +31 402310122

 Taiwan: +886 277275120



⚠ Warning

Ensure that the grounding screw is securely fastened and that the product is properly grounded.

- ⚠ Terminal block wire type: Cu. Only use 12-28 AWG wire size.
- ⚠ Terminal block with DC Plug wire type: Cu. Only use 14-22 AWG wire size, torque value 2.2 Lb In.
- ⚠ Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:
 1. manually resetting the product to factory settings, or
 2. handing the product to the TXOne support team, who will help you clear all stored data and configurations.
- ⚠ The means of power cord of adapter should be connected to a socket outlet with earthing connection.
- ⚠ This product is intended to be supplied by a UL Listed Power Adapter with rated output 12-48Vdc, 7.5A-1.87A (for Terminal Block) and 12Vdc, 7.5A (for DC Jack), Tma = 65°C minimum.
- ⚠ Do not replace batteries of the device. Risk of explosion may occur if the batteries are replaced with incorrect types.
- ⚠ Ne remplacez pas les piles de l'appareil. Un risque d'explosion peut survenir si les piles sont remplacées par des types incorrects.
- ⚠ Dispose of used batteries according to the instructions.
- ⚠ The equipment is intended to be installed in the restricted access location.