


Quick Setup Guide

EdgeIPS™ 103 Rugged



Support
configurable
hardware
bypass

EdgeIPS 103 Rugged is a Transparent Security Box equipped with dual Ethernet LAN ports. Users can efficiently adapt the palm-sized EdgeIPS 103 Rugged into a flexible solution for the challenges of Ethernet communications.

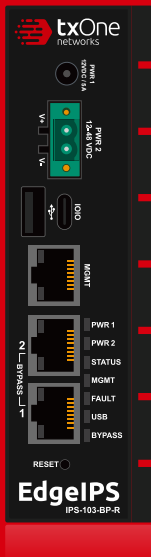

1

Opening and Inspecting the Package



EdgeIPS 103 Rugged Appliance



Terminal Block x1



DIN Rail Kit x1



Power Adapter x1

*(The power adapter is only for this product)




Rubber Feet x4



Power Cords x4
(US, UK, EU, JP)

*(The power cords are only for this product)



Console Cable x1
(USB-Type-C)



Quick Setup Guide x1 &
Hardware Warranty Paper x1

2

Examining the EdgeIPS 103 Rugged



Front Panel




Back Panel

3 Deployment Checklist

Requirement	Details
Ethernet Cables	- Connect to MGMT port to access web management console. - Connect switch to port 1. - Connect field assets to port 2.
Default IP Address of Web Console	Default web console access information: https://192.168.127.254  User name: admin Password: txone
Laptop with Ethernet Port (RJ-45 Type)	The computer must have one of the following browsers installed: - Microsoft Edge (version 15 or above) - Firefox (version 53 or above) - Safari (version 10.1 or above) - Google Chrome (version 63 or above)

4 Deployment Scenarios and System Operation Modes

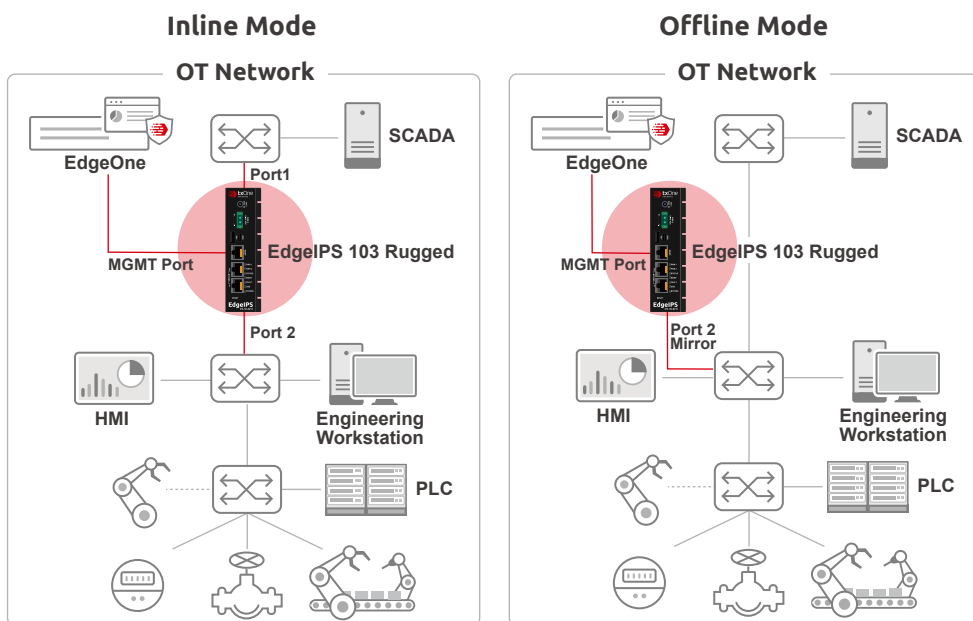

Inline mode In inline mode, EdgelPS 103 Rugged is deployed directly on the traffic path.

Offline mode In offline mode, EdgelPS 103 Rugged is connected to a mirror port of network switch and mirrors network traffic to itself.


5 LED Indicators

The function of each LED is described in the table below.

PWR1	● Green	Power 1 is on, and the device is operating normally.
	● Off	Power 1 is off.
PWR2	● Green	Power 2 is on, and the device is operating normally.
	● Off	Power 2 is off.
STATUS	● Green	The system is running normally.
	● Off	The system failed, and the FAULT LED will also be turned on.
MGMT	● Green	EdgeOne sync is enabled and EdgeOne is connected.
	● Off	EdgeOne sync is disabled. Note: EdgeIPS 103 Rugged does not support OT Defense Console (ODC) sync.
FAULT	● Blinking	A hardware or system fault occurs.
	● Off	The system is operating normally.
USB	● Green	LED will be turned on when a USB flash drive is plugged in.
	● Blinking	USB data transmission is in progress.
	● Off	No USB flash drive is plugged in.
BYPASS	● Green	The system is operating normally.
	● Red	The network traffic is redirected to the bypass port, and the Hardware Bypass mode is "Fail Open" or "Force Open" during device downtime.
	● Off	The LAN port is physically disconnected, and the Hardware Bypass mode is "Fail Close" during device downtime.

6 Resetting to Factory Default Settings


The reset button for the EdgeIPS 103 Rugged is located on the front panel.

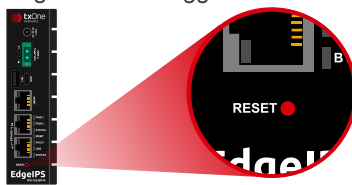

Reset Type	Description
Reboot System	Press and hold the reset button for 2 to 10 seconds. The STATUS LED will begin to blink every one second, indicating the system is rebooting.
Restore Factory Default Settings	Press and hold the reset button for more than 10 seconds. The STATUS LED will begin to blink every half second, indicating the system is resetting itself to factory defaults.

7 Mounting the EdgeIPS 103 Rugged to a DIN Rail

The aluminum DIN rail attachment plate should already be fixed to the back panel of EdgeIPS 103 Rugged when you take it out of the box. If you need to reattach the DIN rail attachment plate to EdgeIPS 103 Rugged, make sure the stiff metal spring is oriented towards the back, as shown in the following picture.

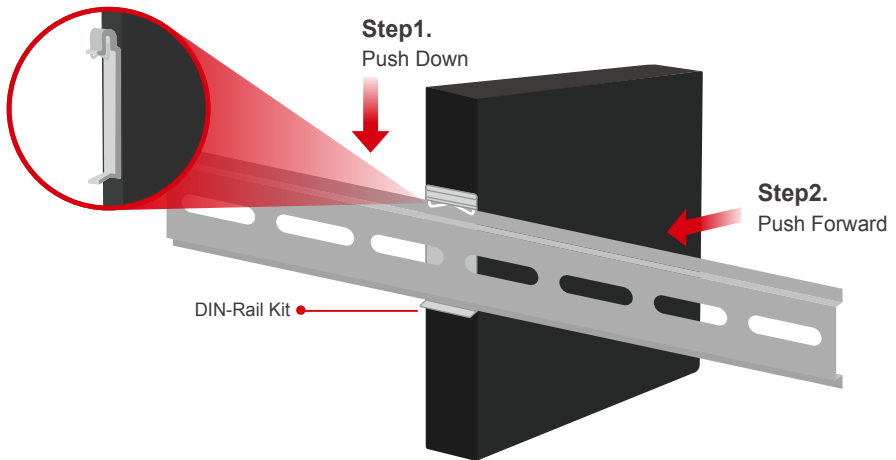


8 Wiring the Power Input

The EdgeIPS 103 Rugged has two types of power inputs. Use the provided power adapter (DC-IN Jack) or other 12V DC power supply (terminal block). The power input location and pin definition are shown in the following diagram.

Connecting the Power with a DC Power Adapter

Insert the provided adapter into the DC-IN jack connector on the front panel of EdgeIPS 103 Rugged.

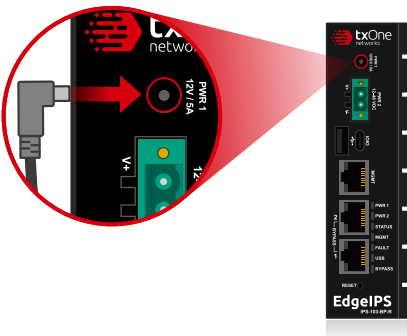

Connecting the Power with DC Wires

Step1.


Open the terminal block's wire locks by pushing the buttons down.

Step2.

Insert a positive/negative DC wire into the V+/V- terminals respectively.

Step3.

When the wire is properly seated, the wire lock will be forced shut around it. Check whether the wire is properly fixed.

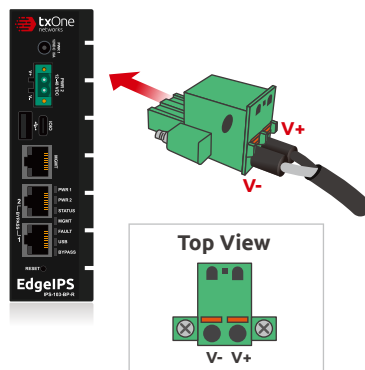



⚠ Consult with your electrician engineer before connecting EdgeIPS 103 Rugged to a DC power source.

⚠ Electrostatic discharge (ESD) can damage your EdgeIPS 103 Rugged.

9 Connecting the Power and Network

If the power is supplied properly, the PWR LED will glow steadily.


When deploying the Edge device to your OT network, make sure that the network switch is connected to Port 1 and the production assets are connected to Port 2.

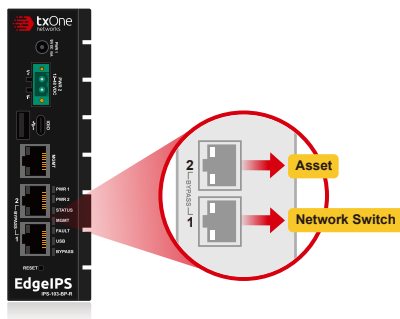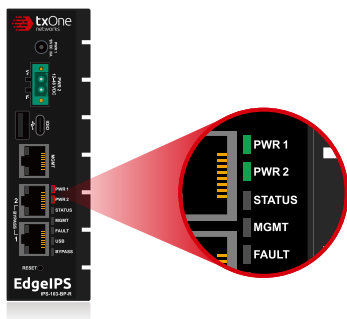

10 Grounding the Unit


Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the terminal block connector to the grounding surface prior to connecting the power. Please note that this product is intended to be mounted on a well-grounded mounting surface, such as a metal panel. The minimum cross-sectional area of the conductor must be equal to the input wiring cable's width/circumference.

11 Software Configuration

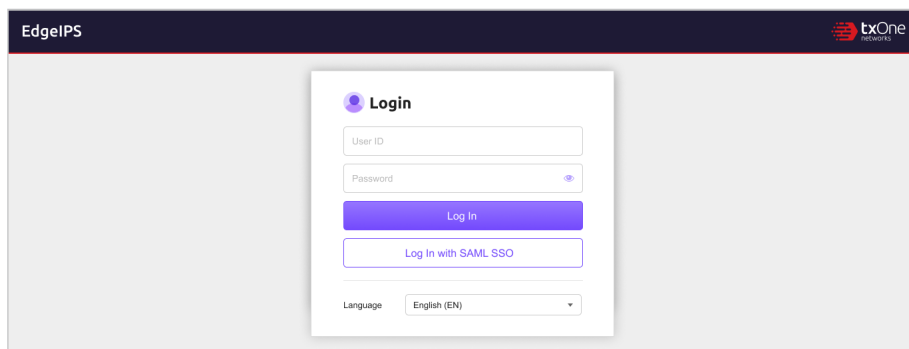

Before you connect the PC/laptop to EdgeIPS 103 Rugged, the PC's IP address should be set to 192.168.127.100. After that, connect the PC and EdgeIPS 103 Rugged using an Ethernet cable. Open a web browser on your PC and type "<https://192.168.127.254>" into the address bar. A pop-up window will be opened to ask for user name and password. Please type the default username, "admin", and password, "txone".

Now, the main screen will pop up so you can configure EdgeIPS 103 Rugged.

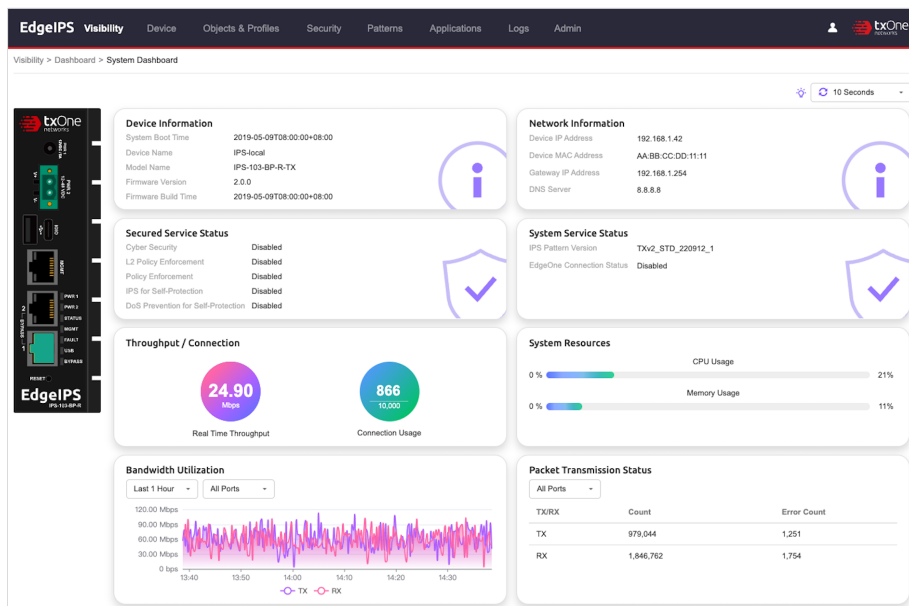

12 Configuring the Management Network Interface

1. Go to [Device] > [Network & Ports] > [Network Settings].

Network Settings

Connection Types

Single IP

Device IP Address*

192.168.1.42

Netmask*

255.255.255.0

Gateway*

192.168.1.1

DNS

8.8.8.8

☒ VLAN ID

42

LLDP Setting

Transmit LLDP

☒

2. In the [Network Settings] pane, configure the management network interface for EdgeIPS 103 Rugged.

Task	Action
Device IP Address	Configure Management IP Address of the EdgeIPS 103 Rugged.
Netmask	Configure Netmask of the EdgeIPS 103 Rugged.
Gateway	Configure Gateway Address of the EdgeIPS 103 Rugged.
DNS	Configure DNS setting of the EdgeIPS 103 Rugged.
Network VLAN ID	Configure Network VLAN ID of the EdgeIPS 103 Rugged.

13 Connecting to the Network

Use the management port to access the EdgeIPS 103 Rugged web console from another computer on your network.

1. Connect one end of a Category 5e (Cat-5e) Ethernet cable to the MGMT port located on the front panel.
2. Connect the other end of the cable to an Ethernet port connected to your network.

14 Checking the LED to Confirm Status


The LEDs on each Ethernet port show the deployment status.

 MGMT		The EdgeIPS 103 Rugged appliance cannot communicate with a network.
		GE LINK/ACT (off = no link, on = activity)
		1 Gbps LINK/ACT (on = 1 Gbps link)
		100 Mbps LINK/ACT (on = 100 Mbps link)
		10 Mbps LINK/ACT (off = 10 Mbps link)
 RJ45		The EdgeIPS 103 Rugged appliance cannot communicate with a network.
		GE LINK/ACT (off = no link, on = activity)
		1 Gbps LINK/ACT (on = 1 Gbps link)
		100 Mbps LINK/ACT (on = 100 Mbps link)
		10 Mbps LINK/ACT (off = 10 Mbps link)

15 Hardware Bypass LED Indicators

The Bypass LED states and device statuses of the IPS port pair are shown below.

Bypass LED Indication	Status
	Hardware Bypass of the port pair is disabled.
	Hardware Bypass of the port pair is enabled.
	Hardware Bypass of the port pair is functioning normally.

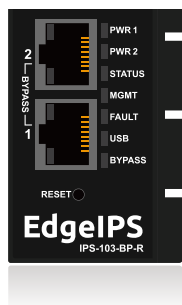

16 Configuring the Management Port Settings


Go to [Security] > [Security General Settings].

Management Port

☒ Inline Mode ☐ Offline Mode
 Management Port ⓘ MGMT
 Hardware Bypass Mode Fail Open
☐ LFPT

MGMT Port


When the management console is set up via the MGMT port, all the hardware bypass features, including Fail Open, Fail Close, and Force Open, are configurable.



☒ Inline Mode ☐ Offline Mode
 Management Port ⓘ Data Port (PORT1 / PORT2)
 Hardware Bypass Mode Fail Open
☐ LFPT

Data Port

When the management console is set up via the data port (port 1 or Port 2), you must connect the management console to the data port. Only Fail Open and Fail Close are configurable.




⚠ When the management console is set up via the data port and the Hardware Bypass Mode is Fail Close, if any hardware failure occurs, you might not be able to access the system.


Hardware Bypass Mode

Fail Open

☒ Inline Mode ☐ Offline Mode
 Management Port ⓘ MGMT
 Hardware Bypass Mode Fail Open
☐ LFPT

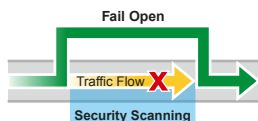


When the Hardware Bypass Mode is Fail Open, if any hardware failure occurs, the connection will be recovered rapidly.

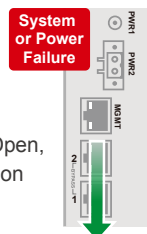


Fail Close

☒ Inline Mode ☐ Offline Mode
 Management Port ⓘ MGMT
 Hardware Bypass Mode Fail Close
☐ LFPT

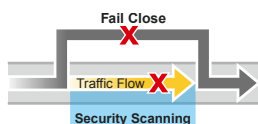


When the Hardware Bypass Mode is Fail Close, if any hardware failure occurs, you might not be able to access the system.

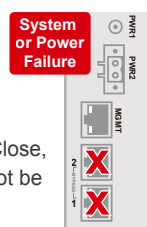


Force Open

☒ Inline Mode ☐ Offline Mode
 Management Port ⓘ MGMT
 Hardware Bypass Mode Force Open
☐ LFPT

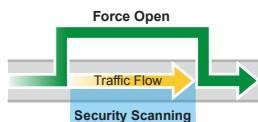

When the Hardware Bypass Mode is Force Open, the system will allow packets to pass through without conducting packet scanning.


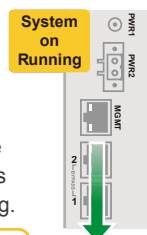


⚠ The Force Open mode is supported only when the management port is set to MGMT.

Appendix: Connecting to the Console Port

The EdgeIPS 103 Rugged console port is a USB Type-C port located on the front panel of the case. It is designed for connecting to serial console terminals to view messages during a boot sequence or to debug system boot issues. To connect to a serial console terminal using a console cable, remove the protective cover from the port.

Serial Console Port, Cable, & Pinouts

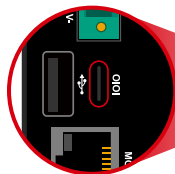

The initial configuration for the EdgeIPS 103 Rugged using the command line interface (CLI) on a serial terminal client will use the following default settings:

- Baud Rate: 115200 bps
- Character Size: 8 bits
- Parity: None
- Stop Bits: 1
- Flow Control: None

Legal Notice

TXOne Networks Incorporated reserves the right to make changes to this document and to the product described herein without notice. Before installing and using the product, review the readme files, release notes, and/or the latest version of the applicable documentation, which are available at <https://download-center.cs.txone.com/>.

TXOne Networks is a registered trademark of TXOne Networks Incorporated. All other product names may be trademarks or registered trademarks of their owners.

In order to protect the value of TXOne Networks' logos and marks, it is very important that they be used appropriately and only by TXOne Networks and Partners with a current and valid partnership agreement.

The following marks are owned exclusively by TXOne Networks and may be registered in the U.S. or other countries. TXOne Networks reserves the right in its sole discretion to add additional marks to or remove marks from this list at any time and the failure of a TXOne trademark or logo to appear on this list shall not be construed as a waiver of any of TXOne Networks' rights in such trademark or logo.

- | | | |
|---------------|--------------|----------------------|
| - EdgeIPS | - EdgeIPS LE | - EdgeOne |
| - EdgeIPS Pro | - EdgeFire | - OT Defense Console |

Trademark ownership is attributed in two ways, with the use of a trademark symbol (such as [™] or ®) after the trademark, and with a trademark legend, usually found at the end of a document in legible text following the copyright notice. Whenever you use one of TXOne trademarks, you must also include a proper trademark attribution statement somewhere on the same document or webpage, such as the following: "The TXOne Networks® and EdgeIPS[™] trademarks are owned by TXOne Networks, Inc. and is used with permission." Remember, mere inclusion of a trademark symbol and legend does not entitle you to use a TXOne trademark.

Other Resources

Website

<https://www.txone.com/>

MyTXOne Portal

<https://my.txone.com/>

EdgeIPS Landing Page



EULA

<https://www.txone.com/legal/license-agreements/>

Contact Information

Email

 support@txone.com

Call Center

<https://help.txone.com/>

Phone

 US: +1 3465867975

 Netherland: +31 402310122

 Taiwan: +886 277275120



⚠ Warning

Ensure that the grounding screw is securely fastened and that the product is properly grounded.

- ⚠ Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:
 1. manually resetting the product to factory settings, or
 2. handing the product to the TXOne support team, who will help you clear all stored data and configurations.
- ⚠ The power cord adapter should be connected to a socket outlet with an earthing connection.
- ⚠ The power cord and adapter must comply with Class II construction.
- ⚠ This product is intended to be supplied by a UL Listed Power Adapter or DC power source marked 'L.P.S.' or 'Limited Power Source', rated 12 VDC, 5 A (MAX.)
- ⚠ Do not replace batteries of the device. Risk of explosion may occur if the batteries are replaced with incorrect types.
- ⚠ Ne remplacez pas les piles de l'appareil. Un risque d'explosion peut survenir si les piles sont remplacées par des types incorrects.
- ⚠ Dispose of used batteries according to the instructions.
- ⚠ The equipment is intended to be installed in the restricted access location.

© 2024 TXOne Networks. All rights reserved. TXOne Networks and the TXOne logo are trademarks or registered trademarks of TXOne Networks. All other company and/or product names may be trademarks or registered trademarks of their owners. Information contained in this document is subject to change without notice.