


Quick Setup Guide

EdgeIPS™ Pro 2096

Support
configurable
hardware
bypass

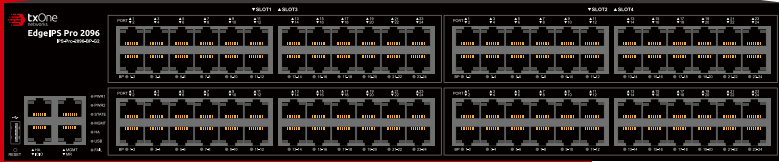

IPSP-2096-BP-G2-TX (Gen2)


EdgeIPS Pro 2096 is a Transparent Security Appliance, supporting up to 48 pairs IPS segments. Users can efficiently adapt the rack mount-sized EdgeIPS Pro 2096 into a flexible solution for the challenges of Ethernet communications.

You can learn more about LAN module in the **Quick Setup Guide - EdgeIPS Pro LAN Module**.

1 Opening and Inspecting the Package



EdgeIPS Pro 2096 Appliance

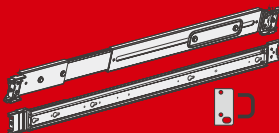

Sliding Rails x2 &
Rack Mount Kits x2




Cage NUT x2



M5x16.5L x8




M4x4L x10



M5x20L x4

Screws for Rack Mount Kits x4



Wire Clamps x2




Power Cords x8
(USx2, UKx2, EUx2, J Px2)

*(The power cords are only for this product)



Console Cable x1



USB Extension Cable x1



RJ45 Dust Covers x4
(MGMT, MR, HA, IOIO)



USB Dust Covers x1



Quick Setup Guide x1 &
Hardware Warranty Paper x1


2 Examining the EdgeIPS Pro 2096



3 Deployment Checklist

Requirement	Details
Ethernet Cables	Connect to the Management Port to access web management console.
Default IP Address of Web Console	Default web console access information: https://192.168.127.254
	 User Name: admin Password: txone
Laptop with Ethernet Port (RJ-45 Type)	The computer must have one of the following browsers installed: - Microsoft Edge (version 15 or above) - Firefox (version 53 or above) - Safari (version 10.1 or above) - Google Chrome (version 63 or above)

4 Deployment Scenario

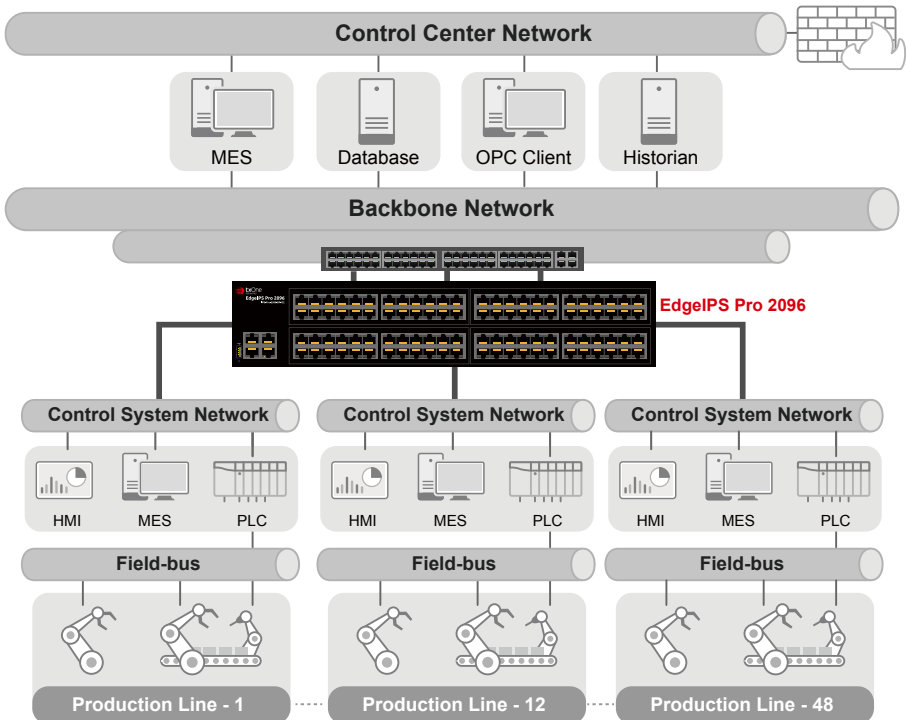



5 LED Indicators

The function of each LED is described in the table below.

PWR1	 Green	Power 1 is on, and the device is functioning normally.
	 Off	Power 1 is off.
PWR2	 Green	Power 2 is on, and the device is functioning normally.
	 Off	Power 2 is off.
STATE	 Green	The system is running normally.
	 Off	The system failed, and the FAIL LED will also be turned on.
MGMT	 Green	EdgeOne sync is enabled and EdgeOne is connected.
	 Off	EdgeOne sync is disabled. Note: EdgeIPS Pro 2096 will support EdgeOne sync if it is upgraded to V2.
HA	 Green	High Availability feature is enabled.
	 Off	High Availability feature is disabled.
USB	 Green	LED will be turned on when a USB flash drive is plugged in.
	 Off	No USB flash device is plugged in.
FAIL	 Red	A hardware or system failure occurs.
	 Off	The system is operating normally.

6 Resetting to Factory Default Settings

The reset button for the EdgeIPS Pro 2096 is located on the front panel.

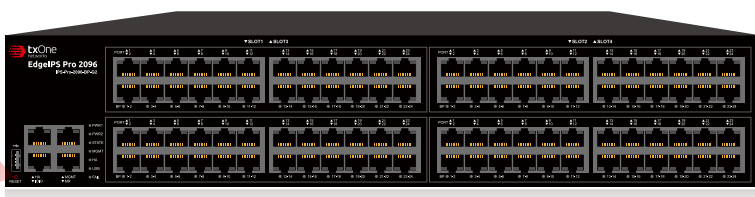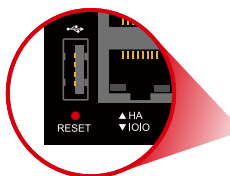

Reset Type

Description

Reboot System

Press and hold the reset button for 2 to 10 seconds. The STATE LED will begin to blink every one second, indicating that the system is rebooting.


Restore Factory Default Settings

Press and hold the reset button for more than 10 seconds. The STATE LED will begin to blink every half second, indicating that the system is resetting itself to factory defaults.


7 Installing the EdgeIPS Pro 2096

The aluminum rail attachment plate should already be fixed to the back panel of the EdgeIPS Pro 2096 when you take it out of the box. If you need to reattach the rail attachment plate to the EdgeIPS Pro 2096, make sure the stiff metal spring is oriented towards the top, as shown in the following pictures.


Step1.

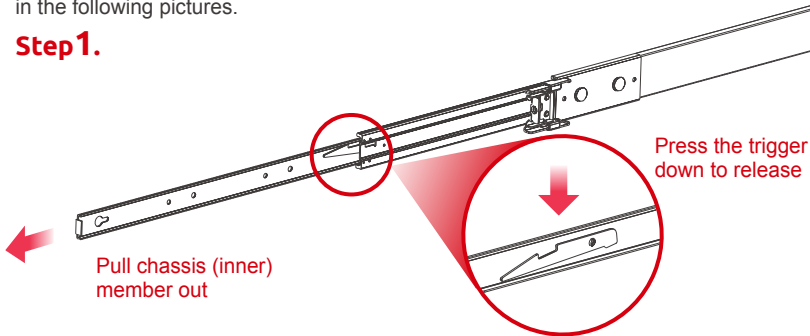


Step2.

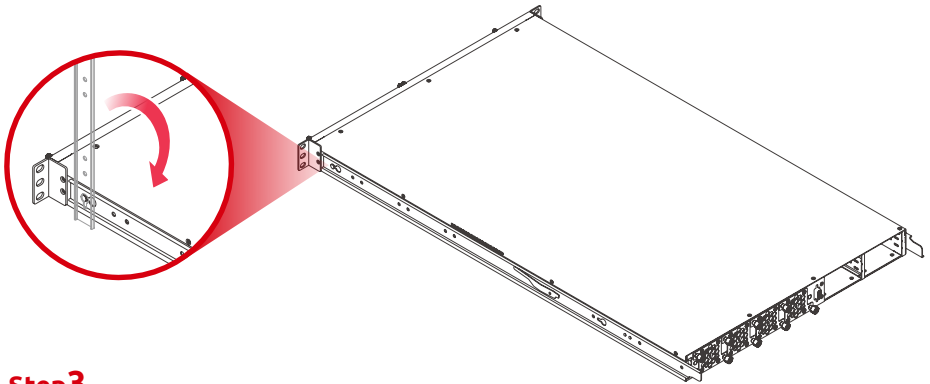


Step3.

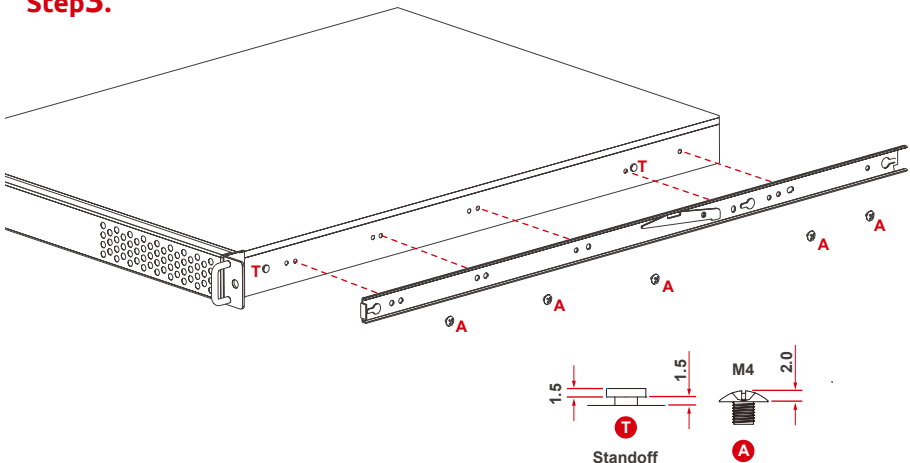


Step4.

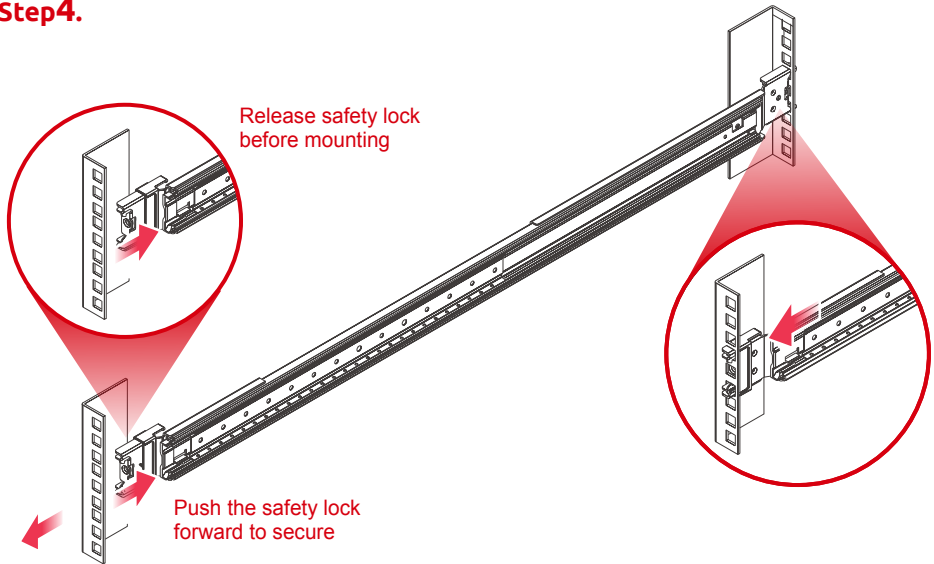

Step5.

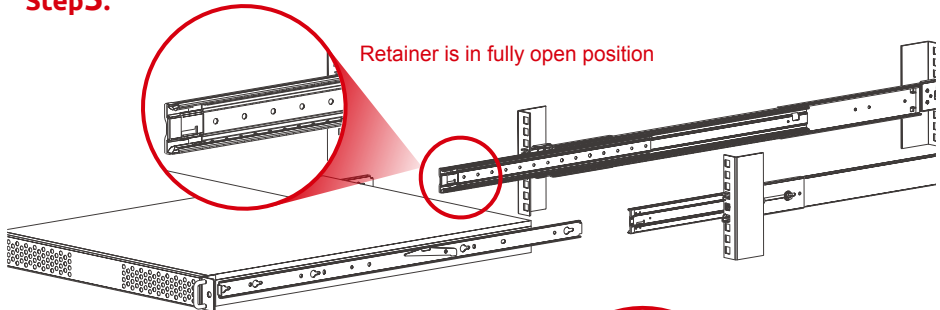

Step6.

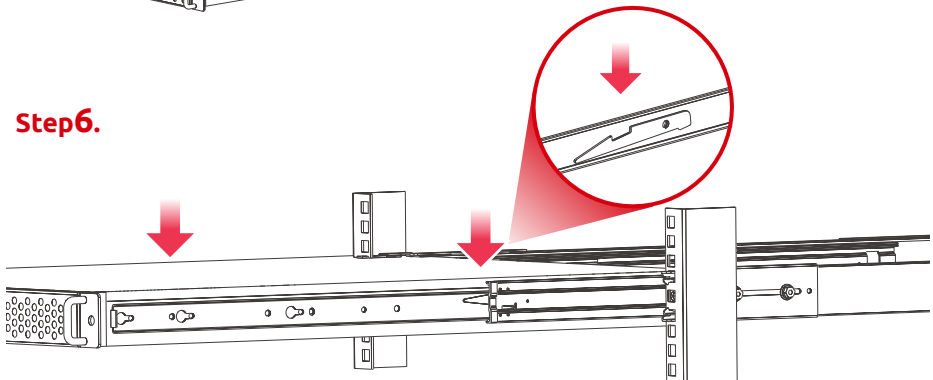

8 Wiring the Redundant Power Inputs

The EdgeIPS Pro 2096 has two sets of power inputs – power input1 and power input2. The top and side views of the terminal block connector are shown below.

Step1.

Prepare the power cord and wire locks.

Step2.

Insert a positive/negative AC wire power cord respectively.


Step3.

When the wire is properly seated, the wire lock will be forced shut around it. Check whether the wire is properly fixed.


9 Connecting the Power

Connect the 100 to 240 AC power cord to the power socket, which is connected to the EdgeIPS Pro 2096. If the power is supplied properly, the PWR LED will glow steadily. The power input location is shown in the following diagram.

Step1.

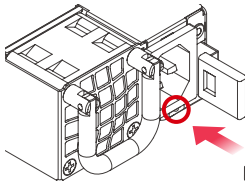


Step2.

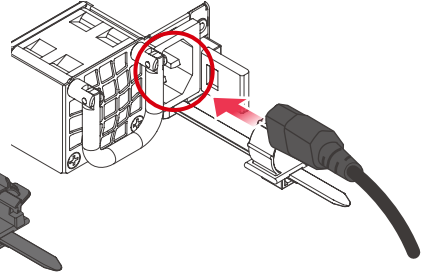

- Green The power module is operating normally, and the system has booted up and is operating
- Blinking The power module is operating normally, but the system has not booted up yet.
- Amber The power module is in good condition, but it is not operating because no power cable is attached.


The button acts as the power on/off switch for the EdgeIPS Pro 2096. To force a shutdown of the device when it's on, press and hold the button for more than 5 seconds. To turn the device on when it's off, simply give the button a short press.

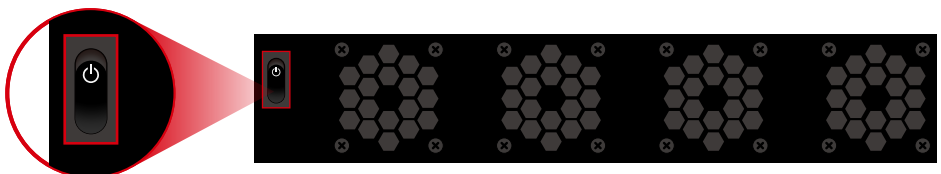

10 Grounding the Unit


Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the terminal block connector to the grounding surface prior to connecting the power. Please note that this product is intended to be mounted on a well-grounded mounting surface, such as a metal panel. The minimum cross-sectional area of the conductor must be equal to the input wiring cable's width/circumference.

11 Software Configuration

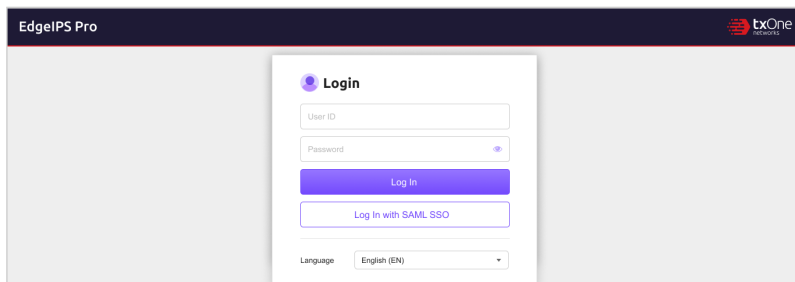

Before you connect the PC/laptop to EdgIPS Pro 2096, the PC's IP address should be set to 192.168.127.100. After that, connect the PC and EdgIPS Pro 2096 using an Ethernet cable. Open a web browser on your PC and type "<https://192.168.127.254>" into the address bar. A pop-up window will open to ask for user name and password. Please type the default username, "admin", and password, "txone".

Now, the main screen will pop up so you can configure EdgIPS Pro 2096.

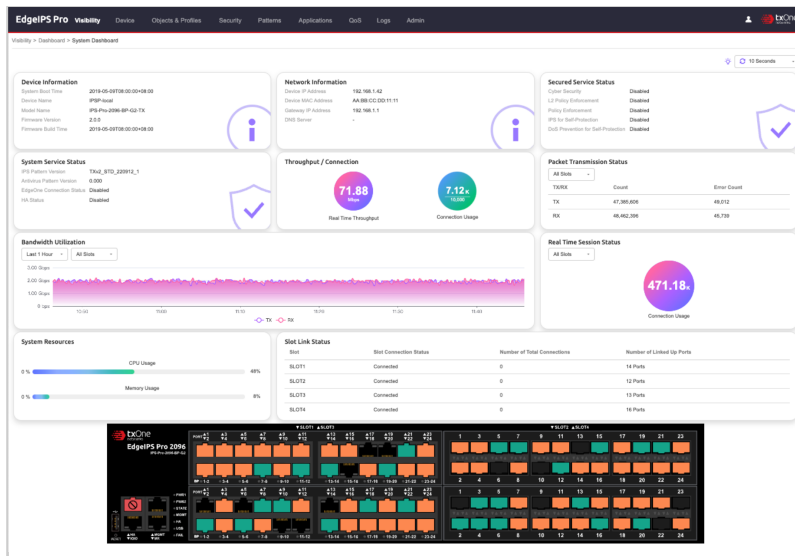

12 Configuring the Management Port

1. Go to [Device] > [Network & Ports] > [Network Settings].

Network Settings

Connection Types

Single IP

Device IP Address*

192.168.1.42

Netmask*

255.255.255.0

Gateway*

192.168.1.1

DNS

8.8.8.8

☒ VLAN ID

42

LLDP Setting

Transmit LLDP

☒

2. In the [Network Settings] pane, configure the management port for EdgeIPS Pro 2096.

Task	Action
Device IP Address	Configure Management IP Address of the EdgeIPS Pro 2096.
Netmask	Configure Netmask of the EdgeIPS Pro 2096.
Gateway	Configure Gateway Address of the EdgeIPS Pro 2096.
DNS	Configure DNS setting of the EdgeIPS Pro 2096.
Network VLAN ID	Configure Network VLAN ID of the EdgeIPS Pro 2096.

13 Connecting to the Network

Use the management port to access the EdgeIPS Pro 2096 web console from another computer on your network.

1. Connect one end of a Category 5e (Cat-5e) Ethernet cable to the MGMT port located on the front panel.
2. Connect the other end of the cable to an Ethernet port connected to your network.


14 Checking LED Indicators to Confirm Status

The LEDs on each Ethernet port show the deployment status.

 MGMT/MR		The EdgeIPS Pro 2096 appliance cannot communicate with a network.
		GE LINK/ACT (off = no link, on = activity)
		10 Gbps LINK/ACT (on = 10 Gbps link)
		1 Gbps LINK/ACT (on = 1 Gbps link)
		10/100 Mbps LINK/ACT (off = 10/100 Mbps link)
 HA		The EdgeIPS Pro 2096 appliance cannot communicate with a network.
		GE LINK/ACT (off = no link, on = activity)
		100 Mbps LINK/ACT (on = 100 Mbps link)
		10 Mbps LINK/ACT (off = 10 Mbps link)
 RJ45		The EdgeIPS Pro 2096 appliance cannot communicate with a network.
		GE LINK/ACT (off = no link, on = activity)
		10/100 Mbps LINK/ACT (off = 10 Mbps link, on = 100 Mbps link)
		1 Gbps LINK/ACT (on = 1 Gbps link)

15 Hardware Bypass LED Indicators

The Bypass LED states and device statuses of each IPS port pair are shown below.

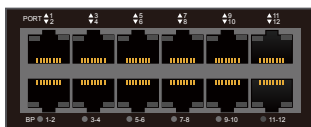

Bypass LED Indication


Status

	Hardware Bypass of the port pair is disabled.
	Hardware Bypass of the port pair is enabled.
	Hardware Bypass of the port pair is functioning normally.

Appendix: Connecting to the Console Port

The EdgeIPS Pro 2096 console port is an RJ45 port located on the front panel of the case. It is designed for connecting to serial console terminals to view messages during a boot sequence or to debug system boot issues. To connect to a serial console terminal using a console cable, remove the protective cover from the port.

Serial Console Port, Cable & Pinouts

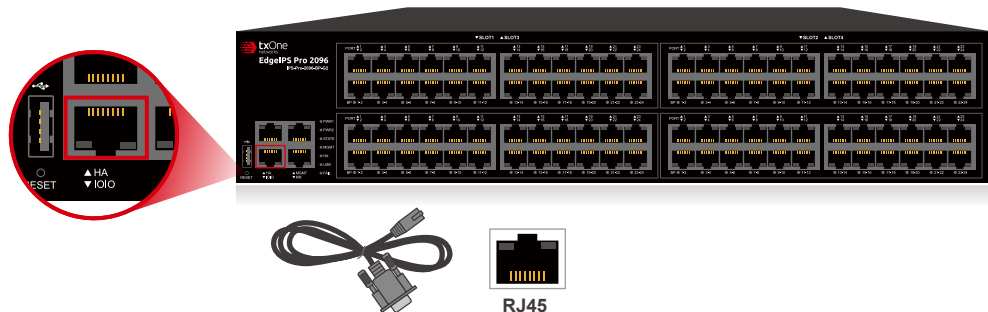

The initial configuration for the EdgeIPS Pro 2096 using the command line interface (CLI) on a serial terminal client will use the following default settings:

- Baud Rate: 115200 bps
- Character Size: 8 bits
- Parity: None
- Stop Bits: 1
- Flow Control: None

Other Resources

Website

<https://www.txone.com/>

MyTXOne Portal

<https://my.txone.com/>

EdgeIPS Pro Landing Page



EULA

<https://www.txone.com/legal/license-agreements/>

Contact Information

Email

 support@txone.com

Call Center

<https://help.txone.com/>

Phone

 US: +1 3465867975

 Netherland: +31 402310122

 Taiwan: +886 277275120

Warning

Ensure that the grounding screw is securely fastened and that the product is properly grounded.

-  Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:
 1. manually resetting the product to factory settings, or
 2. handing the product to the TXOne support team, who will help you clear all stored data and configurations.
-  Do not replace batteries of the device. Risk of explosion may occur if the batteries are replaced with incorrect types.
-  Ne remplacez pas les piles de l'appareil. Un risque d'explosion peut survenir si les piles sont remplacées par des types incorrects.
-  Dispose of used batteries according to the instructions.
-  The equipment is intended to be installed in the restricted access location.