

Quick Setup Guide

EdgeIPS™ Pro 732

Support
configurable
hardware
bypass




EdgeIPS Pro 732 is a Transparent Network Appliance Platform, supporting up to 16 pairs IPS segments. Users can efficiently adapt the rack mount-sized EdgeIPS Pro 732 into a flexible solution for the challenges of Ethernet communications.

1 Opening and Inspecting the Package



EdgeIPS Pro 732 Appliance

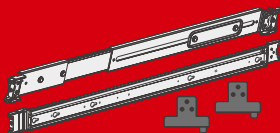


Sliding Rails x2 &
Mount Ears x2


7.1mm Round Hold Server Rack
x8

F4x6mm x6
M4x4L x10
M5x10L x2

Screws for Rack Mount Kits x4



Wire Clamps x2

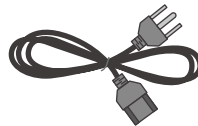

Power Cords x10
(USx2, UKx2, EUx2, JPx2, TWx2)
*(The power cords are only for this product)



Console Cable x1



RJ45 Dust Covers x4
(MGMT, MR, HA, IOIO)




USB Dust Covers x1



Quick Setup Guide x1 &
Hardware Warranty Paper x1


2 Examining the EdgeIPS Pro 732

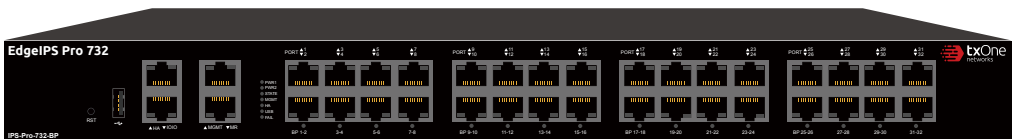

3 Deployment Checklist

Requirement	Details
Ethernet Cables	Connect to the Management Port to access web management console.
Default IP Address of Web Console	Default web console access information: https://192.168.127.254
	 User Name: admin Password: txone
Laptop with Ethernet Port (RJ-45 Type)	The computer must have one of the following browsers installed: - Microsoft Edge (version 15 or above) - Firefox (version 53 or above) - Safari (version 10.1 or above) - Google Chrome (version 63 or above)

4 Deployment Scenario

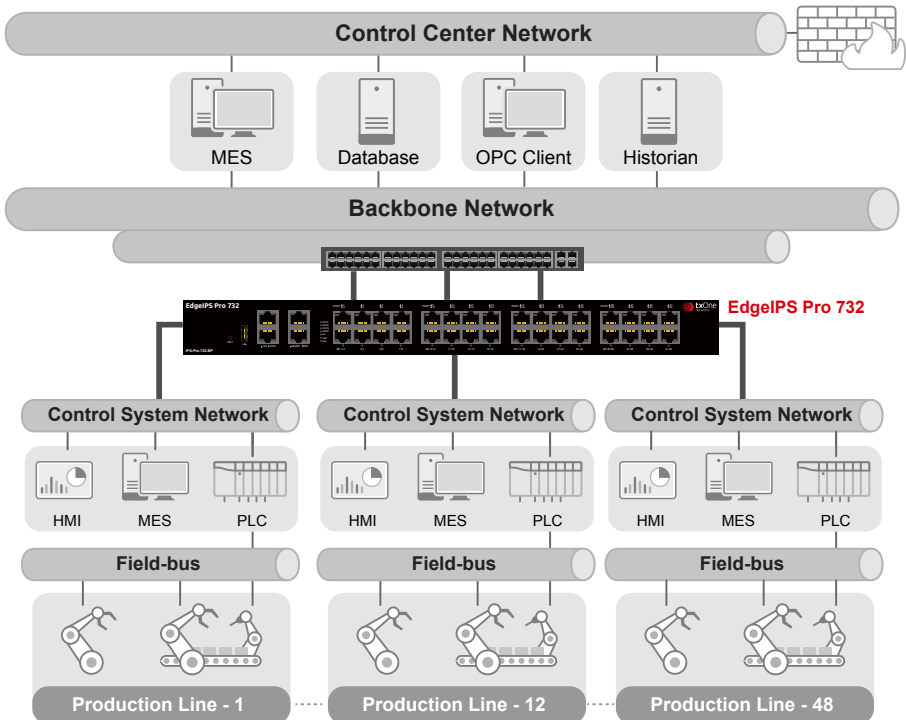


5 LED Indicators

The function of each LED is described in the table below.

PWR1	Green Off	Power 1 is on, and the device is functioning normally. Power 1 is off.
PWR2	Green Off	Power 2 is on, and the device is functioning normally. Power 2 is off.
STATE	Green Off	The system is running normally. The system failed, and the FAIL LED will also be turned on.
MGMT	Green Off	EdgeOne sync is enabled and EdgeOne is connected. EdgeOne sync is disabled.
HA	Green Off	High Availability feature is enabled. High Availability feature is disabled.
USB	Green Off	LED will be turned on when a USB flash drive is plugged in. No USB flash device is plugged in.
FAIL	Red Off	A hardware or system failure occurs. The system is operating normally.


6 Resetting to Factory Default Settings

The reset button for the EdgeIPS Pro 732 is located on the front panel.

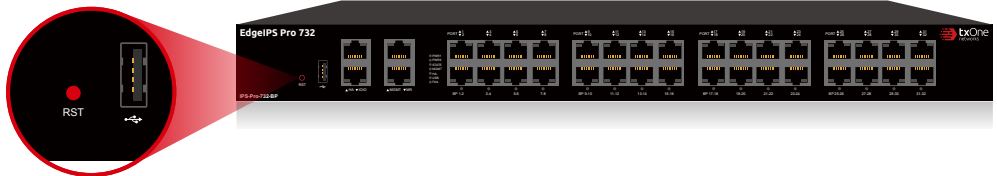


Reset Type	Description
Reboot System	Press and hold the reset button for 2 to 10 seconds. The STATE LED will begin to blink every one second, indicating that the system is rebooting.
Restore Factory Default Settings	Press and hold the reset button for more than 10 seconds. The STATE LED will begin to blink every half second, indicating that the system is resetting itself to factory defaults.


Step3. Attach the outer rail member to the rack.

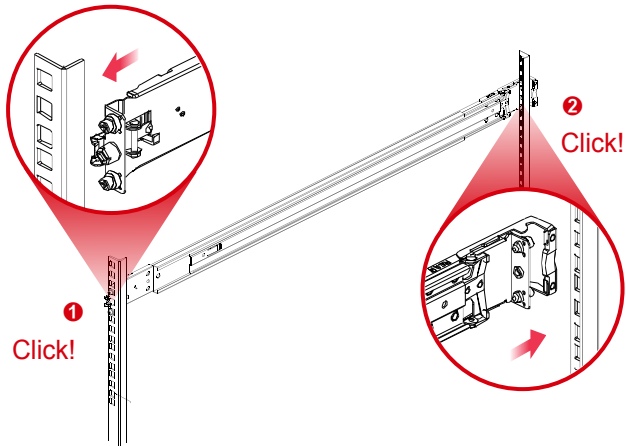

Step4. ① CAUTION: Ensure the ball bearing retainer is locked in the forward position.
② Insert the system horizontally halfway into the slide rail.

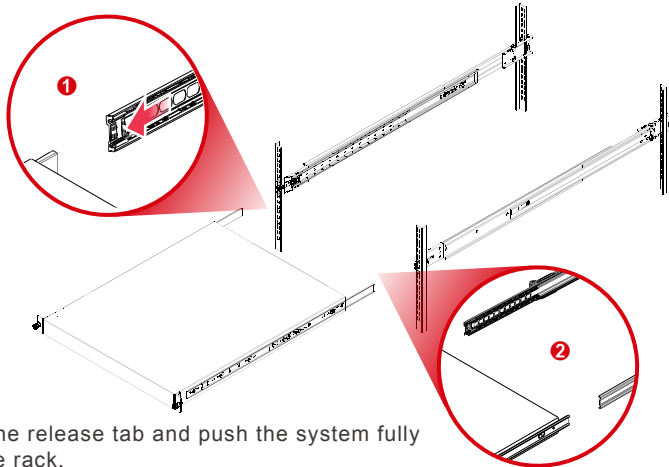

Step5. Slide the release tab and push the system fully into the rack.

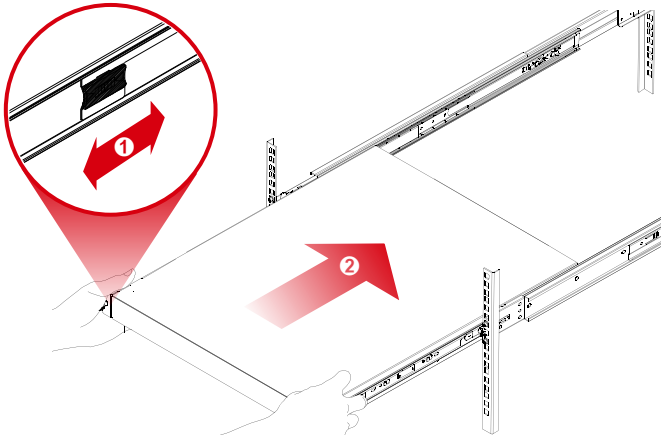

8 Wiring the Redundant Power Inputs

The EdgeIPS Pro 732 has two sets of power inputs – power input1 and power input2. The top and side views of the terminal block connector are shown below.

Step1.

Prepare the power cord and wire locks.

Step2.

Insert a positive/negative AC wire power cord respectively.


Step3.

When the wire is properly seated, the wire lock will be forced shut around it. Check whether the wire is properly fixed.


9 Connecting the Power

Connect the 100 to 240 AC power cord to the power socket, which is connected to the EdgeIPS Pro 732. If the power is supplied properly, the PWR LED will glow steadily. The power input location is shown in the following diagram.

Step1.

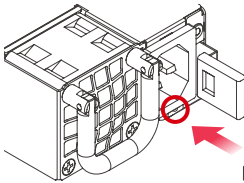


Step2.

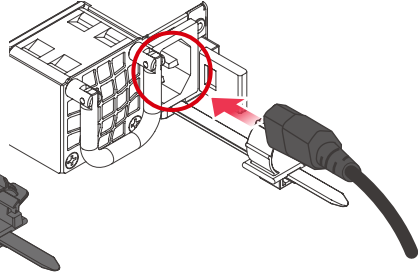

- Green The power module is operating normally, and the system has booted up and is operating
- Blinking The power module is operating normally, but the system has not booted up yet.
- Amber The power module is in good condition, but it is not operating because no power cable is attached.


The button acts as the power on/off switch for the EdgeIPS Pro 732. To force a shutdown of the device when it's on, press and hold the button for more than 5 seconds. To turn the device on when it's off, simply give the button a short press.

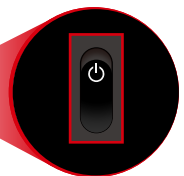

10 Grounding the Unit


Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the terminal block connector to the grounding surface prior to connecting the power. Please note that this product is intended to be mounted on a well-grounded mounting surface, such as a metal panel. The minimum cross-sectional area of the conductor must be equal to the input wiring cable's width/circumference.

11 Software Configuration

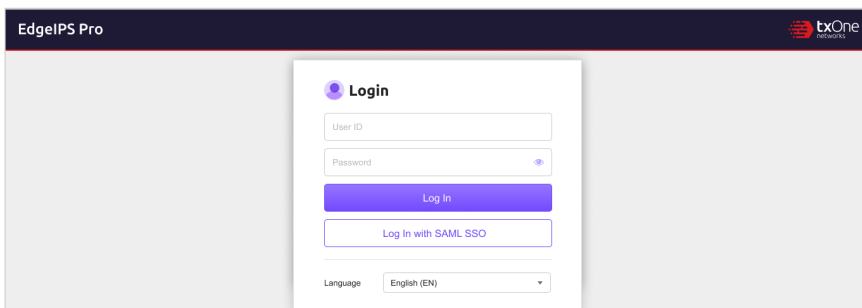

Before you connect the PC/laptop to EdgeIPS Pro 732, the PC's IP address should be set to 192.168.127.100. After that, connect the PC and EdgeIPS Pro 732 using an Ethernet cable. Open a web browser on your PC and type "<https://192.168.127.254>" into the address bar. A pop-up window will open to ask for user name and password. Please type the default username, "admin", and password, "txone".

Now, the main screen will pop up so you can configure EdgeIPS Pro 732.

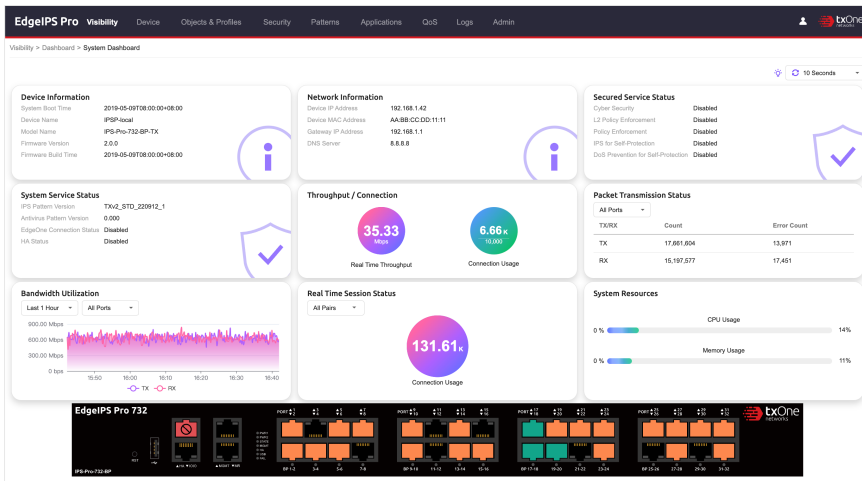

12 Configuring the Management Port

1. Go to [Device] > [Network & Ports] > [Network Settings].

Network Settings

Connection Types

Single IP

Device IP Address*

192.168.1.42

Netmask*

255.255.255.0

Gateway*

192.168.1.1

DNS

8.8.8.8

☒ VLAN ID

42

LLDP Setting

Transmit LLDP

☒

2. In the [Network Settings] pane, configure the management port for EdgeIPS Pro 732.

Task	Action
Device IP Address	Configure Management IP Address of the EdgeIPS Pro 732.
Netmask	Configure Netmask of the EdgeIPS Pro 732.
Gateway	Configure Gateway Address of the EdgeIPS Pro 732.
DNS	Configure DNS setting of the EdgeIPS Pro 732.
Network VLAN ID	Configure Network VLAN ID of the EdgeIPS Pro 732.

13 Connecting to the Network

Use the management port to access the EdgeIPS Pro 732 web console from another computer on your network.

1. Connect one end of a Category 5e (Cat-5e) Ethernet cable to the MGMT port located on the front panel.
2. Connect the other end of the cable to an Ethernet port connected to your network.


14 Checking LED Indicators to Confirm Status

The LEDs on each Ethernet port show the deployment status.

 MGMT/MR		Off	The EdgeIPS Pro 732 appliance cannot communicate with a network.
		Left: Green	GE LINK/ACT (off = no link, on = activity)
		Right: Green	10 Gbps LINK/ACT (on = 10 Gbps link)
		Right: Amber	1 Gbps LINK/ACT (on = 1 Gbps link)
		Right: Off	10/100 Mbps LINK/ACT (off = 10/100 Mbps link)
 HA		Off	The EdgeIPS Pro 732 appliance cannot communicate with a network.
		Left: Green	GE LINK/ACT (off = no link, on = activity)
		Right: Green	100 Mbps LINK/ACT (on = 100 Mbps link)
		Right: Off	10 Mbps LINK/ACT (off = 10 Mbps link)
 RJ45		Off	The EdgeIPS Pro 732 appliance cannot communicate with a network.
		Left: Green	GE LINK/ACT (off = no link, on = activity)
		Right: Green	10/100 Mbps LINK/ACT (off = 10 Mbps link, on = 100 Mbps link)
		Right: Amber	1 Gbps LINK/ACT (on = 1 Gbps link)

15 Hardware Bypass LED Indicators

The Bypass LED states and device statuses of each IPS port pair are shown below.

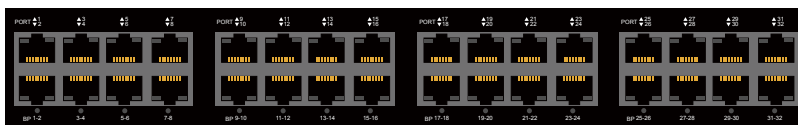

Bypass LED Indication

Status

 Off

Hardware Bypass of the port pair is disabled.

 Red

Hardware Bypass of the port pair is enabled.


 Green

Hardware Bypass of the port pair is functioning normally.

Appendix: Connecting to the Console Port

The EdgeIPS Pro 732 console port is an RJ45 port located on the front panel of the case. It is designed for connecting to serial console terminals to view messages during a boot sequence or to debug system boot issues. To connect to a serial console terminal using a console cable, remove the protective cover from the port.

Serial Console Port, Cable & Pinouts

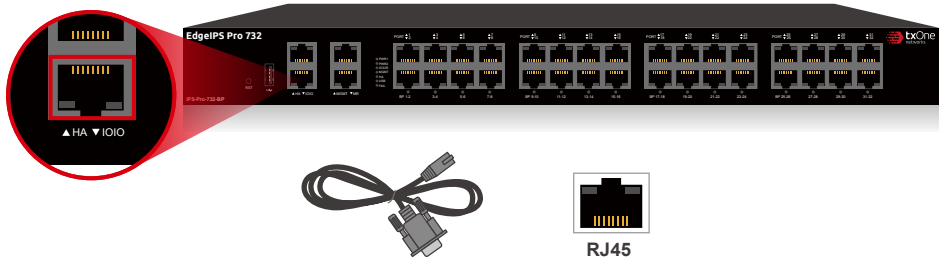

The initial configuration for the EdgeIPS Pro 732 using the command line interface (CLI) on a serial terminal client will use the following default settings:

- Baud Rate: 115200 bps
- Character Size: 8 bits
- Parity: None
- Stop Bits: 1
- Flow Control: None

Other Resources

Website

<https://www.txone.com/>

MyTXOne Portal

<https://my.txone.com/>

EULA

<https://www.txone.com/legal/license-agreements/>

EdgeIPS Pro Landing Page



Contact Information

Email

support@txone.com

Call Center

<https://help.txone.com/>

Phone

- US: +1 3465867975
- Netherland: +31 402310122
- Taiwan: +886 277275120

- ⚠ The machine can only be used in a restricted access location and must be installed by a skilled person.
- ⚠ **"CAUTION:** Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions."
- ⚠ **WARNING:** There is danger of explosion if the battery is mishandled or incorrectly replaced. Replace only with the same type of battery. Do not disassemble it or attempt to recharge it outside the system. Do not crush, puncture, dispose of in fire, short the external contacts, or expose to water or other liquids. Dispose of the battery in accordance with local regulations and instructions from your service provider.
- ⚠ **CAUTION:**
 - Lithium Battery Caution: Danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type. Dispose batteries according to manufacturer's instructions.
 - Disposal of a BATTERY into fire or a hot oven, or mechanically crushing or cutting of a BATTERY, that can result in an EXPLOSION
 - Leaving a BATTERY in an extremely high temperature surrounding environment that can result in an EXPLOSION or the leakage of flammable liquid or gas
 - A BATTERY subjected to extremely low air pressure that may result in an EXPLOSION or the leakage of flammable liquid or gas.
- ⚠ This equipment is to be installed for operation in an environment with maximum ambient temperature below 40°C.
- ⚠ "Stability hazard - The rack may tip over causing serious personal injury.
Before extending the rack to the installation position, read the installation instructions.
Do not put any load on the slide-rail mounted equipment in the installation position.
Do not leave the slide-rail mounted equipment in the installation position."
- ⚠ a) This equipment is to be installed for operation in an environment with maximum ambient temperature below 40°C.
- b) The openings on the enclosure are for air convection to protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
- c) Carefully mount the equipment into the rack, in such manner, that it won't be hazardous due to uneven mechanical loading.
Place this equipment on a stable surface when install. A drop or fall could cause injury.
- d) Make sure the voltage of the power source is within the specification on the label when connecting the equipment to the power outlet. The current load and output power of loads shall be within the specification.
- e) This equipment must be connected to reliable grounding before using. Pay special attention to power supplied other than direct connections, e.g. using of power strips.
- ⚠ Before turning on the device, ground the grounding cable of the equipment. Proper grounding (grounding) is very important to protect the equipment against the harmful effects of external noise and to reduce the risk of electrocution in the event of a lightning strike. To uninstall the equipment, disconnect the ground wire after turning off the power. A ground wire is required and the part connecting the conductor must be greater than 0.75 mm² or 18 AWG.
- ⚠ Electrostatic discharge (ESD) can damage equipment and impair electrical circuitry. ESD damage occurs when electronic components are improperly handled and can result in complete or intermittent failures. Be sure to follow ESD-prevention procedures when removing and replacing components to avoid these problems.
Wear an ESD-preventive wrist strap, ensuring that it makes good skin contact. If no wrist strap is available, ground yourself by touching the metal part of the chassis.

- ⚠ Les matériels sont destinés à être installés dans des **EMPLACEMENTS À ACCÈS RESTREINT**.
- ⚠ **“ATTENTION:** Risque d'explosion si la batterie est remplacée par un type incorrect. Mettre au rebut les batteries usagées selon les instructions.“
- ⚠ **MISE EN GARDE:**
 - Pile au lithium Attention: Risque d'explosion si la pile n'est pas remplacée correctement. Remplacez uniquement par un type identique ou équivalent. Jetez les piles conformément aux instructions du fabricant.
 - Mise au rebut d'une BATTERIE dans un feu ou un four chaud, ou écrasement ou découpage mécanique d'une BATTERIE, pouvant entraîner une EXPLOSION
 - Laisser une BATTERIE dans un environnement extrêmement chaud pouvant entraîner une EXPLOSION ou une fuite de liquide ou de gaz inflammable
 - UNE BATTERIE soumise à une pression d'air extrêmement basse pouvant entraîner une EXPLOSION ou une fuite de liquide ou de gaz inflammable.
- ⚠ **“Danger d'instabilité - Le rack peut basculer et provoquer des blessures corporelles graves**
Avant d'étendre le rack en position d'installation, lire les instructions d'installation.
Ne pas charger l'équipement monté sur rail de glissière en position d'installation.
Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.”
- ⚠ Avant d'allumer l'appareil, reliez le câble de mise à la terre de l'équipement à la terre.
Une bonne mise à la terre (connexion à la terre) est très importante pour protéger l'équipement contre les effets néfastes du bruit externe et réduire les risques d'électrocution en cas de foudre.
Pour désinstaller l'équipement, débranchez le câble de mise à la terre après avoir éteint l'appareil.
Un câble de mise à la terre est requis et la zone reliant les sections du conducteur doit faire plus de 0.75 mm² or 18 AWG.
- ⚠ Les décharges électrostatiques (ESD) peuvent endommager l'équipement et gêner les circuits électriques. Des dégâts d'ESD surviennent lorsque des composants électroniques sont mal manipulés et peuvent causer des pannes totales ou intermittentes. Suivez les procédures de prévention d'ESD lors du retrait et du remplacement de composants.
Portez un bracelet anti-ESD et veillez à ce qu'il soit bien au contact de la peau. Si aucun bracelet n'est disponible, reliez votre corps à la terre en touchant la partie métallique du châssis.

- ⚠ Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:
 1. manually resetting the product to factory settings, or
 2. handing the product to the TXOne support team, who will help you clear all stored data and configurations.



⚠ Warning

Ensure that the grounding screw is securely fastened and that the product is properly grounded.