

Quick Setup Guide

EdgeIPS™ Pro 2008

Support
configurable
hardware
bypass




EdgeIPS Pro 2008 is a Transparent Security Appliance, supporting up to 4 pairs of IPS segments. Users can efficiently adapt the rack mounted EdgeIPS Pro 2008 into a flexible solution for the challenges of Ethernet communications.

1 Opening and Inspecting the Package




EdgeIPS Pro 2008 Appliance

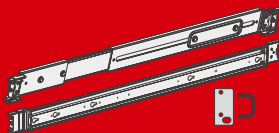

Sliding Rails x2 &
Rack Mount Kits x2




Screws for Rack Mount Kits x4

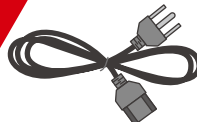

Power Cords x8
(USx2, UKx2, EUx2, JPx2)



Console Cable x1



Wire Clamps x2



USB Dust Covers x1



RJ45 Dust Covers x4
(MGMT, MR, HA, IOIO)



Quick Setup Guide x1 &
Hardware Warranty Paper x1


2 Examining the EdgeIPS Pro 2008



3 Deployment Checklist

Requirement	Details
Ethernet Cables	Connect to the Management Port to access web management console.
Default IP Address of Web Console	Default web console access information: https://192.168.127.254
	 User Name: admin Password: txone
Laptop with Ethernet Port (RJ-45 Type)	The computer must have one of the following browsers installed: - Microsoft Edge (version 15 or above) - Firefox (version 53 or above) - Safari (version 10.1 or above) - Google Chrome (version 63 or above)

4 Deployment Scenario

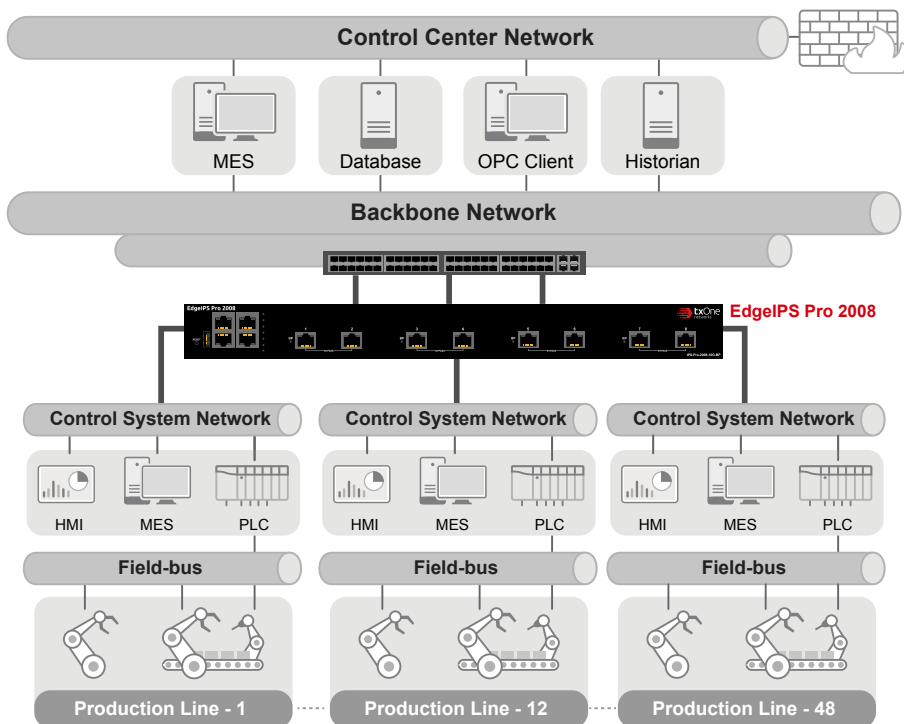

5 LED Indicators

The function of each LED is described in the table below.

PWR1	 Green	Power 1 is on, and the device is functioning normally.
	 Off	Power 1 is off.
PWR2	 Green	Power 2 is on, and the device is functioning normally.
	 Off	Power 2 is off.
STATE	 Green	The system is running normally.
	 Off	The system failed, and the FAIL LED will also be turned on.
MGMT	 Green	EdgeOne sync is enabled and EdgeOne is connected.
	 Off	EdgeOne sync is disabled. Note: EdgelPS Pro 2008 will support EdgeOne sync if it is upgraded to V2.
HA	 Green	High Availability feature is enabled.
	 Off	High Availability feature is disabled.
USB	 Green	LED will be turned on when a USB flash drive is plugged in.
	 Off	No USB flash device is plugged in.
FAIL	 Red	A hardware or system failure occurs.
	 Off	The system is operating normally.

6 Resetting to Factory Default Settings

The reset button for the EdgelPS Pro 2008 is located on the front panel.




Reset Type	Description
Reboot System	Press and hold the reset button for 2 to 10 seconds. The STATE LED will begin to blink every one second, indicating that the system is rebooting.
Restore Factory Default Settings	Press and hold the reset button for more than 10 seconds. The STATE LED will begin to blink every half second, indicating that the system is resetting itself to factory defaults.


7 Installing the EdgeIPS Pro 2008

The aluminum rail attachment plate should already be fixed to the back panel of the EdgeIPS Pro 2008 when you take it out of the box. If you need to reattach the rail attachment plate to the EdgeIPS Pro 2008, make sure the stiff metal spring is oriented towards the top, as shown in the following pictures.


Step1.

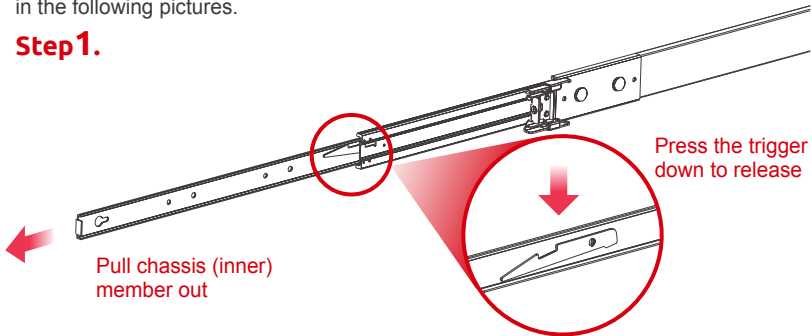


Step2.

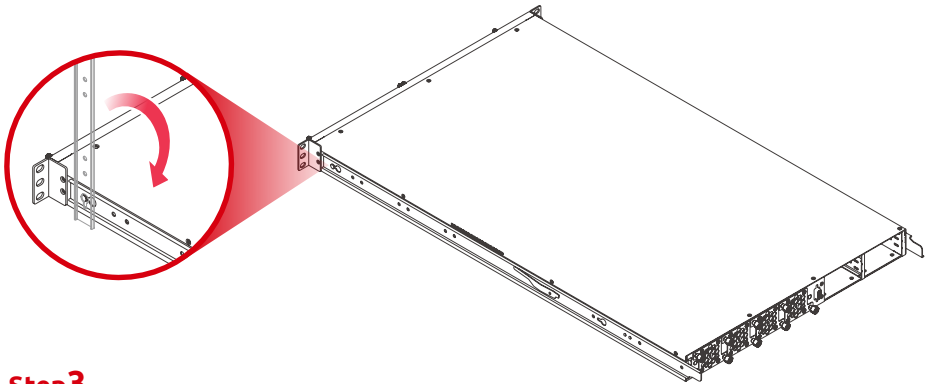


Step3.

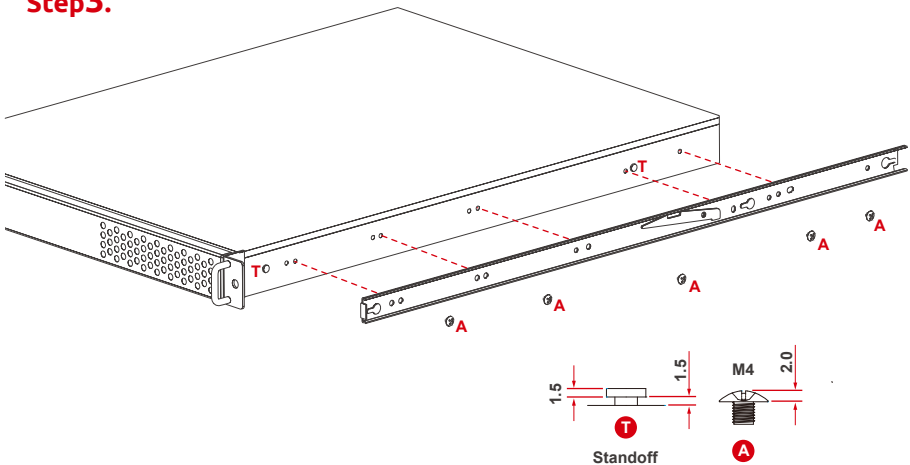


Step4.

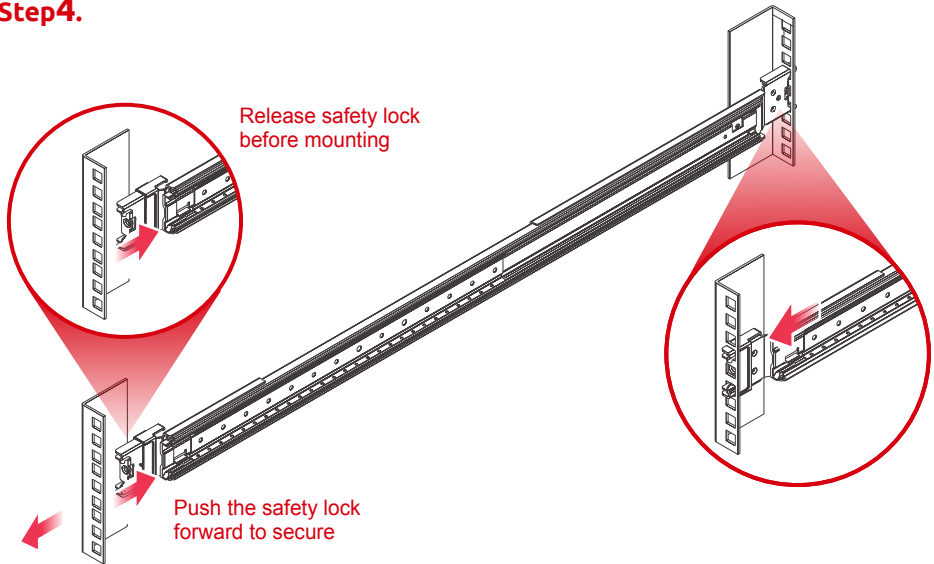

Step5.

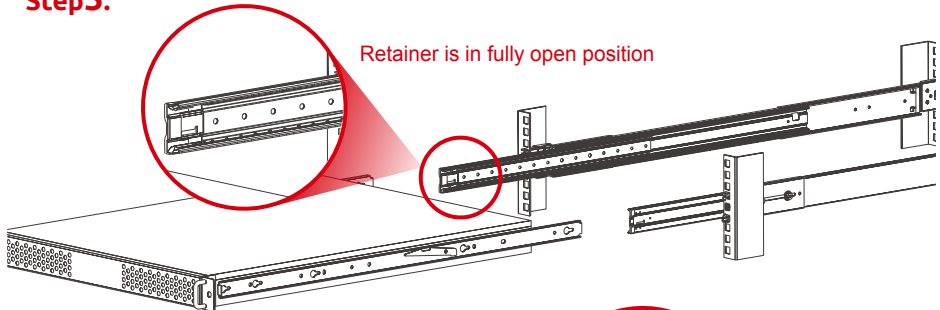

Step6.

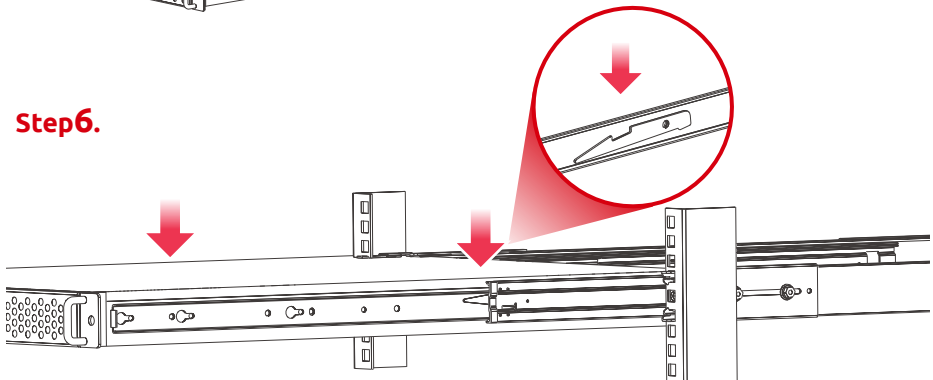

8 Wiring the Redundant Power Inputs

The EdgeIPS Pro 2008 has two sets of power inputs - power input1 and power input2. The top and side views of the terminal block connector are shown below.

Step1.

Prepare the power cord and wire locks.

Step2.

Insert a positive/negative AC wire power cord respectively.


Step3.

When the wire is properly seated, the wire lock will be forced shut around it. Check whether the wire is properly fixed.


9 Connecting the Power

Connect the 100 to 240 AC power cord to the power socket, which is connected to the EdgeIPS Pro 2008. If the power is supplied properly, the PWR LED will glow steadily. The power input location is shown in the following diagram.

Step1.

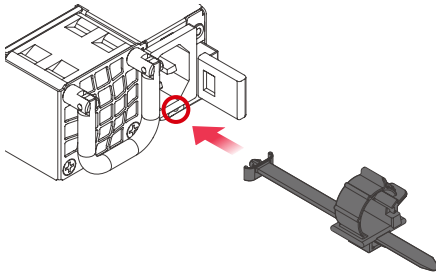


Step2.

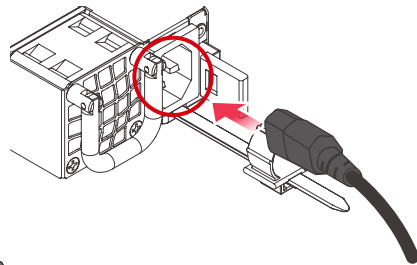

10 Grounding the Unit


Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the terminal block connector to the grounding surface prior to connecting the power. Please note that this product is intended to be mounted on a well-grounded mounting surface, such as a metal panel. The minimum cross-sectional area of the conductor must be equal to the input wiring cable's width/circumference.

11 Software Configuration

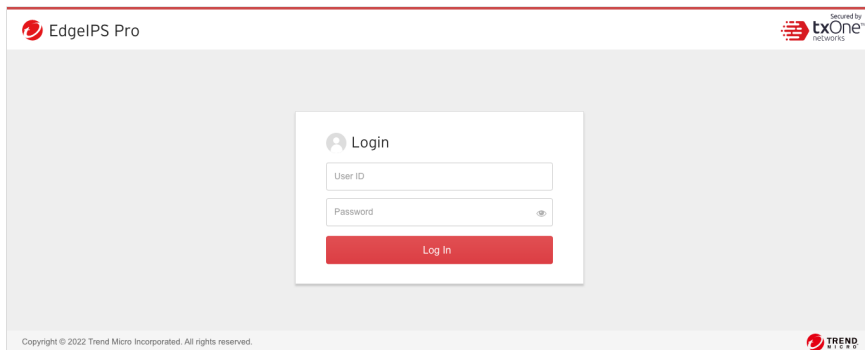

Before you connect the PC/laptop to EdgeIPS Pro 2008, the PC's IP address should be set to 192.168.127.100. After that, connect the PC and EdgeIPS Pro 2008 using an Ethernet cable. Open a web browser on your PC and type "<https://192.168.127.254>" into the address bar. A pop-up window will open to ask for user name and password. Please type the default username, "admin", and password, "txone".

Now, the main screen will pop up so you can configure EdgeIPS Pro 2008.

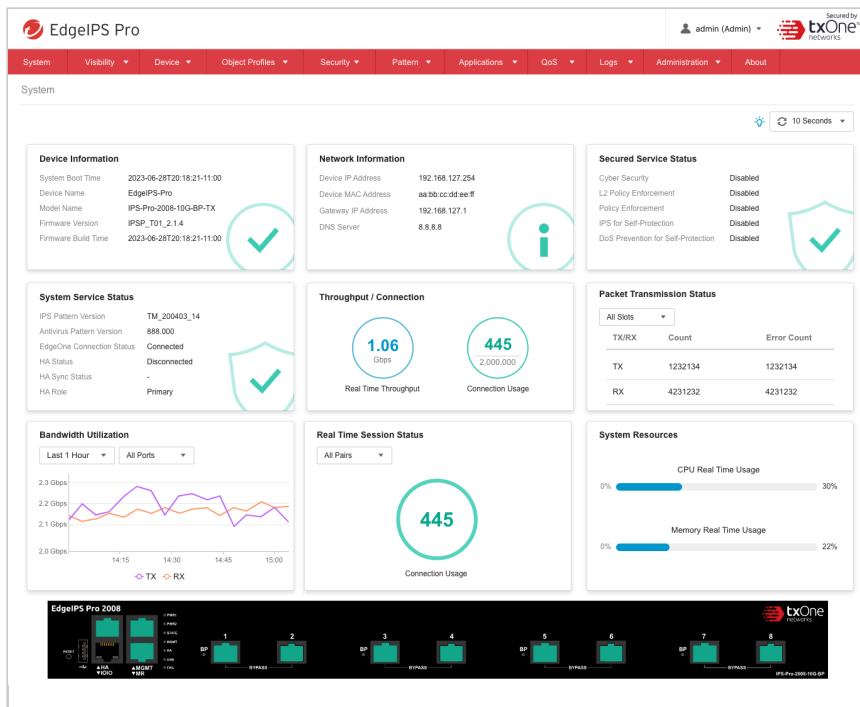

12 Configuring the Management Port

1. Go to [Network] > [Device Settings].

Network > Device Settings

Management Port Settings

Device IP Address*

Netmask*

Gateway*

DNS

☐ VLAN ID

LLDP Setting

Transmit LLDP ☐

2. In the [Device Settings] pane, configure the management port for EdgeIPS Pro 2008.

Task	Action
Device IP Address	Configure Management IP Address of the EdgeIPS Pro 2008.
Netmask	Configure Netmask of the EdgeIPS Pro 2008.
Gateway	Configure Gateway Address of the EdgeIPS Pro 2008.
DNS	Configure DNS setting of the EdgeIPS Pro 2008.
Network VLAN ID	Configure Network VLAN ID of the EdgeIPS Pro 2008.

13 Connecting to the Network

Use the management port to access the EdgeIPS Pro 2008 web console from another computer on your network.

1. Connect one end of a Category 5e (Cat-5e) Ethernet cable to the MGMT port located on the front panel.
2. Connect the other end of the cable to an Ethernet port connected to your network.


14 Checking LED Indicators to Confirm Status

The LEDs on each Ethernet port show the deployment status.

 MGMT/MR		The EdgeIPS Pro 2008 appliance cannot communicate with a network.
		GE LINK/ACT (off = no link, on = activity)
		10 Gbps LINK/ACT (on = 10 Gbps link)
		1 Gbps LINK/ACT (on = 1 Gbps link)
		100 Mbps LINK/ACT (off = 100 Mbps link)
 HA		The EdgeIPS Pro 2008 appliance cannot communicate with a network.
		GE LINK/ACT (off = no link, on = activity)
		100 Mbps LINK/ACT (on = 100 Mbps link)
		1 Gbps LINK/ACT (on = 1 Gbps link)
		10 Mbps LINK/ACT (on = 10 Mbps link)
 RJ45		The EdgeIPS Pro 2008 appliance cannot communicate with a network.
		GE LINK/ACT (off = no link, on = activity)
		10/100 Mbps LINK/ACT (off = 10 Mbps link, on = 100 Mbps link)
		1 Gbps LINK/ACT (on = 1 Gbps link)

15 Hardware Bypass LED Indicators

The Bypass LED states and device statuses of each IPS port pair are shown below.

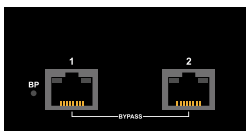


Bypass LED Indication	Status
	Hardware Bypass of the port pair is disabled.
	Hardware Bypass of the port pair is enabled.
	Hardware Bypass of the port pair is functioning normally.

Appendix: Connecting to the Console Port

The EdgeIPS Pro 2008 console port is an RJ-45 port located on the front panel of the case. It is designed for connection to serial console terminals to view messages during the boot sequence or to debug system boot issues. To connect to a serial console terminal using a console cable, remove the protective cover from the port.

Serial Console Port, Cable, & Pinouts

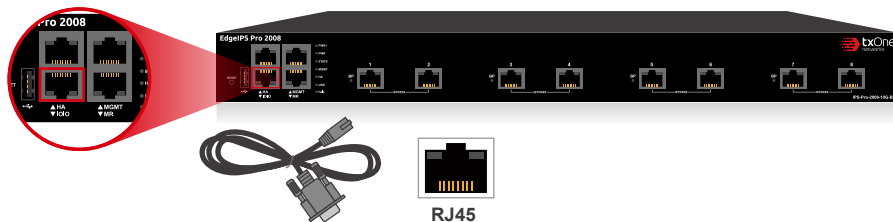

Initial configuration for the EdgeIPS Pro 2008 using the command line interface (CLI) on a serial terminal client will use the following default settings:

- Baud Rate: 115200 bps
- Character Size: 8 bits
- Parity: None
- Stop Bits: 1
- Flow Control: None

Contact Information

Website

<https://www.txone.com/>

List of Worldwide Offices and Phone Numbers

<https://www.txone.com/contact/>

Technical Support

<https://success.trendmicro.com/>

E-mail: support@txone.com

EULA

<https://www.txone.com/legal/license-agreements/>

EdgeIPS Pro Landing Page



- ⚠ **WARNING:** Do not replace batteries of the device. Risk of explosion may occur if the batteries are replaced with incorrect types.
- ⚠ **AVERTISSEMENT:** Ne remplacez pas les piles de l'appareil. Un risque d'explosion peut survenir si les piles sont remplacées par des types incorrects.
- ⚠ **DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**