



How to Set Up Massive Edge Devices with Deployment Assistant

Application Note

Version 1.3

October 15, 2025

TXOne Networks Incorporated reserves the right to make changes to this document and to the product described herein without notice. Before installing and using the product, review the readme files, release notes, and/or the latest version of the applicable documentation, which are available at <https://my.txone.com>.

TXOne Networks is a registered trademark of TXOne Networks Incorporated. All other product names may be trademarks or registered trademarks of their owners.

In order to protect the value of TXOne Networks' logos and marks, it is very important that they be used appropriately and only by TXOne Networks and Partners with a current and valid partnership agreement.

The following marks are owned exclusively by TXOne Networks and may be registered in the U.S. or other countries. TXOne Networks reserves the right in its sole discretion to add additional marks to or remove marks from this list at any time and the failure of a TXOne trademark or logo to appear on this list shall not be construed as a waiver of any of TXOne Networks' rights in such trademark or logo.

- EdgeIPS
- EdgeIPS Pro
- EdgeIPS LE
- EdgeFire
- EdgeOne
- OT Defense Console

Trademark ownership is attributed in two ways, with the use of a trademark symbol (such as ™ or ®) after the trademark, and with a trademark legend, usually found at the end of a document in legible text following the copyright notice. Whenever you use one of TXOne trademarks, you must also include a proper trademark attribution statement somewhere on the same document or webpage, such as the following: "The TXOne Networks® and EdgeIPS™ trademarks are owned by TXOne Networks, Inc. and is used with permission." Remember, mere inclusion of a trademark symbol and legend does not entitle you to use a TXOne trademark.

Data Security Warning

Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:

- manually resetting the product to factory settings, or
- handing the product to the TXOne support team, who will help you clear all stored data and configurations.

TXOne Support Team Contact Information

- Email: support@txone.com
- Website: <https://www.txone.com/>
- Call Center: <https://help.txone.com/>
- Phone:
 - US: +1 3465867975
 - Netherland: +31 402310122
 - Taiwan: +886 277275120


Table of Contents

1	Introduction to Deployment Assistant	4
2	Minimum System Requirements and Compatible Edge Devices	6
3	Compatible Network Switches	7
4	Preparation	9
5	Edge Device Batch Configuration	10
5.1	Setting Up EdgeIPS, EdgeIPS Pro, and EdgeIPS LE Devices	10
5.1.1	Importing Device CSV File for Setup (EdgeIPS Family)	10
5.1.2	Configuring Devices During Discovery (EdgeIPS Family)	18
5.2	Setting Up EdgeFire Devices	25
5.2.1	Importing Device CSV File for Setup (EdgeFire Family)	26
5.2.2	Configuring Devices During Discovery (EdgeFire Family)	36
6	Appendix A: Syslog Settings	46
6.1	Configuring Syslog Settings	46
6.2	Syslog Severity Levels	47
7	Appendix B: SNMP Settings	48
7.1	Configuring SNMP v1/v2c	48
7.2	Configuring SNMP v3	49
7.3	Configuring SNMP Trap Receivers for EdgeIPS/EdgeIPS LE	51
7.4	Configuring SNMP Trap Receivers for EdgeIPS Pro	54
7.5	Configuring SNMP Trap Receivers for EdgeFire	56


1 Introduction to Deployment Assistant

In a typical production environment, the need for robust security solutions is paramount. Yet, the initial setup can be a daunting task. IT teams often find themselves mired in repetitive procedures, hindering the timely implementation of critical security measures.


Imagine you are planning to deploy more than 20 new security appliances for your organization. Traditionally, this would mean countless hours of manual setup—connecting each device to a network switch, logging in to each device's console, registering it with the management system, and repeating the process for every single unit.

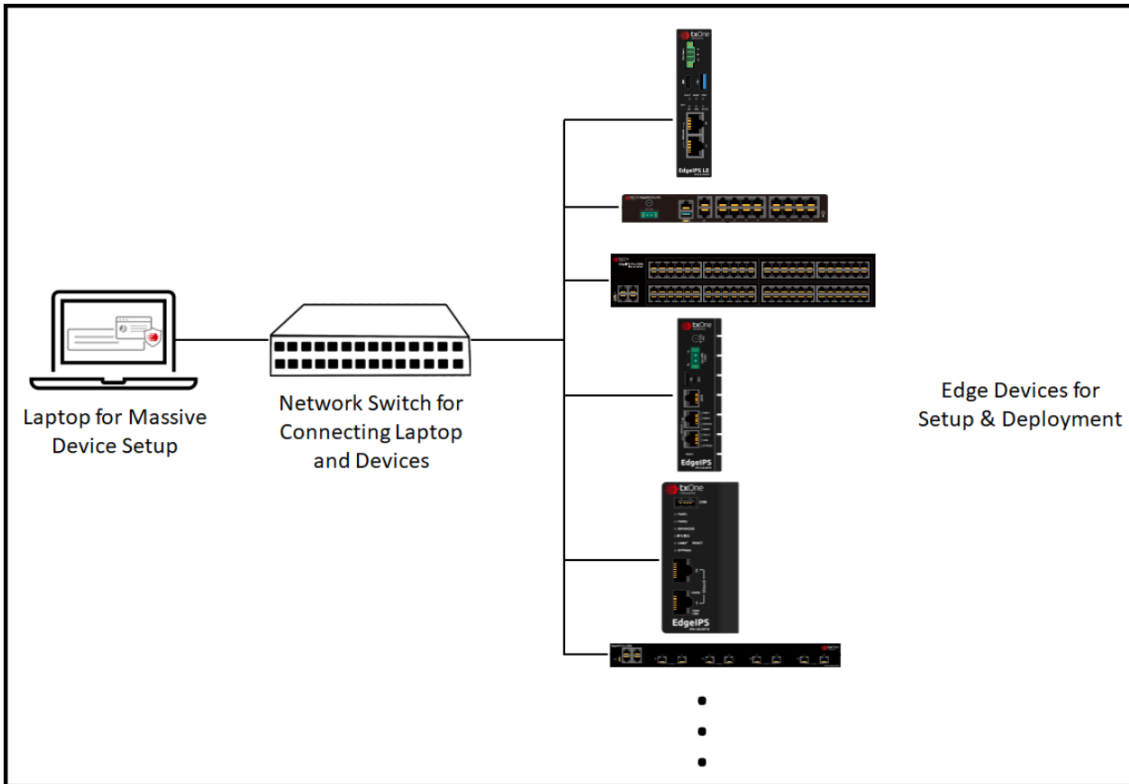

It's time to move away from this inefficient approach. TXOne has listened to customer feedback and developed the Deployment Assistant, a software tool specifically designed to streamline the massive deployment of Edge devices.

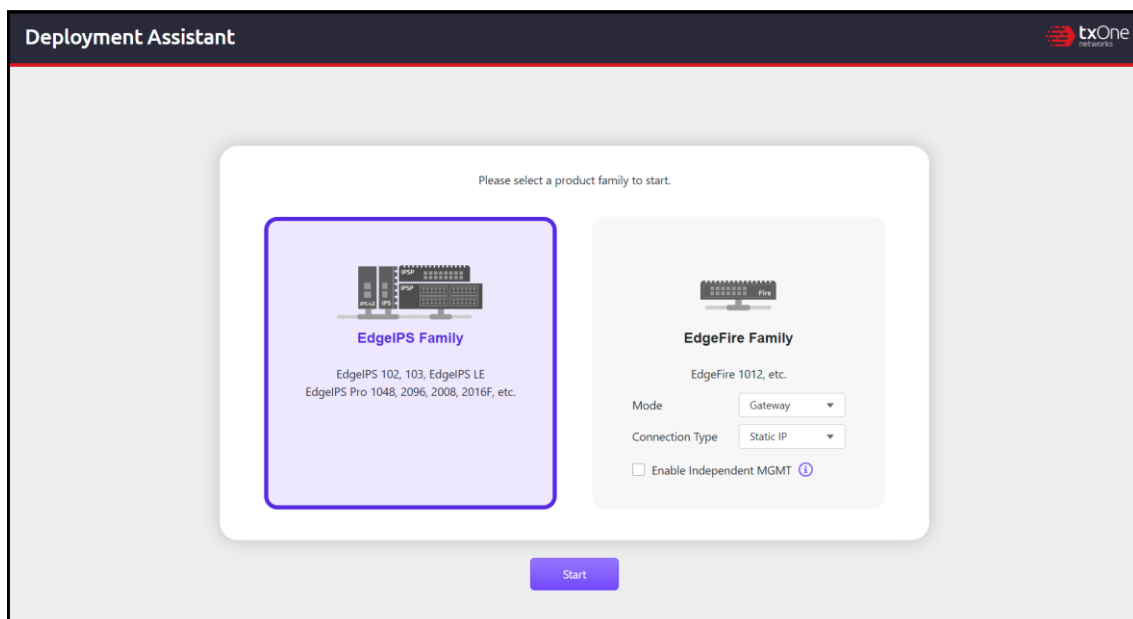

With the Deployment Assistant, you can simultaneously configure the management IP addresses for multiple Edge devices and simplify the onboarding process, all through a single pane of glass. What used to take days can now be accomplished in just five steps in no time:

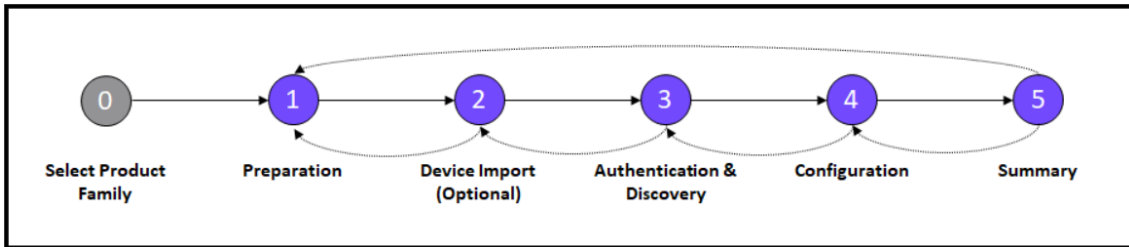

1. **Preparation:** Before you start using Deployment Assistant, ensure that all minimum system requirements are met, the network switch you're using is compatible, and all pre-tasks are completed.
2. **Device Import** (Optional): Import Edge device configurations into Deployment Assistant.
3. **Authentication & Discovery:** Log in to Edge devices and discover all devices within your network.
4. **Configuration:** Complete the initial batch setup for your Edge devices.
5. **Summary:** Review and export configuration details to an Excel file.

Once the initial setup is complete, OT personnel can proceed with the physical on-site deployment of Edge devices in your production environment. Our Edge solutions can then provide ongoing protection for your production sites. This not only enhances the security of your facilities but also significantly reduces the time and effort involved in the initial setup, making the adoption of our Edge solutions both efficient and user-friendly.

The primary functions of our Deployment Assistant include:

1. Discovering Edge devices on the same network
2. Facilitating batch device configuration
3. Exporting Edge device setting details to an Excel file

In the subsequent chapters, we offer step-by-step instructions to guide you through these five stages—Preparation, Device Import, Authentication & Discovery, Configuration, and Summary.

2 Minimum System Requirements and Compatible Edge Devices

Before you start using Deployment Assistant, the first step is to make sure that your PC/laptop meets the following minimum system requirements, and that your Edge devices are compatible.

- **Minimum System Requirements**

Operating System	Windows 10 or 11 (64-bit only)
Display Resolution	1366x768

- **Compatible Edge Devices**

EdgeIPS	Version 2.0.13 or later
EdgeIPS Pro	Version 2.0.10 or later
EdgeIPS LE	Version 2.0.5 or later
EdgeFire	Version 2.0.17 or later

3 Compatible Network Switches

Once you've confirmed that the minimum system requirements, as outlined in the previous chapter, are met, choose a compatible network switch from the table below to set up Edge devices via Deployment Assistant Tool.

- **Compatible Network Switches for EdgeIPS V2.0 Family:**

Network Switch Model	Number of Ports	Note
TXOne EdgeFire 1012	8 (LAN Ports)	Only the eight LAN ports on EdgeFire can connect to Edge devices.
TXOne EdgeFire 1014	10 (LAN Ports)	Only the 10 LAN ports on EdgeFire can connect to Edge devices.
Dell PowerConnect 2724	24	
D-link DGS-1005A	5	
D-link DGS-1008A	8	
D-link DGS-1224T	24	
TP-link TL-SF1005D	5	
TP-link TL-SG108E	8	

- **Compatible Network Switches for EdgeIPS V2.1 and EdgeFire V2.X Family:**

Network Switch Model	Number of Ports	Note
TXOne EdgeFire 1012	8 (LAN Ports)	Only the eight LAN ports on EdgeFire can connect to Edge devices.
TXOne EdgeFire 1014	10 (LAN Ports)	Only the 10 LAN ports on EdgeFire can connect to Edge devices.
3COM 3C16471	24	
Aruba 7010	16	
Cisco 2960-S	48	
Cisco 3750-G	24	
Dell PowerConnect 2724	24	
Dell PowerConnect 2848	48	
Dell PowerConnect 6248	48	
D-link DES-1016R	16	
D-link DES-1024R	24	
D-link DES-3326S	24	
D-link DGS-1005A	5	
D-link DGS-1008A	8	

Network Switch Model	Number of Ports	Note
D-link DGS-1210-52	48	
D-link DGS-1224T	24	
D-link DGS-1226G	24	
HP 1920S Switch JL381A	24	
HP 5130 Switch JG934A	48	
HP 5945 48SPF28 8QSPF28	56	
HP A5120 Switch JE068A	24	
TP-link TL-SF1005D	5	
TP-link TL-SG108E	8	
Zyxel XGS1910-48	48	

4 Preparation

After you choose a compatible network switch from the list provided in the previous chapter, it's time to ensure the following pre-tasks are completed:

- The pcap library tool (<https://npcap.com/#download>) is installed on your PC/laptop.
- All the Edge devices are powered on.
- The following ports are connected to the network switch.
 - EdgeIPS Pro Series and EdgeIPS 103: Out-of-band management port (MGMT)
 - EdgeIPS LE and EdgeIPS 102: PORT1
 - EdgeFire: LAN1
- The network settings on your Windows PC/laptop are configured as follows.
 - IP Address: 191.x.x.x
 - Subnet Mask: 240.0.0.0



The Deployment Assistant tool does not support running on a VM or PC/laptop with Hyper-V enabled.

5 Edge Device Batch Configuration

Once you've met all the minimum system requirements, confirmed that your network switch is compatible, and completed all pre-tasks, you're ready to proceed with setting up your Edge devices.

Configuration procedures vary for the EdgeIPS family (EdgeIPS, EdgeIPS Pro, and EdgeIPS LE) and the EdgeFire family. Please refer to the relevant chapters for specific product configurations.


5.1 Setting Up EdgeIPS, EdgeIPS Pro, and EdgeIPS LE Devices

We offer two approaches for EdgeIPS, EdgeIPS Pro, and EdgeIPS LE batch setup. You can either import a device CSV file or configure the devices during the device discovery process.


5.1.1 Importing Device CSV File for Setup (EdgeIPS Family)

Procedure

1. When launching the Deployment Assistant for the first time, you will see a Windows security alert window. Click **Allow access** to begin the process.

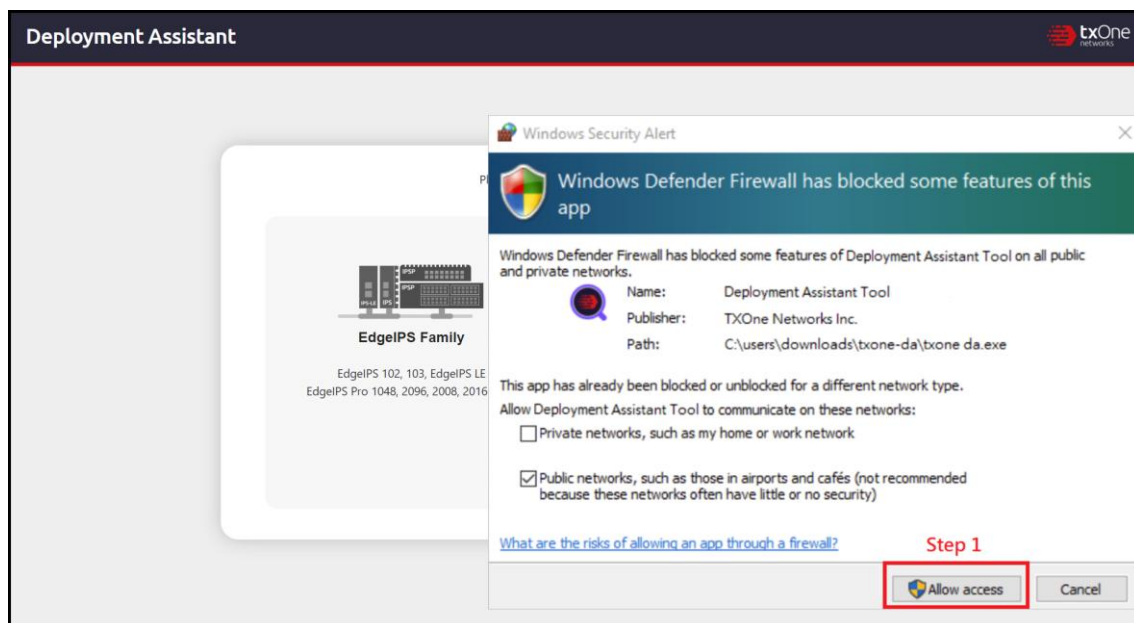

2. Select **EdgeIPS Family** and click **Start**.

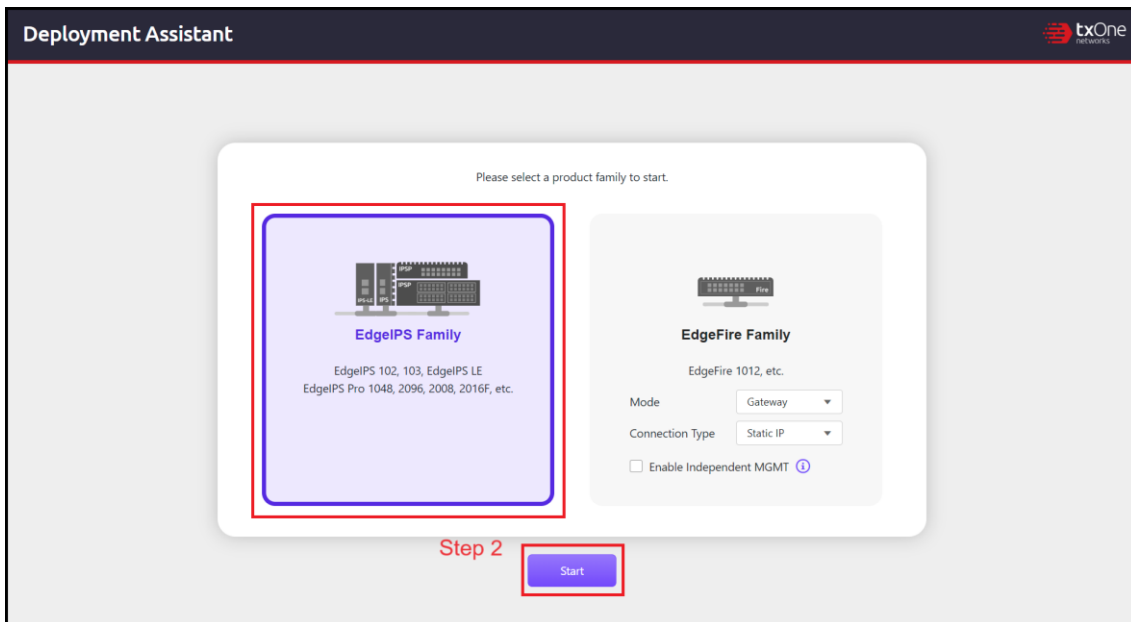


Currently, we do not support combined configuration for EdgeIPS series and EdgeFire series devices in a single batch setup.

3. Make sure that you have fulfilled the prerequisites for the deployment process.




For more information, see [Preparation](#).

4. Select a **network interface** from the drop-down list for deploying your Edge devices. Once completed, click **Continue**.

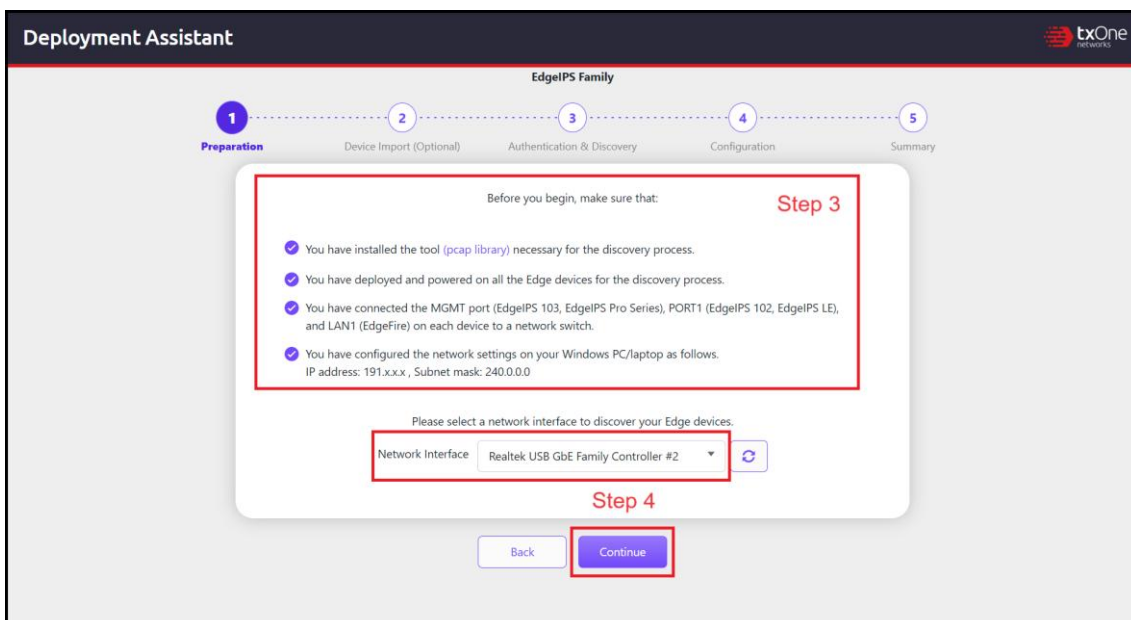


5. Click **Import Devices** and **Continue** to import device CSV files containing device general data and configuration parameters, such as hostname, location, IP address, subnet mask, and gateway.

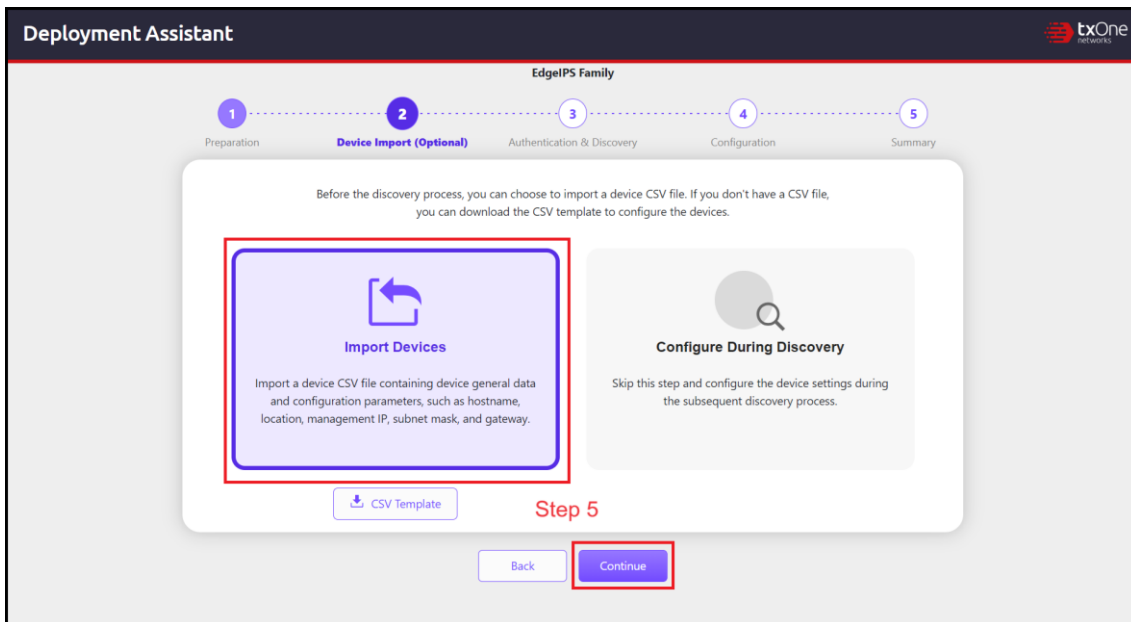

If you do not have a CSV file, click **CSV Template** to download a blank template and fill in the required device information on the template.

6. An [Import Devices] window pops up. Click **Browse** to upload the CSV file. Once completed, click **Import**.

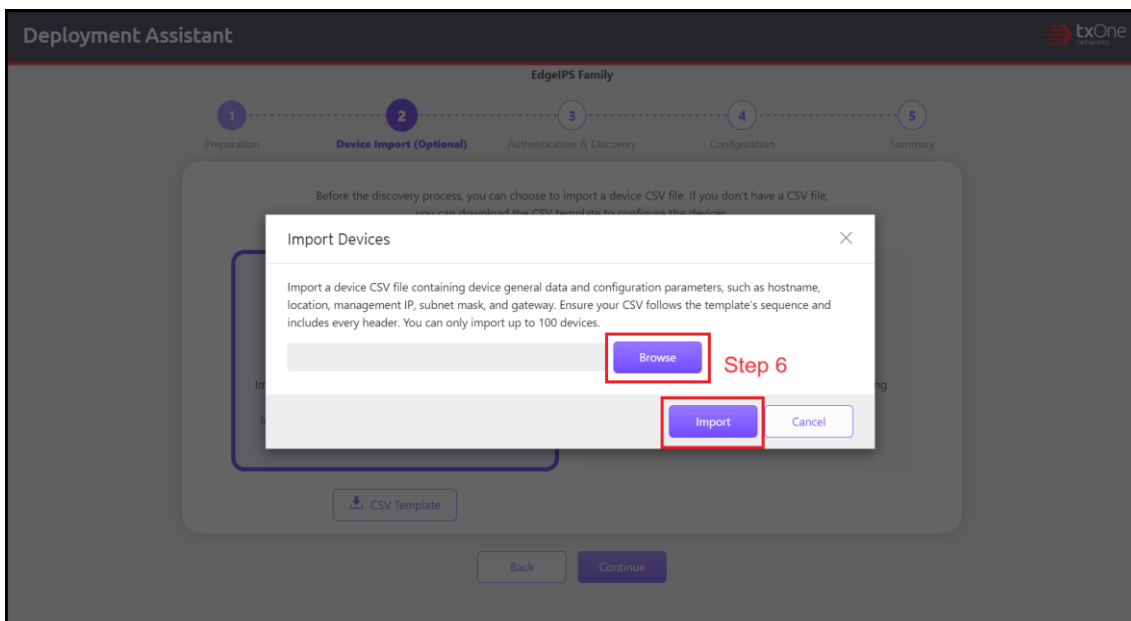


7. You will receive a notification once the CSV file is imported successfully.

8. Enter the login credentials, then click **Continue**. The default login credentials are as follows.


- **User ID:** *admin*
- **Password:** *txone*



If you have restarted the deployment process, please use the User ID and password you previously set for authentication.

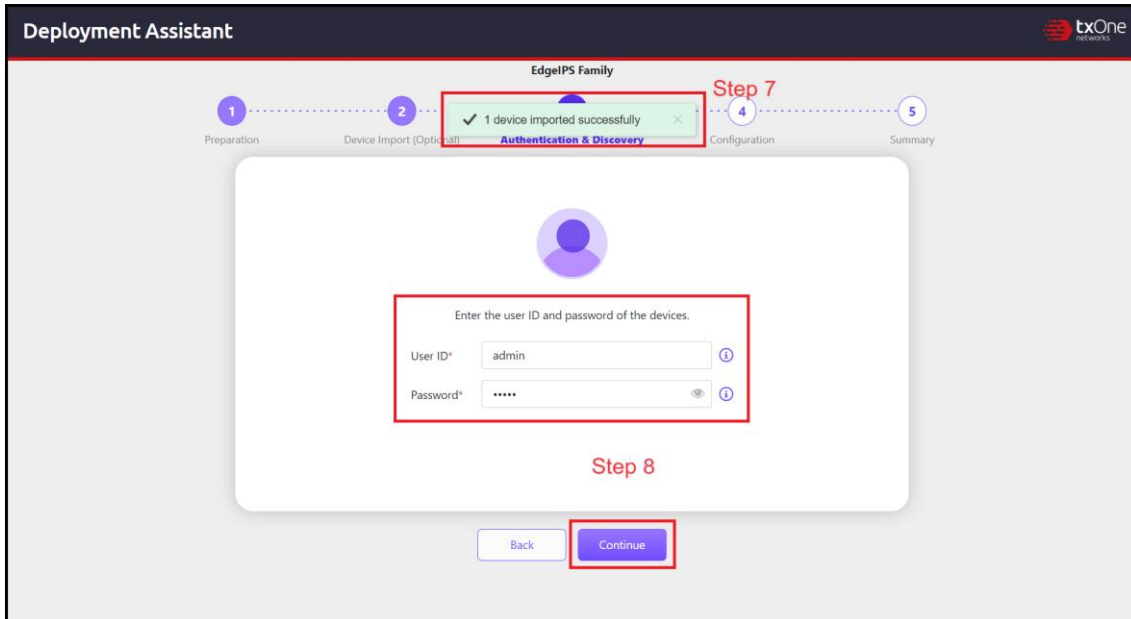


9. The Deployment Assistant starts to discover all your Edge devices. This may take a while. Please wait until the process is complete. To skip this process, click **Skip**.

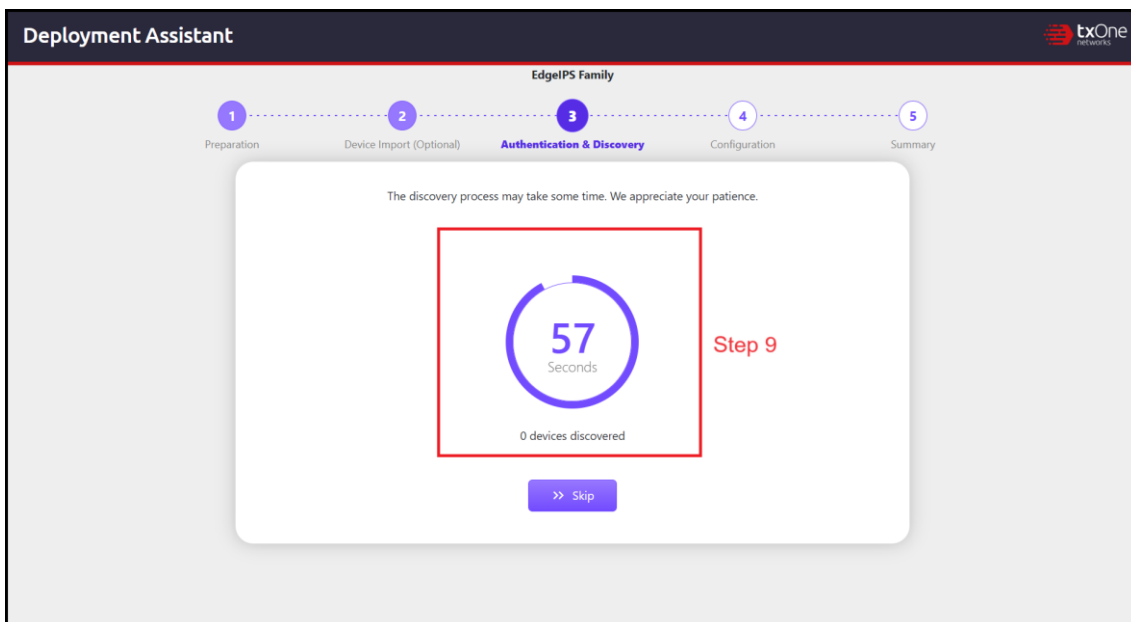

10. You will receive a notification once the discovery process is complete.

11. After the discovery process is complete, the Deployment Assistant lists the general data and configuration parameters of each discovered Edge device based on the CSV file you previously imported. Click **Continue**.

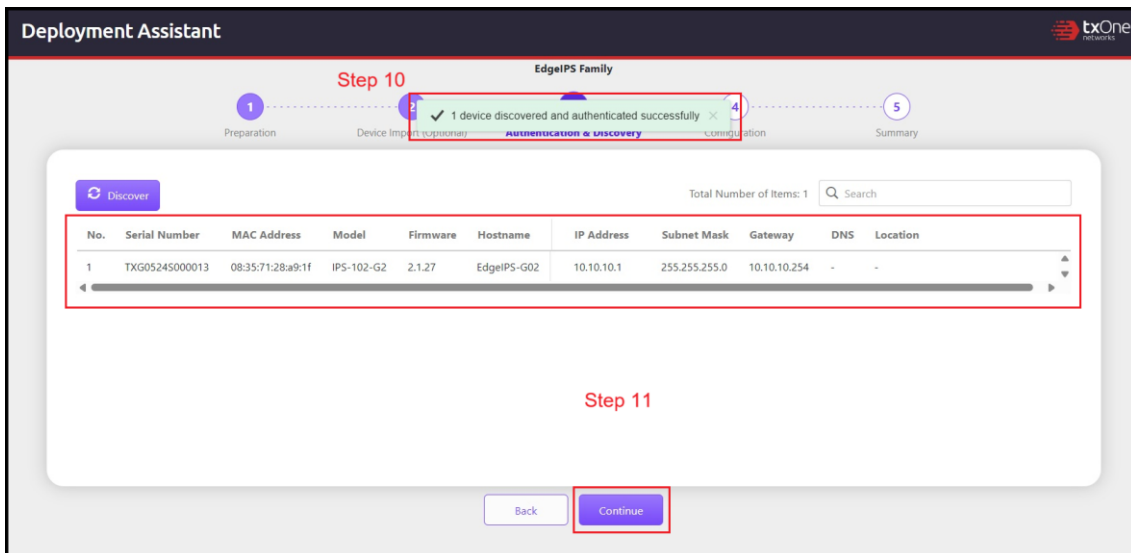

If you want to discover devices once again, click **Discover**.


12. (Optional) If you would like to onboard Edge devices to EdgeOne, in the left pane, enter the IP address of the EdgeOne system that centrally manages these discovered devices. If the passcode authentication method is enabled in EdgeOne, click the **Passcode** toggle and enter the passcode specified in EdgeOne.

13. (Optional) In the right pane, click the **USB Application** toggle to enable this function, and click **Edit Syslog Settings** and **Edit SNMP Settings** to edit these settings for the discovered Edge devices.




For more information about editing the advanced settings, see [Appendix A: Syslog Settings](#) and [Appendix B: SNMP Settings](#).

14. Once you are satisfied with the global settings, click **Continue**.

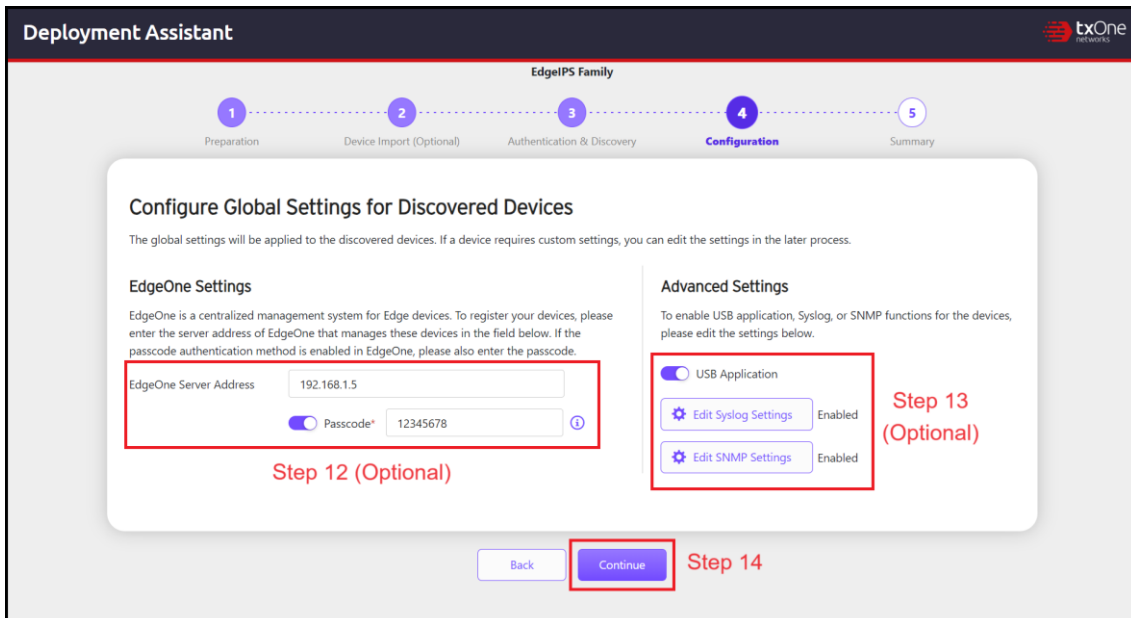

15. (Optional) The Deployment Assistant lists the configuration details of each discovered Edge device based on the CSV file you previously imported. Adjust the device setting values if needed.

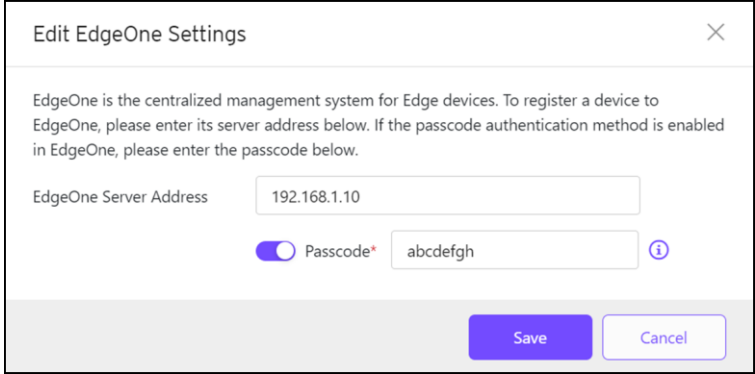Field	Description
Hostname	The name of the Edge device.
IP Address	The IP address of the Edge device.
Subnet Mask	The subnet mask of the Edge device.
Gateway	The IP address of the device gateway that sends packets to a different network.
DNS	(Optional) The DNS address of the Edge device.
Location	(Optional) The location of the Edge device.
EdgeOne Settings Type	Select either Global Settings or Custom Settings. • Global Settings: Use the EdgeOne settings previously configured. • Custom Settings: Specify another EdgeOne IP address and passcode (if required) in the [Edit EdgeOne Settings] window as shown below. To modify the pre-configured custom settings, click :discovery_assistant_edit_custom_settings_button: . 
Advanced Settings Type	Select either Global Settings or Custom Settings. • Global Settings: Use the advanced settings previously configured. • Custom Settings: Enable or disable USB Application and configure Syslog and SNMP settings specific to this device in the [Edit Advanced Settings] window as shown below. To modify the pre-configured custom settings, click :discovery_assistant_edit_custom_settings_button: .

Field	Description
	Edit Advanced Settings To enable USB application, Syslog, or SNMP functions for the devices, please edit the settings below. ☐ USB Application Edit Syslog Settings Disabled Edit SNMP Settings Disabled Save Cancel For more information about editing the advanced settings, see Appendix A: Syslog Settings and Appendix B: SNMP Settings.

16. (Optional) To edit global settings for all devices, click **Edit Global Settings**.

17. Click **Continue** after you have confirmed all the setting values are accurate.

Deployment Assistant

EdgeIPS Family

1 Preparation 2 Device Import (Optional) 3 Authentication & Discovery 4 **Configuration** 5 Summary

Step 16 (Optional)


Total Number of Items: 1

No.	Serial Number	MAC Address	Model	Firmware	Hostname*	IP Address*	Subnet Mask*	Gateway*
1	TXG05245000013	08:35:71:28:a9:1f	IPS-102-G2	2.1.27	EdgeIPS-G02	10.10.10.1	255.255.255.0	10.10.10.1

Step 15 (Optional)

Step 17

18. Click **Continue** to implement these settings to the discovered devices.

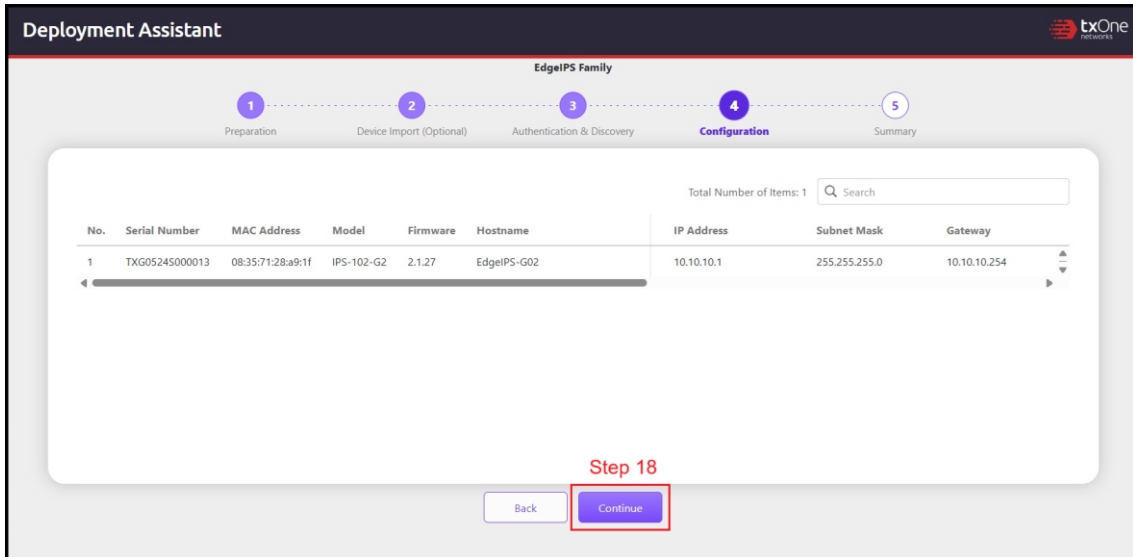

Deployment Assistant

EdgeIPS Family

1 Preparation 2 Device Import (Optional) 3 Authentication & Discovery 4 **Configuration** 5 Summary


Total Number of Items: 1

No.	Serial Number	MAC Address	Model	Firmware	Hostname	IP Address	Subnet Mask	Gateway
1	TXG05245000013	08:35:71:28:a9:1f	IPS-102-G2	2.1.27	EdgeIPS-G02	10.10.10.1	255.255.255.0	10.10.10.254

Step 18

19. If this is the first time you configure the devices, you will be prompted to change the default login credentials and accept our End User License Agreement before Deployment Assistant implements the setting values to the devices. Enter a new user ID and password to change the default login credentials, then click **Apply**.

- **New Login Name (ID):** Enter your new user ID for the admin account.
- **New Password:** Enter your new password for the admin account.
- **Confirm Password:** Enter the new password again for confirmation.

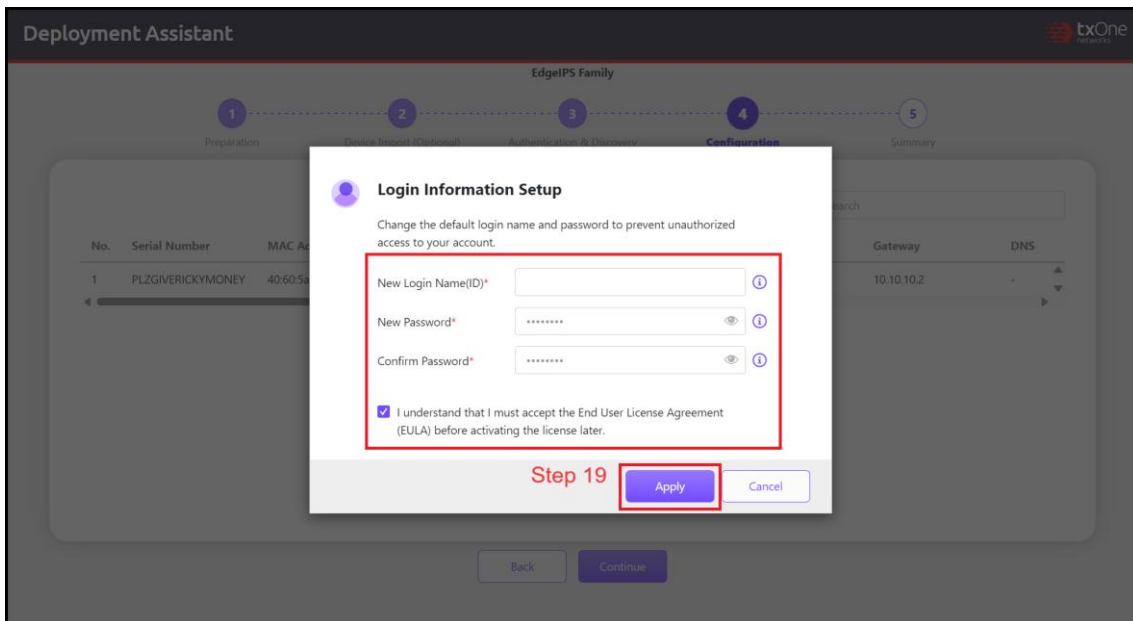

Deployment Assistant

EdgeIPS Family

1 Preparation 2 Device Import (Optional) 3 Authentication & Discovery 4 **Configuration** 5 Summary

Login Information Setup

Change the default login name and password to prevent unauthorized access to your account.

New Login Name(ID)*

New Password*

Confirm Password*

☒ I understand that I must accept the End User License Agreement (EULA) before activating the license later.

Step 19




Changing the User ID and password is only required during the initial deployment process. If the process is restarted, you will not need to change them.

20. You will receive a notification once the settings are implemented successfully.

21. Click **Export Configuration Details** to save an Excel file containing the device configuration details to your local storage.


22. Click **Finish** to exit.

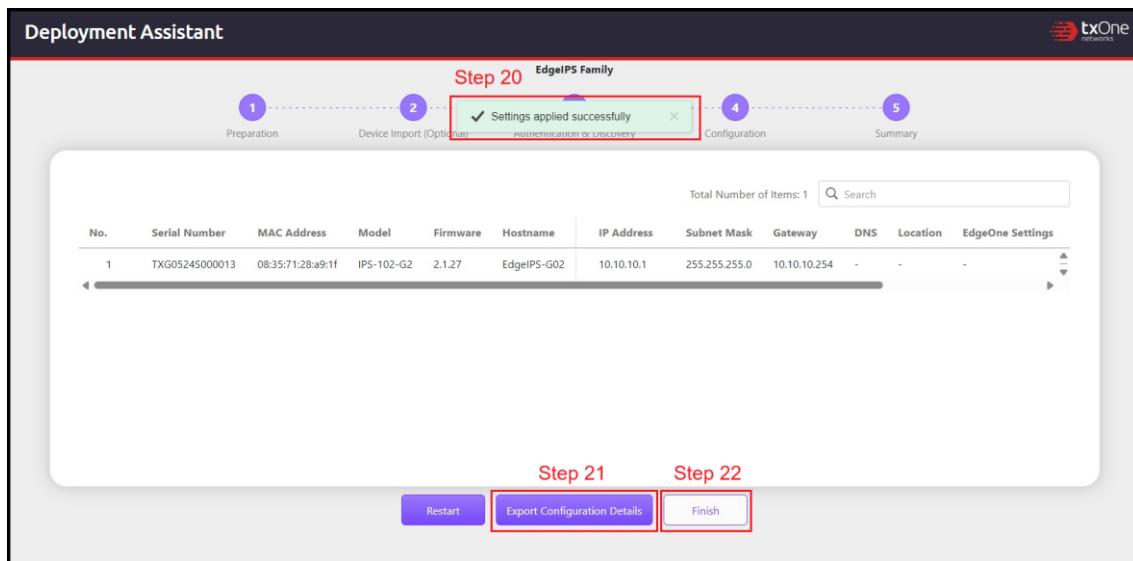


5.1.2 Configuring Devices During Discovery (EdgeIPS Family)

Procedure

1. When launching the Deployment Assistant for the first time, you will see a Windows security alert window. Click **Allow access** to begin the process.

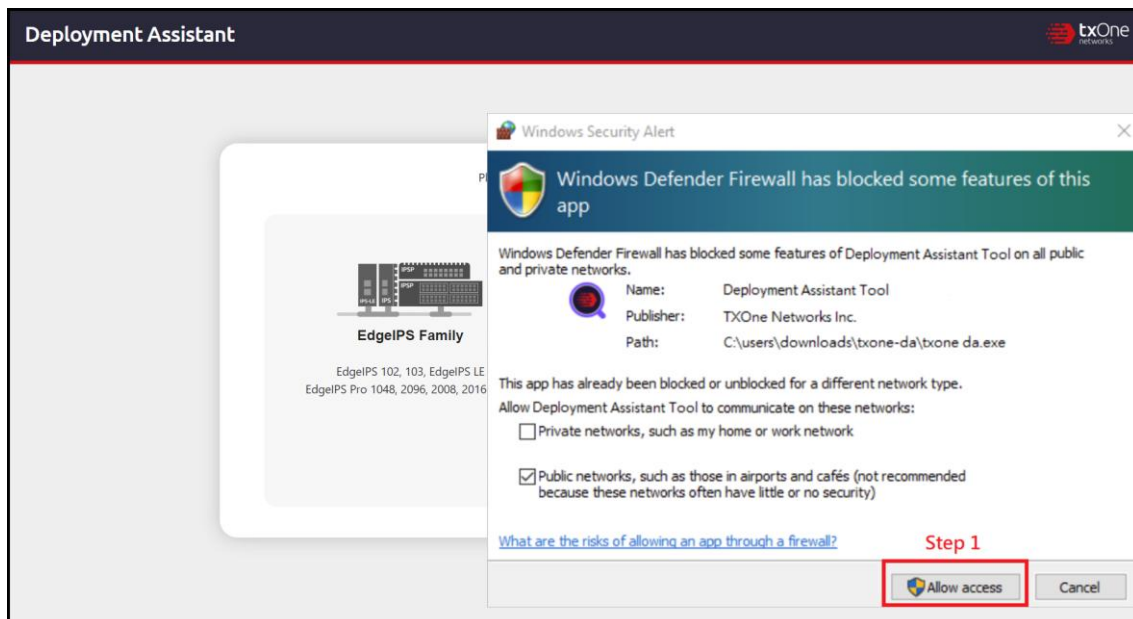

2. Select **EdgeIPS Family** and click **Start**.

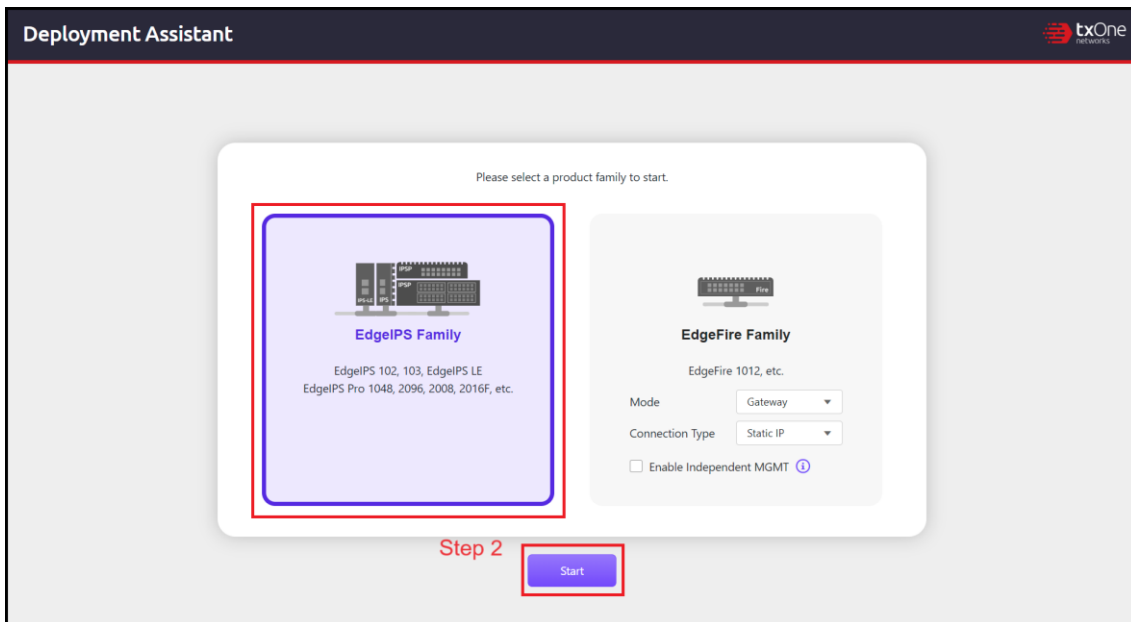


Currently, we do not support combined configuration for EdgeIPS series and EdgeFire series devices in a single batch setup.

3. Make sure that you have fulfilled the prerequisites for the deployment process.




For more information, see [Preparation](#).

4. Select a **network interface** from the drop-down list for deploying your Edge devices. Once completed, click **Continue**.

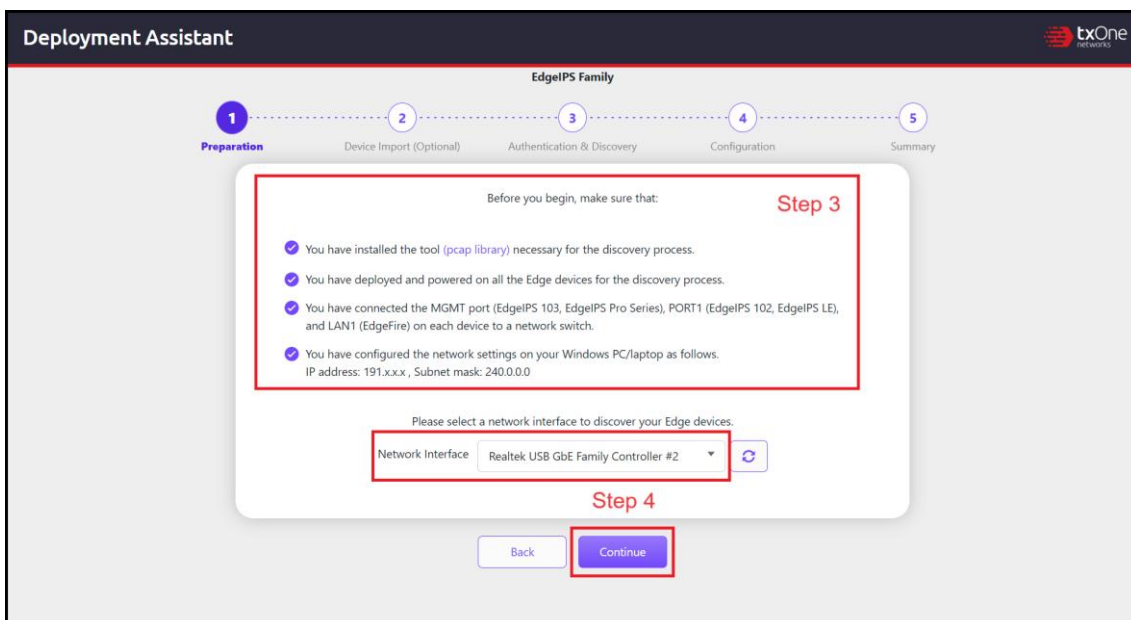

5. Click **Configure During Discovery** if you want to configure the device settings during the subsequent discovery process. Then click **Continue**.

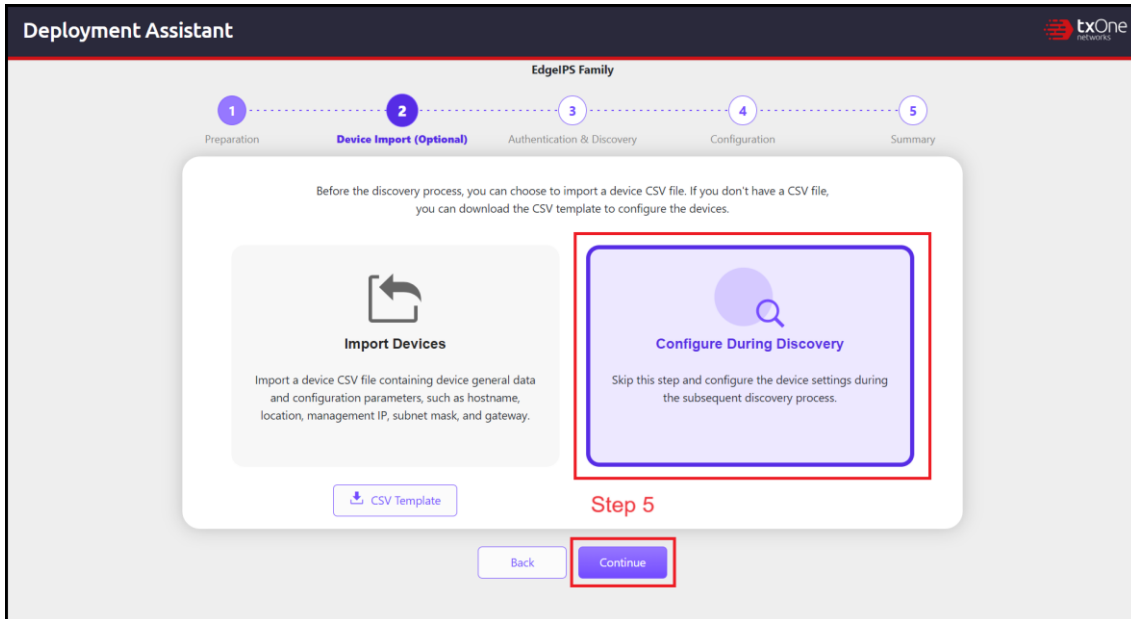


6. Enter the login credentials, then click **Continue**. The default login credentials are as follows.


- **User ID:** *admin*
- **Password:** *txone*



If you have restarted the deployment process, please use the User ID and password you previously set for authentication.

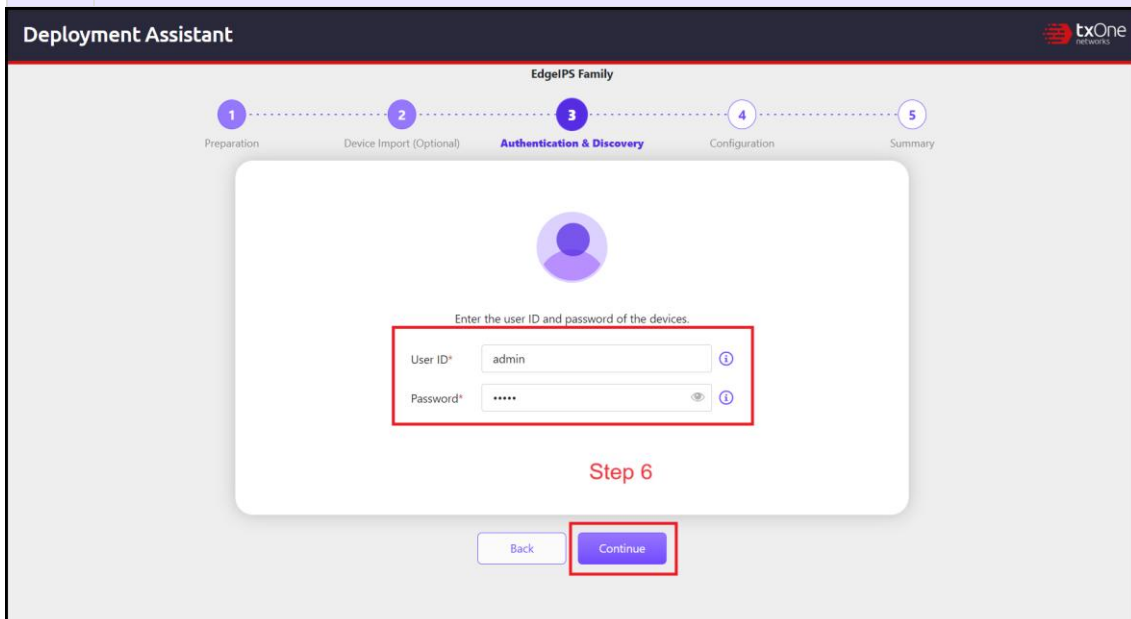


7. The Deployment Assistant starts to discover all your Edge devices. This may take a while. Please wait until the process is complete. To skip this process, click **Skip**.

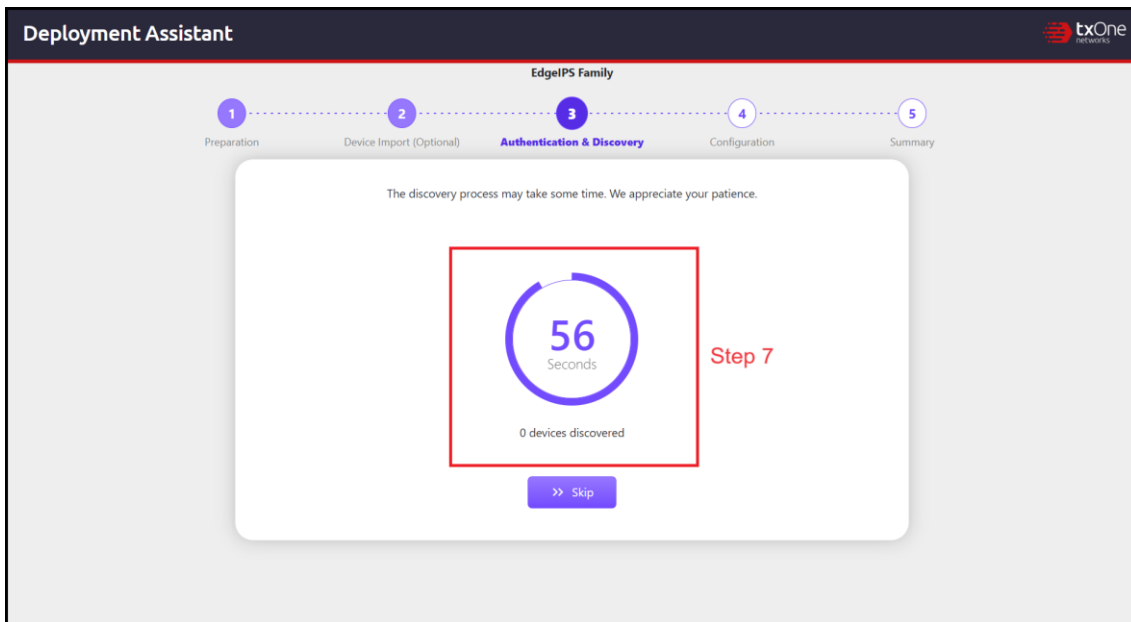

8. You will receive a notification once the discovery process is complete.

9. After the discovery process is complete, the Deployment Assistant lists the serial number, MAC address, and hostname of each discovered Edge device. Click **Continue**.

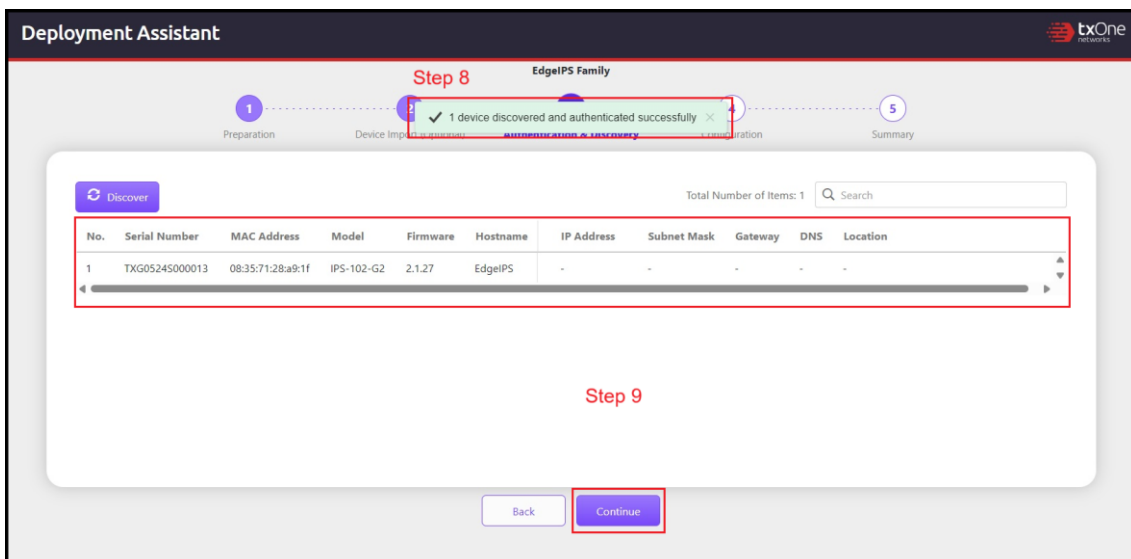


If you want to discover devices once again, click **Discover**.

10. (Optional) If you would like to onboard Edge devices to EdgeOne, in the left pane, enter the IP address of the EdgeOne system that centrally manages these discovered devices. If the passcode authentication method is enabled in EdgeOne, click the **Passcode** toggle and enter the passcode specified in EdgeOne.

11. (Optional) In the right pane, click the **USB Application** toggle to enable this function, and click **Edit Syslog Settings** and **Edit SNMP Settings** to edit these settings for the discovered Edge devices.



For more information about editing the advanced settings, see [Appendix A: Syslog Settings](#) and [Appendix B: SNMP Settings](#).

12. Once you are satisfied with the global settings, click **Continue**.

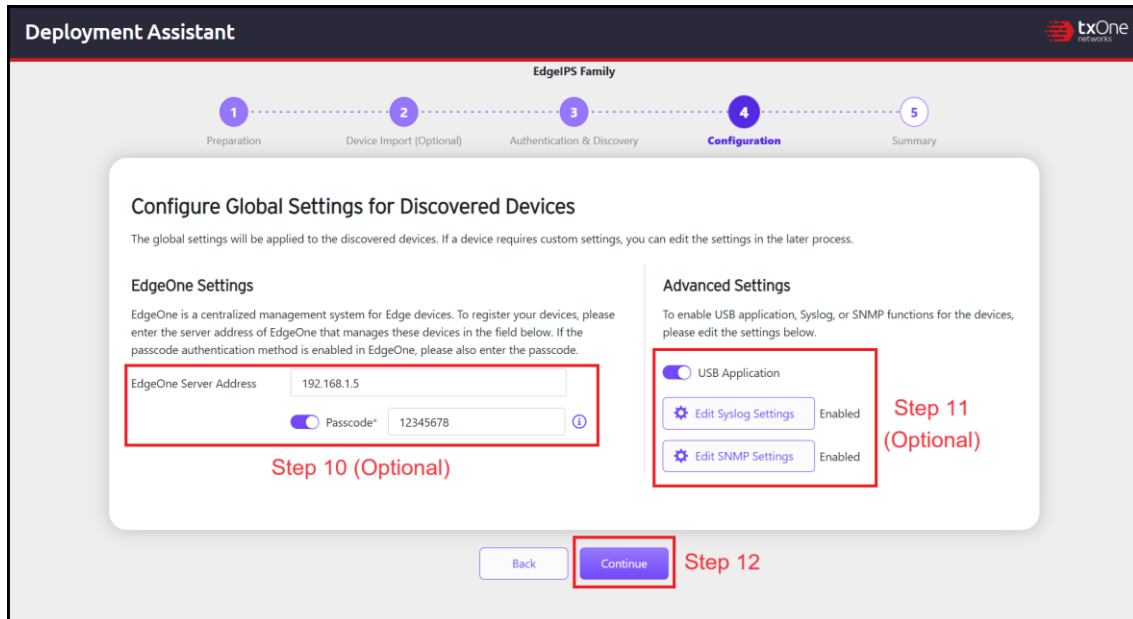


13. Configure the device setting values for each discovered device.

Field	Description
Hostname	The name of the Edge device.
IP Address	The IP address of the Edge device.
Subnet Mask	The subnet mask of the Edge device.
Gateway	The IP address of the device gateway that sends packets to a different network.
DNS	(Optional) The DNS address of the Edge device.
Location	(Optional) The location of the Edge device.
EdgeOne Settings Type	Select either Global Settings or Custom Settings. Global Settings: Use the EdgeOne settings previously configured. Custom Settings: Specify another EdgeOne IP address and passcode (if required) in the [Edit EdgeOne Settings] window as shown below. To modify the pre-configured custom settings, click :discovery_assistant_edit_custom_settings_button: .

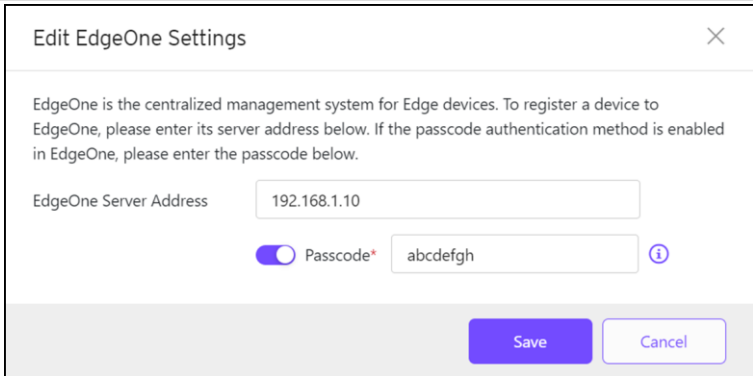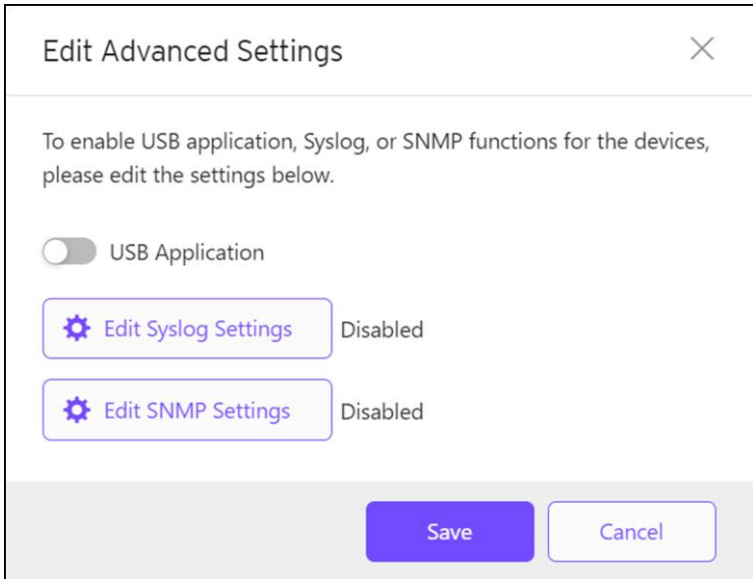
Field	Description
	
Advanced Settings Type	Select either Global Settings or Custom Settings. • Global Settings: Use the advanced settings previously configured. • Custom Settings: Enable or disable USB Application and configure Syslog and SNMP settings specific to this device in the [Edit Advanced Settings] window as shown below. To modify the pre-configured custom settings, click :discovery_assistant_edit_custom_settings_button: .   For more information about editing the advanced settings, see Appendix A: Syslog Settings and Appendix B: SNMP Settings.

14. (Optional) To edit global settings for all devices, click **Edit Global Settings**.

15. Click **Continue** after you have configured all the device setting values.

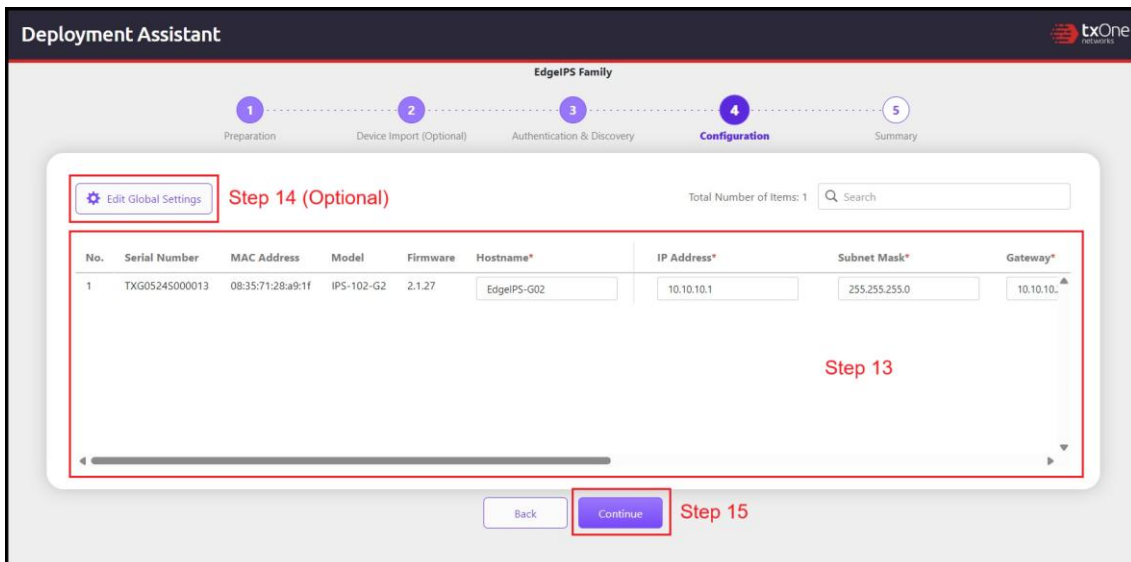


16. Click **Continue** to implement these settings to the discovered devices.

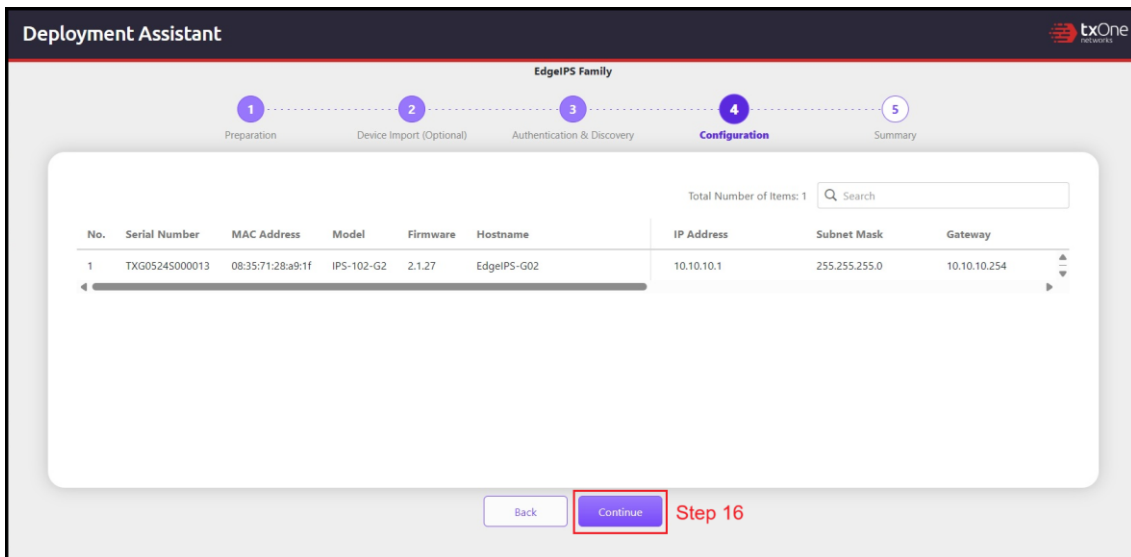

17. If this is the first time you configure the devices, you will be prompted to change the default login credentials and accept our End User License Agreement before Deployment Assistant implements the setting values to the devices. Enter a new user ID and password to change the default login credentials, then click **Apply**.

- **New Login Name (ID):** Enter your new user ID for the admin account.
- **New Password:** Enter your new password for the admin account.
- **Confirm Password:** Enter the new password again for confirmation.

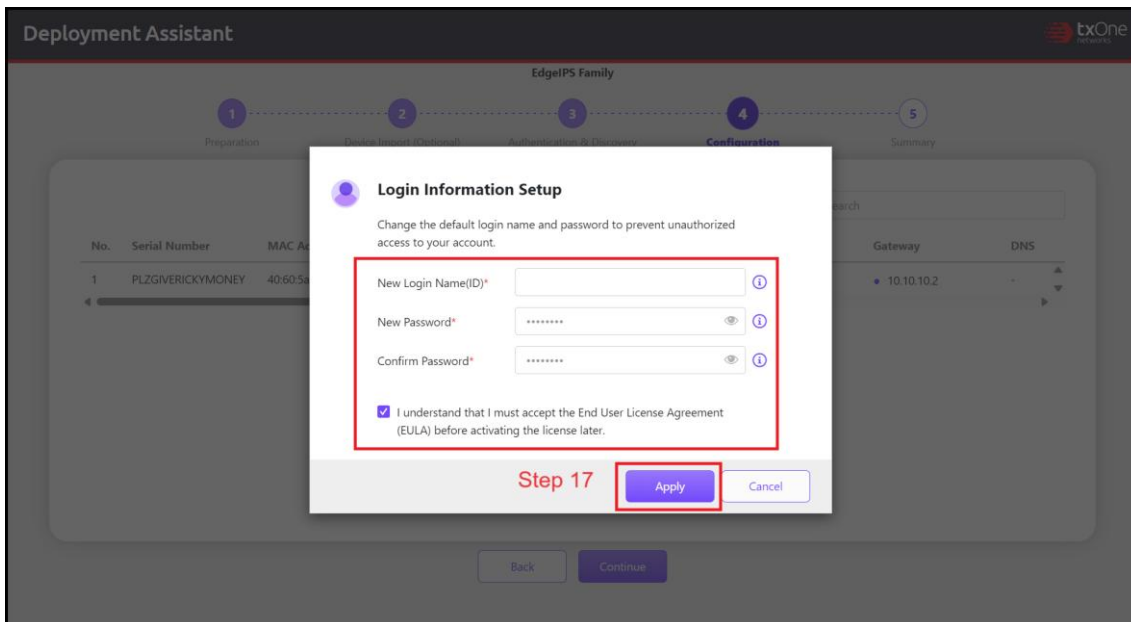


Changing the User ID and password is only required during the initial deployment process. If the process is restarted, you will not need to change them.

18. You will receive a notification once the settings are implemented successfully.

19. Click **Export Configuration Details** to save an Excel file containing the device configuration details to your local storage.

20. Click **Finish** to exit.

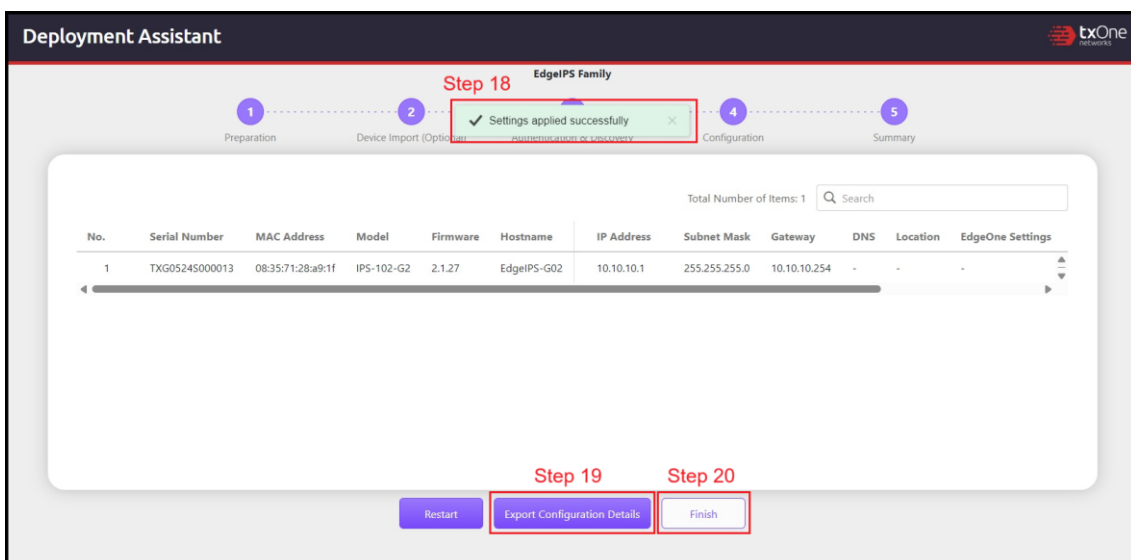


5.2 Setting Up EdgeFire Devices

We offer two approaches for EdgeFire batch setup. You can either import a device CSV file or configure the devices during the device discovery process.

5.2.1 Importing Device CSV File for Setup (EdgeFire Family)

Procedure


1. When launching the Deployment Assistant for the first time, you will see a Windows security alert window. Click **Allow access** to begin the process.

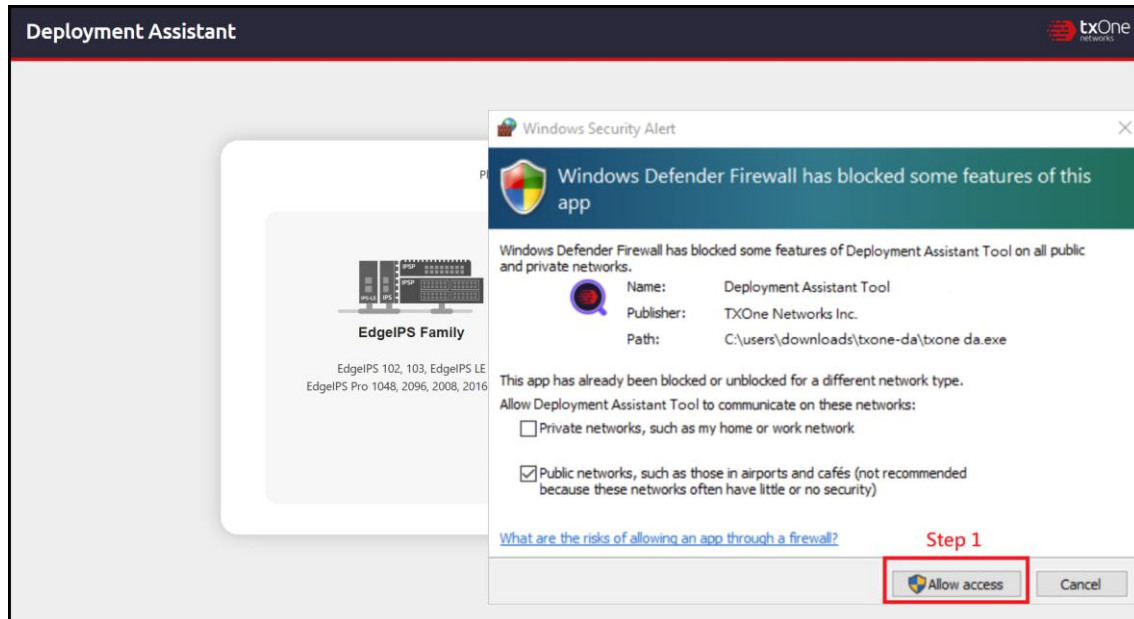

2. Select **EdgeFire Family**, configure the operation mode, connection type, and management settings as detailed below, and click **Start**.


Setting Item	Options	Default Setting
Mode	Gateway: EdgeFire operates as a gateway with NAT and routing main features between multiple different network segments to actively analyze, filter, and take actions on all traffic that passes through it. Bridge: EdgeFire sits in the direct communication path between source and destination to actively analyze, filter and take actions on all traffic that passes through it.	Gateway
Connection Type (Applicable only when you select “ Gateway ” for the mode.)	Static IP: EdgeFire uses a static IP address for its interface. DHCP Client: EdgeFire functions as a DHCP client to get an IP address from a DHCP server. ⚠ If you select DHCP Client as your connection type, please double-check your LAN and WAN subnets to ensure that they don’t overlap when you configure the settings in the subsequent steps.	Static IP

Setting Item	Options	Default Setting
Enable Independent MGMT	Enabled (Checkbox ticked): EdgeFire transmits management data through its out-of-band management port (mapped to WAN2). Disabled (Checkbox not ticked): EdgeFire transmits management data through its data ports.	Disabled

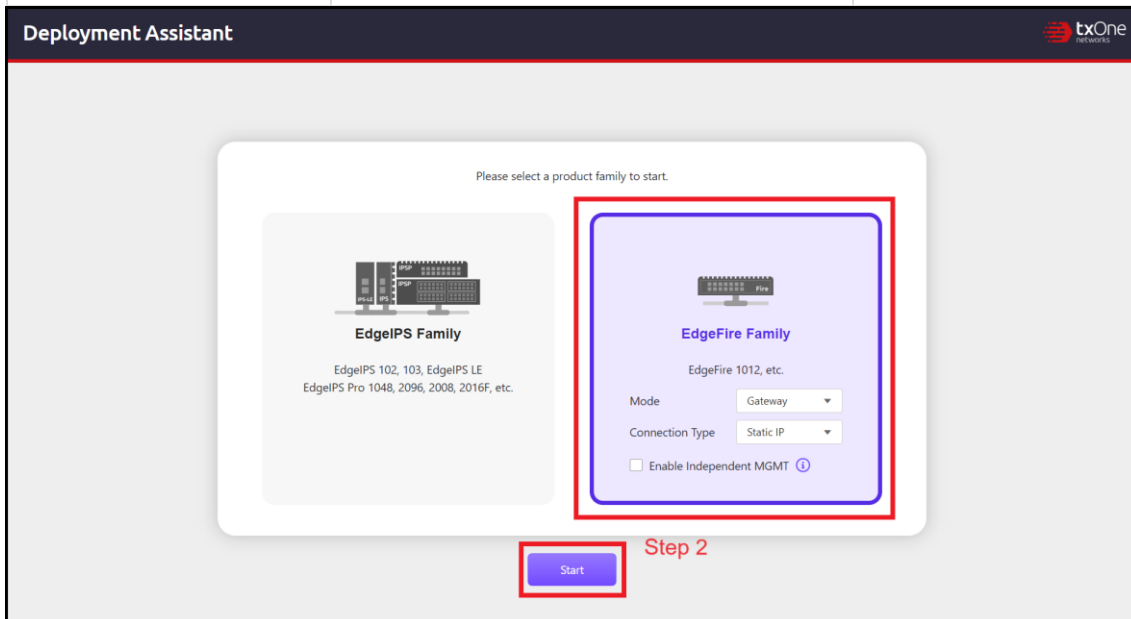

Deployment Assistant

Please select a product family to start.



EdgeIPS Family

EdgeIPS 102, 103, EdgeIPS LE
EdgeIPS Pro 1048, 2096, 2008, 2016F, etc.



EdgeFire Family

EdgeFire 1012, etc.

Mode: Gateway

Connection Type: Static IP

☐ Enable Independent MGMT ⓘ

Start Step 2




Currently, we do not support combined configuration for EdgeIPS series and EdgeFire series devices in a single batch setup.

3. Make sure that you have fulfilled the prerequisites for the deployment process.




For more information, see [Preparation](#).

4. Select a **network interface** from the drop-down list for deploying your Edge devices. Once completed, click **Continue**.

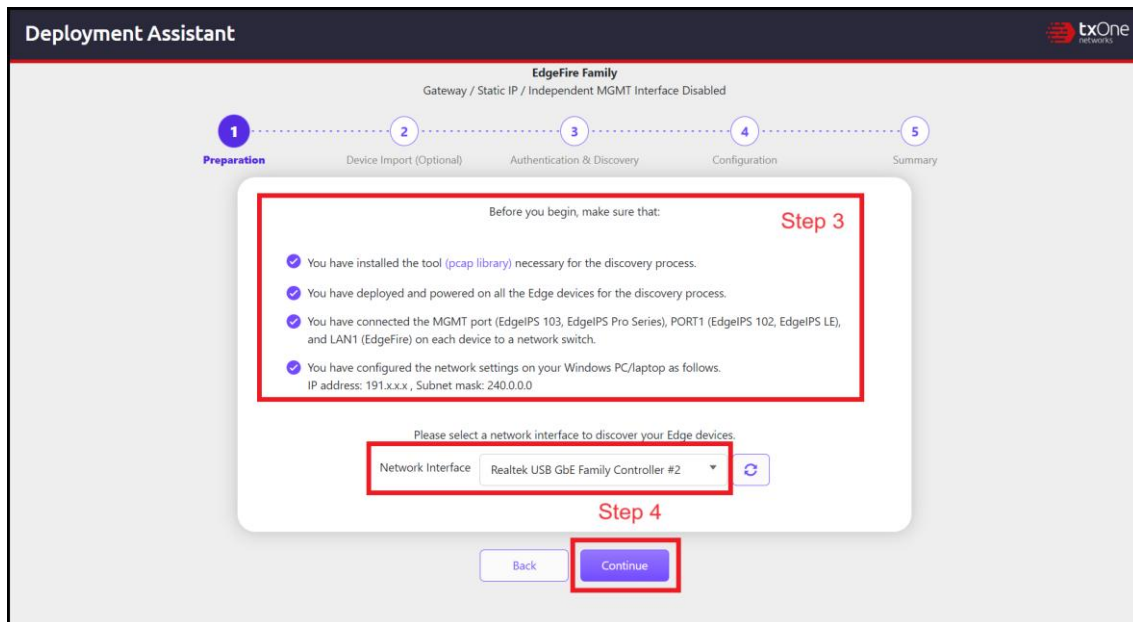


5. Click **Import Devices** and **Continue** to import device CSV files containing device general data and configuration parameters, such as hostname, location, IP address, subnet mask, and gateway.

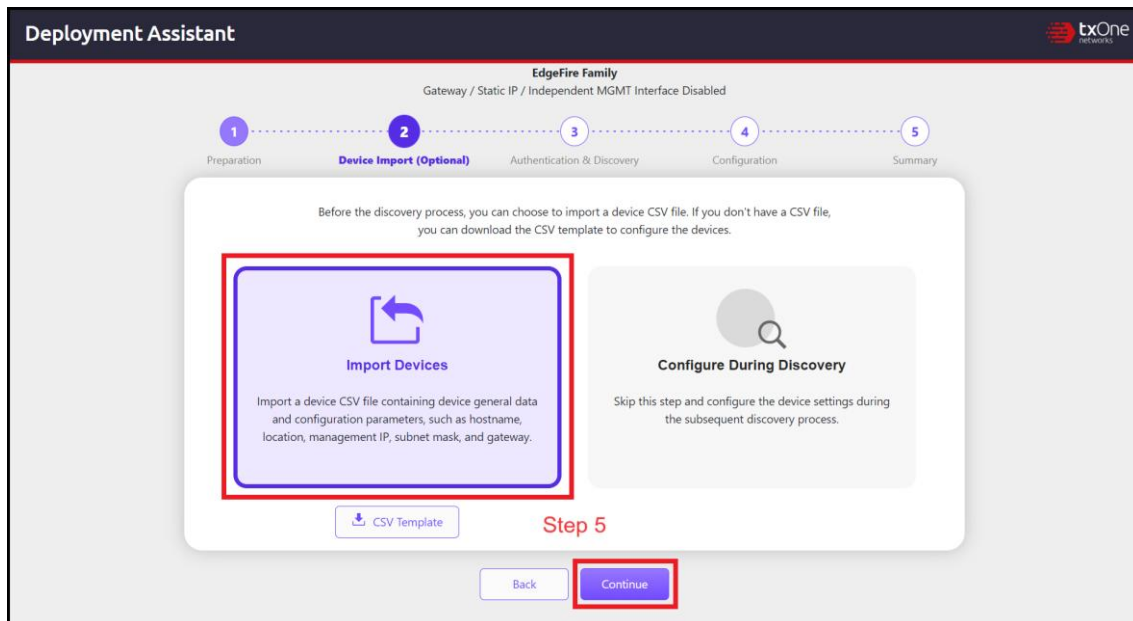

If you do not have a CSV file, click **CSV Template** to download a blank template and fill in the required device information on the template.

6. An [Import Devices] window pops up. Click **Browse** to upload the CSV file. Once completed, click **Import**.

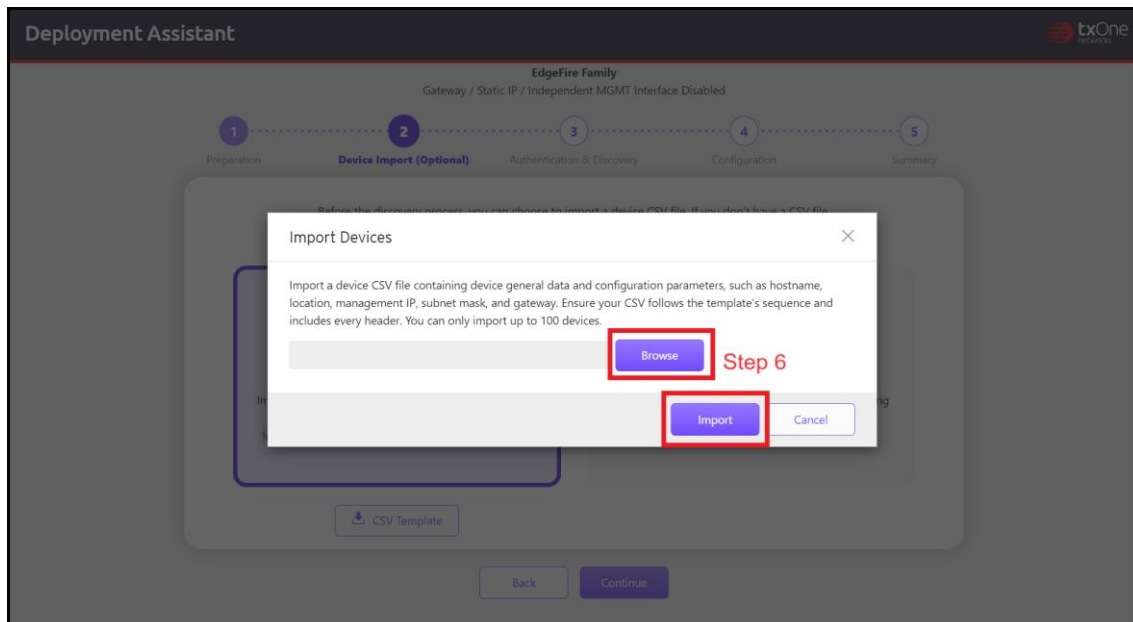


7. You will receive a notification once the CSV file is imported successfully.

8. Enter the login credentials, then click **Continue**. The default login credentials are as follows.


- **User ID:** *admin*
- **Password:** *txone*



If you have restarted the deployment process, please use the User ID and password you previously set for authentication.

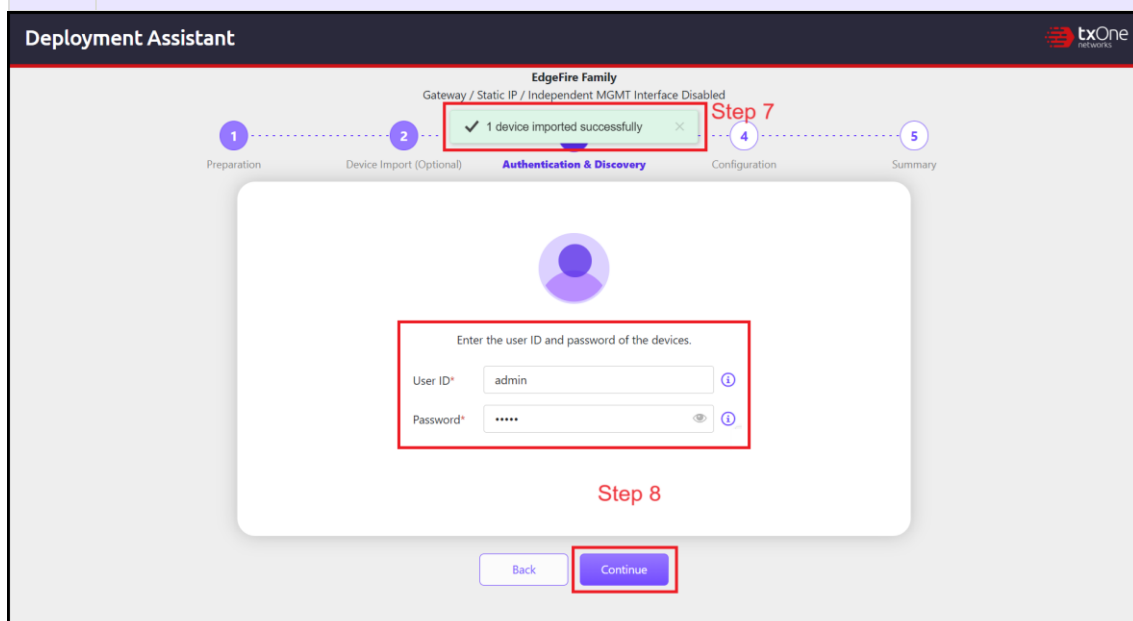


9. The Deployment Assistant starts to discover all your Edge devices. This may take a while. Please wait until the process is complete. To skip this process, click **Skip**.

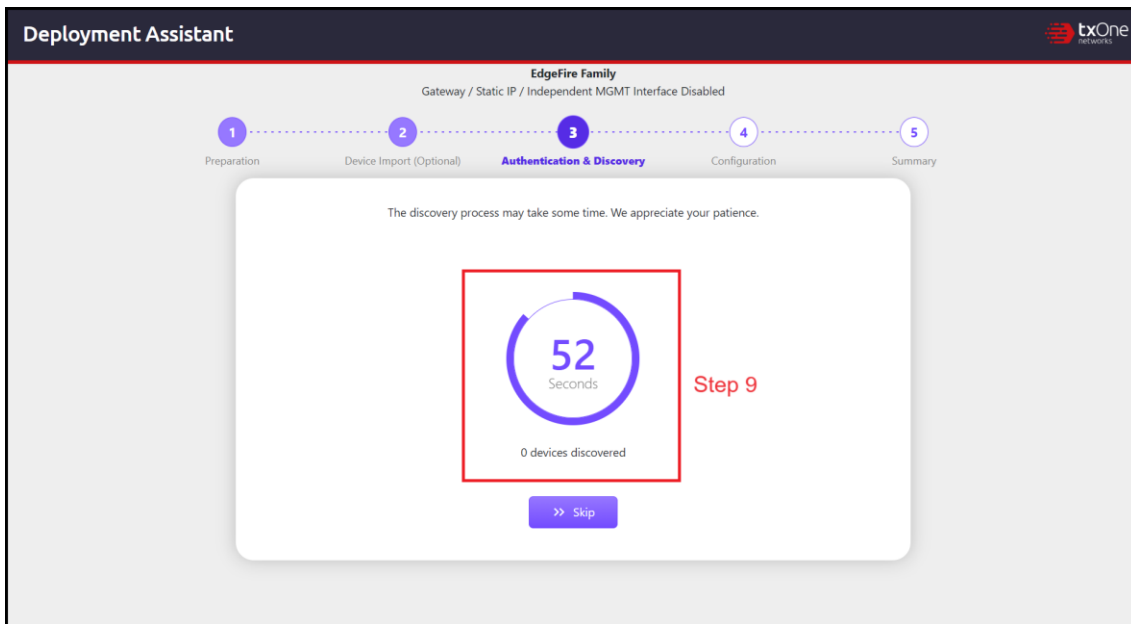

10. You will receive a notification once the discovery process is complete.

11. After the discovery process is complete, the Deployment Assistant lists the general data and configuration parameters of each discovered Edge device based on the CSV file you previously imported. Click **Continue**.

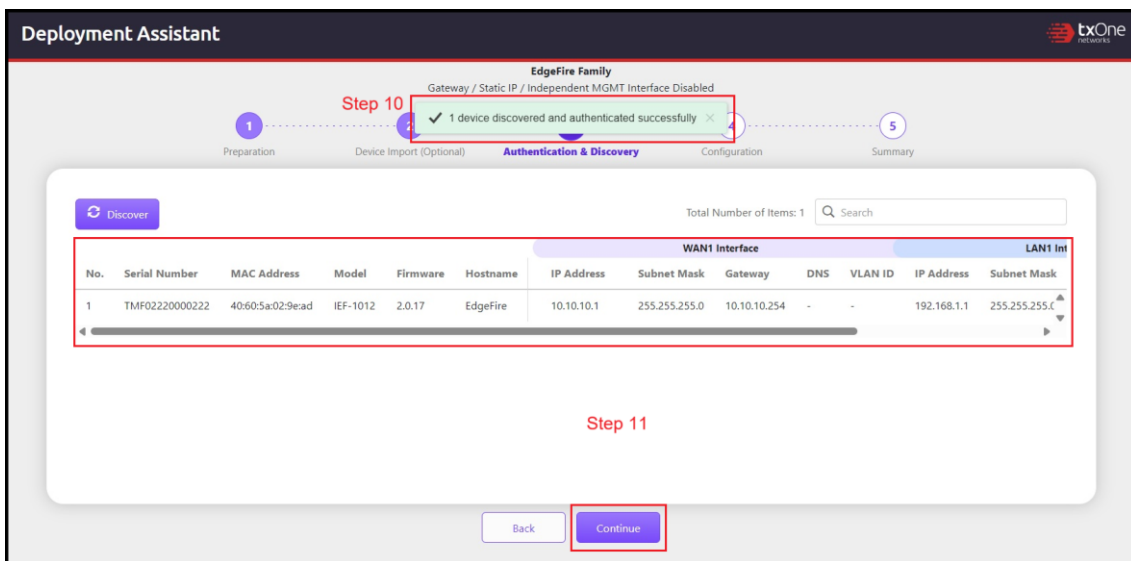

 If you want to discover devices once again, click **Discover**.

12. (Optional) If you would like to onboard Edge devices to EdgeOne, in the left pane, enter the IP address of the EdgeOne system that centrally manages these discovered devices. If the passcode authentication method is enabled in EdgeOne, click the **Passcode** toggle and enter the passcode specified in EdgeOne.

13. (Optional) In the right pane, click the **USB Application** toggle to enable this function, and click **Edit Syslog Settings** and **Edit SNMP Settings** to edit these settings for the discovered Edge devices.


For more information about editing the advanced settings, see [Appendix A: Syslog Settings](#) and [Appendix B: SNMP Settings](#).

14. Once you are satisfied with the global settings, click **Continue**.

15. (Optional) The Deployment Assistant lists the configuration details of each discovered Edge device based on the CSV file you previously imported. Adjust the device setting values if needed.

- **General Device Configuration Details**

Field	Description
Hostname	The name of the Edge device.
Location	(Optional) The location of the Edge device.
EdgeOne Settings Type	Select either Global Settings or Custom Settings. • Global Settings: Use the EdgeOne settings previously configured. • Custom Settings: Specify another EdgeOne IP address and passcode (if required) in the [Edit EdgeOne Settings] window as shown below. To modify the pre-configured custom settings, click :discovery_assistant_edit_custom_settings_button: . Edit EdgeOne Settings EdgeOne is the centralized management system for Edge devices. To register a device to EdgeOne, please enter its server address below. If the passcode authentication method is enabled in EdgeOne, please enter the passcode below. EdgeOne Server Address: 192.168.1.10 Passcode*: abcdefgh Save Cancel

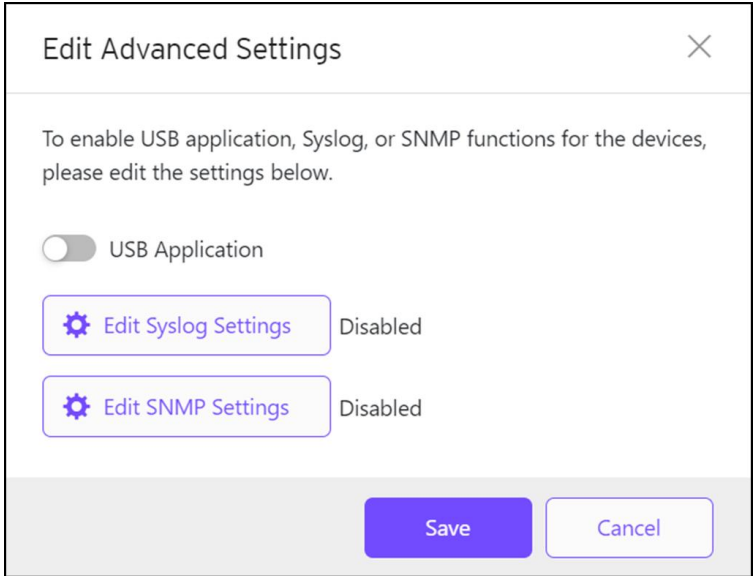Field	Description
Advanced Settings Type	Select either Global Settings or Custom Settings. • Global Settings: Use the advanced settings previously configured. • Custom Settings: Enable or disable USB Application and configure Syslog and SNMP settings specific to this device in the [Edit Advanced Settings] window as shown below. To modify the pre-configured custom settings, click :discovery_assistant_edit_custom_settings_button: .   For more information about editing the advanced settings, see Appendix A: Syslog Settings and Appendix B: SNMP Settings.

- **Independent MGMT Interface Details** (Applicable only when you **enable independent MGMT** in step 2.)

Field	Description
IP Address	The IP address of the independent MGMT interface.
Subnet Mask	The subnet mask of the independent MGMT interface.
Gateway	The IP address of the device gateway on the independent MGMT interface that sends packets to a different subnet.
DNS	(Optional) The DNS address of the independent MGMT interface.
VLAN ID	(Optional) The VLAN ID of the network traffic from the independent MGMT interface.

- **WAN1 Interface Details** (Applicable only when you select “**Gateway**” for the mode and “**Static IP**” for the connection type in step 2.)

Field	Description
IP Address	The IP address of the WAN1 interface.
Subnet Mask	The subnet mask of the WAN1 interface.
Gateway	The IP address of the device gateway on the WAN1 interface that sends packets to a different subnet.
DNS	(Optional) The DNS address of the WAN1 interface.
VLAN ID	(Optional) The VLAN ID of the network traffic from the WAN1 interface.

- **LAN1 Interface Details** (Applicable only when you select “**Gateway**” for the mode in step 2.)

Field	Description
IP Address	The IP address of the LAN1 interface.
Subnet Mask	The subnet mask of the LAN1 interface.
VLAN ID	(Optional) The VLAN ID of the network traffic from LAN1 interface.

DHCP Server	Select Disabled or Enabled. • Disabled: The device uses the user-defined device configuration details defined on this page. • Enabled: The device uses auto-generated device configuration details, including IP address and subnet mask, provided by a DHCP server.
-------------	--

If **Enabled** is selected, further provide the following DHCP server details.

Edit DHCP Server

Start IP Address*

End IP Address*

Gateway*

Lease Time* 86400 i

DNS Server

Save

Cancel

- **Start IP Address:** Input a start IP address to define the beginning of the IP range that the DHCP server can assign to the device.
- **End IP Address:** Input an end IP address to define the end of the IP range that the DHCP server can assign to the device.
- **Gateway:** Input a gateway IP address that the device uses.


Field	Description
	• Lease Time: Input a length of time (unit: seconds) for which the DHCP lease is valid. Once the lease time expires, the device will have to request new network setting details from the DHCP server. • DNS Server: (Optional) Input an IP address of the DNS server that the device uses.

- **Bridge Port Details** (Applicable only when you select “**Bridge**” for the mode and **disable independent MGMT** in step 2.)

Field	Description
IP Address	The IP address of the bridge port.
Subnet Mask	The subnet mask of the bridge port.
Gateway	The IP address of the device gateway on the bridge port that sends packets to a different subnet.
DNS	(Optional) The DNS address of the bridge port.

16. (Optional) To edit global settings for all devices, click **Edit Global Settings**.


17. Click **Continue** after you have confirmed all the setting values are accurate.

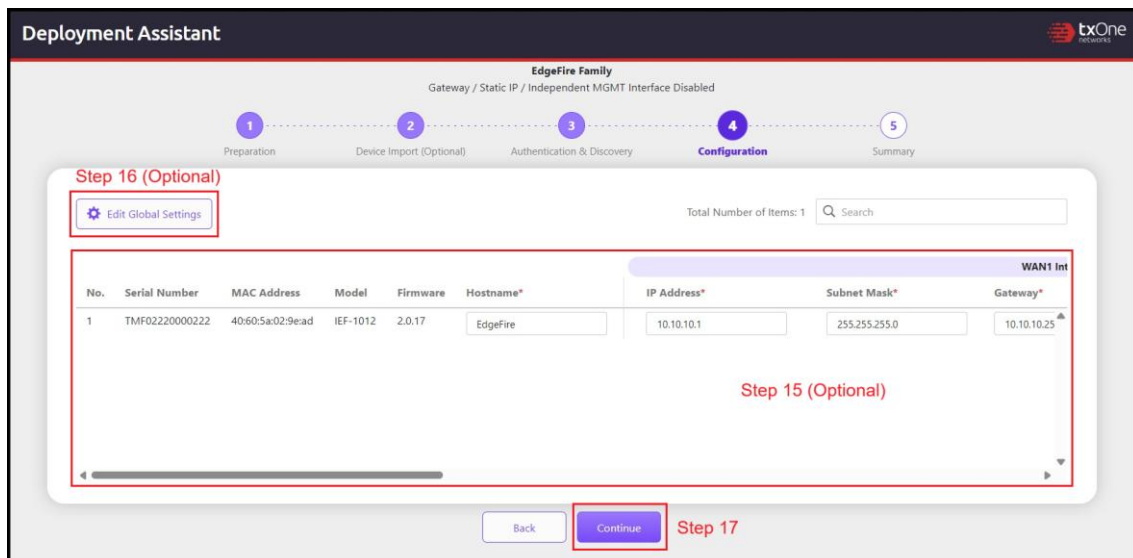

The screenshot shows the 'Deployment Assistant' interface for the 'EdgeFire Family'. A progress bar at the top indicates five steps: 1. Preparation, 2. Device Import (Optional), 3. Authentication & Discovery, 4. Configuration (current step), and 5. Summary. Below the progress bar, a modal window titled 'Step 16 (Optional)' is open. Inside this modal, there is a button labeled 'Edit Global Settings' with a gear icon. Below this button is a table with columns: No., Serial Number, MAC Address, Model, Firmware, Hostname*, IP Address*, Subnet Mask*, and Gateway*. The table contains one row of data for a device with serial number TMF02220000222. Below the table, there is a red text label 'Step 15 (Optional)'. At the bottom of the modal, there are 'Back' and 'Continue' buttons. The 'Continue' button is highlighted with a red box, and a red label 'Step 17' is next to it.

No.	Serial Number	MAC Address	Model	Firmware	Hostname*	IP Address*	Subnet Mask*	Gateway*
1	TMF02220000222	40:60:5a:02:9ead	IEF-1012	2.0.17	EdgeFire	10.10.10.1	255.255.255.0	10.10.10.25

18. Click **Continue** to implement these settings to the discovered devices.

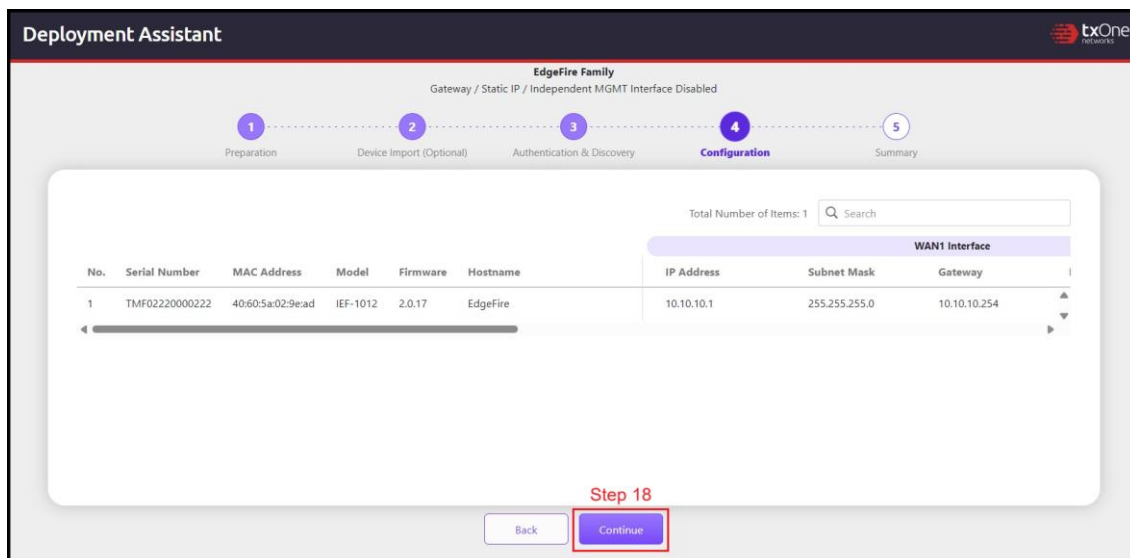

Deployment Assistant

EdgeFire Family
Gateway / Static IP / Independent MGMT Interface Disabled

1 Preparation 2 Device Import (Optional) 3 Authentication & Discovery 4 Configuration 5 Summary

Total Number of Items: 1 Search

No.	Serial Number	MAC Address	Model	Firmware	Hostname	IP Address	Subnet Mask	Gateway
1	TMF0220000222	40:60:5a:02:9ead	IEF-1012	2.0.17	EdgeFire	10.10.10.1	255.255.255.0	10.10.10.254


WAN1 Interface

Step 18

Back Continue

19. If this is the first time you configure the devices, you will be prompted to change the default login credentials and accept our End User License Agreement before Deployment Assistant implements the setting values to the devices. Enter a new user ID and password to change the default login credentials, then click **Apply**.

- **New Login Name (ID):** Enter your new user ID for the admin account.
- **New Password:** Enter your new password for the admin account.
- **Confirm Password:** Enter the new password again for confirmation.

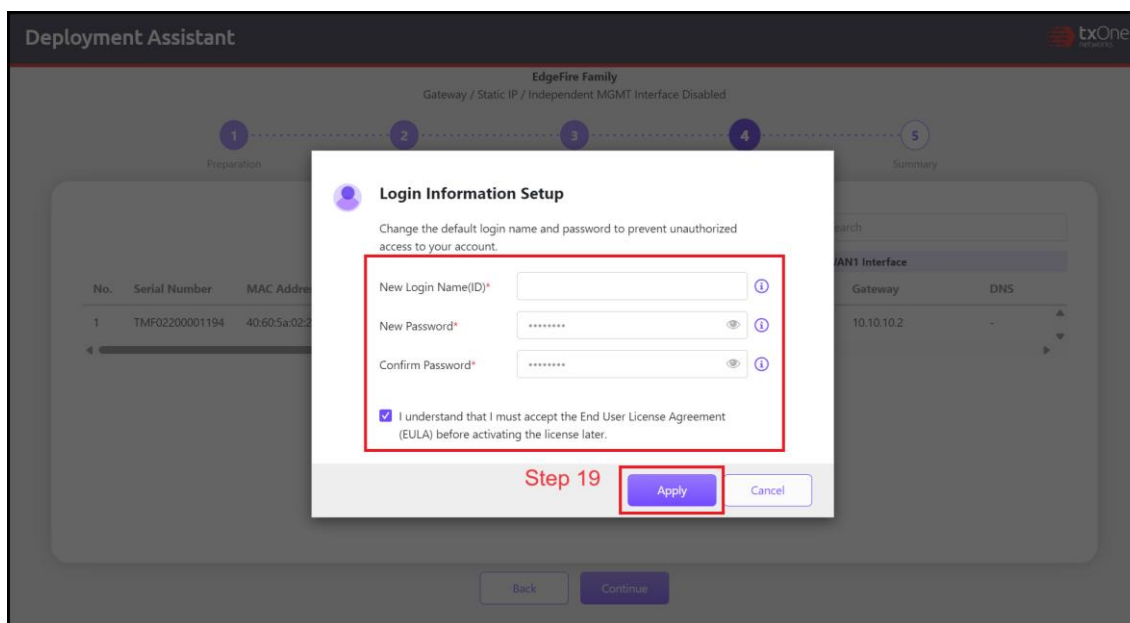

Deployment Assistant

EdgeFire Family
Gateway / Static IP / Independent MGMT Interface Disabled

1 Preparation 2 Device Import (Optional) 3 Authentication & Discovery 4 Configuration 5 Summary

1 Login Information Setup

Change the default login name and password to prevent unauthorized access to your account.

New Login Name(ID)*

New Password*

Confirm Password*

☒ I understand that I must accept the End User License Agreement (EULA) before activating the license later.

Step 19

Apply Cancel

Back Continue




Changing the User ID and password is only required during the initial deployment process. If the process is restarted, you will not need to change them.

20. You will receive a notification once the settings are implemented successfully.

21. Click **Export Configuration Details** to save an Excel file containing the device configuration details to your local storage.


22. Click **Finish** to exit.

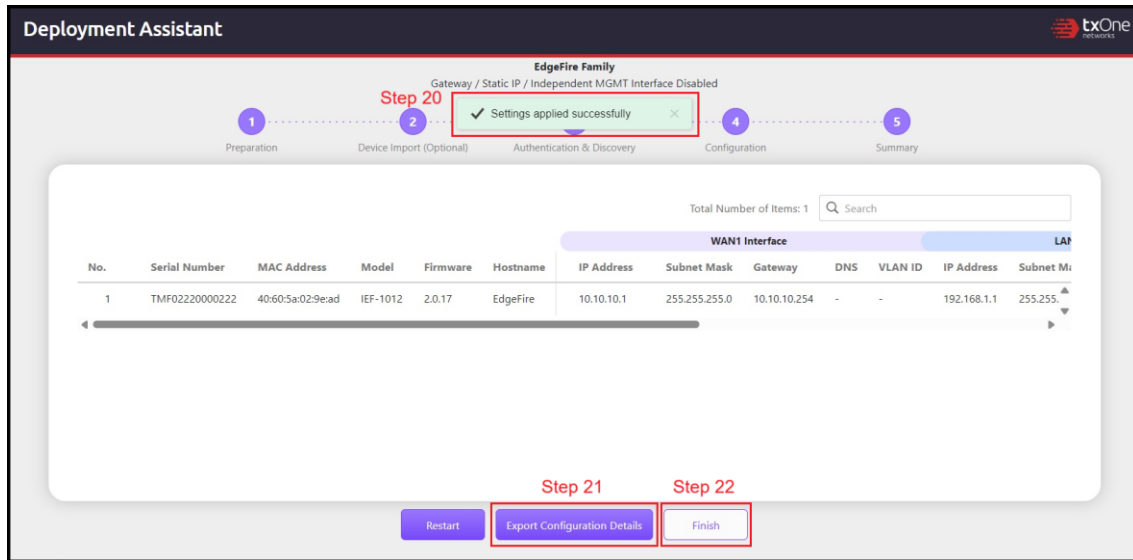

5.2.2 Configuring Devices During Discovery (EdgeFire Family)

Procedure


1. When launching the Deployment Assistant for the first time, you will see a Windows security alert window. Click **Allow access** to begin the process.

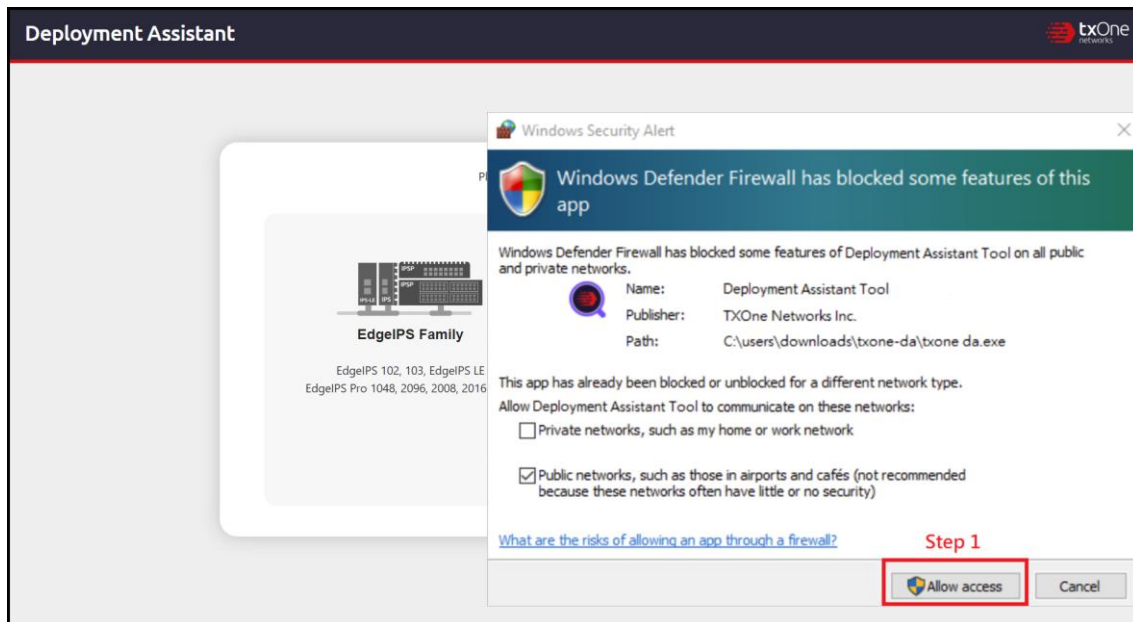

2. Select **EdgeFire Family**, configure the operation mode, connection type, and management settings as detailed below, and click **Start**.

Setting Item	Options	Default Setting
Mode	Gateway: EdgeFire operates as a gateway with NAT and routing main features between multiple different network segments to actively analyze, filter, and take	Gateway

Setting Item	Options	Default Setting
	actions on all traffic that passes through it. • Bridge: EdgeFire sits in the direct communication path between source and destination to actively analyze, filter and take actions on all traffic that passes through it.	
Connection Type (Applicable only when you select “ Gateway ” for the mode.)	• Static IP: EdgeFire uses a static IP address for its interface. • DHCP Client: EdgeFire functions as a DHCP client to get an IP address from a DHCP server. ⚠ If you select DHCP Client as your connection type, please double-check your LAN and WAN subnets to ensure that they don’t overlap when you configure the settings in the subsequent steps.	Static IP
Enable Independent MGMT	• Enabled (Checkbox ticked): EdgeFire transmits management data through its out-of-band management port (mapped to WAN2). • Disabled (Checkbox not ticked): EdgeFire transmits management data through its data ports.	Disabled

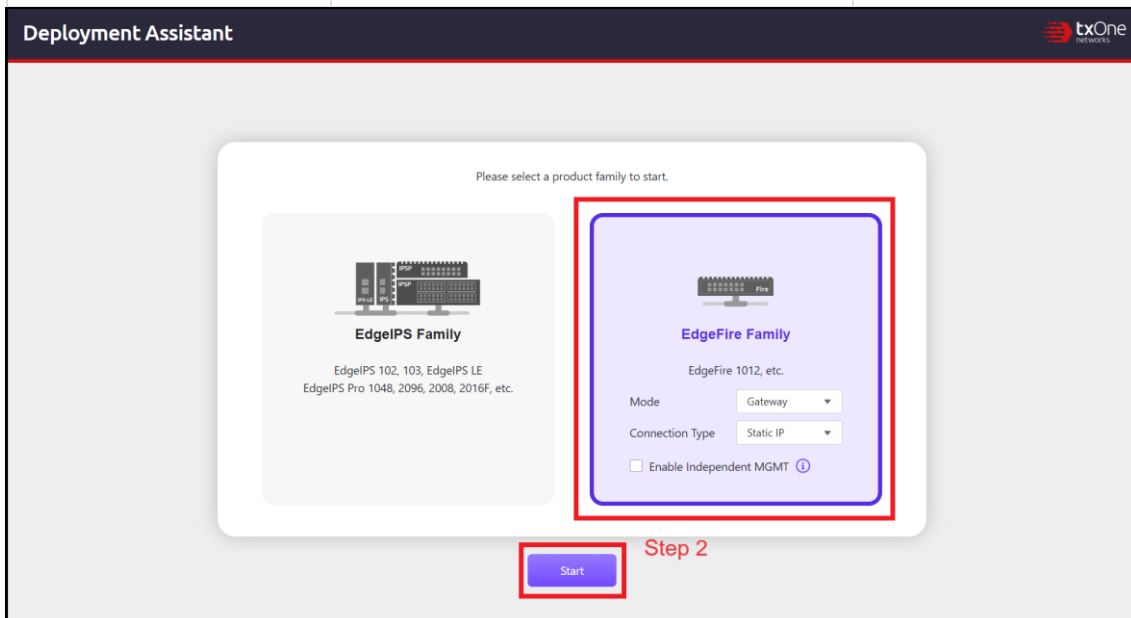


Currently, we do not support combined configuration for EdgeIPS series and EdgeFire series devices in a single batch setup.


3. Make sure that you have fulfilled the prerequisites for the deployment process.

For more information, see [Preparation](#).

4. Select a **network interface** from the drop-down list for deploying your Edge devices. Once completed, click **Continue**.

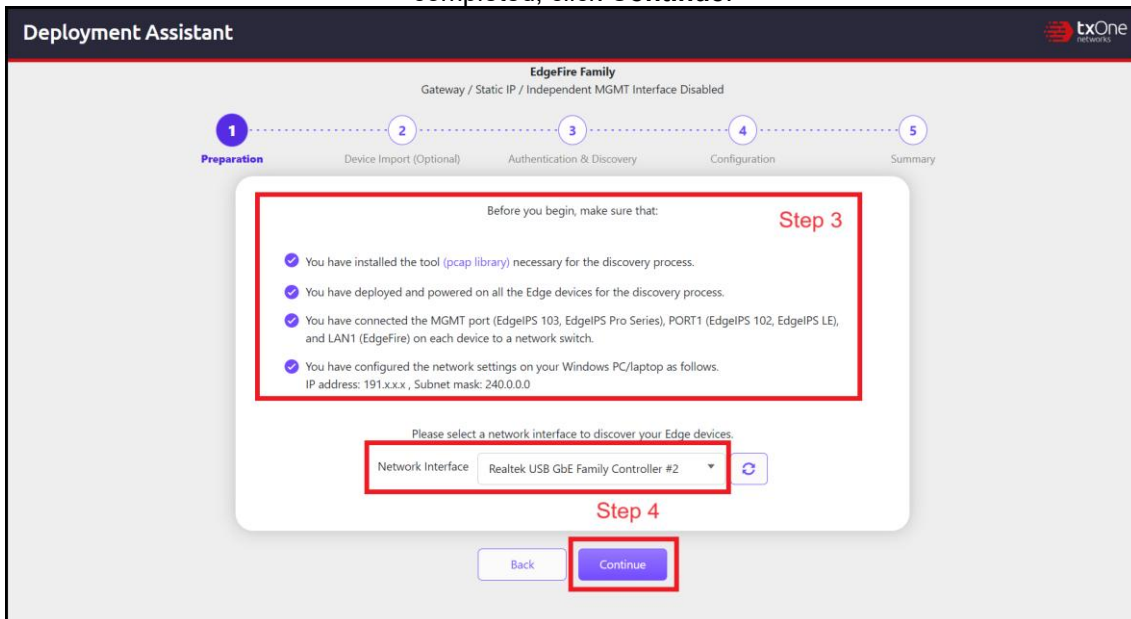


5. Click **Configure During Discovery** if you want to configure the device settings during the subsequent discovery process. Then click **Continue**.

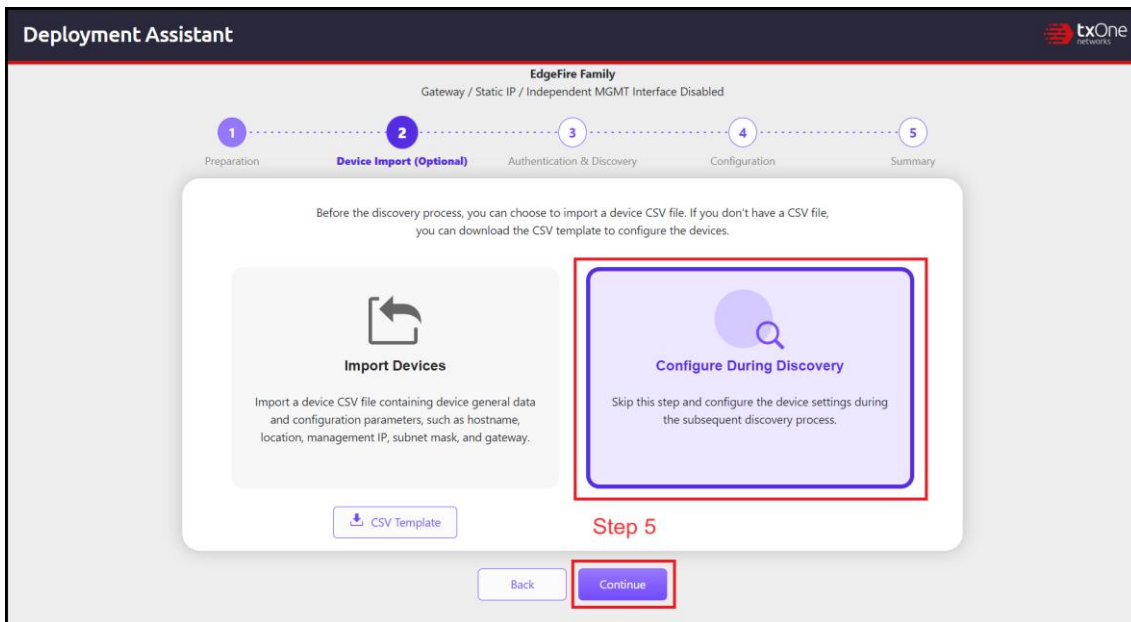


6. Enter the login credentials, then click **Continue**. The default login credentials are as follows.

- **User ID:** *admin*
- **Password:** *txone*

If you have restarted the deployment process, please use the User ID and password you previously set for authentication.

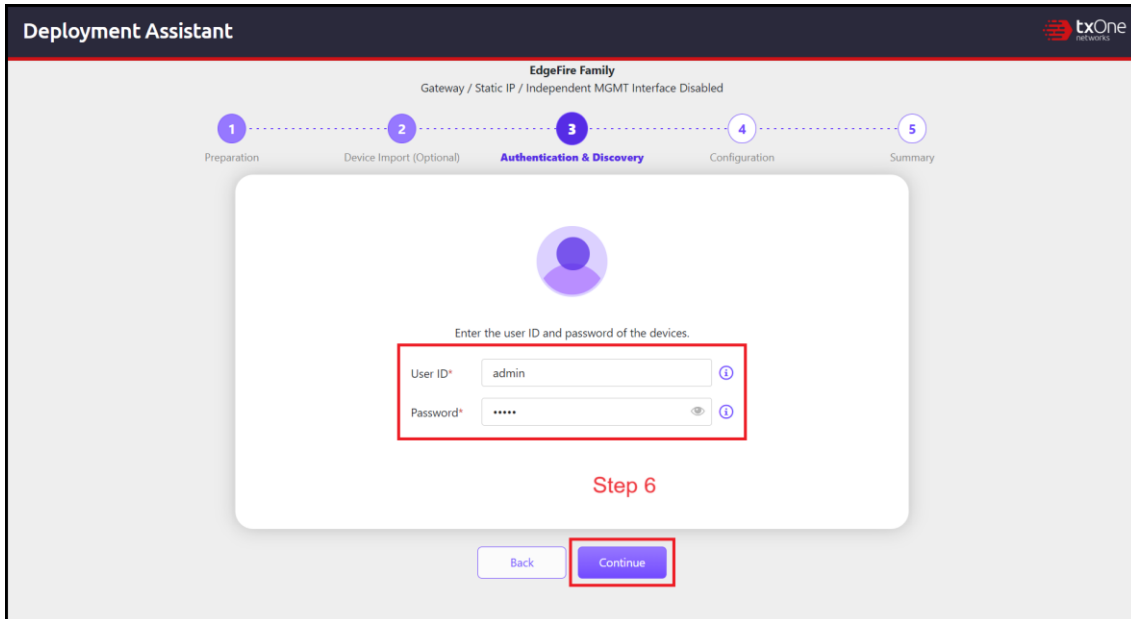


7. The Deployment Assistant starts to discover all your Edge devices. This may take a while. Please wait until the process is complete. To skip this process, click **Skip**.

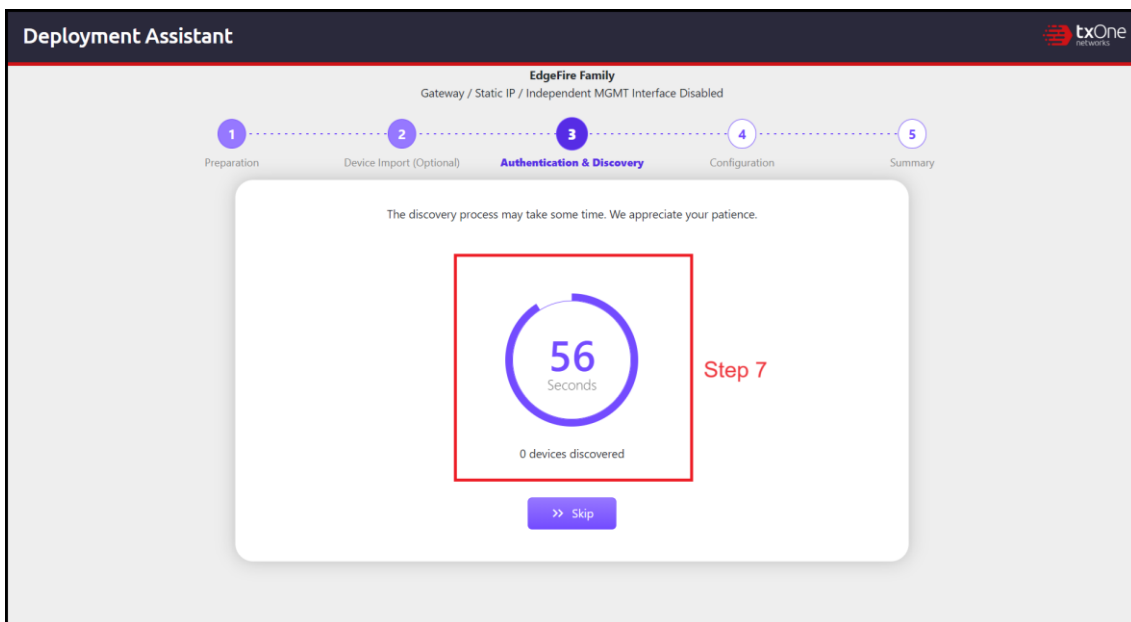

8. You will receive a notification once the discovery process is complete.

9. After the discovery process is complete, the Deployment Assistant lists the serial number, MAC address, and hostname of each discovered Edge device. Click **Continue**.

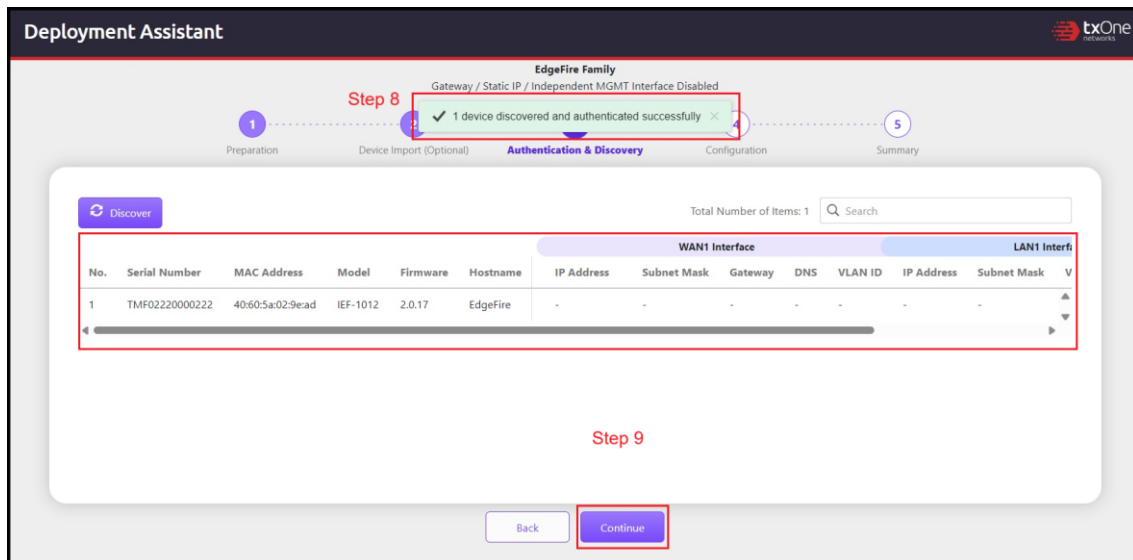

Deployment Assistant txOne networks

EdgeFire Family
Gateway / Static IP / Independent MGMT Interface Disabled

Step 8

✓ 1 device discovered and authenticated successfully ✕

Preparation Device Import (Optional) **Authentication & Discovery** Configuration Summary

Discover Total Number of Items: 1

No.	Serial Number	MAC Address	Model	Firmware	Hostname	WAN1 Interface					LAN1 Interface			
						IP Address	Subnet Mask	Gateway	DNS	VLAN ID	IP Address	Subnet Mask	V	
1	TMF02220000222	40:60:5a:02:9ead	IEF-1012	2.0.17	EdgeFire	-	-	-	-	-	-	-	-	-

Step 9

Back Continue


 If you want to discover devices once again, click **Discover**.

10. (Optional) If you would like to onboard Edge devices to EdgeOne, in the left pane, enter the IP address of the EdgeOne system that centrally manages these discovered devices. If the passcode authentication method is enabled in EdgeOne, click the **Passcode** toggle and enter the passcode specified in EdgeOne.

11. (Optional) In the right pane, click the **USB Application** toggle to enable this function, and click **Edit Syslog Settings** and **Edit SNMP Settings** to edit these settings for the discovered Edge devices.

 For more information about editing the advanced settings, see [Appendix A: Syslog Settings](#) and [Appendix B: SNMP Settings](#).

12. Once you are satisfied with the global settings, click **Continue**.

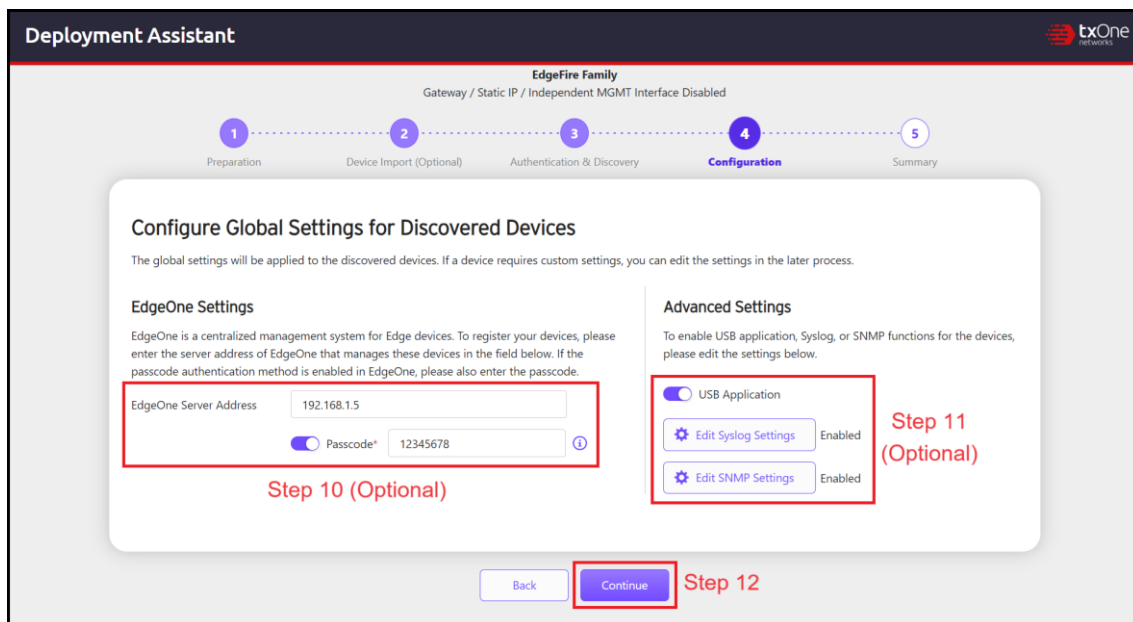

Deployment Assistant txOne networks

EdgeFire Family
Gateway / Static IP / Independent MGMT Interface Disabled

1 2 3 4 **5**

Preparation Device Import (Optional) Authentication & Discovery **Configuration** Summary

Configure Global Settings for Discovered Devices

The global settings will be applied to the discovered devices. If a device requires custom settings, you can edit the settings in the later process.

EdgeOne Settings

EdgeOne is a centralized management system for Edge devices. To register your devices, please enter the server address of EdgeOne that manages these devices in the field below. If the passcode authentication method is enabled in EdgeOne, please also enter the passcode.

EdgeOne Server Address

☒ Passcode*

Step 10 (Optional)

Advanced Settings

To enable USB application, Syslog, or SNMP functions for the devices, please edit the settings below.

☒ USB Application

Edit Syslog Settings Enabled



Edit SNMP Settings Enabled

Step 11 (Optional)

Back Continue **Step 12**

13. Configure the device setting values for each discovered device.

- **General Device Configuration Details**

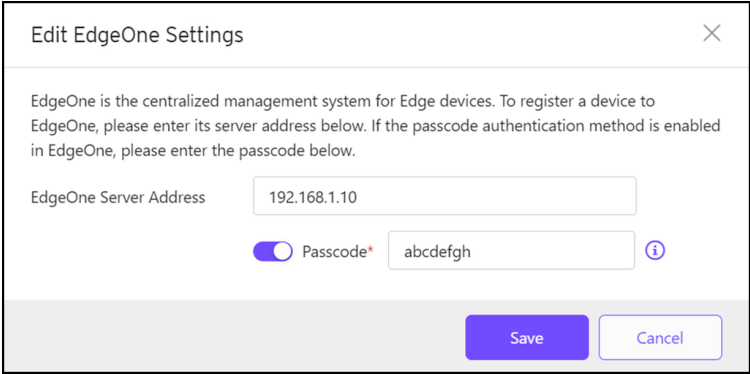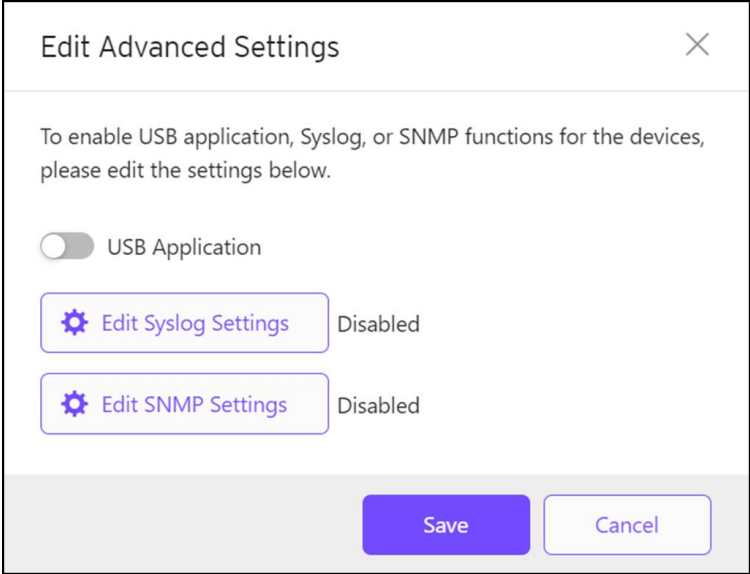Field	Description
Hostname	The name of the Edge device.
Location	(Optional) The location of the Edge device.
EdgeOne Settings Type	Select either Global Settings or Custom Settings. • Global Settings: Use the EdgeOne settings previously configured. • Custom Settings: Specify another EdgeOne IP address and passcode (if required) in the [Edit EdgeOne Settings] window as shown below. To modify the pre-configured custom settings, click :discovery_assistant_edit_custom_settings_button: . 
Advanced Settings Type	Select either Global Settings or Custom Settings. • Global Settings: Use the advanced settings previously configured. • Custom Settings: Enable or disable USB Application and configure Syslog and SNMP settings specific to this device in the [Edit Advanced Settings] window as shown below. To modify the pre-configured custom settings, click :discovery_assistant_edit_custom_settings_button: . 

Field	Description
	 For more information about editing the advanced settings, see Appendix A: Syslog Settings and Appendix B: SNMP Settings .

- **Independent MGMT Interface Details** (Applicable only when you **enable independent MGMT** in step 2.)

Field	Description
IP Address	The IP address of the independent MGMT interface.
Subnet Mask	The subnet mask of the independent MGMT interface.
Gateway	The IP address of the device gateway on the independent MGMT interface that sends packets to a different subnet.
DNS	(Optional) The DNS address of the independent MGMT interface.
VLAN ID	(Optional) The VLAN ID of the network traffic from the independent MGMT interface.

- **WAN1 Interface Details** (Applicable only when you select “**Gateway**” for the mode and “**Static IP**” for the connection type in step 2.)

Field	Description
IP Address	The IP address of the WAN1 interface.
Subnet Mask	The subnet mask of the WAN1 interface.
Gateway	The IP address of the device gateway on the WAN1 interface that sends packets to a different subnet.
DNS	(Optional) The DNS address of the WAN1 interface.
VLAN ID	(Optional) The VLAN ID of the network traffic from the WAN1 interface.

- **LAN1 Interface Details** (Applicable only when you select “**Gateway**” for the mode in step 2.)

Field	Description
IP Address	The IP address of the LAN1 interface.
Subnet Mask	The subnet mask of the LAN1 interface.
VLAN ID	(Optional) The VLAN ID of the network traffic from LAN1 interface.
DHCP Server	Select Disabled or Enabled . • Disabled: The device uses the user-defined device configuration details defined on this page. • Enabled: The device uses auto-generated device configuration details, including IP address and subnet mask, provided by a DHCP server.


Field	Description
	If Enabled is selected, further provide the following DHCP server details. Edit DHCP Server Start IP Address* End IP Address* Gateway* Lease Time* 86400 ⓘ DNS Server Save Cancel • Start IP Address: Input a start IP address to define the beginning of the IP range that the DHCP server can assign to the device. • End IP Address: Input an end IP address to define the end of the IP range that the DHCP server can assign to the device. • Gateway: Input a gateway IP address that the device uses. • Lease Time: Input a length of time (unit: seconds) for which the DHCP lease is valid. Once the lease time expires, the device will have to request new network setting details from the DHCP server. • DNS Server: (Optional) Input an IP address of the DNS server that the device uses.

- **Bridge Port Details** (Applicable only when you select “**Bridge**” for the mode and **disable independent MGMT** in step 2.)

Field	Description
IP Address	The IP address of the bridge port.
Subnet Mask	The subnet mask of the bridge port.
Gateway	The IP address of the device gateway on the bridge port that sends packets to a different subnet.
DNS	(Optional) The DNS address of the bridge port.

14. (Optional) To edit global settings for all devices, click **Edit Global Settings**.

15. Click **Continue** after you have configured all the device setting values.

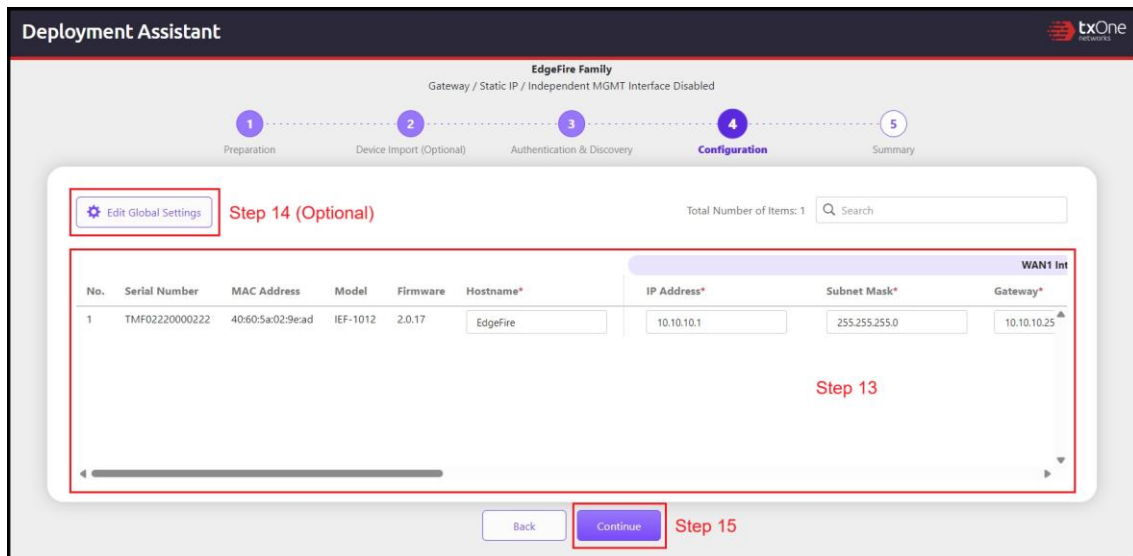

Deployment Assistant txOne networks

EdgeFire Family
Gateway / Static IP / Independent MGMT Interface Disabled

1 Preparation 2 Device Import (Optional) 3 Authentication & Discovery 4 **Configuration** 5 Summary


[Edit Global Settings](#)
Step 14 (Optional)
Total Number of Items: 1

No.	Serial Number	MAC Address	Model	Firmware	Hostname*	IP Address*	Subnet Mask*	Gateway*	WAN1 Int
1	TMF02220000222	40:60:5a:02:9ead	IEF-1012	2.0.17	EdgeFire	10.10.10.1	255.255.255.0	10.10.10.25	

Step 13

Back
Continue
Step 15

16. Click **Continue** to implement these settings to the discovered devices.

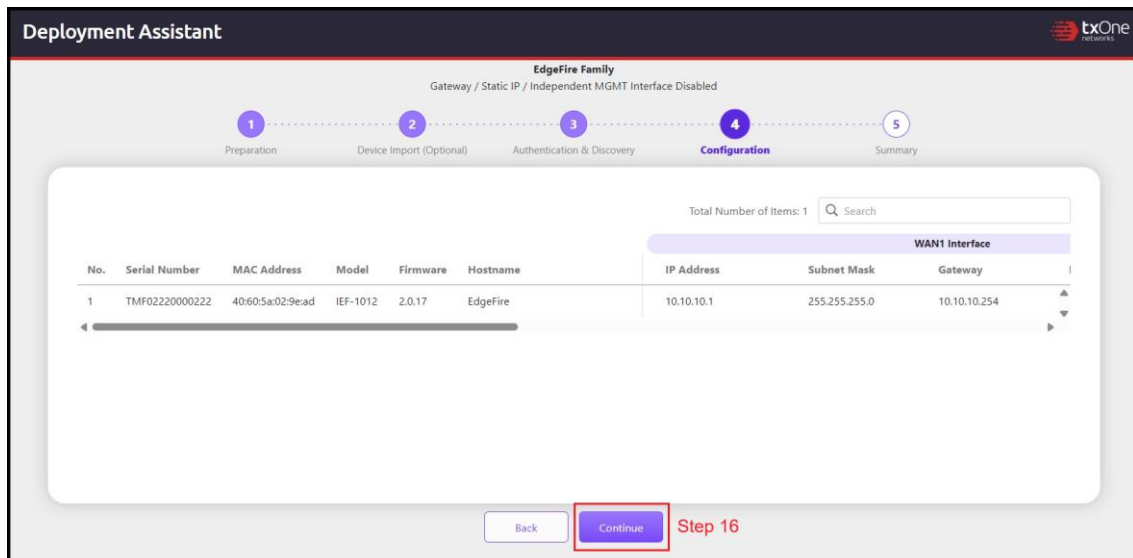

Deployment Assistant txOne networks

EdgeFire Family
Gateway / Static IP / Independent MGMT Interface Disabled

1 Preparation 2 Device Import (Optional) 3 Authentication & Discovery 4 **Configuration** 5 Summary


Step 16
Total Number of Items: 1

No.	Serial Number	MAC Address	Model	Firmware	Hostname	WAN1 Interface		
						IP Address	Subnet Mask	Gateway
1	TMF02220000222	40:60:5a:02:9ead	IEF-1012	2.0.17	EdgeFire	10.10.10.1	255.255.255.0	10.10.10.254

Back
Continue

17. If this is the first time you configure the devices, you will be prompted to change the default login credentials and accept our End User License Agreement before Deployment Assistant implements the setting values to the devices. Enter a new user ID and password to change the default login credentials, then click **Apply**.

- **New Login Name (ID):** Enter your new user ID for the admin account.
- **New Password:** Enter your new password for the admin account.
- **Confirm Password:** Enter the new password again for confirmation.

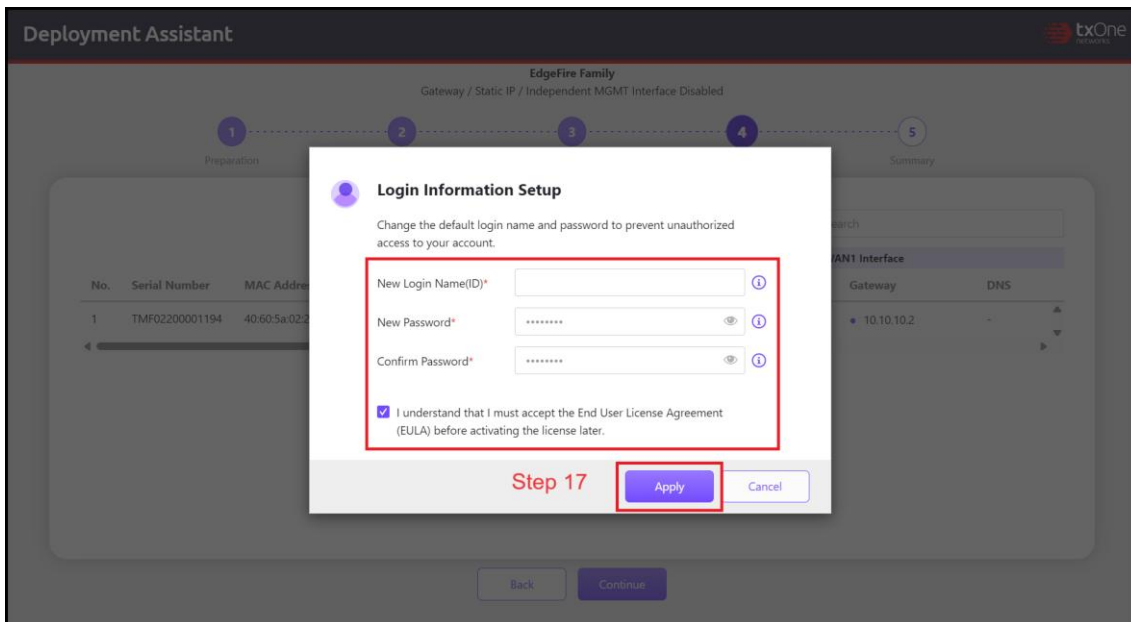


 Changing the User ID and password is only required during the initial deployment process. If the process is restarted, you will not need to change them.

18. You will receive a notification once the settings are implemented successfully.

19. Click **Export Configuration Details** to save an Excel file containing the device configuration details to your local storage.

20. Click **Finish** to exit.

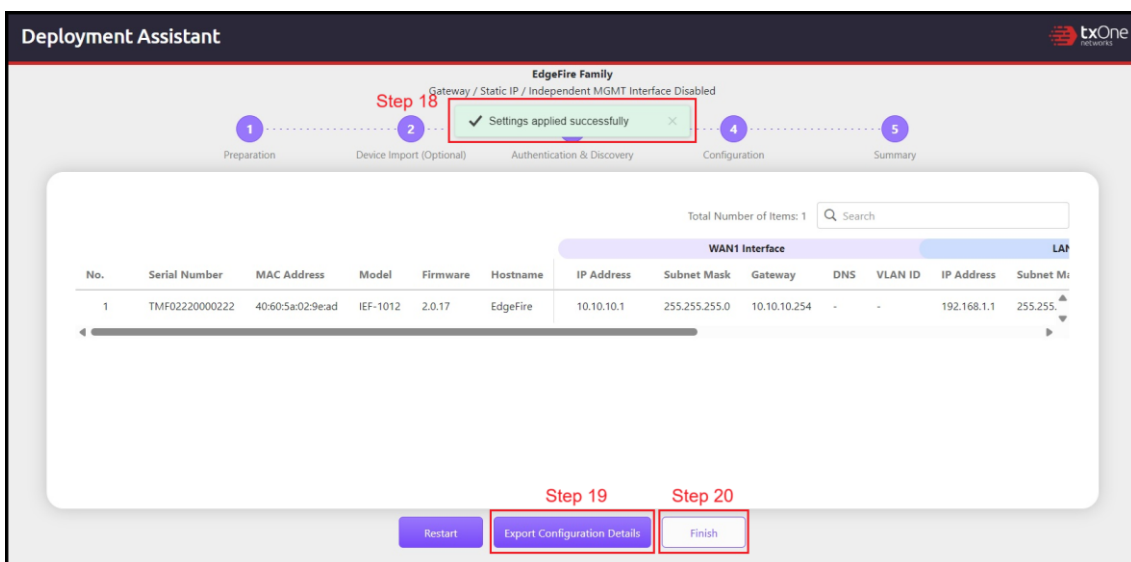


6 Appendix A: Syslog Settings

Edge series devices maintain Syslog events that provide summaries of security and system events. Common Event Format (CEF) and Log Event Extended Format (LEEF) syslog messages are used in the devices.

Configure the Syslog settings to allow the discovered devices to send logs to a Syslog server.

6.1 Configuring Syslog Settings

Procedure

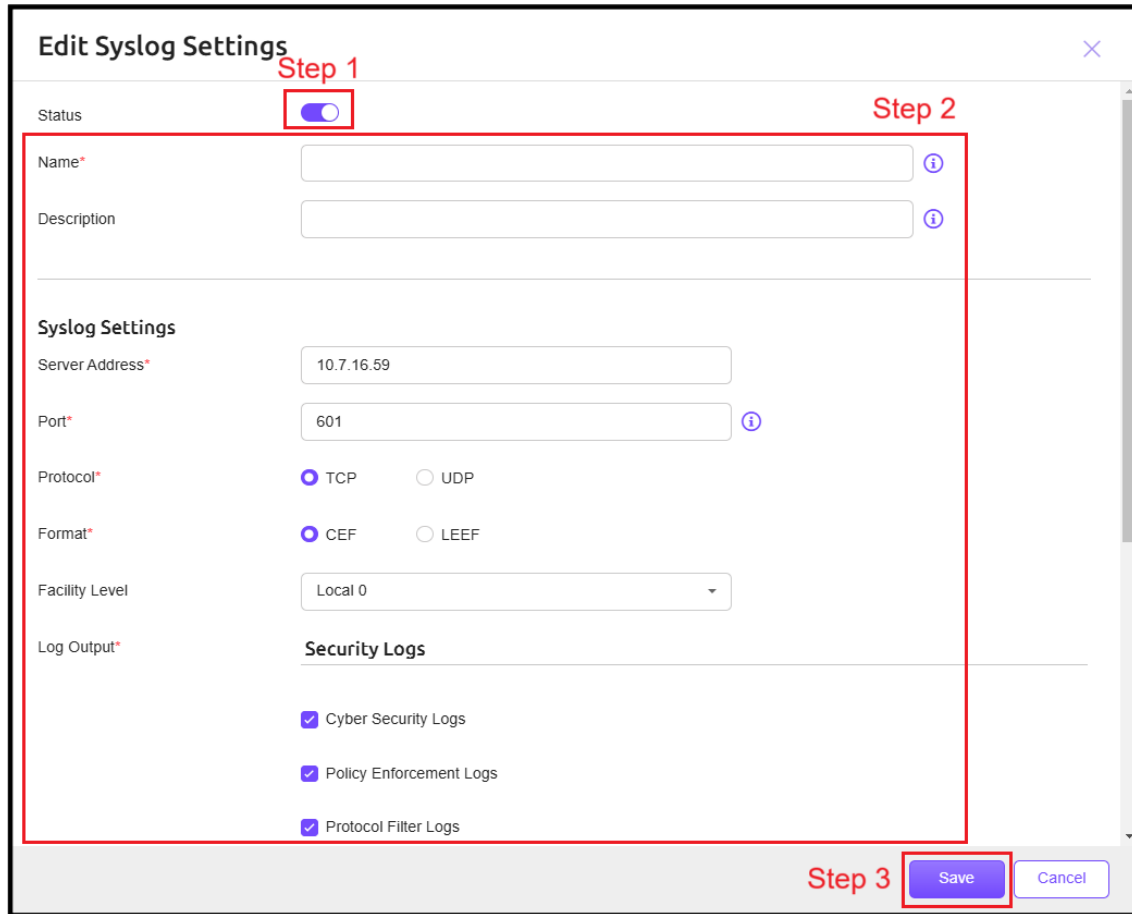

1. Click the toggle to enable the Syslog function.

2. Configure the following settings.

Field	Description
Name	Type a name for this Syslog profile.
Description	(Optional) Type a description.
Server Address	Type the IP address of the Syslog server.
Port	Type the port number.
Protocol	Select a protocol for the communication.

Field	Description
Format	Select a Syslog format, either CEF or LEEF.
Facility Level	Select a facility level to determine the source and priority of the logs.
Log Level	Select a Syslog severity level. EdgeOne only sends logs with the selected severity level or higher to the Syslog server.  For more information, see Syslog Severity Levels.
Log Output	Select the types of logs to send.

3. Click **Save**.

6.2 Syslog Severity Levels

The Syslog severity level specifies the type of messages to be sent to a Syslog server.


Level	Severity	Description
0	Emergency	Complete system failure Take immediate action.
1	Alert	Primary system failure Take immediate action.
2	Critical	Urgent failure Take immediate action.
3	Error	Non-urgent failure Resolve issues quickly.
4	Warning	Error pending Take action to avoid errors.
5	Notice	Unusual events Immediate action is not required.
6	Informational	Normal operational messages useful for reporting, measuring throughput, and other purposes No action is required.
7	Debugging	Useful information when debugging the application.  Setting the debugging level can lead to a large amount of Syslog traffic in a busy network. Use with caution.

7 Appendix B: SNMP Settings

The Simple Network Management Protocol (SNMP) is a protocol used for exchanging management information between an Edge series device and its management console. Edge series devices support SNMPv1/v2c and a more secure v3, as well as SNMP traps.

7.1 Configuring SNMP v1/v2c

Procedure

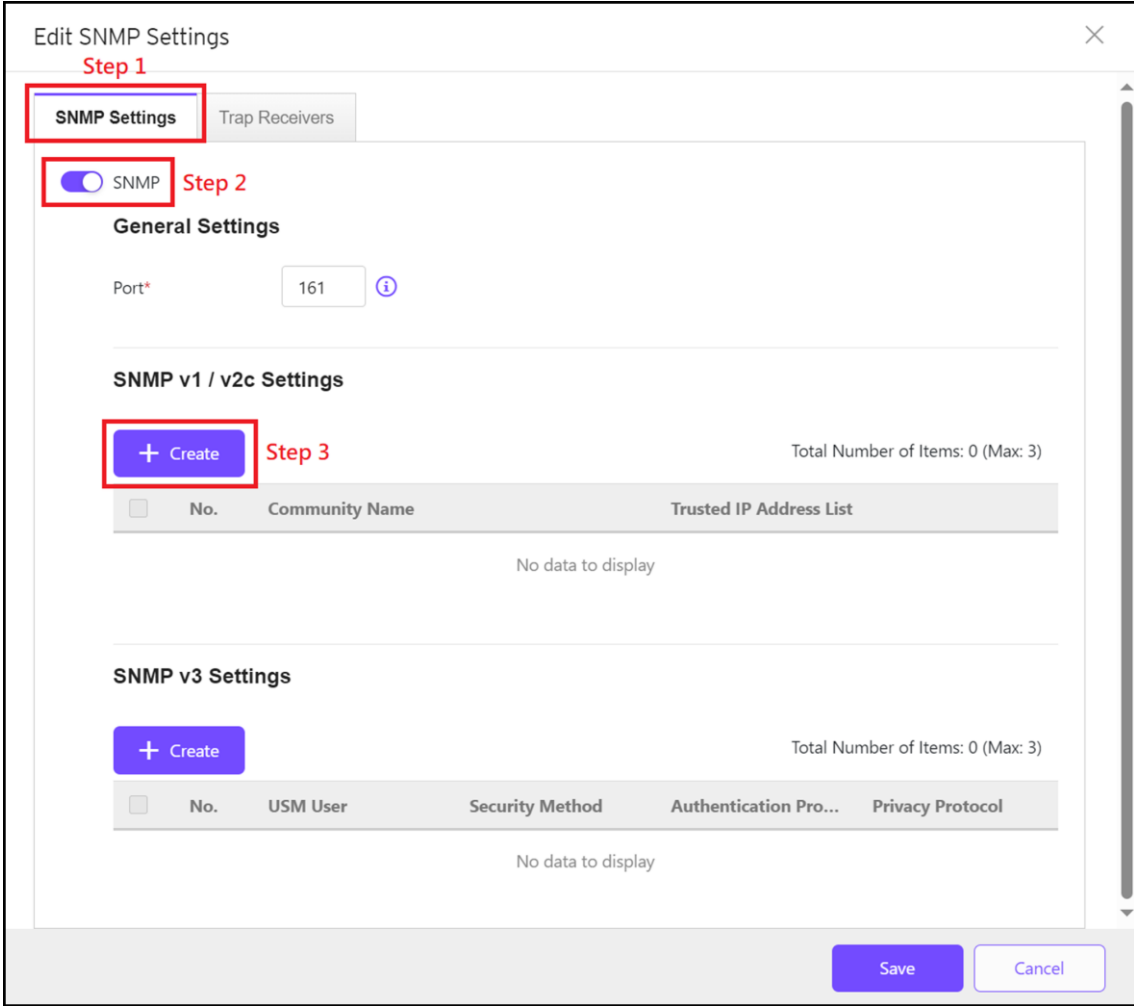

The screenshot shows the 'Edit SNMP Settings' window with the following elements:

- Step 1:** The 'SNMP Settings' tab is selected.
- Step 2:** The 'SNMP' toggle switch is turned on.
- General Settings:** The 'Port' is set to 161.
- SNMP v1 / v2c Settings:**
 - A '+ Create' button is highlighted.
 - A table with columns: No., Community Name, Trusted IP Address List.
 - Text: 'Total Number of Items: 0 (Max: 3)' and 'No data to display'.
- SNMP v3 Settings:**
 - A '+ Create' button is present.
 - A table with columns: No., USM User, Security Method, Authentication Pro..., Privacy Protocol.
 - Text: 'Total Number of Items: 0 (Max: 3)' and 'No data to display'.
- Buttons:** 'Save' and 'Cancel' buttons at the bottom right.

1. Navigate to [SNMP Settings] tab.
2. Click the [SNMP] toggle to enable the SNMP function.
3. In the [SNMP v1/v2c Settings] pane, do one of the following.
 - Click **Create** to create an SNMP v1/v2c community. The [Create Community] window will appear.
 - Click an SNMP v1/v2c community name. The [Edit Community] window will appear.

Create Community

Step 4

Community Name* i

Trusted IP Address List i (Max: 3)

No.1

Single IP ▼

+

Step 5

OK

Cancel


4. Configure the following settings.

Item	Description
Community Name	Input an SNMP v1/v2c community name.
Trusted IP Address List	Specify an IP address or an IP subnet. Click the add button :DA_add_IP_button: to add another entry, or the remove button :DA_remove_IP_button: to remove an entry.

5. Click **OK**.

7.2 Configuring SNMP v3

Procedure

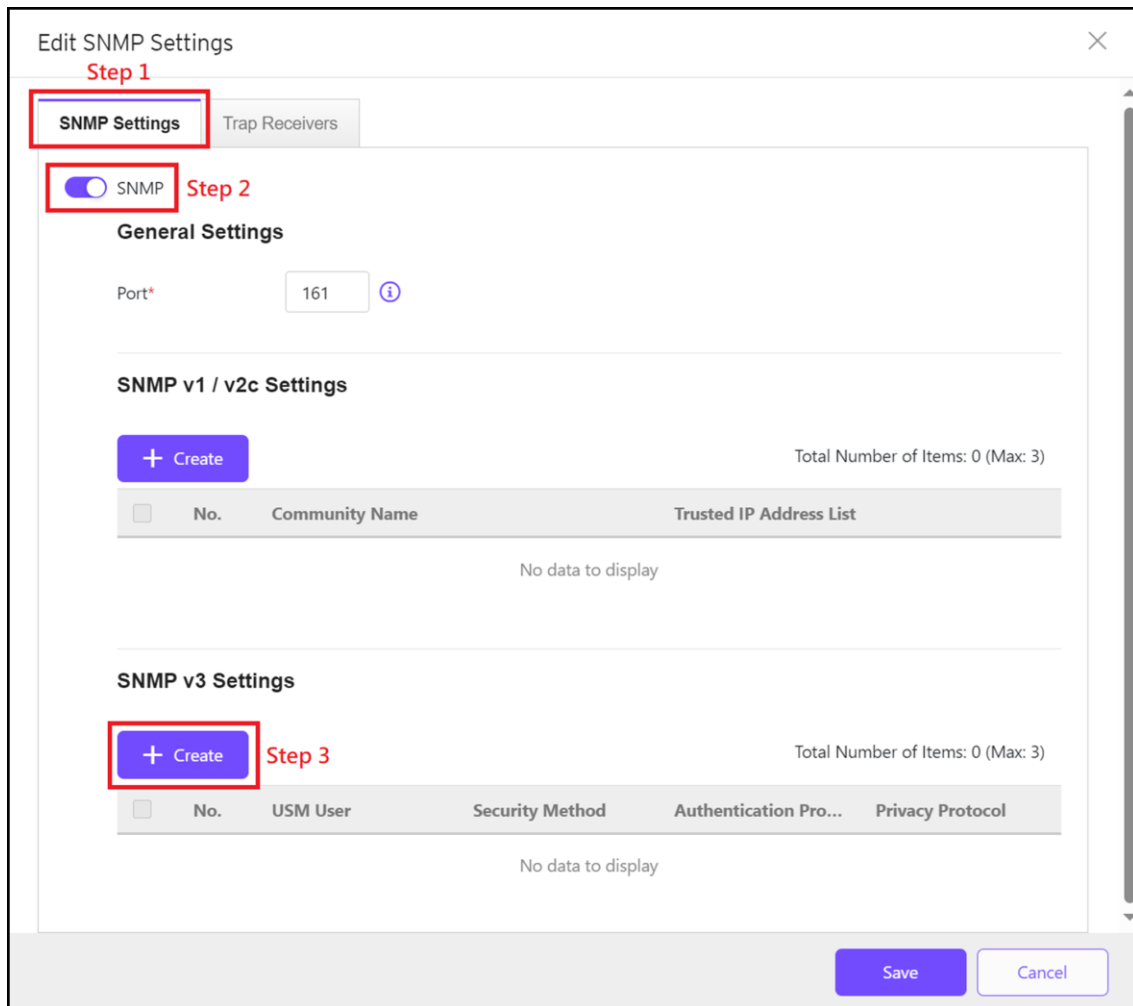

Edit SNMP Settings

Step 1

SNMP Settings Trap Receivers

SNMP Step 2

General Settings

Port* 161

SNMP v1 / v2c Settings

+ Create Total Number of Items: 0 (Max: 3)

No.	Community Name	Trusted IP Address List
No data to display		

SNMP v3 Settings

+ Create Step 3 Total Number of Items: 0 (Max: 3)

No.	USM User	Security Method	Authentication Pro...	Privacy Protocol
No data to display				

Save Cancel

1. Navigate to [SNMP Settings] tab.
2. Click the [SNMP] toggle to enable the SNMP function.
3. In the [SNMP v3 Settings] pane, do one of the following.
 - Click **Create** to create an SNMP v3 USM user. The [Create USM User] window will appear.
 - Click an SNMP v3 USM username. The [Edit USM User] window will appear.

Create USM User

Step 4

USM User*

i

Security Method

No Authentication or Privacy

Step 5

OK

Cancel


4. Configure the following settings.

Item	Description
USM User	Input an SNMP v3 USM username.
Security Method	Select one of the following options. - No Authentication or Privacy - Authentication without Privacy: Further select an appropriate authentication protocol (SHA or MD5) and enter an authentication key. - Authenticaiton with Privacy: Further select an appropriate authentication protocol (SHA or MD5), enter an authentication key, select an appropriate privacy protocol (AES or DES), and enter a privacy key.


5. Click **OK**.

7.3 Configuring SNMP Trap Receivers for EdgeIPS/EdgeIPS LE

Procedure

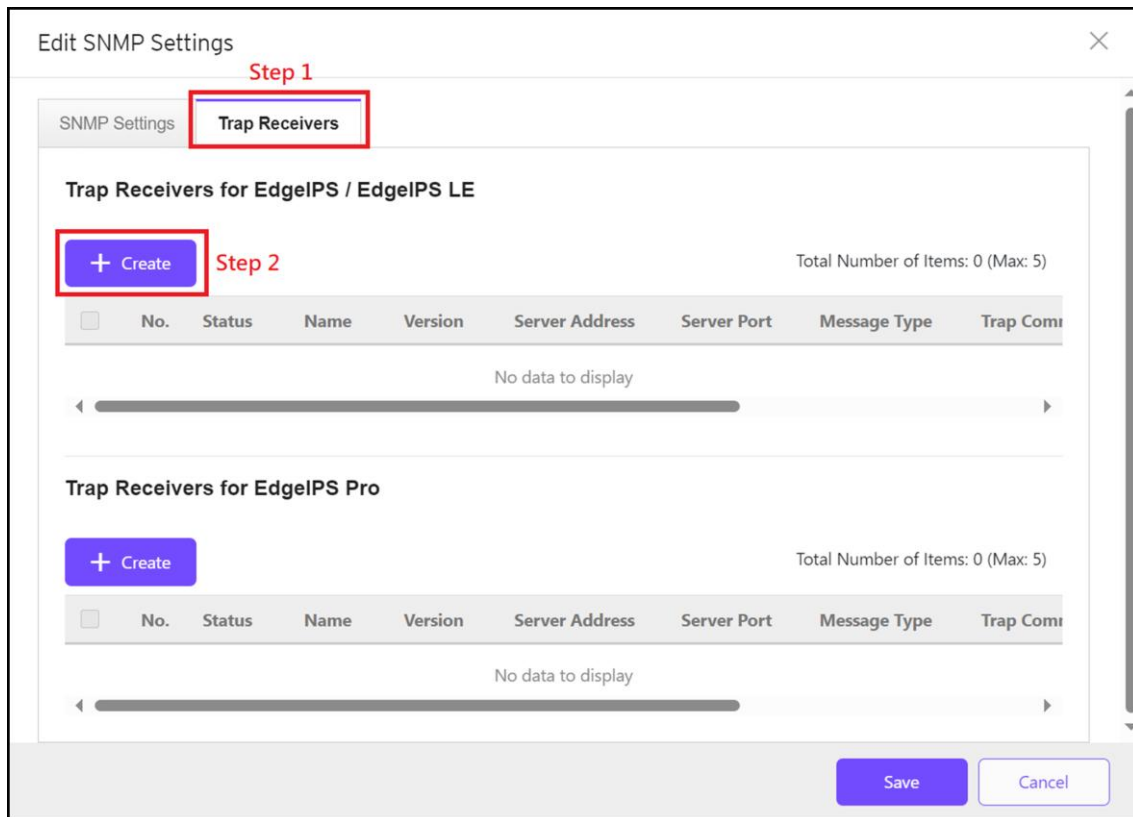

1. Navigate to [Trap Receivers] tab.
2. In the [Trap Receivers for EdgeIPS/EdgeIPS LE] pane, do one of the following.
 - Click **Create** to create a new trap receiver. The [Create Trap Receiver] window will appear.
 - Click a trap receiver item. The [Edit Trap Receiver] window will appear.

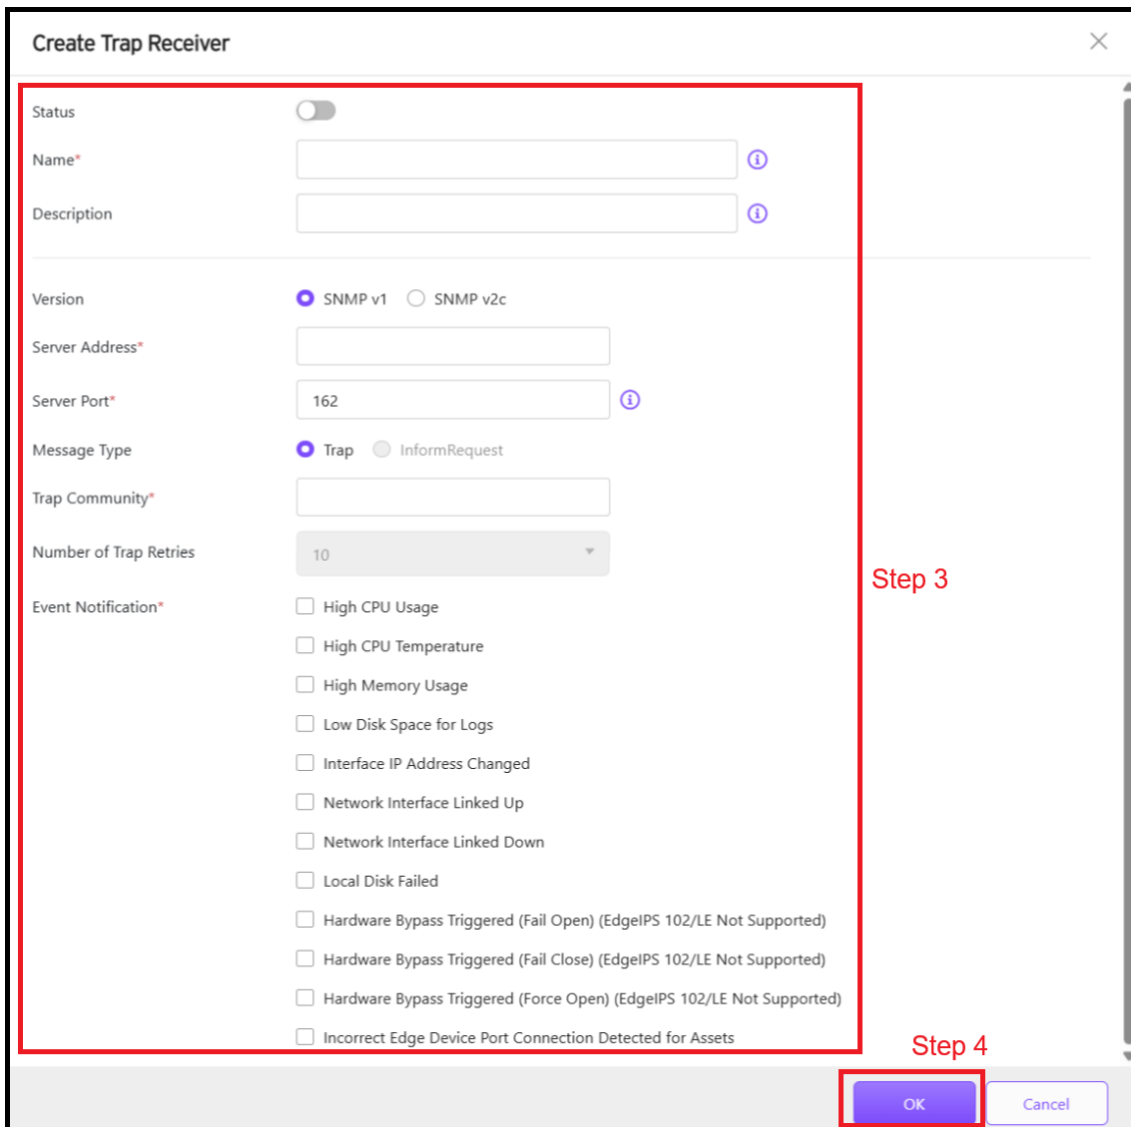

Create Trap Receiver

Status ☐

Name*

Description

Version ☒ SNMP v1 ☐ SNMP v2c

Server Address*

Server Port*

Message Type ☒ Trap ☐ InformRequest

Trap Community*

Number of Trap Retries

Event Notification*

- ☐ High CPU Usage
- ☐ High CPU Temperature
- ☐ High Memory Usage
- ☐ Low Disk Space for Logs
- ☐ Interface IP Address Changed
- ☐ Network Interface Linked Up
- ☐ Network Interface Linked Down
- ☐ Local Disk Failed
- ☐ Hardware Bypass Triggered (Fail Open) (EdgeIPS 102/LE Not Supported)
- ☐ Hardware Bypass Triggered (Fail Close) (EdgeIPS 102/LE Not Supported)
- ☐ Hardware Bypass Triggered (Force Open) (EdgeIPS 102/LE Not Supported)
- ☐ Incorrect Edge Device Port Connection Detected for Assets

Step 3

Step 4

OK **Cancel**

3. Configure the following trap receiver settings.


Item	Description
Status	Enable this trap receiver by clicking the toggle.
Name	Type a name for this trap receiver.
Description	(Optional) Type a description.
Version	Select an SNMP version, SNMP v1 or SNMP v2c.
Server Address	Input a server IP address.
Server Port	Input a server port. The default server port is 162.
Message Type	If you selected SNMP v2c for [Version], further select a message type, Trap or InformRequest.
Trap Community	Input a trap community name.
Number of Trap Retries	If you selected InformRequest for [Message Type], further set the number of trap retries ranging from 1 to 10.
Event Notification	Select what will trigger an event notification.

Item	Description
	 1. If “High CPU Usage” is selected, the system will send an event notification when the CPU usage reaches 70%, 80%, or 95%. 2. If “High Memory Usage” is selected, the system will send an event notification when the memory usage reaches 80%. 3. If “Low Disk Space for Logs” is selected, the system will send an event notification when the disk space for log storage reaches 95%.

4. Click **OK**.

7.4 Configuring SNMP Trap Receivers for EdgeIPS Pro

Procedure

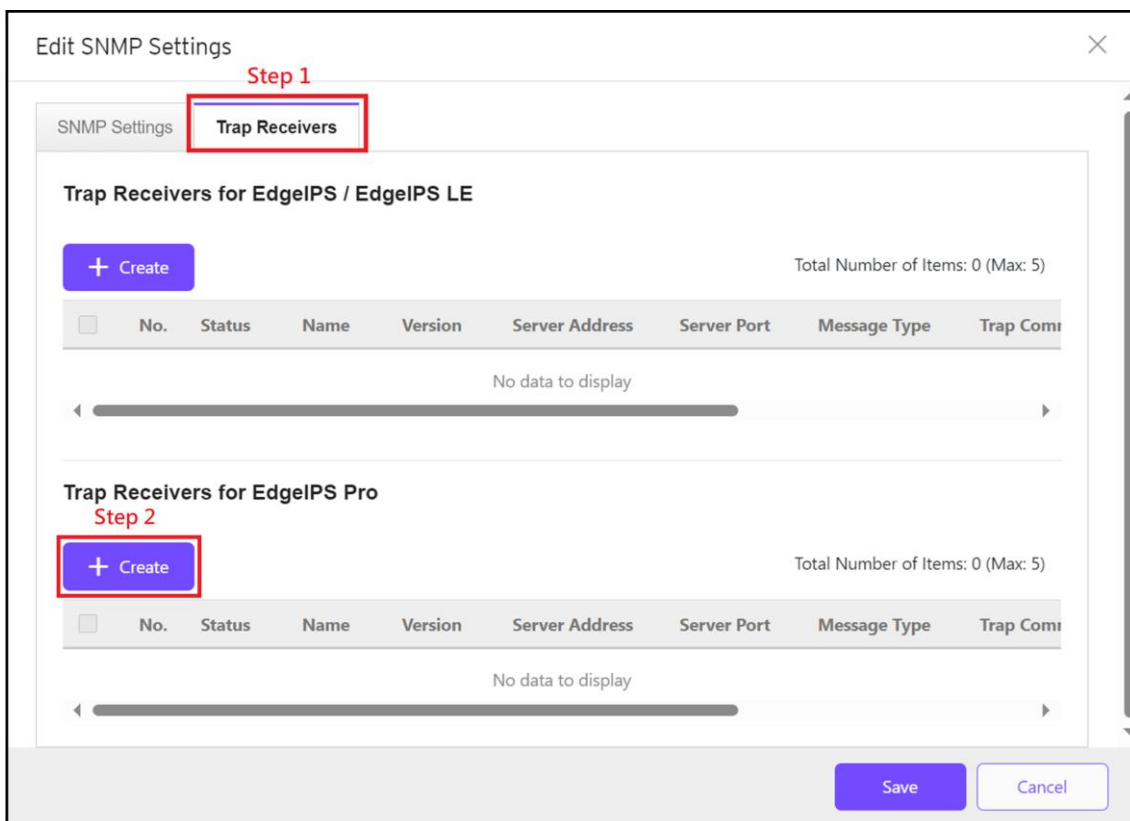

1. Navigate to [Trap Receivers] tab.
2. In the [Trap Receivers for EdgeIPS Pro] pane, do one of the following.
 - Click **Create** to create a new trap receiver. The [Create Trap Receiver] window will appear.
 - Click a trap receiver item. The [Edit Trap Receiver] window will appear.

Create Trap Receiver

Status ☐

Name* ⓘ

Description ⓘ

Version ☒ SNMP v1 ☐ SNMP v2c

Server Address*

Server Port* ⓘ

Message Type ☒ Trap ☐ InformRequest

Trap Community*

Number of Trap Retries

Event Notification*

- ☐ High CPU Usage
- ☐ High CPU Temperature
- ☐ High Memory Usage
- ☐ Low Disk Space for Logs
- ☐ Interface IP Address Changed
- ☐ Network Interface Linked Up
- ☐ Network Interface Linked Down
- ☐ HA Heartbeat Failed
- ☐ Fan Failed (EdgeIPS Pro 216/212F Not Supported)
- ☐ Power Failed (EdgeIPS Pro 216/212F Not Supported)
- ☐ Local Disk Failed
- ☐ Universal Bypass Triggered (GEN1 Not Supported)
- ☐ Logical Port Pairs Failed
- ☐ Hardware Bypass Triggered (Fail Open)
- ☐ Hardware Bypass Triggered (Fail Close)
- ☐ Hardware Bypass Triggered (Force Open)
- ☐ Incorrect Edge Device Port Connection Detected for Assets

Step 3

Step 4

OK Cancel

3. Configure the following trap receiver settings.


Item	Description
Status	Enable this trap receiver by clicking the toggle.
Name	Type a name for this trap receiver.
Description	(Optional) Type a description.
Version	Select an SNMP version, SNMP v1 or SNMP v2c.
Server Address	Input a server IP address.
Server Port	Input a server port. The default server port is 162.
Message Type	If you selected SNMP v2c for [Version], further select a message type, Trap or InformRequest.

Item	Description
Trap Community	Input a trap community name.
Number of Trap Retries	If you selected InformRequest for [Message Type], further set the number of trap retries ranging from 1 to 10.
Event Notification	Select what will trigger an event notification.  1. If “High CPU Usage” is selected, the system will send an event notification when the CPU usage reaches 70%. 2. If “High Memory Usage” is selected, the system will send an event notification when the memory usage reaches 80%. 3. If “Low Disk Space for Logs” is selected, the system will send an event notification when the disk space for log storage reaches 95%.

4. Click **OK**.


7.5 Configuring SNMP Trap Receivers for EdgeFire

Procedure

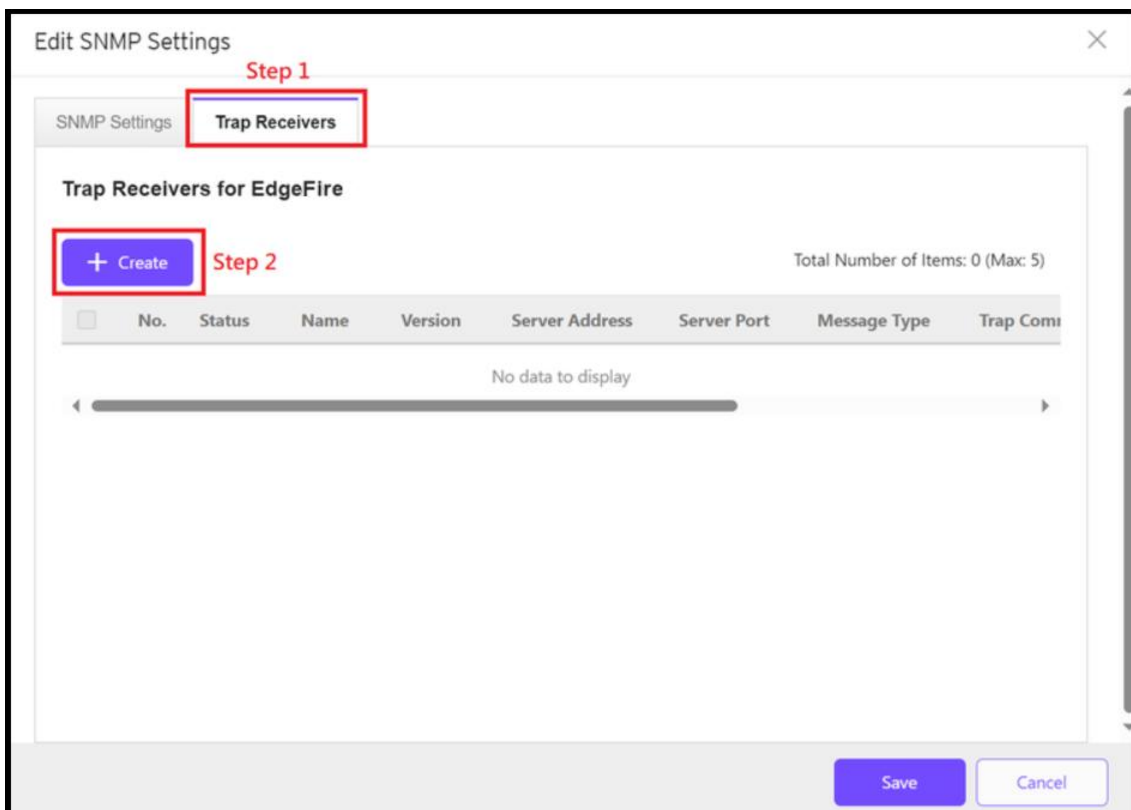

1. Navigate to [Trap Receivers] tab.
2. In the [Trap Receivers for EdgeFire] pane, do one of the following.
 - Click **Create** to create a new trap receiver. The [Create Trap Receiver] window will appear.

- Click a trap receiver item. The [Edit Trap Receiver] window will appear.

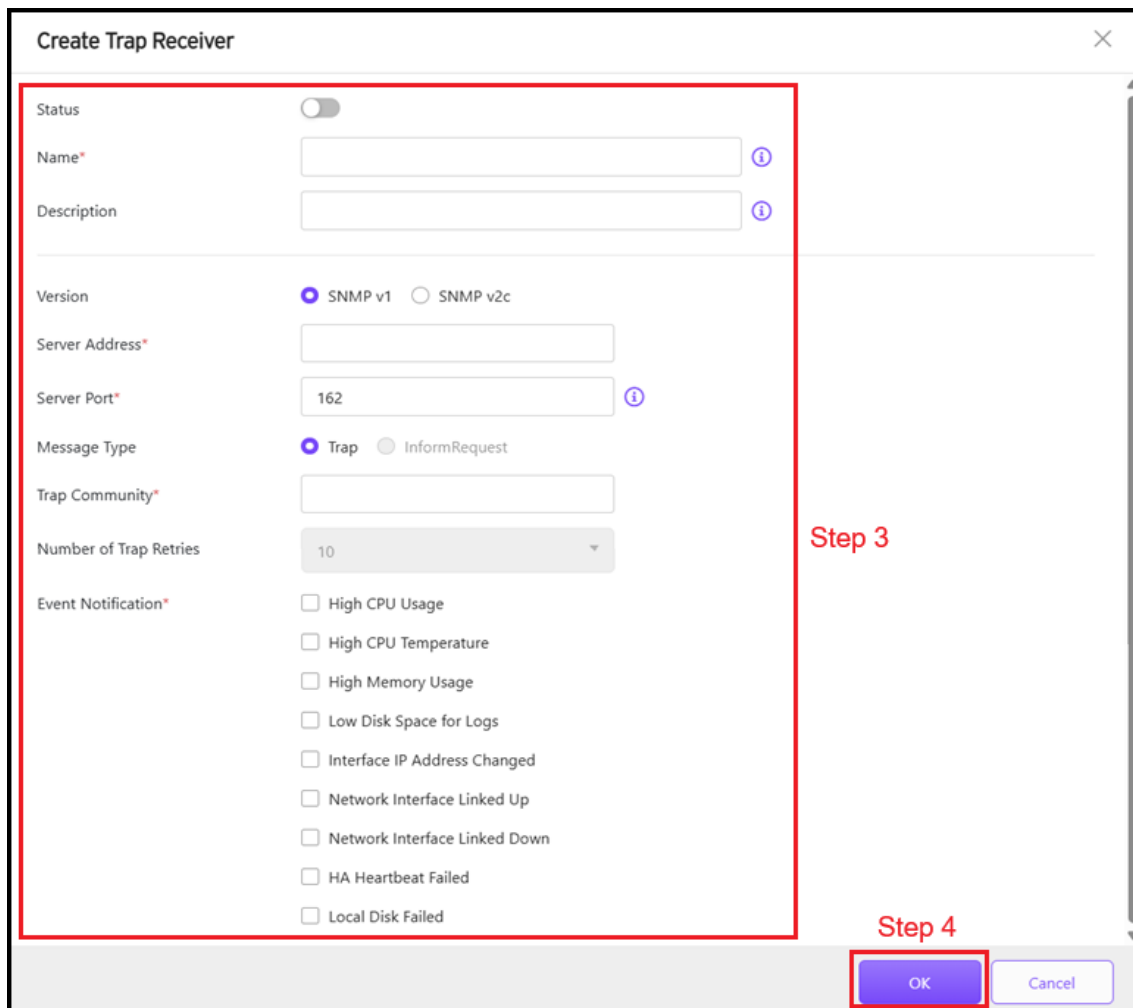

3. Configure the following trap receiver settings.

Item	Description
Status	Enable this trap receiver by clicking the toggle.
Name	Type a name for this trap receiver.
Description	(Optional) Type a description.
Version	Select an SNMP version, SNMP v1 or SNMP v2c.
Server Address	Input a server IP address.
Server Port	Input a server port. The default server port is 162.
Message Type	If you selected SNMP v2c for [Version], further select a message type, Trap or InformRequest.
Trap Community	Input a trap community name.
Number of Trap Retries	If you selected InformRequest for [Message Type], further set the number of trap retries ranging from 1 to 10.
Event Notification	Select what will trigger an event notification.

Item	Description
	 1. If “High CPU Usage” is selected, the system will send an event notification when the CPU usage reaches 70%, 80%, or 95%. 2. If “High Memory Usage” is selected, the system will send an event notification when the memory usage reaches 80%. 3. If “Low Disk Space for Logs” is selected, the system will send an event notification when the disk space for log storage reaches 95%.

4. Click **OK**.