



Command-Line Interface Manual

Version 2.2

March 24, 2026

TXOne Networks Incorporated reserves the right to make changes to this document and to the product described herein without notice. Before installing and using the product, review the readme files, release notes, and/or the latest version of the applicable documentation, which are available at <https://my.txone.com>.

TXOne Networks is a registered trademark of TXOne Networks Incorporated. All other product names may be trademarks or registered trademarks of their owners.

In order to protect the value of TXOne Networks' logos and marks, it is very important that they be used appropriately and only by TXOne Networks and Partners with a current and valid partnership agreement.

The following marks are owned exclusively by TXOne Networks and may be registered in the U.S. or other countries. TXOne Networks reserves the right in its sole discretion to add additional marks to or remove marks from this list at any time and the failure of a TXOne trademark or logo to appear on this list shall not be construed as a waiver of any of TXOne Networks' rights in such trademark or logo.

- EdgeIPS
- EdgeIPS Pro
- EdgeIPS LE
- EdgeFire
- EdgeOne
- OT Defense Console

Trademark ownership is attributed in two ways, with the use of a trademark symbol (such as [™] or ®) after the trademark, and with a trademark legend, usually found at the end of a document in legible text following the copyright notice. Whenever you use one of TXOne trademarks, you must also include a proper trademark attribution statement somewhere on the same document or webpage, such as the following: "The TXOne Networks® and EdgeIPS[™] trademarks are owned by TXOne Networks, Inc. and is used with permission." Remember, mere inclusion of a trademark symbol and legend does not entitle you to use a TXOne trademark.

Data Security Warning

Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:

- manually resetting the product to factory settings, or
- handing the product to the TXOne support team, who will help you clear all stored data and configurations.

TXOne Support Team Contact Information

- Email: support@txone.com
- Website: <https://www.txone.com/>
- Call Center: <https://help.txone.com/>
- Phone:
 - US: +1 3465867975
 - Netherland: +31 402310122
 - Taiwan: +886 227727512

Table of Contents

1	Getting Started	5
1.1	Opening the CLI Management Console	5
2	System Information.....	7
3	Device.....	10
3.1	Viewing Network Settings.....	10
3.2	Configuring Network Settings	10
3.3	Viewing Fiber Port Information	11
4	Network	13
4.1	Viewing Network Interface Settings.....	13
4.2	Configuring Network Interface Settings	13
4.3	Viewing Operation Mode Settings	16
4.4	Configuring Operation Mode Settings	17
5	NAT	19
5.1	Viewing NAT Rules.....	19
5.2	Configuring NAT Rules.....	19
6	Routing.....	24
6.1	Viewing Static Routes.....	24
6.2	Configuring Static Routes	24
7	Object Profiles.....	26
7.1	Viewing IP Object Profiles	26
7.2	Configuring IP Object Profiles	27
7.3	Viewing Service Object Profiles	28
7.4	Configuring Service Object Profiles.....	29
7.5	Viewing Antivirus Profiles	31
7.5.1	Viewing File Exception Settings	31
7.6	Configuring Antivirus Profiles	31
7.6.1	Configuring File Exception Settings	33
8	Security	35
8.1	EdgeIPS Pro	35
8.1.1	Viewing Policy Enforcement Rule Sets	35
8.1.2	Viewing Policy Enforcement Rules.....	35
8.1.3	Configuring Policy Enforcement Rule Sets and Rules	36
8.1.4	Viewing Port Security	39
8.1.5	Configuring Port Security	40
8.2	EdgeIPS, EdgeIPS LE, EdgeFire	44
8.2.1	Viewing Policy Enforcement Rules	44
8.2.2	Configuring Policy Enforcement Rules.....	45
9	Administration.....	52
9.1	Viewing Device Name and Device Location Information	52
9.2	Configuring Device Name and Device Location Information.....	52
9.3	Viewing Management Protocols and Ports	53
9.4	Configuring Management Protocols and Ports	54
9.5	Viewing Access Control List	55
9.6	Configuring Access Control List	55
9.7	Viewing EdgeOne Connection Status	56
9.8	Configuring EdgeOne Connection Settings.....	57
9.9	Viewing SNMP Settings and Traps	57
9.10	Configuring SNMP Settings	58
9.11	Configuring SNMP Trap Settings.....	61
9.12	Viewing NTP Settings	64
9.13	Configuring NTP Settings	65
9.14	Syncing NTP Server	65
9.15	Viewing Time Zone Settings	66

9.16	Configuring Time Zone Settings	66
9.17	Configuring System Time Settings	67
9.18	Using MTR (My Traceroute) Tools	68
9.19	System Reboot	69
9.20	System Power Off	69
9.21	Viewing Device Firmware Information	69
9.22	Switching Firmware Partition	70
10	Appendix A: Edge Series Product Feature Matrix	72

1 Getting Started

This chapter describes Edge series and how to get started with configuring Command-Line Interface (CLI) settings. Edge series v2.0 that currently supports CLI commands includes EdgeIPS, EdgeIPS Pro, EdgeIPS LE, and EdgeFire.

1.1 Opening the CLI Management Console

Edge series provide a built-in management CLI management interface that you can use to configure and manage the products. Operate the CLI management interface with Telnet or SSH terminal software.




To remotely access the CLI management interface, please log in to the Edge device web console and go to [Administration] > [System Management] and enable “Telnet” or “SSH” in the [Management Method] pane.

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. In a telnet or SSH terminal software (such as PuTTY), type the IP address of Edge series in the following format:

192.168.127.254

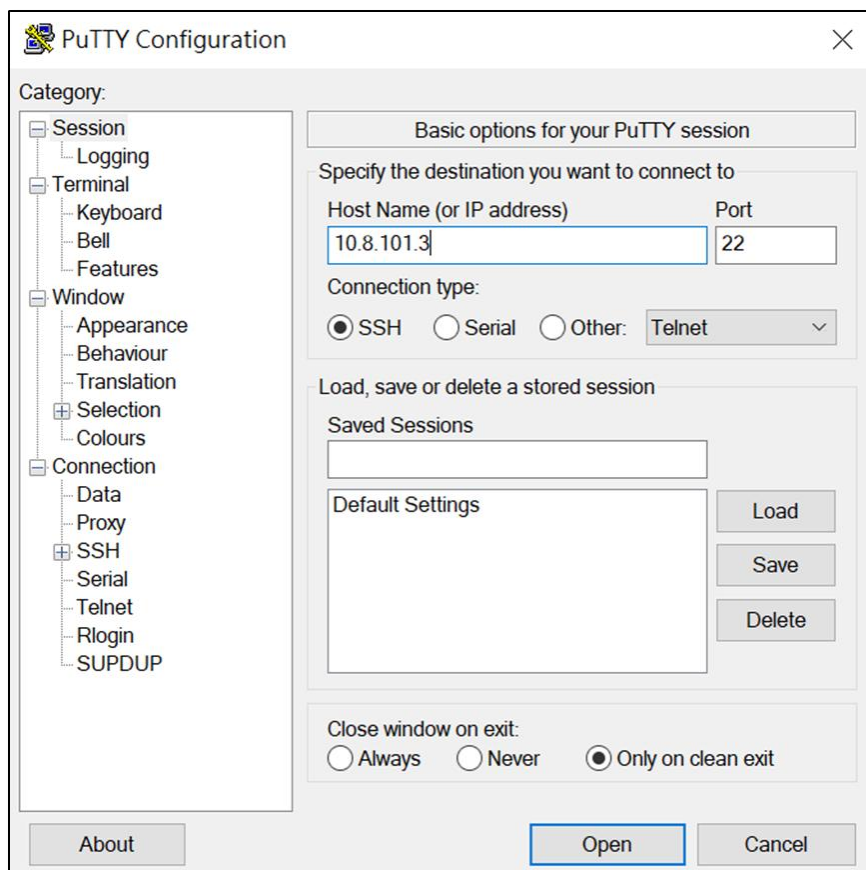


Edge series use an automatically generated self-signed SSL certificate to encrypt communications between the client and the device. Given that the certificate is self-signed, most SSH terminal software will not trust the certificate and will give a warning that the certificate being used is not signed by a known authority.

The login screen will appear.



The default IP address of Edge series is 192.168.127.254 with subnet 255.255.255.0. Before connecting a PC/laptop to Edge series, the PC's IP address should be set to an IP address that is able to access to the default IP address. After that, connect the PC and Edge series with an Ethernet cable.

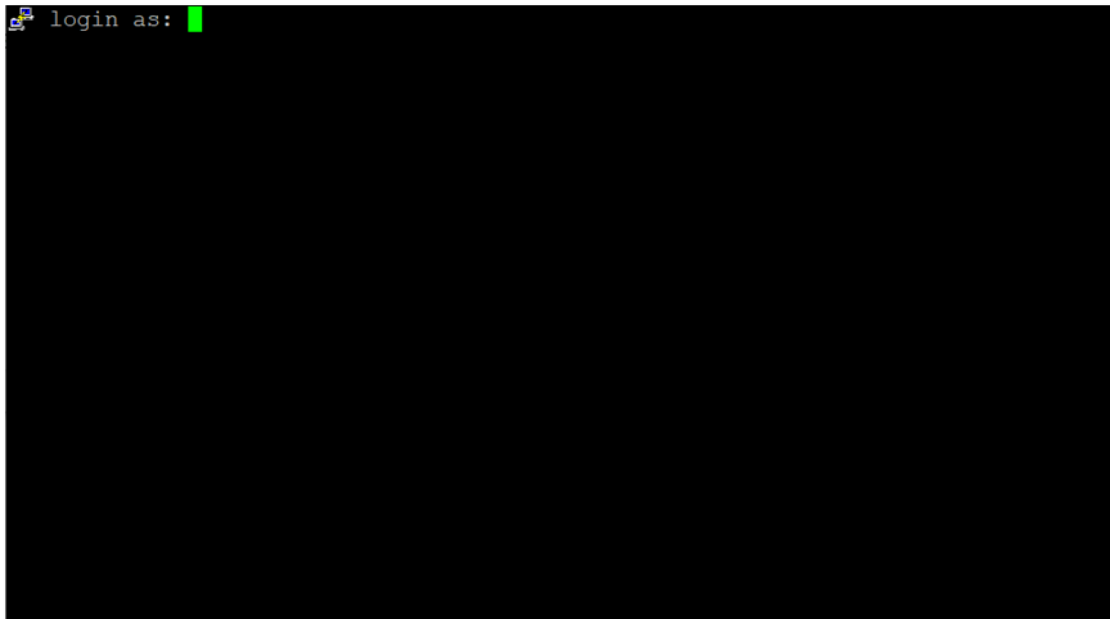


2. Input the login credentials (user ID and password). Use the default administrator login credentials when logging in to the Edge device for the first time:

- User ID: *admin*
- Password: *txone*



If you have previously logged in to the Edge device's web console, use the login credentials you have set up in the web console for your login via the CLI.

3. Press the ENTER key to log in.

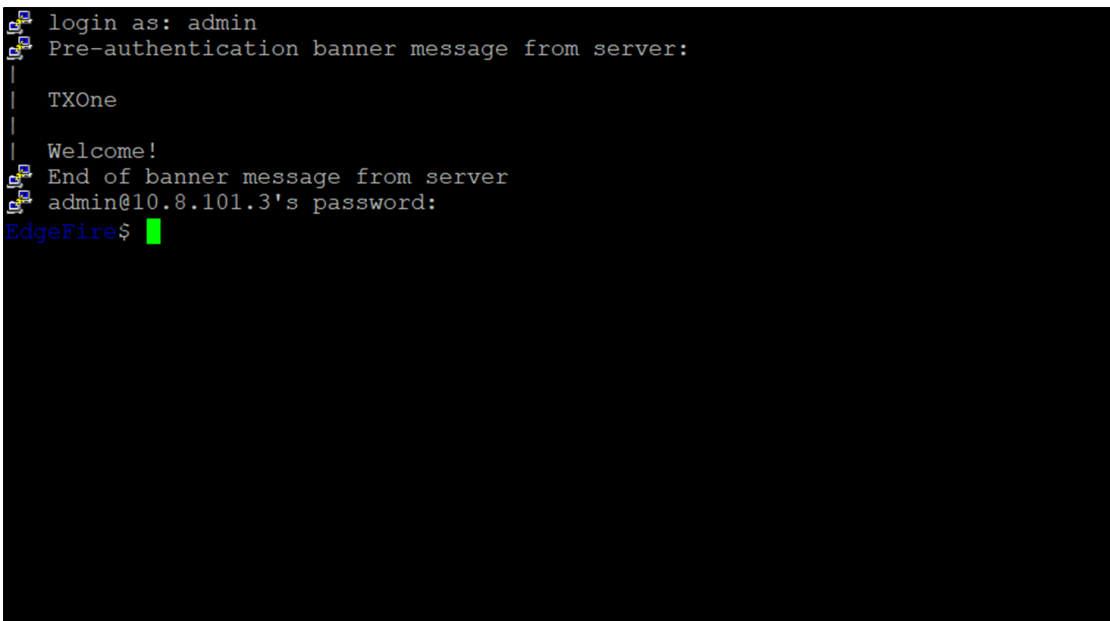

To access the CLI management interface, log in using an admin account.

2 System Information

Monitor your basic system information, including System Boot Time, System Time, Device Name, Model Name, Firmware Version, Firmware Build Time, Serial Number, IPS Pattern Version, EdgeOne Connection Status, etc.

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# show system
```

1. The output displays the system information below.

```
EdgeIPS# show system

System Boot Time:      2023-08-01T02:12:16Z
System Time:           2023-08-02T02:41:57Z
Device Name:           EdgeIPS
Model Name:             IPS-102-BP-R-TM
Firmware Version:       IPS_G02_2.0.11
Firmware Build Time:    2023-05-23T06:57:11Z
Serial Number:          TMG02220000424
MAC Address:            00:90:e8:b2:ae:71
Security General Setting: inline           Management Port: P
ORT1/PORT2

IPS Pattern Version:    TXv2_STD_230109_1

EdgeOne Sync status:    disconnected
EdgeIPS#
```

```
EdgeIPS-LE# show system

System Boot Time:      2023-07-18T02:44:22Z
System Time:           2023-07-31T09:48:44Z
Device Name:           EdgeIPS-LE
Model Name:             IPSLE-102-BP-TX
Firmware Version:       IPSLE_T01_2.0.0
Firmware Build Time:    2023-06-29T07:41:29Z
Serial Number:          ipsle_sample41
MAC Address:            40:60:5a:02:b6:d6
Security General Setting: inline           Management Port: P
ORT1/PORT2

IPS Pattern Version:    TXv2_LE_230615_1

EdgeOne Sync status:    connected
EdgeIPS-LE#
```

```
EdgeFire# show system

System Boot Time:      2023-07-24T11:33:30+08:00
System Time:           2023-07-31T17:49:18+08:00
Device Name:           EdgeFire
Model Name:            IEF-1012-R-TM
Firmware Version:      IEF_T01_2.0.13
Firmware Build Time:   2023-05-24T13:07:43+08:00
Serial Number:         TMF02220000219
MAC Address:           40:60:5a:02:93:b6
Operation Mode:        gateway

IPS Pattern Version:   TXv2_STD_230109_1

EdgeOne Sync status:   connected
Independent MGMT IP:   10.8.101.3      status: enabled

EdgeFire#
```

System Information	Description
System Boot Time	The time and the date the system was initialized and booted up.
System Time	The current time and date.
Device Name	The name of the Edge-series device.
Model Name	The model name of the Edge-series device.
Firmware Version	The firmware version of the Edge-series device in the active partition.
Firmware Build Time	The time and the date the firmware was compiled and built as an image.
Serial Number	The serial number of the Edge-series device.
MAC Address	The MAC address of the Edge-series device.
Security General Setting	The security operation mode of EdgeIPS/EdgeIPS LE.  Only EdgeIPS and EdgeIPS LE support this system information.
Management Port	The management port of EdgeIPS/EdgeIPS LE.  Only EdgeIPS and EdgeIPS LE support this system information.
Operation Mode	The operation mode of EdgeFire.  Only EdgeFire supports this system information.
IPS Pattern Version	The IPS pattern version of the Edge-series device.
Antivirus Pattern Version	The antivirus pattern version of EdgeIPS Pro.  Only EdgeIPS Pro supports this system information.
EdgeOne Connection Status	The connection status between the Edge-series device and EdgeOne.

System Information	Description
Independent MGMT IP	The IP address and the connection status of the Independent MGMT.  Only EdgeFire supports this system information.

3 Device

This chapter describes how to set up the network settings and port configuration for EdgeIPS, EdgeIPS Pro, and EdgeIPS LE.

3.1 Viewing Network Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE)

1. Log on to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# show network
```

1. The output displays the network settings below.

```
EdgeIPS# show network

Network Setting:
Connection Type: Static IP
IP 10.8.101.53 mask 255.255.192.0 gateway 10.8.127.254
DNS 8.8.8.8,8.8.4.4
VLAN-ID disabled
LLDP enabled
EdgeIPS#
```

```
EdgeIPS-Pro# show network

Network Setting:
Connection Type: Static IP
IP 192.168.127.254 mask 255.255.255.0 gateway 192.168.127.1
DNS
VLAN-ID disabled
LLDP enabled
EdgeIPS-Pro#
```

```
EdgeIPS# show network

Network Setting:
Connection Type: Static IP
IP 10.8.101.51 mask 255.255.192.0 gateway 10.8.127.254
DNS 8.8.8.8,8.8.4.4
VLAN-ID disabled
LLDP enabled
EdgeIPS#
```

3.2 Configuring Network Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# set configure
```

```
EdgeIPS(set configure)# edit network
```

1. The output displays the network settings below. Now you are already in the editor mode to configure the settings.

EdgeIPS(set configure)# edit network

Network Setting:

IP 192.168.1.115 mask 255.255.255.0 gateway 192.168.1.1
 DNS 192.168.1.1
 VLAN-ID disabled
 LLDP disabled

EdgeIPS(cfg-edit network)#

1. Input the below command lines to configure the network settings.

Command Line	Description
set ip <addr> <mask> <gateway>	Configure the IP address, network mask and gateway address of the device.
set dns <ip>	Configure the DNS server IP address of the device.
set vlan tag <id>	Enable VLAN Tag and configure the VLAN ID of the device.
set vlan untag	Disable the VLAN Tag of the device.
set lldp <enabled disabled>	Enable or disable LLDP function
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.
set dhcp <enabled disabled>	Enable or disable the DHCP client connection type.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

3.3 Viewing Fiber Port Information

Procedure (For EdgeIPS/EdgeIPS Pro)

1. Log on to the CLI management console.
2. Input the below commands.

EdgeIPS\$ enable

EdgeIPS# show transceiverinfo

1. The output displays the network settings below.

```
EdgeIPS# show transceiverinfo PORT1

Fiber Port:      PORT1
Temperature(Celsius): 40.22
Voltage(Volts): 3.30
Optical Transmit Power(dbm): -6.47
Optical Receive Power(dbm): -6.44

EdgeIPS# █
```



This command is only applicable to Edge devices with fiber interfaces.

4 Network

This chapter describes how to set up the network interface settings and operation mode settings for EdgeFire.

4.1 Viewing Network Interface Settings

Procedure (For EdgeFire in Gateway Mode)

1. Log in to the CLI management console
2. Input the below commands.

```
EdgeFire$ enable
EdgeFire# show network-interface
```

3. The output displays the network interface settings below.

```
EdgeFire# show network-interface

Interface:      WAN1
Status:         enabled
Connection Type : Static IP
IP address:     192.168.100.1
Mask:           255.255.255.0
VLAN-ID:        -
Description:

Interface:      LAN1
Status:         enabled
Connection Type : DHCP Service Disabled
IP address:     192.168.0.254
Mask:           255.255.255.0
VLAN-ID:        -
Description:

Interface:      LAN2
Status:         enabled
Connection Type : DHCP Service Disabled
IP address:     192.168.10.254
Mask:           255.255.255.0
VLAN-ID:        -
Description:

Interface:      DMZ
Status:         enabled
Connection Type : DHCP Service Disabled
IP address:     192.168.11.254
Mask:           255.255.255.0
VLAN-ID:        -
Description:

EdgeFire#
```



Only EdgeFire in Gateway mode supports network interface settings.

4.2 Configuring Network Interface Settings

Procedure (For EdgeFire in Gateway Mode)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeFire$ enable
```

```
EdgeFire# set configure
```

```
EdgeFire(set configure)# edit network-interface
```

1. The output displays the network interface settings below. Now you are already in the editor mode to configure the settings.

```
EdgeFire(set configure)# edit network-interface
```

```
Interface:      WAN1
Status:         enabled
Connection Type : Static IP
IP address:     10.24.7.41
Mask:           255.255.0.0
VLAN-ID:        -
Description:
```

```
Interface:      LAN1
Status:         enabled
Connection Type : DHCP Server
IP address:     192.168.127.254
Mask:           255.255.255.0
VLAN-ID:        -
Description:
```

```
Interface:      LAN2
Status:         enabled
Connection Type : DHCP Server
IP address:     192.168.2.254
Mask:           255.255.255.0
VLAN-ID:        -
Description:
```

```
Interface:      DMZ
Status:         enabled
Connection Type : DHCP Server
IP address:     192.168.253.254
Mask:           255.255.255.0
VLAN-ID:        -
Description:
```

EdgeFire(cfg-edit network-interface)#

- Input the below command lines to configure the network interface settings.

Command Line	Description
edit <WAN1 LAN1 LAN2 DMZ>	Configure the IP address, network mask and gateway address of the device.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

- If you choose a network interface to edit, further input the below command lines to edit its settings.
 - If the network interface type is WAN1:

Command Line	Description
set enabled < true false >	Set the WAN1 interface to be enabled or disabled.
set description <description>	Input the description of the WAN1 interface.
set vlan tag <id>	Enable VLAN tag and set the VLAN ID on the WAN1 interface.
set vlan untag	Disable VLAN tag on the WAN1 interface.
set connection-type < static_ip dhcp_client >	Set the connection type to static IP or DHCP client.
set ip <addr> <mask> <gateway>	Set the IP address, the network mask address and the gateway address on the WAN1 interface.
set dns [<ip1>,<ip2>]	Set the primary and secondary DNS addresses.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

- If the network interface type is LAN1, LAN2, or DMZ:

Command Line	Description
set enabled < true false >	Set LAN1/LAN2/DMZ interface(s) to be enabled or disabled.

Command Line		Description
set description <description>		Input the description of LAN1/LAN2/DMZ interface.
set vlan tag <id>		Enable VLAN tag and set the VLAN ID on LAN1/LAN2/DMZ interface.
set vlan untag		Disable VLAN tag on LAN1/LAN2/DMZ interface.
set lan-ip <addr>		Set the LAN IP address on tLAN1/LAN2/DMZ interface.
set mask <mask>		Set the network mask address on LAN1/LAN2/DMZ interface.
set dhcp disabled		Disable DHCP service.
set dhcp enabled < server relay >		Enable the DHCP service and set it as DHCP server or DHCP relay. Enable DHCP server to configure the following setting items.
	set ip-range <start-ip> <end-ip>	Set the starting IP and ending IP for the IP range on LAN1/LAN2/DMZ interface.
	set gateway <ip-addr>	Set the gateway IP address on LAN1/LAN2/DMZ interface.
	set lease-time <number>	Set the DHCP lease time for DHCP server.
	set dns [<ip1>, <ip2>]	Set the primary and secondary DNS addresses on LAN1/LAN2/DMZ interface.
preview		List the preview settings.
done		Keep the current settings (the configuration has not yet been saved).
done force		Keep the current settings without being prompted for confirmation.
exit		Return to the upper layer of the command lines.
exit force		Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.



Only EdgeFire in Gateway mode supports network interface settings.

4.3 Viewing Operation Mode Settings

Procedure (For EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeFire$ enable
```

```
EdgeFire# show operation-mode
```

1. The output displays the operation mode settings below.

```
EdgeFire# show operation-mode
      Operation Mode: gateway
EdgeFire#
```



Only EdgeFire supports Operation Mode.

4.4 Configuring Operation Mode Settings

Procedure (For EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeFire$ enable
```

```
EdgeFire# set configure
```

```
EdgeFire(set configure)# edit operation-mode
```

1. The output displays the operation mode settings below. Now you are already in the editor mode to configure the settings.

```
EdgeFire(set configure)# edit operation-mode
```

```
Operation Mode: gateway
```

```
EdgeFire(cfg-edit operation-mode)#
```

1. Input the below command lines to edit the operation mode settings.
 - If the operation mode is Gateway Mode:

Command Line	Description
set operation-mode <gateway bridge>	Set the operation mode to gateway mode or bridge mode.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

- If the operation mode is Bridge Mode:

Command Line	Description
set operation-mode <gateway bridge>	Set the operation mode to gateway mode or bridge mode.

Command Line	Description
set management-interface <bridge-port independent-MGMT-port>	Set bridge port or independent MGMT port as the management interface.
set ip <addr> <mask> <gateway>	Set the IP address, network mask and gateway address of the management interface.
set dns <ip>	Set the DNS address of the management interface.
set dhcp <enabled disabled>	Enable or disable the DHCP client connection type.
set vlan tag <id>	Enable VLAN tag and set the VLAN ID of the management interface
set vlan untag	Disable VLAN tag on the management interface.
set stp <enabled disabled>	Enable or disable STP (Spanning Tree Protocol) for all network interfaces or ports on EdgeFire. EdgeFire can detect the loop and disable the network interfaces or ports that cause the loop.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “yes” and press enter to write the configuration.
3. Input “yes” and press enter to switch the operation mode. The system will reboot.

	1. When EdgeFire is switched from gateway mode to bridge mode, the features of Network Interface, NAT Rules, ALG, and Static Route will not operate and not be configurable. 2. When the operation mode is set to gateway mode, the LAN1 network settings / LAN1 DHCP Service for Gateway mode is not editable and for previewing only. 3. The configuration of the policy enforcement rule is not compatible between Gateway mode and Bridge mode. Therefore, the policy enforcement rule needs to be reconfigured after switching from Gateway mode to Bridge mode.
---	---

5 NAT

This chapter describes how to view and configure the following NAT rules on EdgeFire.

- 1 to 1 network address translation for incoming traffic on the specific interface
- Multiple 1 to 1 network address translation for incoming traffic on the specific interface
- Port forwarding address translation for incoming traffic on the specific interface

The following table describes the tasks you can perform in NAT Rule function in CLI mode.

Task	Description
Add a NAT rule	Create a new NAT rule.
Edit a NAT rule	Edit the NAT rule settings.
Delete a NAT rule	Select one or multiple NAT rules to delete.

5.1 Viewing NAT Rules

Procedure (For EdgeFire in Gateway Mode)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeFire$ enable
```

```
EdgeFire# show nat-rules
```

1. The output displays the NAT rules below.

```
EdgeFire# show nat-rules
      NAT rule list:           now:1 / max:64

      Index: 1      Name: nat-1      Status: enabled
      Type: 1 to 1 NAT
      Original ip: 10.24.5.101
      Mapped ip: 192.168.5.101
EdgeFire#
```



Only EdgeFire in Gateway mode supports NAT Rule settings.

5.2 Configuring NAT Rules

Procedure (For EdgeFire in Gateway Mode)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeFire$ enable
```

```
EdgeFire# set configure
```

```
EdgeFire(set configure)# edit nat-rules
```

1. The output displays the NAT rules below. Now you are already in the editor mode to configure the settings.

```
EdgeFire(set configure)# edit nat-rules
```

NAT rule list: now:1 / max:64

Index: 1 Name: test Status: enabled

Type: 1 to 1 NAT

Original ip: 10.10.10.10

Mapped ip: 192.168.2.10

EdgeFire(cfg-edit nat-rules)#

1. Input the below command lines to configure the NAT rules.

Command Line	Description
edit <nat-rule>	Create a new NAT rule or edit an existing NAT rule. The default NAT type in a new NAT rule is 1-to-1 NAT.  The EdgeFire CLI does not support editing [Source NAT] rules.
delete <nat-rule>	Delete the NAT rule.
move <rule-name> <priority>	Change the priority of the NAT rule.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a NAT rule to edit, further input the below command lines to edit its settings.
 - If the NAT type is 1-to-1 NAT:

Command Line	Description
set name <new-name>	Set the name of the NAT rule.
set description <description>	Set the description of the NAT rule.
set enabled <true false>	Enable or disable the NAT rule.
set nat-loopback <enabled disabled>	Enable or disable the NAT loopback feature in the NAT rule.
set incoming-interface <WAN1 LAN1 LAN2 DMZ >	Set the following interfaces of the NAT rule. • WAN1 • LAN1 • LAN2

Command Line	Description
	DMZ
set type <1-to-1-nat multi-1-to-1-nat-ip-range multi-1-to-1-nat-cidr port-forward>	Set the NAT type in the NAT rule. 1 to 1 NAT - Multiple 1 to 1 NAT (Define the rule with IP range) - Multiple 1 to 1 NAT (Define the rule with CIDR) - Port forward
set original-ip <ip>	Set the original IP address in the NAT rule. (for 1 to 1 NAT).
set mapped-ip <ip>	Set the mapped IP address in the NAT rule. (for 1 to 1 NAT).
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

- If the NAT type is multi 1-to-1 NAT (IP range):

Command Line	Description
set name <new-name>	Set the name of the NAT rule.
set description <description>	Set the description of the NAT rule.
set enabled <true false>	Enable or disable the NAT rule.
set nat-loopback <enabled disabled>	Enable or disable the NAT loopback feature in the NAT rule.
set incoming-interface <WAN1 LAN1 LAN2 DMZ >	Set the following interfaces of the NAT rule. - WAN1 - LAN1 - LAN2 - DMZ
set type <1-to-1-nat multi-1-to-1-nat-ip-range multi-1-to-1-nat-cidr port-forward>	Set the NAT type in the NAT rule. 1 to 1 NAT - Multiple 1 to 1 NAT (Define the rule with IP range) - Multiple 1 to 1 NAT (Define the rule with CIDR) - Port forward
set ip-range <original-ip-range-start> <original-ip-range-end> <mapped-ip-range-start> <mapped-ip-range-end>	Set the original IP starting/ending address and the mapping IP starting/ending address in the NAT rule. (for multiple 1 to 1 NAT).

Command Line	Description
range-start> <mapped--ip-range-end>	
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

- If the NAT type is multi 1-to-1 NAT (CIDR, Classless Inter-Domain Routing):

Command Line	Description
set name <new-name>	Set the name of the NAT rule.
set description <description>	Set the description of the NAT rule.
set enabled <true false>	Enable or disable the NAT rule.
set nat-loopback <enabled disabled>	Enable or disable the NAT loopback feature in the NAT rule.
set incoming-interface <WAN1 LAN1 LAN2 DMZ >	Set the following interfaces of the NAT rule. • WAN1 • LAN1 • LAN2 • DMZ
set type <1-to-1-nat multi-1-to-1-nat-ip-range multi-1-to-1-nat-cidr port-forward>	Set the NAT type in the NAT rule. • 1 to 1 NAT • Multiple 1 to 1 NAT (Define the rule with IP range) • Multiple 1 to 1 NAT (Define the rule with CIDR) • Port forward
set ip-cidr <original-ip> <mapped-ip> <cidr>	Set the original IP starting/ending address and the mapping IP starting/ending address in NAT rule via CIDR format. (For multiple 1 to 1 NAT)
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

- If the NAT type is port forward:

Command Line	Description
set name <new-name>	Set the name of the NAT rule.
set description <description>	Set the description of the NAT rule.
set enabled <true false>	Enable or disable the NAT rule.
set nat-loopback <enabled disabled>	Enable or disable the NAT loopback feature in the NAT rule.
set incoming-interface <WAN1 LAN1 LAN2 DMZ >	Set the following interfaces of the NAT rule. • WAN1 • LAN1 • LAN2 • DMZ
set type <1-to-1-nat multi-1-to-1-nat-ip-range multi-1-to-1-nat-cidr port-forward>	Set the NAT type in the NAT rule. • 1 to 1 NAT • Multiple 1 to 1 NAT (Define the rule with IP range) • Multiple 1 to 1 NAT (Define the rule with CIDR) • Port forward
set protocol <tcp udp tcp/udp>	Set the protocol type in the port forwarding rule. • TCP • UDP • TCP/UDP (Both)
set original-port <start-port> <end-port>	Set the original starting port and the original ending port in the port forwarding rule.
set mapped-ip <ip>	Set the mapped IP address in the port forwarding rule.
set mapped-port <start-port> <end-port>	Set the mapped starting port and the mapped ending port in the port forwarding rule.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “yes” and press enter to write the configuration.

6 Routing

This chapter describes how to view a list of current static routes and configure static route settings on EdgeFire.

Static routes are generally used when no appropriate dynamic route is present, or when you want the traffic to follow the static route you specify as opposed to following the dynamic route that is automatically learned and generated by the device.

The following table describes the tasks you can perform in Static Route function in CLI mode.

Task	Description
Add a static route	create a new static route rule.
Edit a static route	edit the existing static route rule.
Delete a static route	delete the existing static route rule.

6.1 Viewing Static Routes

Procedure (For EdgeFire in Gateway Mode)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeFire$ enable
```

```
EdgeFire# show static-routes
```

1. The output displays the static routes below.

```
EdgeFire# show static-routes

Static Route List:                now:2 / max:64

Name:  static-route-1  Status: enabled  Description:
Name:  static-route-2  Status: enabled  Description:

EdgeFire#
```

6.2 Configuring Static Routes

Procedure (For EdgeFire in Gateway Mode)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeFire$ enable
```

```
EdgeFire# set configure
```

```
EdgeFire(set configure)# edit static-routes
```

1. The output displays the static routes below. Now you are already in the editor mode to configure the settings.

```
EdgeFire(set configure)# edit static-routes
```

```
Static Route List:                now:1 / max:64
```

Name: test Status: disabled Description:

EdgeFire(cfg-edit static-routes)#

1. Input the below command lines to configure the static routes.

Command Line	Description
edit <route-name>	Create a new static route rule or edit an existing static router rule.
delete <route-name>	Delete the existing static route rule.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a static route rule to edit, further input the below command lines to edit its settings.

Command Line	Description
set enabled <true false>	Enable or disable the static route rule.
set name <new-name>	Set the name of the static route rule.
set description <description>	Set the description of the static route rule.
set destination-ip <ip-addr> <mask>	Set the destination IP address and network mask of the static route rule.
set gateway-ip <ip-addr>	Set the gateway IP address and network mask of the static route rule.
set interface <name>	Set the intergateway IP address and the network mask of the static route rule.
set metric <number>	Set the metric value as the weight value for routing. (Value: 1 to 15)
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “yes” and press enter to write the configuration.

7 Object Profiles

Object profiles simplify policy management by storing configurations that can be used by Edge series.

You can configure the following types of object profiles for this device in CLI management console:

- **IP Object Profile:** Contains the IP addresses that you can apply to a policy rule.
- **Service Object Profile:** Contains the service definitions that you can apply to a policy rule. TCP port range, UDP port range, ICMP, and custom protocol number are defined here.
- **Antivirus Profile (Exclusive to EdgeIPS Pro):** Streaming-based antivirus profiles provide an extra layer of protection under EdgeIPS Pro for scanning, optimizing memory utilization for large archive files by decompressing the files on the fly and scanning the PE and ELF format malware files.

7.1 Viewing IP Object Profiles

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# show ip-objects
```

1. The output displays the IP object profiles below.

```
EdgeIPS# show ip-objects
```

```
IP Object Profile List:                now:1 / max:32
Name:  ip-object-1                     Description:
```

```
EdgeIPS#
```

```
EdgeIPS-Pro# show ip-objects
```

```
IP Object Profile List:                now:1 / max:256
Name:  ip-object-1                     Description:
```

```
EdgeIPS-Pro#
```

```
EdgeIPS-LE# show ip-objects
```

```
IP Object Profile List:                now:1 / max:32
Name:  ip-object-1                     Description:
```

```
EdgeIPS-LE#
```

```
EdgeFire# show ip-objects
```

```
IP Object Profile List:                now:1 / max:32
Name:  ip-object-1                     Description:
```

```
EdgeFire#
```

7.2 Configuring IP Object Profiles

You can configure the IP address in an IP object profile, which can be used by other policy rules.

The types of IP addresses you can assign to are:

- Single IP address

For example: 192.168.1.1

- IP ranges

For example: from 192.168.1.1 to 192.168.1.20

- IP subnets

For example: 192.168.1.0/24

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# set configure
```

```
EdgeIPS(set configure)# edit ip-objects
```

1. The output displays the IP object profiles below. Now you are already in the editor mode to configure the settings.

```
EdgeIPS(set configure)# edit ip-objects
```

```
IP Object Profile List:                               now:1 / max:32
```

```
Name: ip-object-1 Description:
```

```
Index: 1 Type: Single IP: 10.8.101.15
```

```
EdgeIPS(cfg-edit ip-objects)#
```

1. Input the below command lines to configure the IP objects.

Command Line	Description
edit <object-name>	Create a new IP object or edit an existing IP object.
delete <object-name>	Delete the IP object.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose an IP object to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Set the profile name of the IP object.
set description <description>	Set the profile description of the IP object.
append single <ip>	Add an IP address to the IP object.
append range <start-ip> <end-ip>	Add an IP range to the IP object.
append subnet <ip> <cidr>	Add an IP subnet to the IP object.
remove <index>	Delete the IP address, range, or subnet from the IP object.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “yes” and press enter to write the configuration.

7.3 Viewing Service Object Profiles

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
EdgeIPS# show service-objects
```

3. The output displays the service object profiles below.

```
EdgeIPS# show service-objects

Service Object Profile List:                now:1 / max:32
Name:    service-object-1                  Description:
EdgeIPS# █

EdgeIPS-Pro# show service-objects

Service Object Profile List:                now:1 / max:256
Name:    service-object-1                  Description:
EdgeIPS-Pro# █
```

```
EdgeIPS-LE# show service-objects

Service Object Profile List:                now:1 / max:32
Name:    service-object-1                  Description:

EdgeIPS-LE#
```

```
EdgeFire# show service-objects

Service Object Profile List:                now:1 / max:32
Name:    service-object-1                  Description:

EdgeFire#
```

7.4 Configuring Service Object Profiles

In a service object profile, you can define the following:

- TCP protocol port range

For example: TCP port 100-120

- UDP protocol port range

For example: UDP port 100-120

- ICMP protocol type and code

For example: ICMP type 8 code 0

- Custom protocol with specified protocol number

For example: protocol number = 6 and service ports range from 100 to 120



The term “protocol number” refers to the protocol number defined in the internet protocol suite.

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# set configure
```

```
EdgeIPS(set configure)# edit service-objects
```

1. The output displays the service object profiles below. Now you are already in the editor mode to configure the settings.

```
EdgeIPS(set configure)# edit service-objects
```

```
Service Object Profile List:                now:1 / max:32
```

```
Name: service-object-1 Description:
```

```
Index: 1 Type: TCP ProtocolNumber: 6 Service Port: any
```

```
EdgeIPS(cfg-edit service-objects)#
```

1. Input the below command lines to configure the service objects.

Command Line	Description
edit <object-name>	Create a new service object or edit an existing service object.
delete <object-name>	Delete the service object.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a service object to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Set the profile name of the service object.
set description <description>	Set the profile description of the service object.
append tcp any	Set the port of TCP protocol to any port.
append tcp custom <start-port> <end-port>	Set the port range of TCP protocol.
append udp any	Set the port of UDP protocol to any port.
append udp custom <start-port> <end-port>	Set the port range of UDP protocol.
append icmp any	Set the type and code of ICMP protocol to any type and code.
append icmp custom <type> <code>	Set the type and code of ICMP protocol.
append custom <protocol-number>	Set the type and code of the custom protocol.
remove <index>	Delete the TCP, UDP, ICMP, or custom ports from the service object.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input "save" and press enter.
2. Input "yes" and press enter to write the configuration.

7.5 Viewing Antivirus Profiles

Procedure (For EdgeIPS Pro)

1. Log on to the CLI management console.
2. Input the below commands.

```
EdgeIPS-Pro$ enable
```

```
EdgeIPS-Pro# show antivirus-profiles
```

1. The output displays the service object profiles below.

```
EdgeIPS-Pro# show antivirus-profiles

Antivirus Profile List:                now:1 / max:256

Name:    Default_AV_Profile           Description:

EdgeIPS-Pro#
```



Only EdgeIPS Pro supports antivirus feature.

7.5.1 Viewing File Exception Settings

Procedure (For EdgeIPS Pro)

1. Log on to the CLI management console.
2. Input the below commands.

```
EdgeIPS-Pro$ enable
```

```
EdgeIPS-Pro# show antivirus-file-exception
```

1. The output displays the service object profiles below.

```
EdgeIPS-Pro# show antivirus-file-exception

File Exception List:                now:1 / max:2000

SHA-1:    9365e80854461496b6803cec83dd9814eea71788
Description:

EdgeIPS-Pro#
```



Only EdgeIPS Pro supports file exception feature.

7.6 Configuring Antivirus Profiles

Antivirus is a stream-based design. The Antivirus Profiles are available to configure and view HTTP, FTP, and SMB protocols and the advanced settings which include the file size limitation setting and compressed file scanning, allowing you to create or edit profiles to apply to a policy rule.

In a profile, you can define the following:

- Protocol settings: include HTTP, FTP, and SMB
- Advanced settings: include the file size limitation and compressed file scanning

Procedure (For EdgeIPS Pro)

1. Log on to the CLI management console.

2. Input the below commands.

```
EdgeIPS-Pro$ enable
EdgeIPS-Pro# set configure
EdgeIPS-Pro(set configure)# edit antivirus-profiles
```

1. The output displays the antivirus profiles below. Now you are already in the editor mode to configure the settings.

```
EdgeIPS-Pro(set configure)# edit antivirus-profiles

Antivirus Profile List:                now:1 / max: 256
Name: Default_AV_Profile Description:

EdgeIPS-Pro(cfg-edit antivirus-profiles)#
```

1. Input the below command lines to configure the antivirus profiles.

Command Line	Description
edit <profile-name>	Create a new antivirus profile or edit an existing antivirus profile.
delete <profile-name>	Delete the antivirus profile.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose an antivirus profile to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Set the profile name of the antivirus profile.
set description <description>	Set the profile description of the antivirus profile.
edit protocol-settings	Edit the protocol settings in the antivirus profile.
set file-size-settings enabled <maximum-file-size> <if-drop-over-size>	Enable the scanning feature for maximum file size, set a file size upper limit ranging from 1 to 10MB, and set whether the device should drop oversized files.
set file-size-settings disabled	Disable the scanning feature for maximum file size.
set compressed-file-settings enabled <if-drop-password-protected-file> <if-drop-malformed>	Enable scanning feature for compressed files and set whether the device should drop password-protected files or destroy files that cannot be decompressed. The scanning only support ZIP and GZIP file format.
set compressed-file-settings disabled	Disable scanning feature for compressed file.
preview	List the preview settings.

Command Line	Description
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose to edit the protocol settings in the antivirus profile, further input the below command lines to edit its settings.

Command Line	Description
set http enabled <accept deny>	Enable the file scanning via HTTP protocol and the action when matched, including Accept and Log, Deny and Log.
set http disabled	Disable the file scanning via HTTP protocol.
set ftp enabled <accept deny>	Enable/Disable the file scanning via FTP protocol and the action when matched, including 'Accept and Log' and 'Deny and Log.'
set ftp disabled	Disable the file scanning via FPT protocol.
set smb enabled <accept deny>	Enable/Disable the file scanning via SMB protocol and the action when matched, including 'Accept and Log' and 'Deny and Log.'
set smb disabled	Disable the file scanning via SMB protocol.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input "save" and press enter.
2. Input "exit" and press enter to leave the current function settings.



The supported archive file formats include zip and gzip files.

7.6.1 Configuring File Exception Settings

File Exceptions are advanced configurations to except certain files from the antivirus profiles you're enabling. The system skips the file scanning based on your File Exception settings. This can increase the flexibility of configuration and obtain the real control for your OT network.

Procedure (For EdgeIPS Pro)

1. Log on to the CLI management console.

2. Input the below commands.

```
EdgeIPS-Pro$ enable
EdgeIPS-Pro# set configure
EdgeIPS-Pro(set configure)# edit antivirus-file-exception
```

1. The output displays the file exception settings below. Now you are already in the editor mode to configure the settings.

```
EdgeIPS-Pro(set configure)# edit antivirus-file-exception

File Exception List:      now:1 / max:2000
      Index: 1      SHA-1: 9365e80854461496b6803cec83dd9814eea71788 Description:

EdgeIPS-Pro(cfg-edit antivirus-file-exception)#
```

1. Input the below command lines to configure the file exception settings.

Command Line	Description
edit <hash value>	Create a new SHA-1 item or edit an existing SHA-1 item.
delete <hash value>	Delete the SHA-1 item.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a SHA-1 item to edit, further input the below command lines to edit its settings.

Command Line	Description
set sha-1 <hash value>	Set the hash value of the SHA-1 item.
set description <description>	Set the description of the SHA-1 item.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “yes” and press enter to write the configuration.

8 Security

This chapter describes the general settings for security, including Policy Enforcement and Port Security.

Policy Enforcement: Allows you to define the detailed access rules for ruleset templates with conditions of profiles. The selected ruleset templates are the base to match the network traffic and take action accordingly.



1. For rule checking, the device rules are of higher priority than the EdgeOne rules.
2. Only the device rules are configurable on CLI management console.

Port Security (Exclusive to EdgeIPS Pro): Allows you to set security modes and implement predefined Policy Enforcement rulesets to a port pair or a single port.

8.1 EdgeIPS Pro

8.1.1 Viewing Policy Enforcement Rule Sets

Procedure (For EdgeIPS Pro)

1. Log on to the CLI management console.
2. Input the below commands.

```
EdgeIPS-Pro$ enable
```

```
EdgeIPS-Pro# show policy-enforcement-rulesets
```

1. The output displays the Policy Enforcement rule sets below.

```
EdgeIPS-Pro# show policy-enforcement-rulesets

Policy Enforcement RuleSet List:                               now:3 / max:64

Name: ruleset-1          Description:          Last upd
ated: 2023-08-02T05:59:37Z

Name: ruleset-2          Description:          Last upd
ated: 2023-08-02T06:00:38Z

Name: ruleset-3          Description:          Last upd
ated: 2023-08-02T06:01:31Z

EdgeIPS-Pro#
```



Only EdgeIPS Pro supports Policy Enforcement rule sets.

8.1.2 Viewing Policy Enforcement Rules

Procedure (For EdgeIPS Pro)

1. Log on to the CLI management console.
2. Input the below commands.

```
EdgeIPS-Pro$ enable
```

```
EdgeIPS-Pro# set configure
```

```
EdgeIPS-Pro(set configure)# edit policy-enforcement-ruleset
```

1. The output displays the Policy Enforcement rule sets in the editor mode below.

```
EdgeIPS-Pro(set configure)# edit policy-enforcement-rulesets
```

```

Policy Enforcement RuleSet List:          now:3 / max:64
      Name: ruleset-1      Rules: 1      Last updated: 2023-08-
02T05:59:37Z
      Name: ruleset-2      Rules: 3      Last updated: 2023-08-
02T06:00:38Z
      Name: ruleset-3      Rules: 3      Last updated: 2023-08-
02T06:01:31Z

```

```
EdgeIPS-Pro(cfg-edit policy-enforcement-ruleset)#
```

1. Input the command **edit <ruleset-name>**. In the <ruleset-name> placeholder, input the name of the ruleset whose rules you want to view and press enter. The output displays the Policy Enforcement rules included in the selected rule set below.

```
EdgeIPS-Pro(cfg-edit policy-enforcement-ruleset)# edit ruleset-2
```

```

Policy Enforcement Rule Settings:
      Name:      ruleset-2
      Description:
      Default action: deny
      Rule list:      now:3 / max:2048
          Priority: 1  Name: policy-rule-1  Status: enabled
          Priority: 2  Name: policy-rule-2  Status: enabled
          Priority: 3  Name: policy-rule-3  Status: enabled

```

```
EdgeIPS-Pro(cfg-policyEnforce-ruleset-2)#
```

8.1.3 Configuring Policy Enforcement Rule Sets and Rules

Procedure (For EdgeIPS Pro)

1. Log on to the CLI management console.
2. Input the below commands.

```
EdgeIPS-Pro$ enable
```

```
EdgeIPS-Pro# set configure
```

```
EdgeIPS-Pro(set configure)# edit policy-enforcement-ruleset
```

1. The output displays the Policy Enforcement rule sets below. Now you are already in the editor mode to configure the settings.

```
EdgeIPS-Pro(set configure)# edit policy-enforcement-rulesets
```

```

Policy Enforcement RuleSet List:          now:3 / max:64
      Name: ruleset-1      Rules: 1      Last updated: 2023-08-
02T05:59:37Z

```

02T06:00:38Z	Name: ruleset-2	Rules: 3	Last updated: 2023-08-
02T06:01:31Z	Name: ruleset-3	Rules: 3	Last updated: 2023-08-

EdgeIPS-Pro(cfg-edit policy-enforcement-ruleset)#

1. Input the below command lines to configure the rule sets.

Command Line	Description
edit <ruleset-name>	Create a new Policy Enforcement rule set or edit an existing rule set.
delete <ruleset-name>	Delete the Policy Enforcement rule set.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a Policy Enforcement rule set to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Set the name of the Policy Enforcement rule set.
set description <description>	Set the description of the Policy Enforcement rule set.
set default-action <accept accept-log deny-log>	Set the default action of the Policy Enforcement rule set.
edit <rule-name>	Create a new Policy Enforcement rule or edit an existing rule.
remove <rule-name>	Remove the Policy Enforcement rule from the rule set.
move <rule-name> <priority>	Move the Policy Enforcement rule to the designated order.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a Policy Enforcement rule to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Set the name of Policy Enforcement rule.
set description <description>	Set the description of Policy Enforcement rule.
set enabled <true false>	Enable or disable the Policy Enforcement rule.
set source-ip any	Set the source IP address to any IP address.
set source-ip single <ip address>	Set the source IP address to a specific IP Address.
set source-ip range <start-ip address> <end-ip address>	Set the source IP address to a specific IP range.
set source-ip subnet <ip subnet> <cidr value>	Set the source IP address to a specific IP subnet.
set source-ip object <ip- object-name>	Apply a specific IP object to the source IP address.
set destination-ip any	Set the destination IP address to any IP address.
set destination-ip single <ip address>	Set the destination IP address to a specific IP Address.
set destination-ip range <start-ip address> <end-ip address>	Set the destination IP address to a specific IP range.
set destination-ip subnet <ip subnet> <cidr value>	Set the destination IP address to a specific IP subnet.
set destination-ip object <ip- object-name>	Apply a specific IP object to the destination IP address.
set service any	Set the service port to any port.
set service custom <protocol-number>	Set a custom protocol number.
set service tcp any	Set the service port to any TCP port.
set service tcp custom <start-port> <end-port>	Set the service port to a specific TCP port range.
set service udp any	Set the service port to any UDP port.
set service udp custom <start-port> <end-port>	Set the service port to a specific UCP port range.
set service icmp any	Set the ICMP protocol to any protocol number.
set service icmp custom <type> <code>	Set the ICMP protocol to a specific type and code.
set service object <service- object-name>	Apply a specific service object to the service port.
set vlan-id any	Set the VLAN ID to any ID number.
set vlan-id [<vlan-id-1>, <vlan-id-2>, ...]	Set the VLAN ID to [<vlan-id-1>, <vlan-id-2>, ...]. The maximum number of VLAN ID for one Policy Enforcement is 5.

Command Line	Description
set action <accept accept-log deny-log>	Set the action to accept, accept & log or deny & log.  If you set the action to “deny-log”, you cannot configure “ips-profile”, “file-filter-profile” and “antivirus-profile” via the commands.
set protocol-filter-profile <profile-name> <accept accept-log deny-log>	Enable the protocol filter profile and import a designated profile, and select whether to allow or deny network traffic that matches the protocol filter.
set protocol-filter-profile disabled	Disable the protocol filter profile.
set ips-profile <profile-name>	Enable the IPS profile and import a designated profile.
set ips-profile disabled	Disable the IPS profile.
set file-filter-profile <profile-name>	Enable the file filter profile and import a designated profile.
set file-filter-profile disabled	Disable the file filter profile.
set antivirus-profile <profile-name>	Enable the antivirus profile and import a designated profile.
set antivirus-profile disabled	Disable the antivirus profile.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

8.1.4 Viewing Port Security

Procedure (For EdgeIPS Pro)

1. Log on to the CLI management console.
2. Input the below commands.

```
EdgeIPS-Pro$ enable
```

```
EdgeIPS-Pro# show port-security
```

1. The output displays the port security details below.

```
EdgeIPS-Pro# show port-security

Name:  SLOT1:PORT1      Description:
Pair Mode: default
Security Operation Mode: Inline Mode
Hardware Bypass Mode:  Fail Open
L2 Policy Enforcement:  Disabled Monitor Mode
Device Rule Set:
Policy Enforcement:    Disabled Monitor Mode
Device Rule Set:  EdgeOne Rule Set:
LFPT:                  Disabled
DoS Prevention:        Disabled Monitor Mode

Name:  SLOT1:PORT2      Description:
Pair Mode: default
Security Operation Mode: Inline Mode
Hardware Bypass Mode:  Fail Open
L2 Policy Enforcement:  Disabled Monitor Mode
Device Rule Set:
Policy Enforcement:    Disabled Monitor Mode
Device Rule Set:  EdgeOne Rule Set:
LFPT:                  Disabled
DoS Prevention:        Disabled Monitor Mode

Name:  SLOT1:PORT3      Description:
Pair Mode: default
Security Operation Mode: Inline Mode
Hardware Bypass Mode:  Fail Open
L2 Policy Enforcement:  Disabled Monitor Mode
Device Rule Set:
Policy Enforcement:    Disabled Monitor Mode
Device Rule Set:  EdgeOne Rule Set:
LFPT:                  Disabled
DoS Prevention:        Disabled Monitor Mode

Name:  SLOT1:PORT4      Description:
Pair Mode: default
Security Operation Mode: Inline Mode
Hardware Bypass Mode:  Fail Open
L2 Policy Enforcement:  Disabled Monitor Mode
Device Rule Set:
Policy Enforcement:    Disabled Monitor Mode
Device Rule Set:  EdgeOne Rule Set:
LFPT:                  Disabled
DoS Prevention:        Disabled Monitor Mode
```



Only EdgeIPS Pro supports Port Security.

8.1.5 Configuring Port Security

Procedure (For EdgeIPS Pro)

1. Log on to the CLI management console.
2. Input the below commands.

```
EdgeIPS-Pro$ enable
```

```
EdgeIPS-Pro# set configure
```

```
EdgeIPS-Pro(set configure)# edit port-security
```

1. The output displays the port security details below. Now you are already in the editor mode to configure the settings.

```
EdgeIPS-Pro(set configure)# edit port-security
```

Name: SLOT1:PORT1 Description:
Pair Mode: default
Security Operation Mode: Inline Mode
Hardware Bypass Mode: Fail Open
L2 Policy Enforcement: Disabled Monitor Mode Device Rule Set:
Policy Enforcement: Disabled Monitor Mode Device Rule
Set: EdgeOne Rule Set:
LFPT: Disabled
DoS Prevention: Disabled Monitor Mode

Name: SLOT1:PORT2 Description:
Pair Mode: default
Security Operation Mode: Inline Mode
Hardware Bypass Mode: Fail Open
L2 Policy Enforcement: Disabled Monitor Mode Device Rule Set:
Policy Enforcement: Disabled Monitor Mode Device Rule
Set: EdgeOne Rule Set:
LFPT: Disabled
DoS Prevention: Disabled Monitor Mode

Name: SLOT1:PORT3 Description:
Pair Mode: default
Security Operation Mode: Inline Mode
Hardware Bypass Mode: Fail Open
L2 Policy Enforcement: Disabled Monitor Mode Device Rule Set:
Policy Enforcement: Disabled Monitor Mode Device Rule
Set: EdgeOne Rule Set:
LFPT: Disabled
DoS Prevention: Disabled Monitor Mode

Name: SLOT1:PORT4 Description:
Pair Mode: default
Security Operation Mode: Inline Mode
Hardware Bypass Mode: Fail Open
L2 Policy Enforcement: Disabled Monitor Mode Device Rule Set:
Policy Enforcement: Disabled Monitor Mode Device Rule
Set: EdgeOne Rule Set:
LFPT: Disabled
DoS Prevention: Disabled Monitor Mode

.
.

EdgeIPS-Pro(cfg-edit port-security)#

1. Input the below command lines to configure the port security settings.

Command Line	Description
edit <slot name> <port name>	Edit the settings of the designated port and slot. For example, edit SLOT1 PORT1 , which means to edit Port1 in Slot1.
clone <source-slot-number> <source-port-number> [<target-slot-number>, <target-slot-number>, ...] [<target-port-number>, <target-port-number>, ...]	Clone the port security settings from the referred port and slot to the designated port and slot. For example, clone 1 1 1,2,3,4 1,3,5,7 , which means to copy the settings of Slot1, Port1 to Port1, Port3, Port5, and Port7 in each of Slot1, Slot2, Slot3, and Slot4.  Once the designated odd/even-numbered port is applied to the new configuration, the bonded odd/even-numbered port is also updated. For example, if the user clones the port security configuration of port 1 in slot 1 to port 1 in slot 3, port 2 in slot 3 will also be updated with the same configuration. Port 1 and port 2 in slot 3 are considered one pair connecting to the OT asset and the upper layer management switch in OT operation.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you choose a port to edit, further input the below command lines to edit its settings.

Command Line	Description
set description <description>	Set the description of the designated port or multiple ports.
set security-operation-mode <inline offline>	Set the security operation mode to “inline” mode or “offline” mode.
set pair-mode <default logical- port-pair universal-bypass>	Set the pair mode to the default mode, “logical port pair” mode or “universal bypass” mode.
set hardware-bypass <fail- open fail-close force-open>	Set the hardware bypass mode to the port. - fail-open: the port is set to bypass the traffic when EdgeIPS Pro is failed to operate. - fail-close: the port is set to block the traffic when EdgeIPS Pro is failed to operate.

Command Line	Description
	force-open: enforce the port to bypass the traffic.
set lfpt <enabled disabled>	Enable or disable the Link Fault Pass Through (LFPT) function to the designated port.
set policy-enforcement enabled <ruleset-name>	Apply the designated Policy Enforcement ruleset to the port.
set policy-enforcement disabled	Disable the Policy Enforcement rule function in the port.
set policy-enforcement-operation-mode <prevention monitor>	Set the Policy Enforcement operation mode to “prevention” mode or “monitor” mode.
set l2-policy-enforcement enabled <ruleset-name>	Apply the designated L2 Policy Enforcement ruleset to the port.
set l2-policy-enforcement disabled	Disable the L2 Policy Enforcement rule function in the port.
set l2-policy-enforcement-operation-mode <prevention monitor>	Set the L2 Policy Enforcement operation mode to “prevention” mode or “monitor” mode.
set dos <enabled disabled>	Enable or disable Denial of Service Prevention (DOS) function in the port(s).
set dos-rule enabled <rule-name> <threshold>	Enable the rule of Denial of Service Prevention (DOS) function and set the threshold. - TCP_SYN_Flood (threshold: 10000) - TCP_Port_FIN_Scan (threshold: 1800) - TCP_Port_Xmas_Scan (threshold: 1800) - UDP_Flood (threshold: 10000) - ICMP_Flood (threshold: 10000) - IGMP_Flood (threshold: 10000) - UDP_Port_Scan (threshold: 250) - TCP_Port_SYN_Scan (threshold: 1800) - TCP_Port_NULL_Scan (threshold: 1800) - ARP_Scan (threshold: 120) - IP_Sweep (threshold: 120) - Ping_Sweep (threshold: 120)
set dos-rule disabled <rule-name>	Disable the rule of Denial of Service Prevention (DOS) function. - TCP_SYN_Flood - TCP_Port_FIN_Scan - TCP_Port_Xmas_Scan - UDP_Flood - ICMP_Flood

Command Line	Description
	• IGMP_Flood • UDP_Port_Scan • TCP_Port_SYN_Scan • TCP_Port_NULL_Scan • ARP_Scan • IP_Sweep • Ping_Sweep
set dos-operation-mode <prevention monitor>	Set the DoS operation mode to “prevention” mode or “monitor” mode.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

8.2 EdgeIPS, EdgeIPS LE, EdgeFire

8.2.1 Viewing Policy Enforcement Rules

Procedure (For EdgeIPS/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Type the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# show policy-enforcement
```

1. The output displays the Policy Enforcement rules below.

```
EdgeIPS# show policy-enforcement

      Policy Enforcement Rule Settings:      enabled
      Operation Mode:                       monitor
      Default Rule Action:                   deny
      Rule List:                            now:4 / max:512

Description:      Priority: 1      Name:    policy-rule-1      Status: enabledD
Description:      Priority: 2      Name:    policy-rule-2      Status: enabledD
Description:      Priority: 3      Name:    policy-rule-3      Status: enabledD
Description:      Priority: 4      Name:    policy-rule-4      Status: enabledD

EdgeIPS#
```

```
EdgeIPS-LE# show policy-enforcement

      Policy Enforcement Rule Settings:      enabled
      Operation Mode:                       prevention
      Default Rule Action:                   accept
      Rule List:                            now:4 / max:512

Description:      Priority: 1      Name:    policy-rule-1      Status: enabledD
Description:      Priority: 2      Name:    policy-rule-2      Status: enabledD
Description:      Priority: 3      Name:    policy-rule-3      Status: enabledD
Description:      Priority: 4      Name:    policy-rule-4      Status: enabledD

EdgeIPS-LE#
```

```
EdgeFire# show policy-enforcement

      Policy Enforcement Rule Settings:      enabled
      Operation Mode:                       monitor
      Default Rule Action:                   deny
      Rule List:                            now:4 / max:512

Description:      Priority: 1      Name:    policy-rule-1      Status: enabledD
Description:      Priority: 2      Name:    policy-rule-2      Status: enabledD
Description:      Priority: 3      Name:    policy-rule-3      Status: enabledD
Description:      Priority: 4      Name:    policy-rule-4      Status: enabledD

EdgeFire#
```

8.2.2 Configuring Policy Enforcement Rules

Procedure (For EdgeIPS/EdgeIPS LE/EdgeFire in Bridge Mode)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
EdgeIPS# set configure
EdgeIPS(set configure) # edit policy-enforcement
```

3. The output displays the Policy Enforcement rules below. Now you are already in the editor mode to configure the Policy Enforcement rules.

```
EdgeIPS(set configure)# edit policy-enforcement

Policy Enforcement Rule Settings:    enabled
Operation Mode:                      monitor
Default Rule action:                 deny
Rule list:                           now:4 / max:512
Priority: 1   Name: policy-rule-1   Status: enabled Description:
Priority: 2   Name: policy-rule-2   Status: enabled Description:
Priority: 3   Name: policy-rule-3   Status: enabled Description:
Priority: 4   Name: policy-rule-4   Status: enabled Description:
```

EdgeIPS(cfg-edit policy-enforcement)#

1. Input the below command lines to configure the rules.

Command Line	Description
set enabled <true false>	Enable or disable the Policy Enforcement settings.
set operation-mode <prevention monitor>	Set the operation mode of Policy Enforcement to “prevention” mode or “monitor” mode.
set default-action <accept accept-log deny-log>	Set the default action of the Policy Enforcement rules.
edit <rule-name>	Create a new Policy Enforcement rule or edit an existing rule.
remove <rule-name>	Delete the Policy Enforcement rule.
move <rule-name> <priority>	Move the Policy Enforcement rule to the designated order.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a Policy Enforcement rule to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Set the name of Policy Enforcement rule.

Command Line	Description
set description <description>	Set the description of Policy Enforcement rule.
set enabled <true false>	Enable or disable the Policy Enforcement rule.
set source-ip any	Set the source IP address to any IP address.
set source-ip single <ip address>	Set the source IP address to a specific IP address.
set source-ip range <start-ip address> <end-ip address>	Set the source IP address to a specific IP range.
set source-ip subnet <ip subnet> <cidr value>	Set the source IP address to a specific IP subnet.
set source-ip object <ip-object-name>	Apply a specific IP object to the source IP address.
set destination-ip any	Set the destination IP address to any IP address.
set destination-ip single <ip address>	Set the destination IP address to a specific IP address.
set destination-ip range <start-ip address> <end-ip address>	Set the destination IP address to a specific IP range.
set destination-ip subnet <ip subnet> <cidr value>	Set the destination IP address to a specific IP subnet.
set destination-ip object <ip-object-name>	Apply a specific IP object to the destination IP address.
set service any	Set the service port to any port.
set service custom <protocol-number>	Set a custom protocol number.
set service tcp any	Set the service port to any TCP port.
set service tcp custom <start-port> <end-port>	Set the service port to a specific TCP port range.
set service udp any	Set the service port to any UDP port.
set service udp custom <start-port> <end-port>	Set the service port to a specific UCP port range.
set service icmp any	Set the ICMP protocol to any protocol number.
set service icmp custom <type> <code>	Set the ICMP protocol to a specific type and code.
set service object <service-object-name>	Apply a specific service object to the service port.
set vlan-id any	Set the VLAN ID to any ID number.
set vlan-id [<vlan-id-1>, <vlan-id-2>, ...]	Set the VLAN ID to [<vlan-id-1>, <vlan-id-2>, ...]. The maximum number of VLAN ID for one Policy Enforcement is 5.
set action <accept accept-log deny-log>	Set the action to accept, accept & log or deny & log.

Command Line	Description
	 If you set the action to “deny-log”, you cannot configure “ips-profile” and “file-filter-profile” via the commands.
set protocol-filter-profile <profile-name> <accept accept-log deny-log>	Enable the protocol filter profile and import a designated profile, and select whether to allow or deny network traffic that matches the protocol filter.
set protocol-filter-profile disabled	Disable the protocol filter profile.
set ips-profile <profile-name>	Enable the IPS profile and import a designated profile.
set ips-profile disabled	Disable the IPS profile.
set file-filter-profile <profile-name>	Enable the file filter profile and import a designated profile.
set file-filter-profile disabled	Disable the file filter profile.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

Procedure (For EdgeFire in Gateway Mode)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeFire$ enable
```

```
EdgeFire# set configure
```

```
EdgeFire(set configure) # edit policy-enforcement
```

1. The output displays the Policy Enforcement rules below. Now you are already in the editor mode to configure the Policy Enforcement rules.

```
EdgeFire(set configure)# edit policy-enforcement
```

```
Policy Enforcement Rule Settings:    enabled
Operation Mode:                      monitor
Default Rule action:                 deny
```

```
Rule list:          now:4 / max:512
Priority: 1  Name:  policy-rule-1  Status: enabled Description:
Priority: 2  Name:  policy-rule-2  Status: enabled Description:
Priority: 3  Name:  policy-rule-3  Status: enabled Description:
Priority: 4  Name:  policy-rule-4  Status: enabled Description:
```

EdgeFire(cfg-edit policy-enforcement)#

1. Input the below command lines to configure the rules.

Command Line	Description
set enabled <true false>	Enable or disable the Policy Enforcement settings.
set operation-mode <prevention monitor>	Set the operation mode of Policy Enforcement to “prevention” mode or “monitor” mode.
set default-action <accept accept-log deny-log>	Set the default-action of the Policy Enforcement rules.
edit <rule-name>	Create a new Policy Enforcement rule or edit an existing rule.
remove <rule-name>	Delete the Policy Enforcement rule.
move <rule-name> <priority>	Move the Policy Enforcement rule to the designated order.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a Policy Enforcement rule to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Set the name of Policy Enforcement rule.
set description <description>	Set the description of Policy Enforcement rule.
set enabled <true false>	Enable or disable the Policy Enforcement rule.
set source-ip any	Set the source IP address to any ID address.
set source-ip single <ip address>	Set the source IP address to a specific IP Address.
set source-ip range <start-ip address> <end-ip address>	Set the source IP address to a specific IP range.
set source-ip subnet <ip subnet> <cidr value>	Set the source IP address to a specific IP subnet.
set source-ip object <ip-object-name>	Apply a specific IP object to the source IP address.

Command Line	Description
set destination-ip any	Set the destination IP address to any ID address.
set destination-ip single <ip address>	Set the destination IP address to a specific IP Address.
set destination-ip range <start-ip address> <end-ip address>	Set the destination IP address to a specific IP range.
set destination-ip subnet <ip subnet> <cidr value>	Set the destination IP address to a specific IP subnet.
set destination-ip object <ip-object-name>	Apply a specific IP object to the destination IP address.
set service any	Set the service port to any port.
set service custom <protocol-number>	Set a custom protocol number.
set service tcp any	Set the service port to any TCP port.
set service tcp custom <start-port> <end-port>	Set the service port to a specific TCP port range.
set service udp any	Set the service port to any UDP port.
set service udp custom <start-port> <end-port>	Set the service port to a specific UCP port range.
set service icmp any	Set the ICMP protocol to any protocol number.
set service icmp custom <type> <code>	Set the ICMP protocol to a specific type and code.
set service object <service-object-name>	Apply a specific service object to the service port.
set interface-direction <any wan-to-lan lan-to-wan wan-to-dmz dmz-to-wan lan-to-dmz dmz-to-lan lan-to-lan vpn-to-wan lan-to-vpn vpn-to-lan dmz-to-vpn vpn-to-dmz>	Set the interface direction to check the connection traffic in the policy enforcement rules. - any: no restriction on direction. EdgeFire checks all the connection traffic from any network interfaces. - wan-to-lan: EdgeFire checks the connection traffic from the WAN interface to the LAN interface. - lan-to-wan: EdgeFire checks the connection traffic from the LAN interface to the WAN interface. - wan-to-dmz: EdgeFire checks the connection traffic from the WAN interface to the DMZ interface. - dmz-to-wan: EdgeFire checks the connection traffic from the DMZ interface to the WAN interface. - lan-to-dmz: EdgeFire checks the connection traffic from the LAN interface to the DMZ interface. - dmz-to-lan: EdgeFire checks the connection traffic from the DMZ interface to the LAN interface. - lan-to-lan: EdgeFire checks the connection traffic from the LAN interface to another LAN interface.

Command Line	Description
	- vpn-to-wan: EdgeFire checks the connection traffic from the VPN interface to another WAN interface. - lan-to-vpn: EdgeFire checks the connection traffic from the LAN interface to another VPN interface. - vpn-to-lan: EdgeFire checks the connection traffic from the VPN interface to another LAN interface. - dmz-to-vpn: EdgeFire checks the connection traffic from the DMZ interface to another VPN interface. - vpn-to-dmz: EdgeFire checks the connection traffic from the VPN interface to another DMZ interface.
set action <accept accept-log deny-log>	Set the action to accept, accept & log or deny & log.  If you set the action to “deny-log”, you cannot configure “ips-profile” and “file-filter-profile” via the commands.
set protocol-filter-profile <profile-name> <accept accept-log deny-log>	Enable the protocol filter profile and import a designated profile, and select whether to allow or deny network traffic that matches the protocol filter.
set protocol-filter-profile disabled	Disable the protocol filter profile.
set ips-profile <profile-name>	Enable the IPS profile and import a designated profile.
set ips-profile disabled	Disable the IPS profile.
set file-filter-profile <profile-name>	Enable the file filter profile and import a designated profile.
set file-filter-profile disabled	Disable the file filter profile.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

9 Administration

This chapter describes the available administrative settings for the Edge series devices.

9.1 Viewing Device Name and Device Location Information

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# show device
```

1. The output displays the IP object profiles below.

```
EdgeIPS# show device
      Host name:      EdgeIPS      Location:
EdgeIPS#
```

```
EdgeIPS-Pro# show device
      Host name:      EdgeIPS-Pro    Location:
EdgeIPS-Pro#
```

```
EdgeIPS-LE# show device
      Host name:      EdgeIPS-LE    Location:
EdgeIPS-LE#
```

```
EdgeFire# show device
      Host name:      EdgeFire      Location:
EdgeFire#
```

9.2 Configuring Device Name and Device Location Information

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# set configure
```

```
EdgeIPS(set configure)# edit device
```

3. The output displays the device name and location below. Now you are already in the editor mode to configure the settings.

```
EdgeIPS(set configure)# edit device
```

```
      Host name:      EdgeIPS      Location:
```

```
EdgeIPS(cfg-edit device)#
```

1. Input the below command lines to configure the device name and location.

Command Line	Description
set hostname <name>	Set the hostname of the device.
set location <location>	Set the location description of the device.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

9.3 Viewing Management Protocols and Ports

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# show remote-access
```

1. The output displays the IP object profiles below.

```
EdgeIPS# show remote-access
```

```

      HTTP port:      80      disabled
      HTTPS port:     443     enabled
      SSH port:       22      enabled
      Telnet port:    23      disabled
```

```
EdgeIPS# █
```

```
EdgeIPS-Pro# show remote-access
```

```

      HTTP port:      80      disabled
      HTTPS port:     443     enabled
      SSH port:       22      enabled
      Telnet port:    23      disabled
```

```
EdgeIPS-Pro# █
```

```
EdgeIPS-LE# show remote-access
```

```

      HTTP port:      80      disabled
      HTTPS port:     443     enabled
      SSH port:       22      enabled
      Telnet port:    23      disabled
```

```
EdgeIPS-LE# █
```

```
EdgeFire# show remote-access
```

```

      HTTP port:      80      disabled
      HTTPS port:     443     enabled
      SSH port:       22      enabled
      Telnet port:    23      disabled
```

```
EdgeFire# █
```

9.4 Configuring Management Protocols and Ports

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
EdgeIPS# set configure
EdgeIPS(set configure)# edit remote-access
```

3. The output displays the management protocols and ports below. Now you are already in the editor mode.

```
EdgeIPS(set configure)# edit remote-access

          HTTP port:      80          disabled
          HTTPS port:    443          enabled
          SSH port:      22          enabled
          Telnet port:   23          disabled
```

```
EdgeIPS(cfg-edit remote-access)#
```

1. Input the below command lines to configure the management protocol and port settings.

Command Line	Description
set http enabled <port-number>	Enable HTTP protocol for the login of web management console and set the port number.  When HTTP protocol is enabled, HTTPS protocol will be disabled.
set https enabled <port-number>	Enable HTTPS protocol for the login of web management console and set the port number.  When HTTPS protocol is enabled, HTTP protocol will be disabled.
set ssh enabled <port-number>	Enable SSH protocol for the login of SSH client and set the port number.
set ssh disabled	Disable SSH protocol for the login of SSH client.
set telnet enabled <port-number>	Enable TELNET protocol for the login of TELNET client and set the port number.
set telnet disabled	Disable TELNET protocol for the login of TELNET client.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.

Command Line	Description
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

9.5 Viewing Access Control List

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
EdgeIPS# show acl
```

3. The output displays the access control list below.

```
EdgeIPS# show acl

      Enable Access Control List:      false
      Allow IP 1:
      Allow IP 2:
      Allow IP 3:
      Allow IP 4:

EdgeIPS#
```

```
EdgeIPS-Pro# show acl

      Enable Access Control List:      false
      Allow IP 1:
      Allow IP 2:
      Allow IP 3:
      Allow IP 4:

EdgeIPS-Pro#
```

```
EdgeIPS-LE# show acl

      Enable Access Control List:      false
      Allow IP 1:
      Allow IP 2:
      Allow IP 3:
      Allow IP 4:

EdgeIPS-LE#
```

```
EdgeFire# show acl

      Enable Access Control List:      false
      Allow IP 1:
      Allow IP 2:
      Allow IP 3:
      Allow IP 4:

EdgeFire#
```

9.6 Configuring Access Control List

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.

2. Input the below commands.

```
EdgeIPS$ enable
EdgeIPS# set configure
EdgeIPS(set configure)# edit acl
```

3. The output displays the access control list below. Now you are already in the editor mode.

```
EdgeIPS(set configure)# edit acl

      Enable Access Control List:  false
      Allow IP 1:
      Allow IP 2:
      Allow IP 3:
      Allow IP 4:

EdgeIPS(cfg-edit acl)#
```

1. Input the below command lines to configure the access control list settings.

Command Line	Description
set enabled <true false>	Enable or disable the access control list function.
set ip [ip1,ip2,ip3,ip4]	Add/update the IP address(es) into the access control list.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

9.7 Viewing EdgeOne Connection Status

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
EdgeIPS# show edgeone-server
```

3. The output displays the status below.

```
EdgeIPS# show edgeone-server
      Name: 10.8.101.10      Status: enabled
EdgeIPS#
```

```
EdgeIPS-Pro# show edgeone-server
Name: 10.8.101.10 Status: enabled
EdgeIPS-Pro#

EdgeIPS-LE# show edgeone-server
Name: 10.8.101.10 Status: enabled
EdgeIPS-LE#

EdgeFire# show edgeone-server
Name: 10.8.101.10 Status: enabled
EdgeFire#
```

9.8 Configuring EdgeOne Connection Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
EdgeIPS# set configure
EdgeIPS(set configure)# edit edgeone-server
```

3. The output displays the EdgeOne connection status below. Now you are already in the editor mode.

```
EdgeIPS(set configure)# edit edgeone-server

Name: 10.24.7.45 Status: enabled

EdgeIPS(cfg-edit edgeone-server)#
```

1. Input the below command lines to configure the EdgeOne connection settings.

Command Line	Description
set enabled <true false>	Enable or disable the EdgeOne connection settings.
set address <ip-address domain-name>	Edit the IP address of domain name of the EdgeOne server.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

9.9 Viewing SNMP Settings and Traps

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
EdgeIPS# show snmp-settings
EdgeIPS# show snmp-trap-settings
```

3. The output displays the SNMP settings below.

```
EdgeIPS# show snmp-settings

      Status:      disabled
      Port:        161
      v1/v2c Settings:
      v3 Settings:
EdgeIPS# show snmp-trap-settings

      Snmp Trap Receivers:      now:0 / max:5
EdgeIPS#
```

```
EdgeIPS-Pro# show snmp-settings

      Status:      disabled
      Port:        161
      v1/v2c Settings:
      v3 Settings:
EdgeIPS-Pro# show snmp-trap-settings

      Snmp Trap Receivers:      now:0 / max:5
EdgeIPS-Pro#
```

```
EdgeIPS-LE# show snmp-settings

      Status:      disabled
      Port:        161
      v1/v2c Settings:
      v3 Settings:
EdgeIPS-LE# show snmp-trap-settings

      Snmp Trap Receivers:      now:0 / max:5
EdgeIPS-LE#
```

```
EdgeFire# show snmp-settings

      Status:      disabled
      Port:        161
      v1/v2c Settings:
      v3 Settings:
EdgeFire# show snmp-trap-settings

      Snmp Trap Receivers:      now:0 / max:5
EdgeFire#
```

9.10 Configuring SNMP Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# set configure
```

```
EdgeIPS(set configure)# edit snmp-settings
```

3. The output displays the SNMP settings below. Now you are already in the editor mode.

```
EdgeIPS(set configure)# edit snmp-settings
```

```
Status:      disabled
```

```
Port:        161
```

```
v1/v2c Settings:
```

```
v3 Settings:
```

```
EdgeIPS(cfg-edit snmp-settings)#
```

1. Input the below command lines to configure SNMP settings.

Command Line	Description
set enabled <true false>	Enable or disable SNMP settings.
set port <port-number>	Set the SNMP port. The default setting is Port 161.
edit community <community-name>	Set the community name.
remove community <community-name>	Remove the community name.
edit usm-user <user-name>	Add and configure a USM user.
remove usm-user <user-name>	Remove an existing USM user.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a community to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Edit the name of the community.
append trusted-address <<ip> <ip> <cidr>>	To add the trusted IP address, you can add one single IP address (e.g. append trusted-address 1.1.1.1) or a sub network (e.g. append trusted-address 2.2.2.2 30).
remove <index>	Remove the trusted address in the designated index of priority.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).

Command Line	Description
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a USM user to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Set the name of a USM user.
set security-level <no-auth-no-priv auth-no-priv auth-and-priv>	Set the security level to one of the three options. • no authentication/private key required • need authentication but no private key • need authentication and private key Set the security level to “need authentication and private key” to configure the following setting items.
set auth-key-protocol <SHA MD5>	Set the hash format for the authentication key. • SHA • MD5
set auth-key <auth-key>	Set the value of the authentication key.
set priv-key-protocol <DES AES>	Set the encryption method for the authentication key. • DES • AES
set priv-key <priv-key>	Set the value of the private key.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

9.11 Configuring SNMP Trap Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
EdgeIPS# set configure
EdgeIPS (set configure)# edit snmp-trap-settings
```

3. The output displays the SNMP traps below. Now you are already in the editor mode.

```
EdgeIPS(set configure)# edit snmp-trap-settings

Name: test          Status: disabled
Description:
Version:    v1
Address:    1.1.1.1   Port: 1
Community:  public
Type: trap      Retries: -
High CPU Usage: enabled
High Memory Usage: enabled
Low Disk Space for Logs: enabled
Interface IP Address Changed: enabled
Network Interface Linked Up: enabled
Network Interface Linked Down: enabled
```

```
EdgeIPS(cfg-edit snmp-trap-settings)#
```

1. Input the below command lines to configure the SNMP trap settings.

Command Line	Description
edit <name>	Set the profile name of SNMP trap.
delete <name>	Delete the profile of SNMP trap.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. If you choose a SNMP profile to edit, further input the below command lines to edit its settings.

Command Line	Description
set name <new-name>	Set the profile name of the SNMP trap.
set enabled <true false>	Enable or disable the SNMP trap profile.
set description <description>	Set the description of the SNMP trap profile.
set address <IP address>	Set the server IP address.
set port <port-number>	Set the server port.
set community <community>	Set the trap community name.
set version v1	Set the SNMP version to SNMPv1
set version v2c <trap> <inform> <retry-times>	Set the SNMP version to SNMPv2c, the message type and the retry times: • Trap • InformRequest
set event-notification enabled <all cpu-usage-high cpu-temperature-high memory-usage-high disk-usage-high ip-address-changed link-up link-down ha-heartbeat-failed fan-failed psu-failed local-disk-failed universal-bypass-triggered logical-port-pair-failed hardware-bypass-fail-open-triggered hardware-bypass-fail-close-triggered hardware-bypass-force-open-triggered incorrect-port-connection-detected>	Set the event notification to enable one or multiple of the below messages. • All of the messages • High CPU Usage • High CPU Temperature • High Memory Usage • Log Disk Space for Logs • Interface IP Address Changed • Network Interface Linked Up • Network Interface Linked Down • HA Heartbeat Failed • Fan Failed • Power Failed • Local Disk Failed • Logical Port Pairs Failed • Hardware Bypass Triggered (Fail Open) • Hardware Bypass Triggered (Fail Close) • Hardware Bypass Triggered (Force Open) • Incorrect Edge Device Port Connection Detected for Assets  1. Only EdgeIPS Pro and EdgeFire support “HA Heartbeat Failed” message option. 2. Only EdgeIPS Pro supports “Fan Failed”, “Power Failed”, “Local Disk Failed”, “Logical Port Pairs Failed”, “Hardware Bypass Triggered (Fail Open)”, “Hardware Bypass Triggered (Fail

Command Line	Description
	Close”, and “Hardware Bypass Triggered (Force Open)” message options.
set event-notification disabled <all cpu-usage-high cpu-temperature-high memory-usage-high disk-usage-high ip-address-changed link-up link-down ha-heartbeat-failed fan-failed psu-failed local-disk-failed universal-bypass-triggered logical-port-pair-failed hardware-bypass-fail-open-triggered hardware-bypass-fail-close-triggered hardware-bypass-force-open-triggered incorrect-port-connection-detected>	Set the event notification to disable one or multiple of the below messages. • All of the messages • High CPU Usage • High CPU Temperature • High Memory Usage • Log Disk Space for Logs • Interface IP Address Changed • Network Interface Linked Up • Network Interface Linked Down • HA Heartbeat Failed • Fan Failed • Power Failed • Local Disk Failed • Logical Port Pairs Failed • Hardware Bypass Triggered (Fail Open) • Hardware Bypass Triggered (Fail Close) • Hardware Bypass Triggered (Force Open) • Incorrect Edge Device Port Connection Detected for Assets  1. Only EdgeIPS Pro and EdgeFire support “HA Heartbeat Failed” message option. 2. Only EdgeIPS Pro supports “Fan Failed”, “Power Failed”, “Local Disk Failed”, “Logical Port Pairs Failed”, “Hardware Bypass Triggered (Fail Open)”, “Hardware Bypass Triggered (Fail Close)”, and “Hardware Bypass Triggered (Force Open)” message options.
set event-notification cpu-usage-high <threshold> <interval>	Set the CPU usage rate threshold (%) and trap triggering interval (seconds) for the “High CPU Usage” event notification.
set event-notification cpu-temperature-high <threshold> <interval>	Set the CPU temperature threshold (°C) and trap triggering interval (seconds) for the “High CPU Temperature” event notification.
set event-notification memory-usage-high <threshold> <interval>	Set the memory usage rate threshold (%) and trap triggering interval (seconds) for the “High Memory Usage” event notification.

Command Line	Description
set event-notification disk-usage-high <threshold> <interval>	Set the disk usage rate threshold (%) and trap triggering interval (seconds) for the “Low Disk Space for Logs” event notification.
set event-notification fan-failed <times> <interval>	Set the failure time threshold and trap triggering interval (seconds) for the “Fan Failed” event notification.
set event-notification psu-failed <times> <interval>	Set the failure time threshold and trap triggering interval (seconds) for the “Power Failed” event notification.
set event-notification incorrect-port-connection-detected <interval>	Set the check interval (hours) for the “Incorrect Edge Device Port Connection Detected for Assets” event notification.
preview	List the preview settings.
done	Keep the current settings (the configuration has not yet been saved).
done force	Keep the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

9.12 Viewing NTP Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# show ntp-server
```

1. The output displays the NTP settings below.

```
EdgeIPS# show ntp-server
Name: 10.8.101.10 Status: enabled
EdgeIPS#
```

```
EdgeIPS-Pro# show ntp-server
Name: 10.8.101.10 Status: enabled
EdgeIPS-Pro#
```

```
EdgeIPS-LE# show ntp-server
Name: 10.8.101.10 Status: enabled
EdgeIPS-LE#
```

```
EdgeFire# show ntp-server
Name: pool.ntp.org Status: disabled
EdgeFire#
```

9.13 Configuring NTP Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# set configure
```

```
EdgeIPS(set configure)# edit ntp-server
```

1. The output displays the NTP server settings below. Now you are already in the editor mode.

```
EdgeIPS(set configure)# edit ntp-server
```

Name: 10.24.7.45

Status: enabled

```
EdgeIPS(cfg-edit ntp-server)#
```

1. Input the below command lines to configure NTP server settings.

Command Line	Description
set enabled <true false>	Enable or disable the NTP server settings.
set address <ip-address domain-name>	Edit the IP address or domain name of NTP server.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.



1. When the device is connected to the EdgeOne server, the NTP setting is not configurable.
2. The EdgeOne system synchronizes the system time with its managed instances.

9.14 Syncing NTP Server

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# sync ntp-server
```

1. The output displays the synced NTP time below.

```
EdgeIPS# sync ntp-server
2023-08-08T09:14:01Z
EdgeIPS#
```

```
EdgeIPS-Pro# sync ntp-server
2023-08-08T09:14:06Z
EdgeIPS-Pro#
```

```
EdgeIPS-LE# sync ntp-server
2023-08-08T09:14:10Z
EdgeIPS-LE#
```

```
EdgeFire# sync ntp-server
2023-08-08T17:19:50+08:00
EdgeFire#
```

9.15 Viewing Time Zone Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# show timezone
```

1. The output displays the time zone below.

```
EdgeIPS# show timezone
name: (GMT+00:00) UTC   timeZoneID: UTC
offset: 0
EdgeIPS#
```

```
EdgeIPS-Pro# show timezone
name: (GMT+00:00) UTC   timeZoneID: UTC
offset: 0
EdgeIPS-Pro#
```

```
EdgeIPS-LE# show timezone
name: (GMT+00:00) UTC   timeZoneID: UTC
offset: 0
EdgeIPS-LE#
```

```
EdgeFire# show timezone
name: (GMT+00:00) UTC   timeZoneID: UTC
offset: 0
EdgeFire#
```

9.16 Configuring Time Zone Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# set configure
```

```
EdgeIPS(set configure)# edit timezone
```

1. The output displays the time zone information below. Now you are already in the editor mode.

```
EdgeIPS(set configure)# edit timezone
```

```
name: (GMT+08:00) Asia/Taipei  timeZoneID: Asia/Taipei
offset: 28800
```

```
EdgeIPS(cfg-edit ntp-server)#
```

1. Input the below command lines to configure time zone.

Command Line	Description
set zone <zone-id>	Set the time zone.
preview	List the preview settings.
save	Save the current settings.
save force	Save the current settings without being prompted for confirmation.
exit	Return to the upper layer of the command lines.
exit force	Return to the upper layer of the command lines without being prompted for confirmation.

1. Once you decide to save the configuration, input “save” and press enter.
2. Input “exit” and press enter to leave the current function settings.

9.17 Configuring System Time Settings

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

1. Input the below command line to configure the system time.

Command Line	Description
set system time <YYYY-MM-DDTHH:mm:ssZ>	Set the system time in UTC format. • YYYY - year • MM - month number (2-digit) • DD - day of month (2-digit) • HH - hours (2-digit, 24-hour format) • mm - minutes (2-digit) • ss - seconds (2-digit)

Command Line	Description
	Z - UTC offset (1-digit) For example, set system time 2023-08-08T18:01:57Z, which means to set the system time to 2023-08-08T18:01:57, and the system time will display in the format of “2023-08-08T18:01:57+08:00”.

9.18 Using MTR (My Traceroute) Tools

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

3. Input one of the following command lines to use My Traceroute (traceroute and ping) tools.

Command Line	Description
mtr icmp <ip or fqdn>	MTR with ICMP to traceroute the IP or FQDN of a target machine.
mtr tcp <ip or fqdn>	MTR with TCP to traceroute the IP or FQDN of a target machine.
mtr udp <ip or fqdn>	MTR with UDP to traceroute the IP or FQDN of a target machine.
ping <ip or fqdn>	Ping the IP or FQDN or a target machine.

4. After you input one of the command lines and press enter, the system will display the result.

```
EdgeIPS# mtr icmp 1.1.1.1
```

```
MTR ICMP 1.1.1.1 Started: 2022-12-14T9:25:42
MTR is processing...connect to 1.1.1.1 (icmp) succeeded!
HOST: EdgeIPS
```

```
Loss Sent Last Avg Best Worst StDev
1 |-- 10.8.127.254
0% 3 1.430 1.449 1.430 1.479 0.02
2 |-- 118.163.84.254
0% 3 11.960 11.798 10.401 13.034 1.08
3 |-- 168.95.83.198
0% 3 3.666 3.594 3.429 3.687 0.12
4 |-- 220.128.27.14
0% 3 3.952 7.503 3.952 13.930 4.55
5 |-- 220.128.2.105
0% 3 9.419 11.015 3.874 19.752 6.58
6 |-- 203.75.230.129
0% 3 10.909 8.731 6.293 10.909 1.89
7 |-- 1.1.1.1
0% 3 5.300 4.426 3.592 5.300 0.70
```

```
EdgeIPS#
```

9.19 System Reboot

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

1. Input the below command line to reboot the device.

Command Line	Description
reboot	Reboot the device

1. After you input “reboot” and press enter, the system will display a prompt for confirmation.

```
EdgeIPS$ reboot
```

```
Are you sure you want to reboot?: yes/no
```

1. Input “yes” and press enter. The device will reboot automatically.

9.20 System Power Off

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

3. Input the below command line to power off the device.

Command Line	Description
power off	Power off the device.

4. After you input “power off” and press enter, the system will display a prompt for confirmation.

```
EdgeIPS# power off
```

```
Are you sure you want to power off device?: yes/no
```

5. Input “yes” and press enter. The device will be powered off automatically.



Once the device is powered off, hardware bypass will start to operate. To power on the device, user needs to unplug and plug in the terminal block or the power adapter again.

9.21 Viewing Device Firmware Information

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

```
EdgeIPS# show partition
```

3. The output displays the partition firmware information below.

```
EdgeIPS# show partition
```

```
partition name: boot1    status: standby
firmware version: IPS_G02_1.1.7
firmware build time: 2020-08-24T09:33:30Z
```

```
partition name: boot2    status: running
firmware version: IPS_G02_2.0.11
firmware build time: 2023-05-23T06:57:11Z
```

```
EdgeIPS#
```

```
EdgeIPS-Pro# show partition
```

```
partition name: boot1    status: running
firmware version: IPSP_T01_2.0.6
firmware build time: 2023-07-25T01:32:02Z
```

```
partition name: boot2    status: standby
firmware version: IPSP_T01_2.0.6
firmware build time: 2023-07-25T01:32:02Z
```

```
EdgeIPS-Pro#
```

```
EdgeIPS-LE# show partition
```

```
partition name: boot1    status: standby
firmware version: IPSLE_T01_2.0.0
firmware build time: 2023-06-29T07:41:29Z
```

```
partition name: boot2    status: running
firmware version: IPSLE_T01_2.0.0
firmware build time: 2023-06-29T07:41:29Z
```

```
EdgeIPS-LE#
```

```
EdgeFire# show partition
```

```
partition name: boot1    status: standby
firmware version: IEF_T01_2.0.6
firmware build time: 2023-02-24T16:18:17+08:00
```

```
partition name: boot2    status: running
firmware version: IEF_T01_2.0.7
firmware build time: 2023-03-03T14:31:28+08:00
```

```
EdgeFire#
```



The Edge series devices can have up to two versions of firmware installed. Each firmware is installed in its own individual partition. At any given point of time, one partition is in the [Running] status that indicates the currently running and active firmware. The other partition will be in the [Standby] status that indicates an alternative or standby firmware.

9.22 Switching Firmware Partition

To switch firmware partition from the [Standby] partition to the [Running] partition, the user may need to boot the [Standby] partition and load the firmware from there.

Procedure (For EdgeIPS/EdgeIPS Pro/EdgeIPS LE/EdgeFire)

1. Log in to the CLI management console.
2. Input the below commands.

```
EdgeIPS$ enable
```

3. Input the below command line to switch the firmware partition.

Command Line	Description
switch partition	Switch the firmware partition.

4. After you input “switch partition” and press enter, the system will switch the firmware partition.

```
EdgeIPS$ switch partition
```

This operation will switch to standby partition after reboot! Are you sure you want to switch partition?: yes/no exit

5. Input “yes” and press enter. The device will reboot the [standby] partition automatically.

10 Appendix A: Edge Series Product Feature Matrix

	EdgeIPS	EdgeIPS Pro	EdgeIPS LE	EdgeFire
Device				
Network Settings	V	V	V	X
Network				
Network Interface Settings	X	X	X	V (Gateway Mode)
Operation Mode Settings	X	X	X	V
NAT				
NAT Rule	X	X	X	V (Gateway Mode)
Routing				
Static Route	X	X	X	V (Gateway Mode)
Object Profiles				
IP Object Profiles	V	V	V	V
Service Object Profiles	V	V	V	V
Antivirus Profiles and File Exception Settings	X	V	X	X
Security				
Policy Enforcement Rule Settings	V	V	V	V
Policy Enforcement Rule Set Settings	X	V	X	X
Port Security	X	V	X	X
Administration				
Device Name and Device Location Information Settings	V	V	V	V
Management Protocol and Port Settings	V	V	V	V
Access Control List	V	V	V	V
EdgeOne Connection Settings	V	V	V	V
SNMP and Traps	V	V	V	V
NTP Settings	V	V	V	V

	EdgeIPS	EdgeIPS Pro	EdgeIPS LE	EdgeFire
Time Zone Settings	V	V	V	V
System Time Settings	V	V	V	V
MTR (My Traceroute) Tools	V	V	V	V
System Reboot	V	V	V	V
System Power Off	V	V	V	V
Firmware Settings	V	V	V	V