



EdgeIPS LE 102

Administrator's Guide

Version 2.2
September 25, 2025

TXOne Networks Incorporated reserves the right to make changes to this document and to the product described herein without notice. Before installing and using the product, review the readme files, release notes, and/or the latest version of the applicable documentation, which are available at <https://my.txone.com>.

TXOne Networks is a registered trademark of TXOne Networks Incorporated. All other product names may be trademarks or registered trademarks of their owners.

In order to protect the value of TXOne Networks' logos and marks, it is very important that they be used appropriately and only by TXOne Networks and Partners with a current and valid partnership agreement.

The following marks are owned exclusively by TXOne Networks and may be registered in the U.S. or other countries. TXOne Networks reserves the right in its sole discretion to add additional marks to or remove marks from this list at any time and the failure of a TXOne trademark or logo to appear on this list shall not be construed as a waiver of any of TXOne Networks' rights in such trademark or logo.

- EdgeIPS
- EdgeIPS Pro
- EdgeIPS LE
- EdgeFire
- EdgeOne
- OT Defense Console

Trademark ownership is attributed in two ways, with the use of a trademark symbol (such as [™] or ®) after the trademark, and with a trademark legend, usually found at the end of a document in legible text following the copyright notice. Whenever you use one of TXOne trademarks, you must also include a proper trademark attribution statement somewhere on the same document or webpage, such as the following: "The TXOne Networks® and EdgeIPS[™] trademarks are owned by TXOne Networks, Inc. and is used with permission." Remember, mere inclusion of a trademark symbol and legend does not entitle you to use a TXOne trademark.

Data Security Warning

Before removing and disposing of this product, ensure all data and configurations stored on the device are erased. You can do this by:

- manually resetting the product to factory settings, or
- handing the product to the TXOne support team, who will help you clear all stored data and configurations.

TXOne Support Team Contact Information

- Email: support@txone.com
- Website: <https://www.txone.com/>
- Call Center: <https://help.txone.com/>
- Phone:
 - US: +1 3465867975
 - Netherland: +31 402310122
 - Taiwan: +886 27727512

Table of Contents

1	About EdgeIPS LE.....	5
1.1	Introduction to EdgeIPS LE	5
1.2	Main Functions of EdgeIPS LE	5
2	Getting Started	8
2.1	Getting Started Task List	8
2.2	Opening the Management Console.....	9
3	Visibility.....	12
3.1	Dashboard	12
3.1.1	System Dashboard.....	12
3.2	OT Visibility	18
3.2.1	Asset View	18
4	Device.....	31
4.1	Network & Ports.....	31
4.1.1	Network Settings.....	31
4.1.2	Port Settings	34
5	Objects & Profiles	36
5.1	IP/Service Objects	37
5.1.1	IP Objects	37
5.1.2	Service Objects.....	38
5.2	Security Profiles.....	40
5.2.1	Protocol Filter Profiles	40
5.2.2	IPS Profiles	43
5.2.3	File Filter Profiles	45
5.2.4	Domain Name Profiles	50
6	Security	53
6.1	General Settings	53
6.1.1	Security Mode Settings	53
6.1.2	Deny Action Setting.....	57
6.2	Security Policies	58
6.2.1	Cyber Security	58
6.2.2	Policy Enforcement.....	59
6.2.3	Policy Rule Auto-Learning.....	66
6.2.4	Domain Name Filter Rules	75
6.2.5	Suspicious Objects.....	83
7	Patterns	85
7.1	Pattern Updates.....	85
7.1.1	Security Patterns.....	85
8	Applications.....	87
8.1	Backup Storage	87
8.1.1	USB Disk Storage	87
8.2	Cyber Forensic Tools	89
8.2.1	IPS Event Packet Capture	89
8.2.2	Captured Packet Downloads.....	91
8.2.3	Pcap File Server Settings.....	92
8.3	Diagnostics	94
8.3.1	Hardware Diagnostics	94
9	Logs.....	97
9.1	Security Logs.....	97
9.1.1	Cyber Security Logs.....	97
9.1.2	Policy Enforcement Logs	100
9.1.3	Protocol Filter Logs	101
9.1.4	Domain Name Filter Logs	103
9.1.5	File Filter Logs	104
9.1.6	Suspicious Object Logs.....	105
9.2	System Logs	106

9.2.1	Asset Detection Logs	106
9.2.2	System Event Logs	107
9.2.3	Audit Logs	107
10	Admin.....	109
10.1	Accounts	109
10.1.1	Account Management	109
10.1.2	Logout Timer	116
10.1.3	Auth Services	117
10.2	Notifications	120
10.2.1	SNMP	120
10.2.2	Syslog	125
10.3	Licensing & Updates	128
10.3.1	License Management	128
10.3.2	Firmware Updates & Management	134
10.4	System	136
10.4.1	System Management	137
10.4.2	Edge Device Security	141
10.4.3	EdgeOne Connection Settings	142
10.4.4	Language Package	144
10.4.5	API Management	145
10.4.6	SSL Certificate	148
10.4.7	Backup/Restore	151
10.4.8	System Time	153
10.4.9	System Reboot	154
11	Extended Functions via Supported USB Device	156
11.1	Backing Up Configuration	156
11.2	Loading Pattern from USB Device	158
11.3	Loading Configuration from USB Device	159
11.4	Loading Firmware from USB Device	161
12	Technical Support	164
12.1	Troubleshooting Resources	164
12.1.1	Help Center	164
12.1.2	Threat Encyclopedia	164
12.2	Contacting TXOne	164
12.2.1	Expediting Support Call	165
12.3	Other Resources	165
12.3.1	MyTXOne Portal	165
12.3.2	Documentation Feedback	165
13	Appendix A: Terms and Acronyms	166

1 About EdgeIPS LE


1.1 Introduction to EdgeIPS LE

EdgeIPS LE is a palm-sized platform that is equipped with dual Ethernet LAN ports. Users can access its web-based management console that provides a graphical user interface for device configuration and security policy settings. The whole management process is designed to comply with the manufacturing SOPs of the industry. The EdgeIPS LE protects your individual assets with OT visibility, cybersecurity, and OT protocol allow-listing/deny-listing.

IT and OT traditionally operate separately, each with its own network, transportation team, goals, and needs. In addition, each industrial environment is equipped with tools and devices that were not designed to connect to a corporate network; thus, provisioning timely security updates or patches can be difficult. Therefore, the need for security products that provide proper security protection and visibility is on the rise.

TXOne provides a wide range of security products that cover both your IT and OT layers. These easy-to-build solutions provide an active and immediate protection to Industrial Control System (ICS) environments with the following features:

- Threat detection and interception, with safeguards against the spread of worms
- Protection against Advanced Persistent Threats (APTs) and Denial of Service (DoS) attacks that target vulnerable legacy devices
- Virtual patch protection against OT device exploits

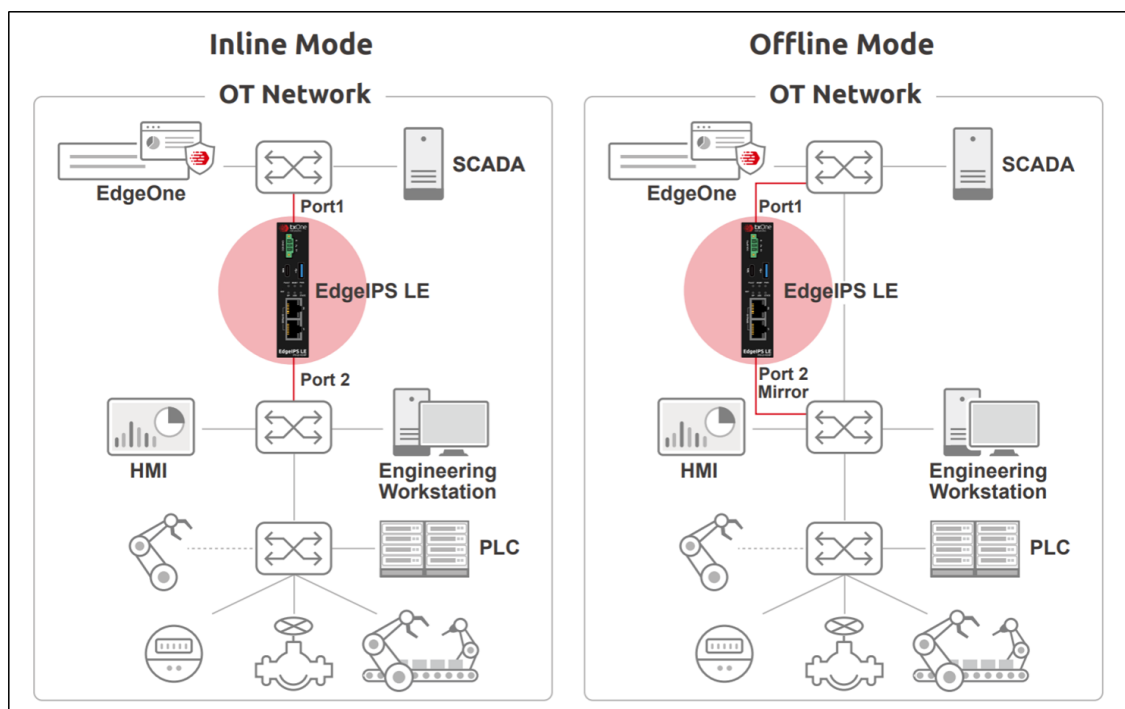

1.2 Main Functions of EdgeIPS LE

EdgeIPS LE is a transparent network security appliance. The main functions of this device are as follows:

Policy Enforcement for Mission-Critical Machines

The device's core technology TXODI (One-pass Deep Packet Inspection for Industrial) allows administrators to maintain a Policy Enforcement database. By analyzing Layer 3 to Layer 7 network traffic between mission-critical production machines, Policy Enforcement executes filtering of control commands within the protocols and blocks traffic that is not defined in the policy rules. This feature can help prevent unexpected operational traffic, block unknown network attacks, and block other activities that match defined policy rules.

Intelligence Learning and Rule Generation for Daily Network Traffic

The device's machine learning technology, Policy Rule Auto-Learning, allows administrators to create a learning task that will analyze the network traffic of daily operations and generate baseline policy rules as a trust list. During the learning process, it creates a rule list for rapid deployment and filters potential cyber threats. This feature can help OT and IT security system administrators to silently deploy security solutions without affecting daily operations and efficiently generate policy rules with minimal manpower.

Improve Shadow OT Visibility by Integrating IT and OT Networks

The device comes equipped to make your IT and OT networks as integrated and coordinated with each other as possible, and to grant visibility of your shadow OT environment.

Intrusion Prevention and Intrusion Detection

The device provides a powerful and up-to-date first line of defense against known threats. Vulnerability filtering rules provide effective protection against exploits at the network level. Manufacturing personnel manage patching and updating, providing pre-emptive protection against critical production failures and additional protection for old or terminated software.

Top Threat Intelligence and Analytics

The device provides advanced protection against unknown threats with its up-to-date threat information. With the help of the Zero Day Initiative (ZDI) vulnerability reward program, the device offers your systems exclusive protection from undisclosed and zero-day threats.

Easily Centralized Management with Convenient, Consolidated Overview

TXOne's EdgeOne provides a graphical user interface for policy management in compliance with manufacturing SOP. It centrally monitors operations information, edits network protection policies, and sets patterns for attack behaviors.

All protections are deployed throughout the entire information technology (IT) and operational technology (OT) infrastructure. These include:

- A centralized policy deployment and reporting system
- Full visibility into assets, operations, and security threats

- IPS and policy enforcement configuration can be assigned per device group, allowing all devices in the same device group to share the same policy configuration
- Management permissions for device groups can be assigned per user account

2 Getting Started

This chapter guides you on how to get started with EdgeIPS LE and configure the initial settings.

 For an overview of the physical hardware and characteristics, or a more condensed manual to help with initial setup of the device, see the document **EdgeIPS LE - Quick Setup Guide**

2.1 Getting Started Task List

This task list provides a high-level overview of all procedures required to get EdgeIPS LE up and running as quickly as possible. Each step links to more detailed instructions found later in the document.

Procedure

1. Open the management console.

 For more information, see [Opening the Management Console](#).

2. Change the administrator account ID and password.

 For more information, see [Changing Account ID/Password](#).

3. Configure the system time.

 For more information, see [Configuring System Time](#).

4. (Optional) Configure the Syslog settings.

 For more information, see [Configuring Syslog Settings](#).

5. Configure objects and profiles.

 For more information, see [Objects & Profiles](#).

6. Configure security policies.

 For more information, see [Security Policies](#).

7. Configure the device name and location.

 For more information, see [Configuring Device Name and Location](#).

8. (Optional) Configure the device access control list.

 For more information, see [Configuring Access Control List](#).

9. (Optional) Configure management protocols and ports.

 For more information, see [Configuring Management Protocols and Ports](#).

10. (Optional) Update the DPI (Deep Packet Inspection) pattern for the device.

 For more information, see [Updating IPS Patterns](#).

11. (Optional) Enable EdgeOne Management settings.

 For more information, see [Enabling EdgeOne Management](#).

12. Configure the network settings and network interface link modes for the device.

 For more information, see [Device](#).

13. (Optional) Configure password policy.

 For more information, see [Configuring Password Policy](#).

2.2 Opening the Management Console

We provide a built-in management console that you can use to configure and manage this Edge series device. View the management console using a web browser.




View the management console using Google Chrome version 63 or later; Firefox version 53 or later; Safari version 10.1 or later; Edge version 15 or later.

Procedure

1. In a web browser, type the address of the device management console in the following format.

https://<target server IP address or FQDN>

The login page will appear.

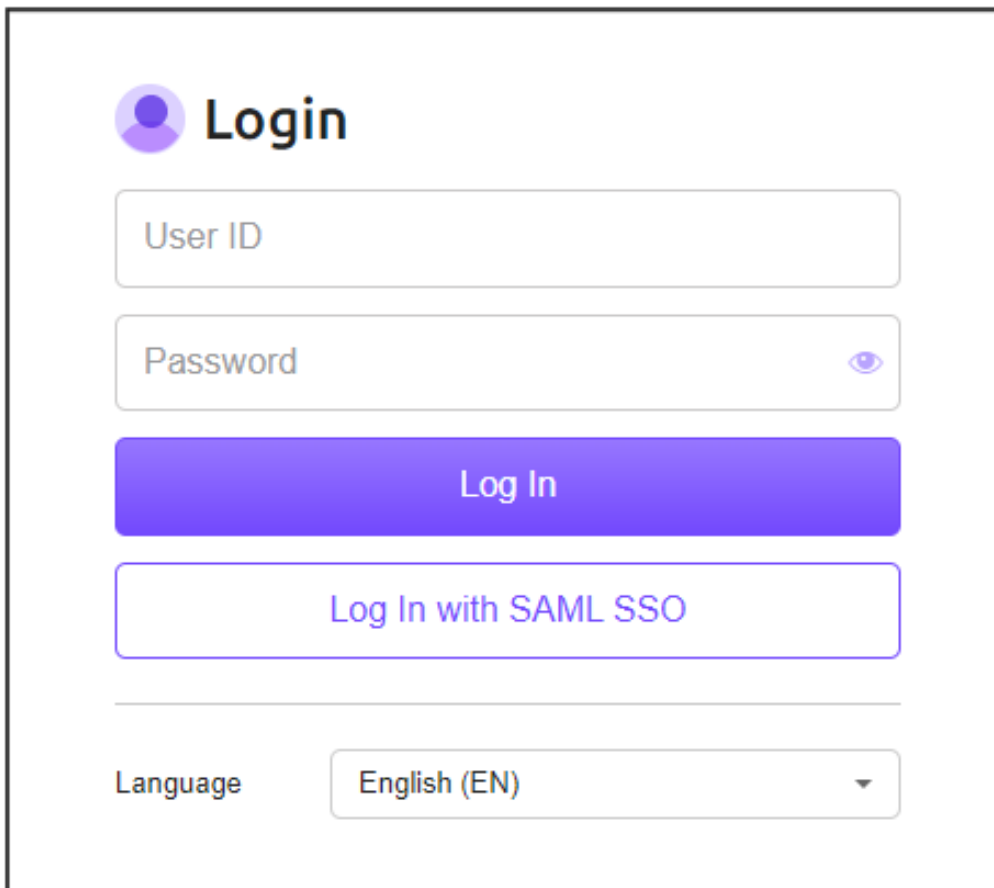

The screenshot shows a web browser displaying the login page of the Edge series device management console. The page has a light gray background. At the top left, there is a purple circular icon with a white person silhouette, followed by the word "Login" in a bold, dark gray font. Below this, there are two input fields: "User ID" and "Password". The "Password" field has a purple eye icon on the right side to toggle visibility. Below the input fields is a large, solid purple button with the text "Log In" in white. Underneath the button is a rectangular box with a purple border and the text "Log In with SAML SSO" in purple. At the bottom of the page, there is a "Language" label followed by a dropdown menu currently set to "English (EN)".



1. The default IP address of this Edge series device is 192.168.127.254 with subnet 255.255.255.0. Before you connect a PC/Laptop to the device, the PC's IP address should be set to an IP address that is able to access the default IP address of the device. After that, connect the PC and the device using an Ethernet cable.

2. TXOne products use an automatically generated self-signed SSL certificate to encrypt communications to and from the client accessing the device. Given that the certificate is self-signed, most browsers will not trust the certificate and will give a warning that the certificate being used is not signed by a known authority.

2. Input your login credentials (user ID and password). Use the default administrator credentials when logging in for the first time.

- User ID: *admin*
- Password: *txone*

3. Click [Log In].

4. When logging in for the first time or after a factory reset, you will be prompted to read and accept our End User License Agreement, and to change the default user ID and password before accessing the system.



End User License Agreement (EULA)

Please read the End User License Agreement (EULA) and accept the terms in the agreement before using this product.

[EULA\(EN\)](#) | [EULA Website Link](#)

☒ I have read and accept the terms in the EULA.

Continue



Reset Login Credentials

Change the default user ID and password to prevent unauthorized access to your account.

New User ID* 

New Password*  

Confirm Password*  

Save Cancel



1. You must change the default login name and password at your first login before you can access the management console.

2. New login name cannot be "root", "admin", "administrator" or "auditor" (case-insensitive).
3. For enhanced security, consider using a strong password with at least 12 characters that consists of both uppercase and lowercase letters, numbers, and symbols. Avoid using common words or personal information.

5. You will be automatically logged out of the system. The login page will appear again. Log in again using your new credentials.

3 Visibility

This chapter describes the visibility-related features designed to provide comprehensive insights into your OT network.


3.1 Dashboard

Monitor and analyze your assets, devices, network status, and threat detection.

- [System Dashboard](#)


3.1.1 System Dashboard

Monitor the EdgeIPS LE device information, network information, secured service status, system service status, throughput/connection, system resources, bandwidth utilization and packet transmission status on the system dashboard.

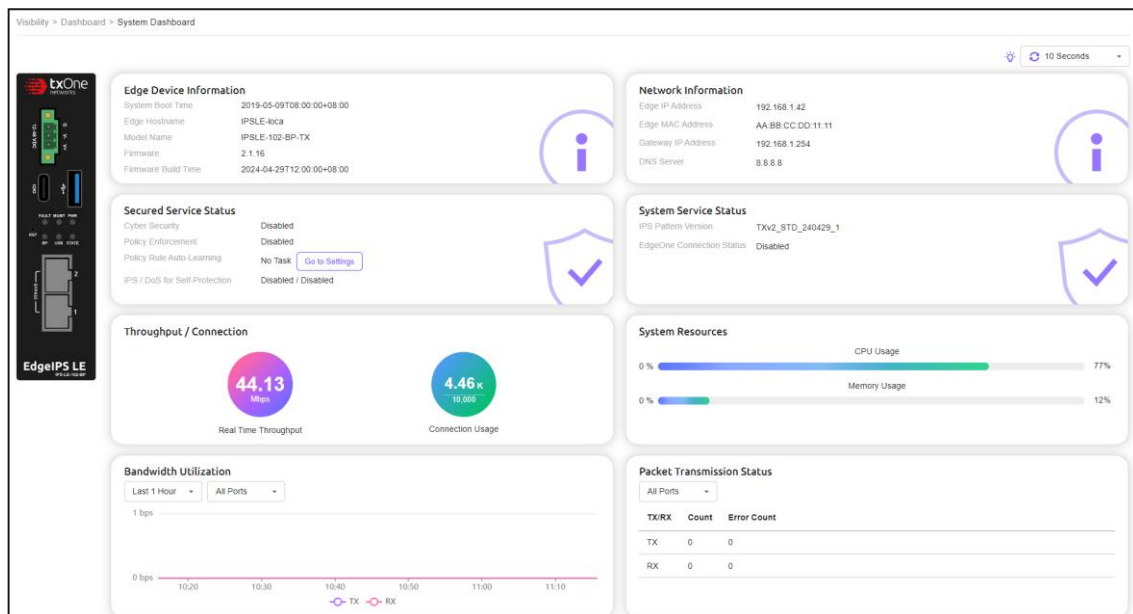


3.1.1.1 Viewing System Dashboard Device Panel

In the left area, you may view the device panel and the status of each port.

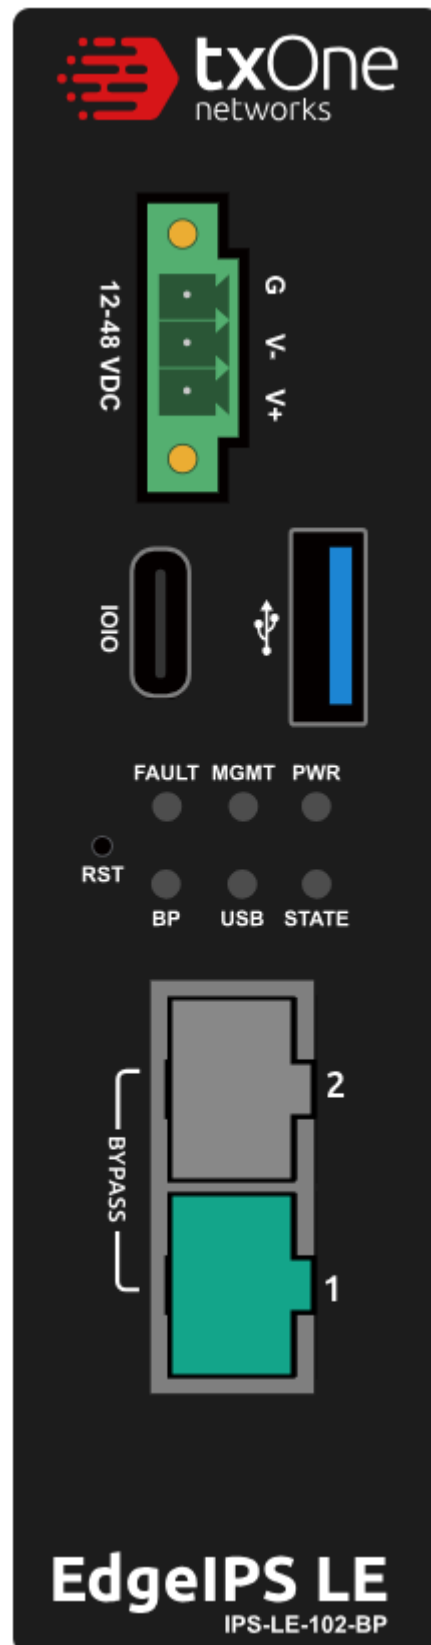


The panel view on the page shows a graphical depiction of the connected ports on the device.

Hover your mouse over a port on the device panel to view details of the port.

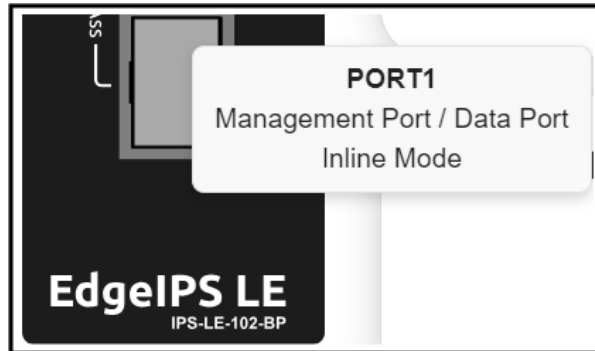


Port Status Information

In the upper right corner, you may view the port status information by clicking the  button.

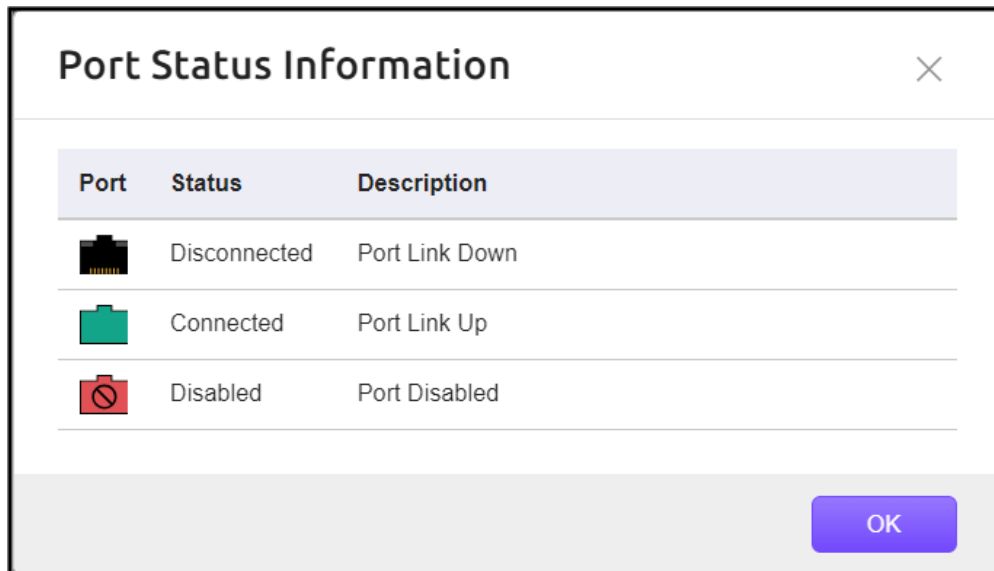

Refresh Interval Settings

In the upper right corner, you may select **10 seconds** (default), **20 seconds**, **30 seconds** or **1 minute** for the refresh interval.

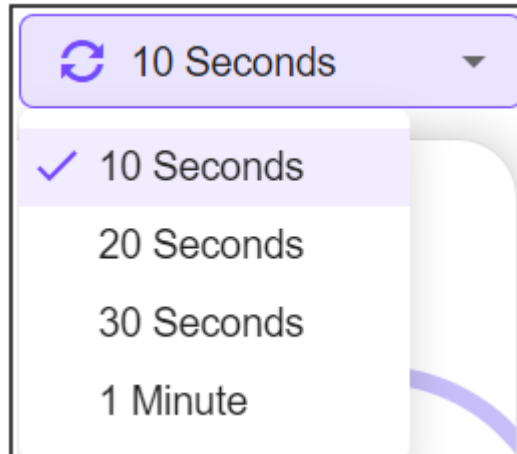

Edge Device Information

This widget shows the system boot time, Edge hostname, model name, firmware version, and firmware build time.

Edge Device Information	
System Boot Time	2019-05-09T08:00:00+08:00
Edge Hostname	IPSLE-locA
Model Name	IPSLE-102-BP-TX
Firmware	2.1.16
Firmware Build Time	2024-04-29T12:00:00+08:00

Network Information

This widget shows the the Edge IP address, Edge MAC address, gateway IP address, and DNS server.

Network Information	
Edge IP Address	192.168.1.42
Edge MAC Address	AA:BB:CC:DD:11:11
Gateway IP Address	192.168.1.254
DNS Server	-

Secured Service Status

The widget shows the statuses of Cyber Security, Policy Enforcement, Policy Rule Auto-Learning, and IPS/DoS for Self-Protection.

Secured Service Status

Cyber Security	Disabled
Policy Enforcement	Disabled
Policy Rule Auto-Learning	No Task Go to Settings
IPS / DoS for Self-Protection	Disabled / Disabled



System Service Status

The widget shows the version of IPS pattern on the device and EdgeOne connection status.

System Service Status

IPS Pattern Version	TXv2_STD_240429_1
EdgeOne Connection Status	Disabled



Throughput / Connection

The widget shows the current network throughput and the current network connection usage on the device.

Throughput / Connection

72.78

Mbps

Real Time Throughput


2.36 K

10,000

Connection Usage

System Resources


This widget shows system resources (CPU and memory) usages on the device.

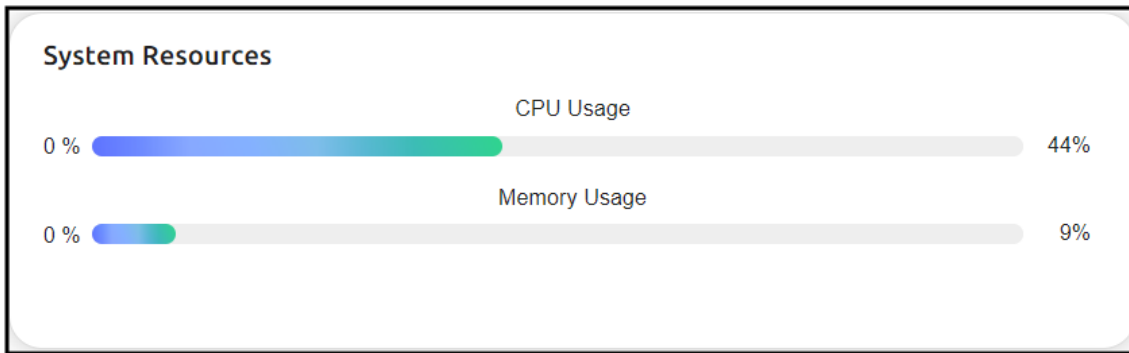

Item	Description
CPU Usage	Percentage of real-time CPU utilization
Memory Usage	Percentage of real-time memory utilization

Bandwidth Utilization

This widget shows TX and RX bandwidth utilization based on the specified time interval.

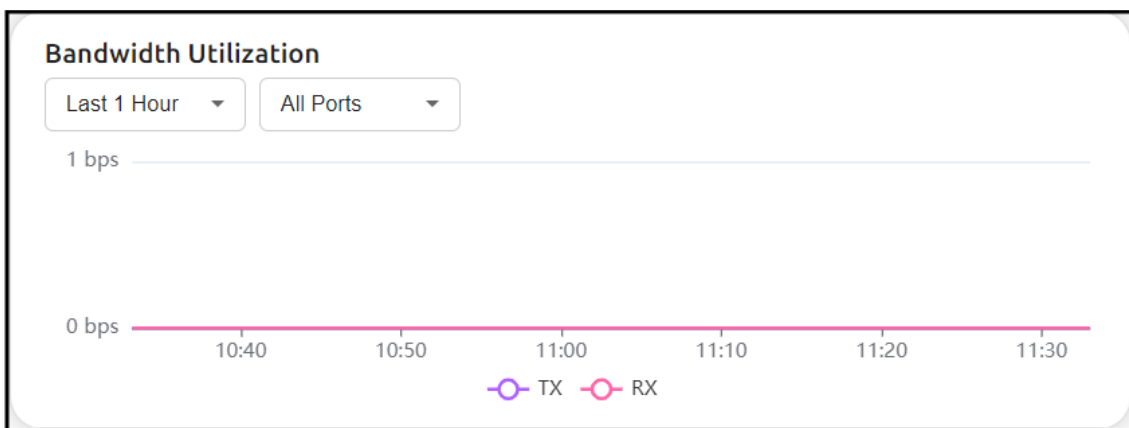

Packet Transmission Status

This widget shows the packet count number on each interface and error count information.

Packet Transmission Status

All Ports

TX/RX	Count	Error Count
TX	0	0
RX	0	0


3.2 OT Visibility

Gain a comprehensive view of your OT networks from various aspects.

- [Asset View](#)

3.2.1 Asset View

The [Asset View] page gives you an overview of your managed assets. The page provides you with timely and accurate information on the assets that are managed by your Edge series device.

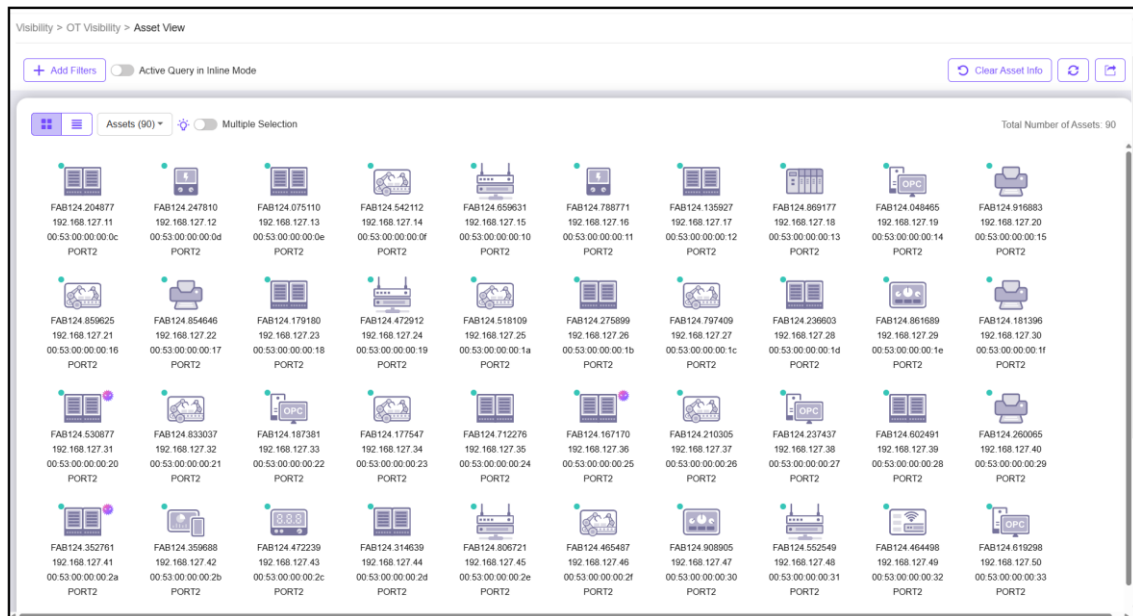

The assets listed on this page are automatically detected by the Edge series devices.



1. The term **asset** in this chapter refers to a device or host that is protected by an Edge device.
2. Starting from firmware v2.2, the identification of newly supported asset types can be enabled via IPS patterns. Even if the Edge firmware is not updated, the forward compatibility of asset type identification ensures that these asset types still appear in the asset view.

The following table lists the actions that you can perform on the [Asset View] page.

Task	Procedure
To clear the current asset information and initialize the page with a new asset view (only available for an admin role)	1. Click the [Clear Asset Info] button in the upper right corner. A confirmation window will appear.

Task	Procedure
	Confirm If you reset these assets, the current asset view is cleared and initialized with a new view. Do you want to reset these assets? ☒ Reset only assets that are not bookmarked ☐ Reset all assets, including bookmarked assets Yes No Select an appropriate option and click [Yes].
To refresh the displayed information	Click the refresh button  in the upper right corner.
To export asset information to a CSV file	Click the export button  in the upper right corner.
To search for specific assets	- Click [Add Filters] in the upper left corner. The [Add Filters] window will appear. Add Filters Add up to 10 filters to search for specific assets. In each filter you can include up to 10 search values. Field Asset Hostname Operator is + Value Search Apply Cancel - Create up to 10 search filters. In each filter you can include up to 10 search values. - Click [Apply].
To enable the function for detecting assets that do not proactively send out OT	Click the [Active Query in Inline Mode] toggle in the upper left corner.

Task	Procedure
commands in the network	 1. The Active Query function operates only in Inline Mode. In Offline Mode, the switch button of active query would not be configurable. 2. Starting from firmware v1.1, the Active Query function supports 4 protocols, including Modbus, CIP, OMRON FINS and SMB.
To switch between the grid view and table view modes	1. Click the grid/table view buttons  .
To select multiple assets	1. Enable the [Multiple Selection] toggle. 2. Click on the assets you want to select. To select all assets, click the [Select All] checkbox.
To copy an asset hostname, IP address, or MAC address	1. Select a specific asset. 2. Click the copy button . 3. Select an action, [Copy Asset Hostname], [Copy IP Address], or [Copy MAC Address], from the pop-up menu.
To use an asset's IP or MAC address for object creation	1. Select a specific asset. 2. Click the create profile button . 3. Select an action, [Create IP Object] or [Create MAC Object], from the pop-up menu.
To bookmark or unbookmark an asset	1. Select one or multiple assets. 2. Click the [Bookmark Asset]  or [Unbookmark Asset]  button.  1. When an inactive asset is bookmarked, its cached information remains accessible in the Edge device GUI until the device is reset to its default settings. 2. The maximum number of detected assets is fixed for the Edge device. When an asset is bookmarked, it occupies a portion of the quota for detecting newly onboarded assets. This means that when the number of bookmarked assets is equal to the maximum number of detected assets, the Edge device will no longer be able to detect new assets.
To edit the alias name, comment, asset type, or OT layer of an asset	1. Select a bookmarked asset. 2. Click the edit asset information button .

3.2.1.1 Viewing in Grid View Mode

Under the [Grid View] display mode, select a specific asset and click the expand button  to view general asset information, application usage, bandwidth usage, event summary, and communication details.

Information > Overview

On the [Information] window, switch to the [Overview] tab to view the general asset information, application usage, bandwidth usage, and event summary. If the selected asset is impacted by high- or critical-severity IPS events within the last 24 hours, the [Information] window will be labeled [Compromised Asset] . If the asset has communicated with a public IP address within the last 24 hours, the window will be labeled [Internet Exposed] .

No.	Application Name	TX	RX
1	S7COMM	1.59 KB	1.88 KB
2	CIP	1.55 KB	902 Bytes
3	ICMP	1.38 KB	941 Bytes
4	Others	1.23 KB	760 Bytes
5	IEC 01850-MMS	1.13 KB	955 Bytes
6	PROFINET	1.12 KB	550 Bytes
7	IGMP	1.12 KB	475 Bytes
8	COTP	1.08 KB	982 Bytes
9	SMB	1.08 KB	647 Bytes
10	IEC-104	905 Bytes	1.82 KB

Policy Enforcement Events	Protocol Filter Events
104	79
107	132

Item	Description
Status	The current status of the asset. Click the buttons to bookmark or unbookmark an asset. Active (Not Bookmarked): An asset is marked as active when it has network traffic passing through it within the last hour. If the asset does not have network traffic for more than an hour and is not bookmarked, the system automatically removes it from the page. Active (Bookmarked): An asset is marked as active when it has network traffic passing through it within the last hour. If the asset does not have network traffic for

Item	Description
	more than an hour and is bookmarked, it continues to be displayed on this page. Inactive (Bookmarked): An asset is marked as inactive when no network traffic is detected within the last hour. However, if the asset is bookmarked, its cached information remains accessible on this page, despite its inactivity.
Asset Hostname	The hostname of the asset. Click the  button to copy the asset hostname.
Alias Name	User-defined name of the asset. Click the  button to edit the alias name.  You can only edit the alias name of a bookmarked asset.
Comment	User-defined comment for the asset. Click the  button to edit the comment.  You can only edit the comment for a bookmarked asset.
IP Address	The IP address of the asset. Click the  button to copy the IP address, or the UNKNOWN ATTACHMENT button to create an IP object.  For more information about creating an IP object, see Configuring IP Objects.
MAC Address	The MAC address of the asset. Click the  button to copy the MAC address.
VLAN ID	The VLAN ID of the asset.
Asset Type	The type of the asset. Click the  button to edit the asset type.  You can only edit the type of a bookmarked asset.
OT Layer	The OT layer in which the asset is located. Click the  button to edit the OT layer.  You can only edit the OT layer of a bookmarked asset.
Vendor	The vendor of the asset.
Model Name	The model name of the asset.
Firmware	The firmware version of the asset.
OS	The operating system of the asset.
Serial Number	The serial number of the asset.

Item	Description
TXOne Stellar	The TXOne Stellar installation status of the asset.
Last Bookmarked	The date and time when the asset was last bookmarked.
First Seen	The date and time when the asset was first seen.
Last Seen	The date and time when the asset was last seen.
Onboarding Interface	The Edge device interface to which the asset is onboarded.

Information > Overview > Application Usage

In the [Application Usage] pane, you can view the statistics of the network traffic passing from/to a specific asset based on different applications.

Application Usage

No.	Application Name	TX	RX	
1	SSL/TLS	315.32 MB	486.69 MB	→
2	HTTP Protocol ov...	21.08 MB	41.25 MB	→
3	MS Remote Deskt...	15.52 MB	25.50 MB	→
4	Others	6.34 MB	8.84 MB	→
5	Microsoft.com	1.58 MB	3.29 MB	→
6	FTP Applications	1.56 MB	11.62 MB	→
7	Windows Update	768.28 KB	5.90 MB	→
8	SMB2	449.97 KB	323.36 KB	→
9	HTTP	130.90 KB	6.09 MB	→
10	IGMP	84.84 KB	0 Bytes	→
11	Microsoft Office	39.61 KB	144.40 KB	→
12	Google APIs(SSL)	20.87 KB	106.56 KB	→
13	Lets Encrypt	14.78 KB	51.71 KB	→
14	QUIC	14.21 KB	28.89 KB	→
15	Microsoft Live.com	6.38 KB	16.42 KB	→
16	Web File Transfer	5.56 KB	70.30 KB	→

Item	Description
No.	The ordinal number of the application traffic.
Application Name	The application type of the traffic.
TX	The amount of traffic transmitted for this application.

Item	Description
RX	The amount of traffic received for this application.

Click the arrow next to a specific application to view its peer IP, peer MAC, and role.

Application Usage


← HTTP Protocol over TLS SSL

No.	Peer IP	Peer MAC	Role
1	10.24.200.131	00:0c:29:e7:03:77	Server
2	34.107.243.93	5c:26:0a:f6:92:62	Client
3	20.90.156.32	5c:26:0a:f6:92:62	Server
4	10.24.200.193	00:0c:29:89:49:bc	Server and Client
5	10.24.7.72	00:0c:29:2a:f9:10	Server and Client
6	20.90.152.133	5c:26:0a:f6:92:62	Server

Item	Description
Peer IP	The IP address of the network element on the other end of the connection.
Peer MAC	The MAC address of the network element on the other end of the connection.
Role	Server: The network element on the other end of the connection transmits network packets to the asset. Client: The network element on the other end of the connection receives network packets from the asset.


Information > Overview > Bandwidth Usage

In the [Bandwidth Usage] pane, you can monitor the bandwidth usage of a specific asset.

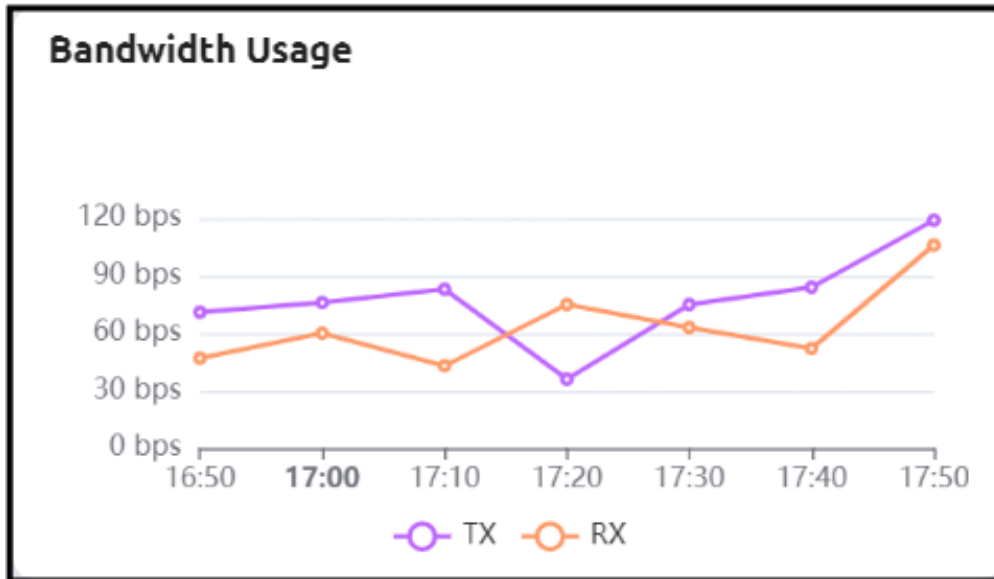


Information > Overview > Event Summary

In the [Event Summary] pane, you can monitor the counts of various types of security events, including Cyber Security, Policy Enforcement, Protocol Filter, Domain Name Filter, and File Filter events.

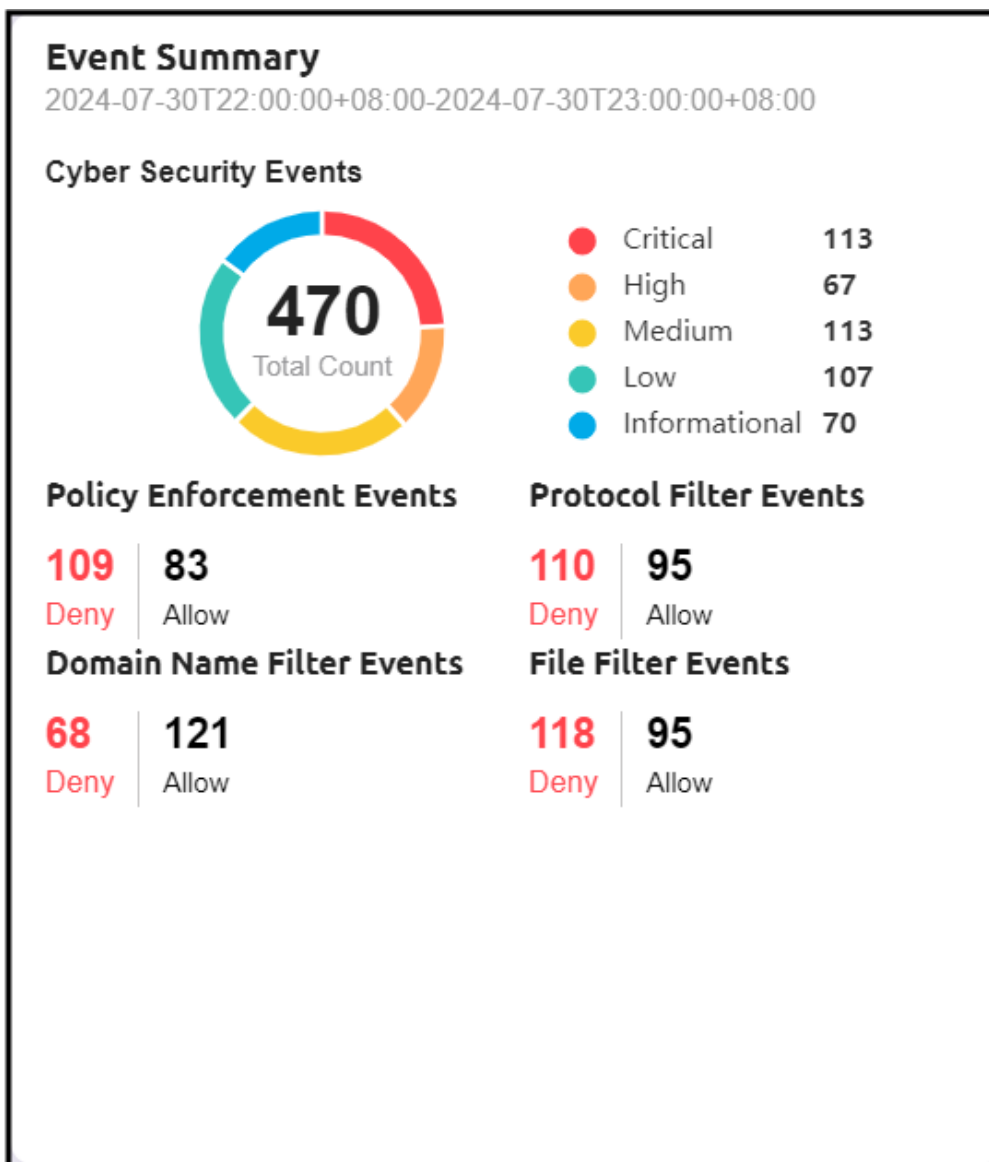

Information > Communication Details

On the [Information] window, switch to the [Communication Details] tab to view a visualized network graph showing which devices are communicating with this asset.

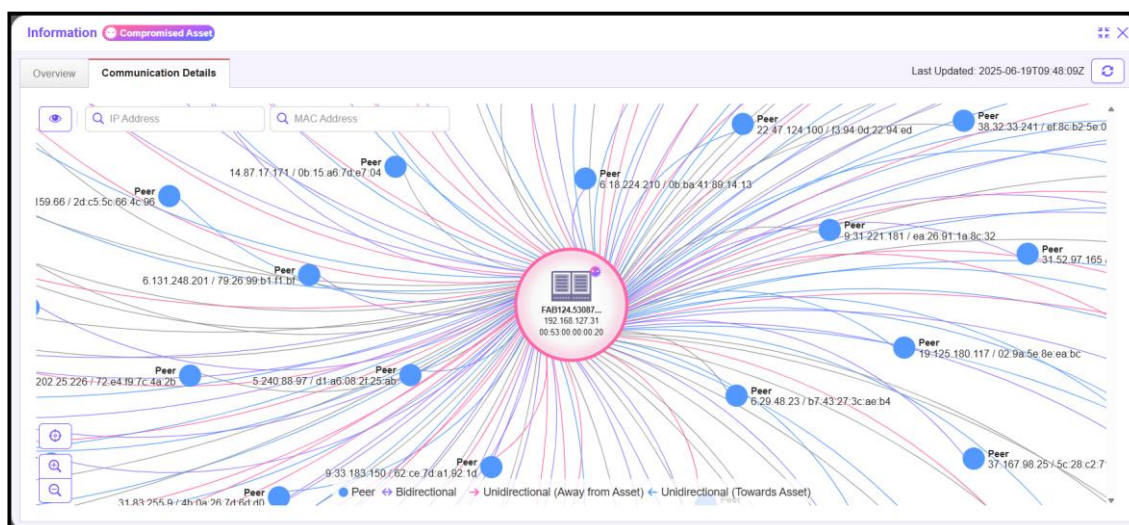

Task	Description
To configure display options	Click [Configure Display Options]  , then check or uncheck the display options.
To search for a specific peer device by IP address	Input the IP address of the target device in the [IP Address] field.
To search for a specific peer device by MAC address	Input the MAC address of the target device in the [MAC Address] field.
To reset and center the communication graph on the asset	Click the [Recenter]  button in the bottom-left corner of the communication graph.
To zoom in on the communication graph	Click the [Zoom In]  button in the bottom-left corner of the communication graph.
To zoom out of the communication graph	Click the [Zoom Out]  button in the bottom-left corner of the communication graph.

3.2.1.2 Viewing in Table View Mode

Under the [Table View] display mode, you can view detailed information on all assets managed by this Edge device.

Visibility > OT Visibility > Asset View


+ Add Filters Active Query in Inline Mode Clear Asset Info

Assets (90) Multiple Selection

Total Number of Assets: 90 1 / 4

Status	Asset Security Status	Asset Hostname	Alias Name	Comment	IP Address	MAC Address	VLAN ID	Asset Type	OT Layer	Vendor
Active (Not Bookmarked)	Uncompromised	FAB124.917317			192.168.127.11	00:53:00:00:00:0c	0	OPC Server	L3	Phytec Messte
Active (Not Bookmarked)	Uncompromised	FAB124.581614			192.168.127.12	00:53:00:00:00:0d	0	Industrial Controller - PLC/RTU	L1	Schneider Elec
Active (Not Bookmarked)	Uncompromised	FAB124.952741			192.168.127.13	00:53:00:00:00:0e	0	Industrial PC / HMI / Panel PC	L2	Super Micro Co
Active (Not Bookmarked)	Uncompromised	FAB124.731971			192.168.127.14	00:53:00:00:00:0f	0	Wireless Access Point and Controller	L3	Buffalo Inc.
Active (Not Bookmarked)	Uncompromised	FAB124.442144			192.168.127.15	00:53:00:00:00:10	0	VoIP Appliance in OT	L3	Avaya, Inc.
Active (Not Bookmarked)	Uncompromised	FAB124.791383			192.168.127.16	00:53:00:00:00:11	0	Industrial Controller - PLC/RTU	L1	SIEMENS
Active (Not Bookmarked)	Uncompromised	FAB124.853714			192.168.127.17	00:53:00:00:00:12	0	Others / Misc.	L3	VMware, Inc.
Active (Not Bookmarked)	Uncompromised	FAB124.504945			192.168.127.18	00:53:00:00:00:13	0	Printer in OT	L3	Zebra Technolo
Active (Not Bookmarked)	Uncompromised	FAB124.302540			192.168.127.19	00:53:00:00:00:14	0	Industrial Production Machines / Assets	L1	Axis Communi
Active (Not Bookmarked)	Uncompromised	FAB124.110967			192.168.127.20	00:53:00:00:00:15	0	OT Appliance (Desktop / Laptop)	L3	Delta Controls
Active (Not Bookmarked)	Uncompromised	FAB124.248256			192.168.127.21	00:53:00:00:00:16	0	Printer in OT	L3	FUJIFILM Busi
Active (Not Bookmarked)	Uncompromised	FAB124.839803			192.168.127.22	00:53:00:00:00:17	0	Network Appliance	L2	Wago Corporat
Active (Not Bookmarked)	Uncompromised	FAB124.394464			192.168.127.23	00:53:00:00:00:18	0	Thin Client	L3	Raspberry Pi F
Active (Not Bookmarked)	Uncompromised	FAB124.725854			192.168.127.24	00:53:00:00:00:19	0	Industrial PC / HMI / Panel PC	L2	Rockwell Auton
Active (Not Bookmarked)	Uncompromised	FAB124.796244			192.168.127.25	00:53:00:00:00:1a	0	Industrial Production Machines / Assets	L1	Rockwell Auton

Click on a row and the expand button  to view general asset information, application usage, bandwidth usage, event summary, and communication details.

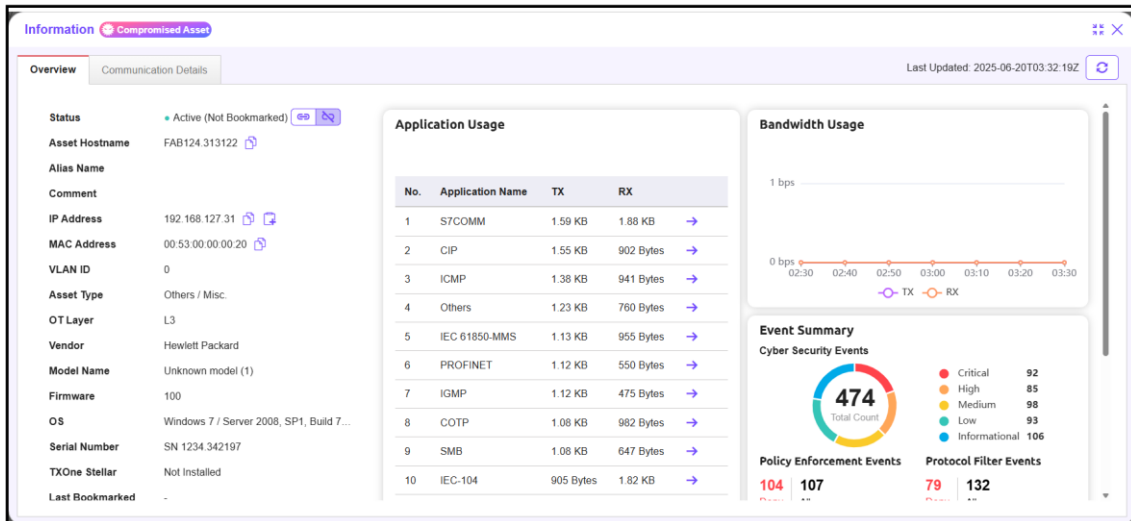

For more information about the information under the [Overview] and [Communication Details] tabs, see [Viewing in Grid View Mode](#).

Click the button to show/hide certain type of information and adjust the column order.

Customize Column Display

Click on the checkboxes to show/hide columns and the arrows to adjust the column order.

- ☒ Asset Security Status
- ☒ Asset Hostname
- ☒ Alias Name
- ☐ Comment
- ☒ IP Address
- ☒ MAC Address
- ☐ VLAN ID
- ☒ Asset Type
- ☐ OT Layer
- ☐ Internet Exposure
- ☐ Vendor
- ☐ Model Name

Apply **Cancel**

The [Asset Security Status], [Asset Hostname], [IP Address], [MAC Address], and [Onboarding Interface] columns cannot be hidden.

Click the  button to adjust the number of rows in the table.

4 Device

This chapter describes how to configure network-related features and port settings under the [Device] tab.

4.1 Network & Ports

Configure device network and port settings.

- [Network Settings](#)
- [Port Settings](#)

4.1.1 Network Settings

The [Network Settings] page contains setting items for IP address, netmask, gateway, DNS, VLAN ID, and transmission of LLDP of the device.

4.1.1.1 Configuring Network and LLDP Settings

Procedure

1. Go to [Device] > [Network & Ports] > [Network Settings].

Device > Network & Ports > Network Settings

Network Settings

Connection Type: Static IP

Edge IP Address*: 192.168.1.42

Subnet Mask*: 255.255.255.0

Gateway*: 192.168.1.254

DNS: 8.8.8.8

☒ VLAN ID: 42 

LLDP Setting


Transmit LLDP: ☒

Save **Cancel**

2. Configure the following settings.

- Network Settings: Select either **Static IP** or **DHCP Client** for the Connection Type.

Connection Type: Static IP

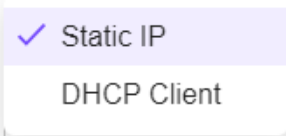Edge IP Address*: 

- **Static IP:** This device uses a static IP address for this interface. If this option is selected, provide the following information.

Network Settings

Connection Type

Static IP

Edge IP Address*

192.168.1.42

Subnet Mask*

255.255.255.0

Gateway*

192.168.1.254

DNS

8.8.8.8

VLAN ID

42

Item	Description
Connection Type	Static IP
Edge IP Address	Input an IP Address of the device.
Subnet Mask	Input a subnet mask of the device.
Gateway	Input an IP address of the gateway that will send packets to a different network.
DNS	(Optional) Input a DNS address of the device.
VLAN ID	(Optional) Enable this function by clicking the toggle. If enabled, input a VLAN ID for the device to allow packets with the specified VLAN tag to access the management interface.

- **DHCP Client:** The interface functions as a DHCP client and automatically get an IP address from a DHCP server. If this option is selected, provide the following information.

Network Settings

Connection Type

DHCP Client

VLAN ID

42

Item	Description
Connection Type	DHCP Client
VLAN ID	(Optional) Enable this function by clicking the toggle. If enabled, input a VLAN ID for the device to allow packets with the specified VLAN tag to access the management interface.

- LLDP Setting

Item	Description
Transmit LLDP	(Optional) Enable the LLDP function by clicking the toggle.  When the transmission of LLDP (Link Layer Discovery Protocol) for discovery and configuration is enabled, it allows a network device to advertise its identity and capabilities on the network.

3. Click [Save].

4.1.2 Port Settings

The [Port Settings] page contains setting items for port connection statuses and port link speeds.

4.1.2.1 Configuring Port Settings

Procedure

1. Go to [Device] > [Network & Ports] > [Port Settings].

Device > Network & Ports > Port Settings					
Port	Port Status	Link Speed Settings	Link Speed Status	Link Status	Description
PORT1	Enabled	10 Mbps Half-Duplex	-	Link Down	General PORT1
PORT2	Enabled	10 Mbps Half-Duplex	-	Link Down	General PORT2

2. Click a port in the [Port] column. The [Port Configuration] window will appear.

Port Configuration

Port Status

Enabled

Port

PORT1

Description

General PORT1

Link Speed Settings

10 Mbps Half-Duplex

Save

Cancel

3. Configure the following port settings.

Item	Description
Description	(Optional) Type a description for the port.
Link Speed Settings	Select a speed and negotiation method, Auto Negotiation , 10 Mbps Half-Duplex , 10 Mbps Full-Duplex , 100 Mbps Half-

Item	Description
	Duplex, 100 Mbps Full-Duplex or 1 Gbps Full-Duplex for the port.  Select [Auto Negotiation] if you would like the interface to automatically negotiate with the highest speed that both sides can work with. Otherwise, the link speed would be set to the configured speed value based on your selection.

5 Objects & Profiles

This chapter describes how to configure different types of objects and profiles to simplify policy management by storing configurations that can be used by the Edge series device under the [Objects & Profiles] tab.

Each type of object and profile has the following types of sub-profile lists for this device:

- **Device Objects/Profiles:** Contains objects and profiles created and configured by users with Edge device local account privileges to be applied to policy rules.
- **EdgeOne Objects/Profiles:** Contains objects and profiles synced from EdgeOne. Users with EdgeOne local account privileges can apply them to policy rules. Users with only Edge device local account privileges can only view and copy objects/profiles from the [EdgeOne Profiles] list to the [Device Profiles] list.

You can perform the following tasks when you view a profile list.


- **Device Objects/Profiles:**

Task	Description
Create object/profile	Click [Create] to create a new object/profile.
Edit object/profile	Click a(n) object/profile name to edit the settings.
Delete object/profile	Select one or multiple objects/profiles and click [Delete] to delete them.
Duplicate object/profile	Select a(n) object/profile and click [duplicate] to duplicate it.

- **EdgeOne Objects/Profiles:**

Task	Description
Copy object/profile to [Device Objects/Profiles]	Select one or multiple objects/profiles and click [Copy EdgeOne Profiles to Device Profiles] to copy the objects/profiles on the [EdgeOne Objects/Profiles] list and paste them to the [Device Objects/Profiles] list.

On the table header row, click the down arrow icon next to the checkbox, and a drop-down menu for selecting objects/profiles will be shown.

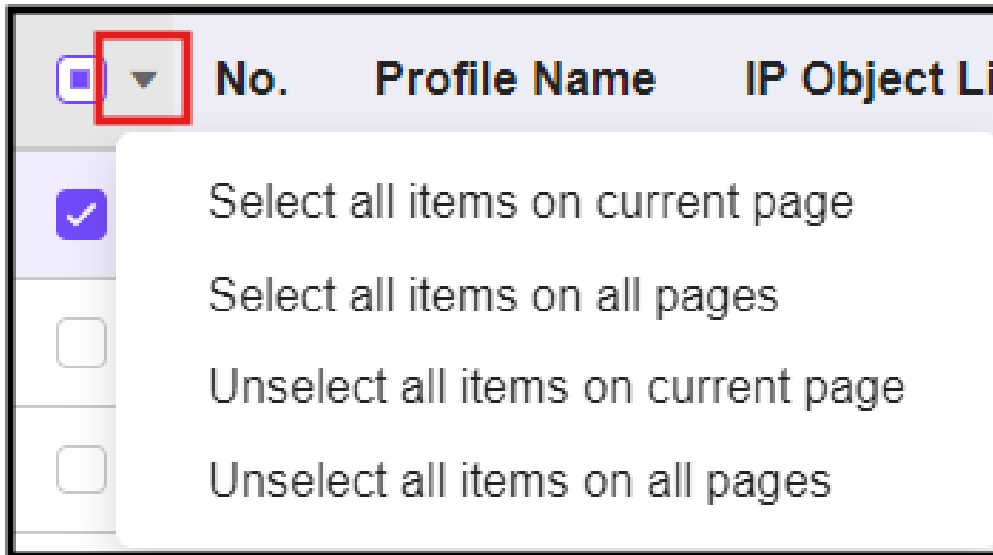

5.1 IP/Service Objects

Create and manage groups of IP addresses and service objects shared among multiple Policy Enforcement rules.

- [IP Objects](#)
- [Service Objects](#)

5.1.1 IP Objects

IP objects contain IP addresses which you can apply to policy rules. The types of IP addresses you can assign are:

- **Single IP address**

For example: 192.168.1.1

- **IP range**

For example: from 192.168.1.1 to 192.168.1.20


- **IP subnet**

For example: 192.168.1.0/24

5.1.1.1 Configuring IP Objects

Procedure

1. Go to [Objects & Profiles] > [IP/Service Objects] > [IP Objects].

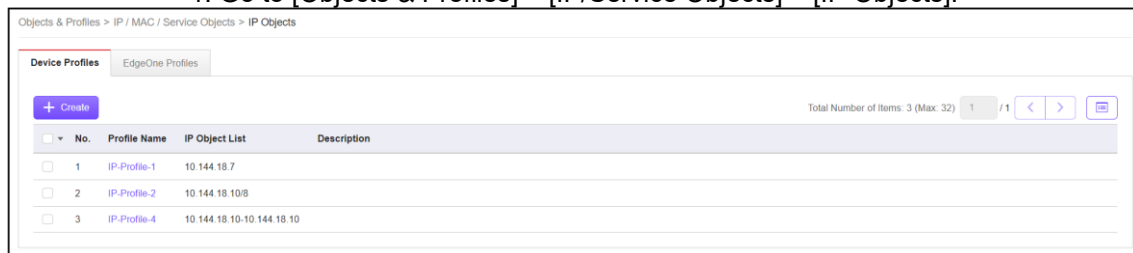

2. Do one of the following.

- Click [Create] to create an object. The [Create IP Object] window will appear.
- Click a profile name to edit settings. The [Edit IP Object] window will appear.

Create IP Object

Profile Name*

Description

IP Object List

(Max: 32)

No. 1*

Single IP

Memo

Save

Cancel

3. Configure the following IP object settings.

Item	Description
Profile Name	Type a profile name for this IP object.
Description	(Optional) Type a description.
IP Object List	Specify an IP address, an IP range, or an IP subnet. If needed, fill out the [Memo] field. Click the [Add Entry] button  to add another entry, or the [Remove Entry] button  to remove an entry.

4. Click [Save].

5.1.2 Service Objects

Service objects contain service definitions, including TCP port ranges, UDP port ranges, ICMP, and custom protocol numbers, which you can apply to policy rules.

- **TCP protocol port range**

For example: TCP ports and service ports ranging from 100 to 120

- **UDP protocol port range**

For example: UDP ports and service ports ranging from 100 to 120

- **ICMP protocol type and code**

For example: ICMP type 8 code 0

- **Custom protocol with specified protocol number**

For example: protocol number 6 and service ports ranging from 100 to 120




The term “protocol number” refers to the protocol number defined in the Internet protocol suite.

5.1.2.1 Configuring Service Objects


Procedure

1. Go to [Objects & Profiles] > [IP/Service Objects] > [Service Objects].

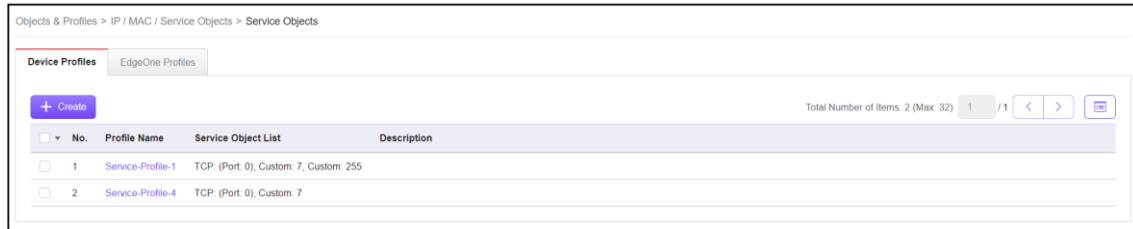

2. Do one of the following:

- Click [Create] to create an object. The [Create Service Object] window will appear.
- Click a profile name to edit settings. The [Edit Service Object] window will appear.

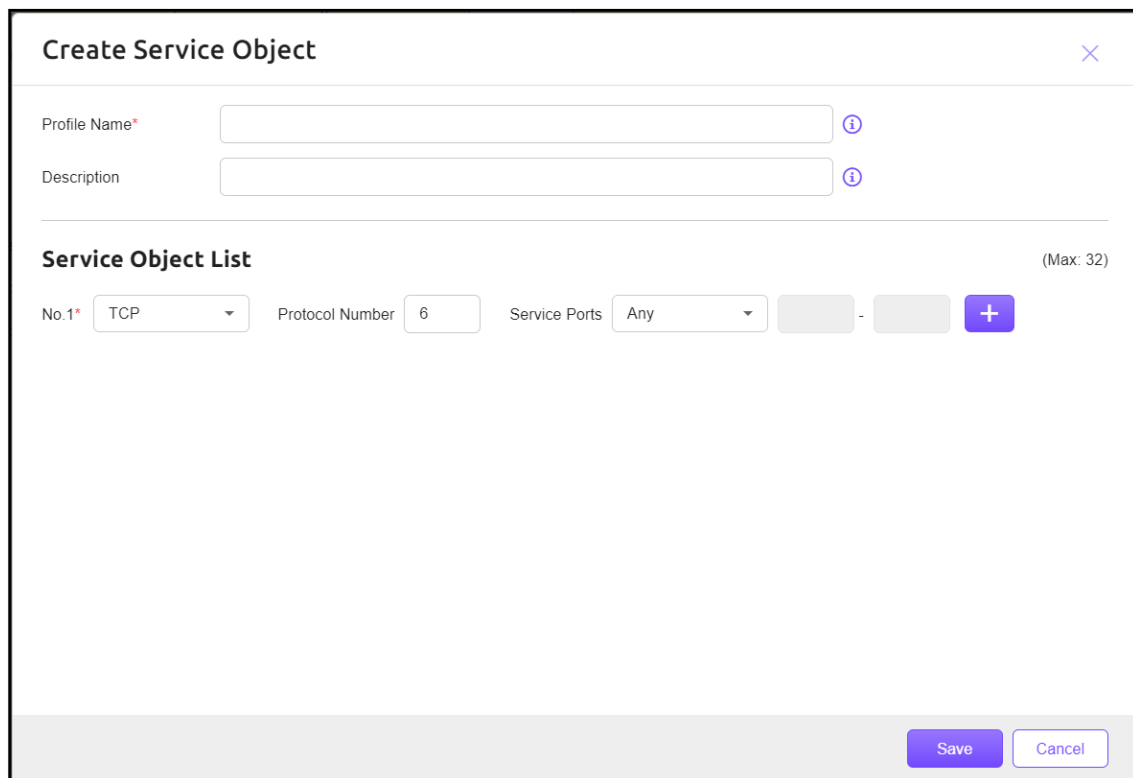

3. Configure the following service object settings.

Item	Description
Profile Name	Type a profile name for this service object.
Description	(Optional) Type a description.
Service Object List	Provide one of the following definitions. TCP protocol number and its port range UDP protocol number and its port range ICMP protocol number and its type and code

Item	Description
	Custom protocol with specified protocol number and port range Click the [Add Entry] button  to add another entry, or the [Remove Entry] button  to remove an entry.

4. Click [Save].

5.2 Security Profiles

Create and manage security profiles to control communications across your network.

- [Protocol Filter Profiles](#)
- [IPS Profiles](#)
- [File Filter Profiles](#)
- [Domain Name Profiles](#)

5.2.1 Protocol Filter Profiles

Protocol Filter profiles contain sophisticated and advanced ICS (Industrial Control System) protocol settings which you can apply to policy rules. The types of ICS protocols you can include in a Protocol Filter profile are:


Factory Automation	• GE SRTP • BSAP • CODESYS • Emerson DeltaV • Emerson ROC • FANUC FOCAS	• FL-net • GE EGD (UDP) • GE SDI • GE iFIX • ION	• Panasonic MEWTOCOL • PTP • ROS SimpleMessage • TriStation • Valmet DNA
Building Automation	• CN/IP • KNX	• LonWorks/LonTalk	• Niagara Fox
General OT Protocol	• CoAP • Ether-S-Bus	• EtherSIO • MDLC	• Moxa Protocol • RTPS/DDS
HealthCare	• DICOM	• HL7	
Power and Electricity	• ICCP TASE.2 • IEC 61850-R-GOOSE	• IEEE C37.118 • OCPP 1.6J	• IEC 61850-R-SV • IEC 62056
Common	• SMB • DNS • FTP • HTTP	• PAgP • RDP • SIP/RTP • SMTP	• SSH • TELNET • TFTP • VNC

	- MQTT - MS RPC	SNMP	Windows Update
--	--	--	--

5.2.1.1 Configuring Protocol Filter Profiles


Procedure

1. Go to [Objects & Profiles] > [Security Profiles] > [Protocol Filter Profiles].

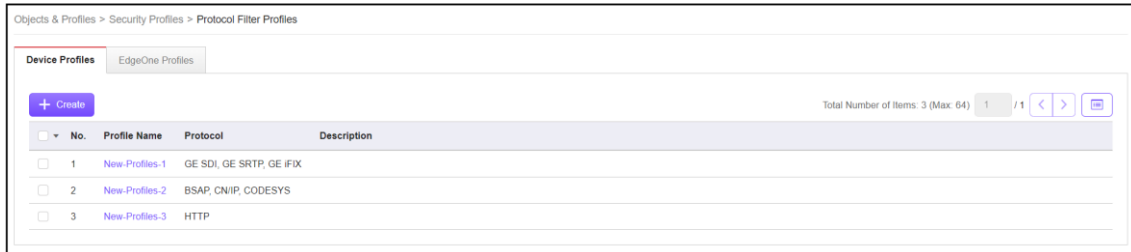

2. Do one of the following.

- Click [Create] to create a profile. The [Create Protocol Filter Profile] window will appear.
- Click a profile name to edit settings. The [Edit Protocol Filter Profile] window will appear.

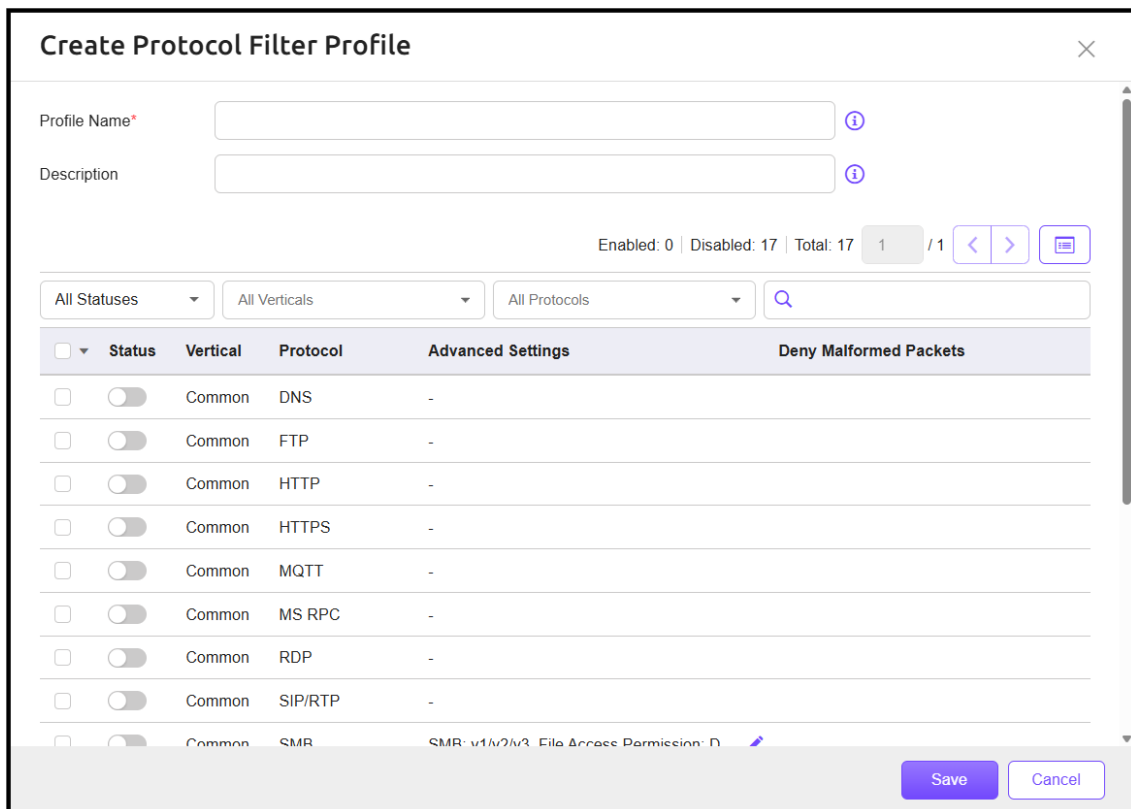

3. Configure the following Protocol Filter profile settings.


Item	Description
Profile Name	Type a profile name for this Protocol Filter profile.
Description	(Optional) Type a description.

Item	Description
Status	Enable the operational statuses of one or multiple protocols you want to include in this Protocol Filter profile by clicking the toggles. (Default status: Disabled)  If you enable Windows Update protocol, you need to enable DNS protocol as well in order for the Windows Update protocol to function properly.
Advanced Settings	Configure advanced settings of each protocol by clicking the edit icon .  Currently, EdgeIPS LE only supports configuring advanced settings for the SMB protocol. For more information about configuring the SMB advance settings, see Configuring SMB Advanced Settings.

4. Click [Save].

5.2.1.2 Configuring SMB Advanced Settings

Through the [SMB Advanced Settings] window, you can further specify the SMB protocol version combination, file access permission and enable or disable the [Deny anonymous SMB v1/v2/v3 access] setting.

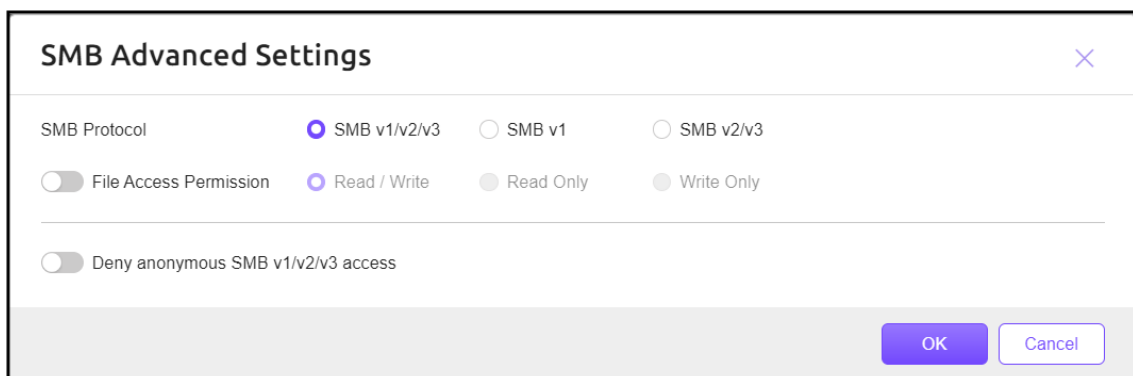

The image shows the 'SMB Advanced Settings' dialog box. It has a title bar with a close button (X). Inside, there are three radio buttons for 'SMB Protocol': 'SMB v1/v2/v3' (selected), 'SMB v1', and 'SMB v2/v3'. Below these are four radio buttons for 'File Access Permission': 'Read / Write' (selected), 'Read Only', 'Write Only', and 'File Access Permission' (disabled). At the bottom, there is a toggle switch for 'Deny anonymous SMB v1/v2/v3 access' which is currently turned off. At the bottom right, there are 'OK' and 'Cancel' buttons.

After you access the [SMB Advanced Settings] window, follow the procedure below.

Procedure

1. Configure the following SMB advanced settings.

- **SMB Protocol:** Select an SMB protocol version combination, **SMB v1/v2/v3**, **SMB v1** or **SMB v2/v3**.
- **File Access Permission:** If needed, enable this function and select one of the following file access behaviors.
 - **Read / Write:** File access for reading and writing.
 - **Read Only:** File access for reading only.
 - **Write Only:** File access for writing only.
- **Deny anonymous SMB v1/v2/v3 access:** If needed, enable this setting to deny access over SMB v1/v2/v3 for anonymous accounts.

2. Click [OK].

5.2.2 IPS Profiles


IPS profiles contain sophisticated IPS pattern rules which you can apply to policy rules for granular control. In IPS profiles, you can configure:

- **IPS pattern rule category**, including:
 - File Vulnerabilities
 - Buffer Overflow
 - DoS Attacks
 - Exploits
 - Malware Traffic
 - Reconnaissance
 - Web Threats
 - ICS Threats
 - Others
 - Misc
- **IPS pattern rule risk level**, including:
 - Informational
 - Low
 - Medium
 - High
 - Critical
- **IPS pattern rule default actions**, including:
 - Allow and Log
 - Deny and Log

5.2.2.1 Configuring IPS Profiles

Procedure

1. Go to [Objects & Profiles] > [Security Profiles] > [IPS Profiles].

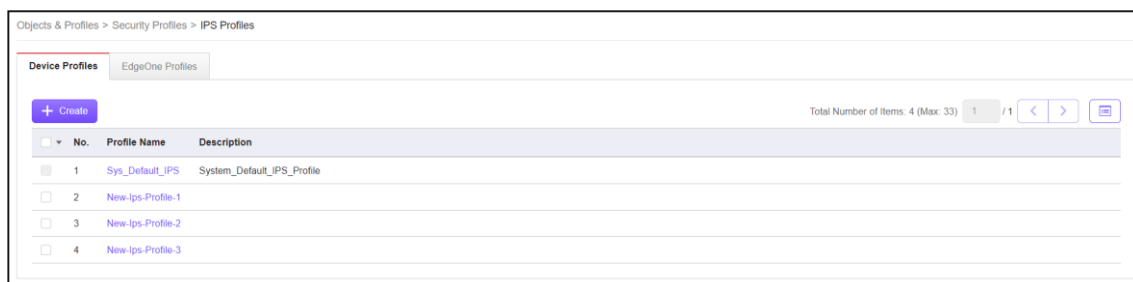

2. Do one of the following.

- Click [Create] to create a profile. The [Create IPS Profile] window will appear.
- Click a profile name to edit settings. The [Edit IPS Profile] window will appear.

Create IPS Profile

Profile Name*

Description

Enabled: 7029 Disabled: 0 Total: 7029 1 / 282

All Statuses

All Categories

All Risk Levels

All Actions


☐	Status	Rule ID	Category	Risk Level	Actions	Rule Name
☐	☒	1048640	Buffer Overflow	High	Deny and Log	WEB Microsoft PCT Buffer Overflow -1 (CVE-2003-0719)
☐	☒	1049406	Exploits	High	Deny and Log	WEB /etc/mold File Download
☐	☒	1049407	Reconnaissance	High	Deny and Log	WEB Linux /etc/shadow File Download
☐	☒	1049409	Exploits	High	Deny and Log	WEB .htgroup access
☐	☒	1049659	Exploits	High	Deny and Log	WEB Cisco IOS HTTP Configuration Arbitrary Administrative Access (CVE-2001-0537)
☐	☒	1049682	Exploits	High	Deny and Log	WEB .htpasswd file download (CVE-2001-0892)
☐	☒	1049736	Exploits	High	Deny and Log	WEB .htaccess file download (CVE-2000-0234)
☐	☒	1049802	Web threats	Critical	Deny and Log	WEB Directory Traversal -2.u
☐	☒	1049859	Buffer Overflow	High	Deny and Log	WEB Oracle 9i Application Server PL/SQL Apache Module Buffer Overflow Vulnerability (CVE-2001-1216)

Save

Cancel

3. Configure the following IPS profile settings.

Item	Description
Profile Name	Type a profile name for this IPS profile.
Description	(Optional) Type a description.
Status	Disable the operational statuses of one or multiple IPS pattern rules you want to exclude from this IPS profile by clicking the toggles. (Default status: Enabled)
Rule ID (IPS Rule Granular Control Details)	Click the rule ID in the [Rule ID] column to configure and view details of each IPS pattern rule. The [IPS Rule Details] window will appear. IPS Rule Details Status Rule ID Rule Name Category Risk Level Impact Action References TIDs Keywords For more information about EPSS, KEV, and CVSS-BT details, please click the rule ID to access TXOne Encyclopedia. OK Cancel Status: The operational status of this single IPS pattern rule. Use the toggle to enable/disable this rule. Rule ID: The ID number of this IPS pattern rule. You can view the threat information regarding this IPS pattern rule in detail by clicking the rule ID number, and you will then be redirected to the TXOne Threat Encyclopedia as shown below.

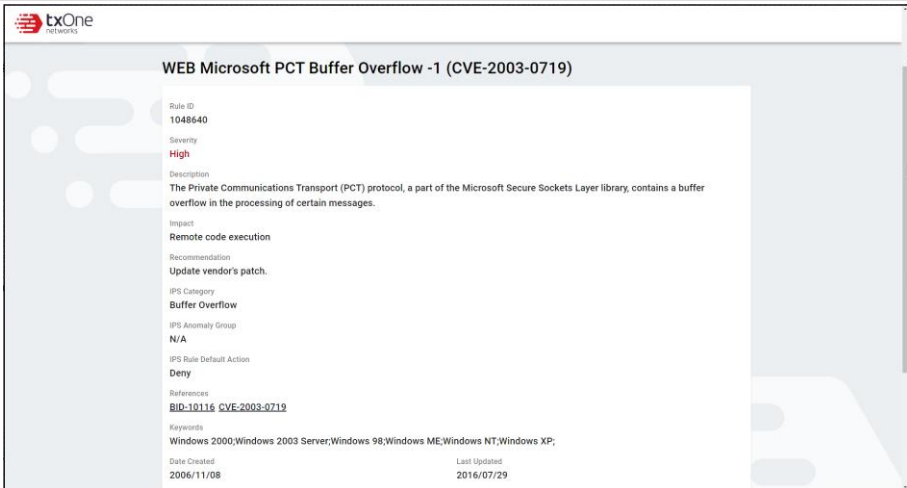Item	Description
	 WEB Microsoft PCT Buffer Overflow -1 (CVE-2003-0719) Rule ID: 1048640 Severity: High Description: The Private Communications Transport (PCT) protocol, a part of the Microsoft Secure Sockets Layer library, contains a buffer overflow in the processing of certain messages. Impact: Remote code execution Recommendation: Update vendor's patch. IPS Category: Buffer Overflow IPS Anomaly Group: N/A IPS Rule Default Action: Deny References: BID-10116 CVE-2003-0719 Keywords: Windows 2000; Windows 2003 Server; Windows 98; Windows ME; Windows NT; Windows XP; Date Created: 2006/11/08 Last Updated: 2016/07/29 • Rule Name: The name of this IPS pattern rule regarding the cyber attack. • Category: The threat category of this IPS pattern rule regarding the cyber attack, including File Vulnerabilities, Buffer Overflow, DoS Attacks, Exploits, Malware Traffic, Reconnaissance, Web Threats, ICS Threats, Others and Misc. • Risk Level: The suggested security level regarding the cyber attack, including Information, Low, Medium, High and Critical. • Impact: The damage that will be caused to the target network device if the cyber attack succeeds. • Action: The preset action for the cyber attack. Select either [Allow and Log] or [Deny and Log]. (Default action: Deny and Log) ○ Allow and Log: When the attack is detected by the Edge series device, the attack will be bypassed and logged for monitoring. ○ Deny and Log: When the attack is detected by the Edge series device, the attack will be blocked and logged for monitoring. • References: The vulnerability IDs of the cyber attack. • TIDs: MITRE TID information. • Keywords: The keywords for searching this IPS pattern rule. Click [OK] to save the configurations of the IPS rule details.

4. Click [Save].



The built-in IPS profile [Sys_Default_IPS] is view-only and cannot be deleted or configured.

5.2.3 File Filter Profiles

File Filter profiles contain detailed access protocols as well as settings for executable file types and Active Directory (AD) GPO dispatch which you can apply to policy rules. In File Filter profiles, you can configure:

- **Protocol for File Filter function**, including:
 - HTTP

- FTP
- SMB
- **Executable file types to be denied**, including:
 - Windows (PE files)
 - Linux (ELF files)
- **Filtering of Active Directory (AD) GPO**
 - Enable or disable AD GPO filters


On the [File Filter Profiles] page, you can further configure the **File Exclusions** function to exclude certain files from the file filter profiles you're enabling. The Edge device skips the file type scanning based on your File Exclusion list. This can increase the flexibility of configuration and obtain real control for your OT network.

We provide two methods for configuring the File Exclusion settings, either adding file items one by one or importing an edited CSV file with multiple **filename** items.

5.2.3.1 Configuring File Filter Profiles

Procedure

1. Go to [Objects & Profiles] > [Security Profiles] > [File Filter Profiles].

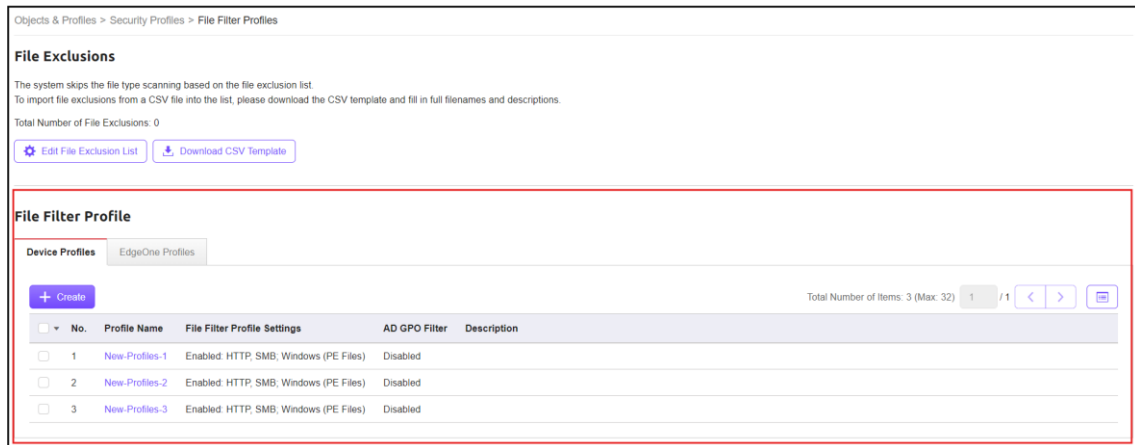

Objects & Profiles > Security Profiles > File Filter Profiles

File Exclusions

The system skips the file type scanning based on the file exclusion list.
To import file exclusions from a CSV file into the list, please download the CSV template and fill in full filenames and descriptions.

Total Number of File Exclusions: 0

[Edit File Exclusion List](#) [Download CSV Template](#)

File Filter Profile

Device Profiles **EdgeOne Profiles**

[+ Create](#) Total Number of Items: 3 (Max: 32) 1 / 1

No.	Profile Name	File Filter Profile Settings	AD GPO Filter	Description
1	New-Profiles-1	Enabled: HTTP, SMB, Windows (PE Files)	Disabled	
2	New-Profiles-2	Enabled: HTTP, SMB, Windows (PE Files)	Disabled	
3	New-Profiles-3	Enabled: HTTP, SMB, Windows (PE Files)	Disabled	

2. Do one of the following:

- Click [Create] to create a profile. The [Create File Filter Profile] window will appear.
- Click a profile name to edit settings. The [Edit File Filter Profile] window will appear.

Create File Filter Profile

Profile Name*

Description

File Filter Profile Settings

☐ Filter files by protocol

Protocol*

☐ HTTP
 ☐ FTP
 ☐ SMB

☐ Deny executable files*

Windows (PE Files)

Linux (ELF files)

AD GPO Filter

☐ Deny Active Directory (AD) GPO dispatch

Save

Cancel

3. Configure the following File Filter profile settings.

Item	Description
Profile Name	Type a profile name for this File Filter profile.
Description	(Optional) Type a description.

- File Filter Profile Settings

Item	Description
Filter files by protocol	Enable the File Filter function by clicking the toggle.
Protocol	Select one or multiple protocols for File Filter function, including HTTP , FTP and SMB .
Deny executable files	Select one or multiple packed executable file types, including Windows (PE files) and Linux (ELF files) .

- AD GPO Filter

Item	Description
Deny Active Directory (AD) GPO dispatch	(Optional) Enable this function by clicking the toggle if you want to filter AD GPOs.

4. Click [Save].

5.2.3.2 Configuring File Exclusions

Procedure

1. Go to [Objects & Profiles] > [Security Profiles] > [File Filter Profiles].

Objects & Profiles > Security Profiles > File Filter Profiles

File Exclusions

The system skips the file type scanning based on the file exclusion list.
To import file exclusions from a CSV file into the list, please download the CSV template and fill in full filenames and descriptions.

Total Number of File Exclusions: 0

[Edit File Exclusion List](#) [Download CSV Template](#)

File Filter Profile

Device Profiles **EdgeOne Profiles**

[+ Create](#) Total Number of Items: 3 (Max: 32) 1 / 1

No.	Profile Name	File Filter Profile Settings	AD GPO Filter	Description
1	New-Profiles-1	Enabled: HTTP, SMB, Windows (PE Files)	Disabled	
2	New-Profiles-2	Enabled: HTTP, SMB, Windows (PE Files)	Disabled	
3	New-Profiles-3	Enabled: HTTP, SMB, Windows (PE Files)	Disabled	

- **Method 1 (Steps 2-5): Importing a File List Using the Built-in CSV File Template**

2. Click the [Download CSV Template] button to download the CSV template.

File Exclusions

The system skips the file type scanning based on the file exclusion list.
To import file exclusions from a CSV file into the list, please download the CSV template and fill in full filenames and descriptions.

Total Number of File Exclusions: 0

[Edit File Exclusion List](#) [Download CSV Template](#)

 To avoid CVS file compatibility issue, we recommend using the CSV template provided on the page for importing full filenames into the console.

3. Open the downloaded CSV file and input the full filenames (mandatory) and descriptions (optional). For example:

Full Filename	Description
abc.exe	Windows PE File
def.bat	Windows PE File
ghi.o	Linux ELF File

- 
1. You do not need to unzip zip/gz file(s) for scanning each compressed file, as the system can identify zip/gz file(s) and determine whether the filename list contains the file items for exclusions. Notice that zip/gz files larger than 100MB will be ignored.
 2. The filename format can be <filename>+<file extension> (e.g. abc.exe), or just <filename> (e.g. abc). We recommend inputting full filenames (with file extensions).
 3. The file system is not case sensitive. Filenames in uppercase or lowercase are identified as the same file. In addition, Whitespace character(s) cannot be included in the beginning and the end of a filename. Special characters (<, >, :, ", /, \, |, and ?) are not allowed.

4. Filenames that start or end with whitespace characters or contain only one asterisk (*) are not valid. To use wildcard search in a file exclusion list, you can insert an asterisk at any point within the filename.
5. The maximum full filename length (<filename>+"."+<file extension>) is 128 characters (UTF-8, English characters). If user inputs any non-English characters, the full filename length will be shortened to 32 characters.

4. Click the [Edit File Exclusion List] button to edit a File Exclusion list.

File Exclusions

The system skips the file type scanning based on the file exclusion list.
To import file exclusions from a CSV file into the list, please download the CSV template and fill in full filenames and descriptions.

Total Number of File Exclusions: 0

 Edit File Exclusion List
  Download CSV Template

5. Click the [Import] button to import file exclusion items from your CSV file.

Edit File Exclusion List

Filenames in the file exclusion list are case-insensitive. Uppercase and lowercase filenames are recognized as the same.

 Create
  Import
 Total Number of Items: 0 (Max: 1000) 1 / 1

No.	Full Filename	Description
No data to display		

 Save
  Cancel

- **Method 2 (Steps 2-5): Manually Adding Full Filenames to the File Exclusion List**

2. Click the [Edit File Exclusion List] button to edit a File Exclusion list.


File Exclusions

The system skips the file type scanning based on the file exclusion list.
To import file exclusions from a CSV file into the list, please download the CSV template and fill in full filenames and descriptions.

Total Number of File Exclusions: 0

 Edit File Exclusion List
  Download CSV Template

3. Click the [Create] button to access the [Create File Exclusion] window.

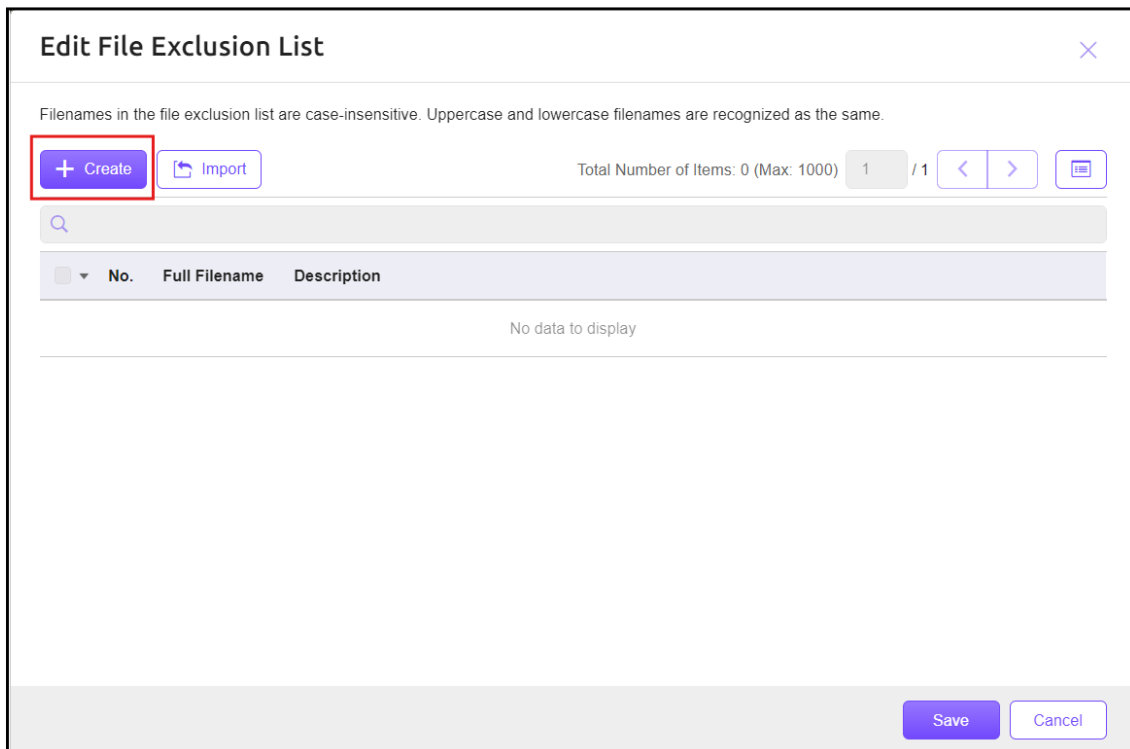

Edit File Exclusion List

Filenames in the file exclusion list are case-insensitive. Uppercase and lowercase filenames are recognized as the same.


+ Create **Import** Total Number of Items: 0 (Max: 1000) 1 / 1

Search bar:

No.	Full Filename	Description
No data to display		

Save **Cancel**

4. Input a full filename. The description is optional.

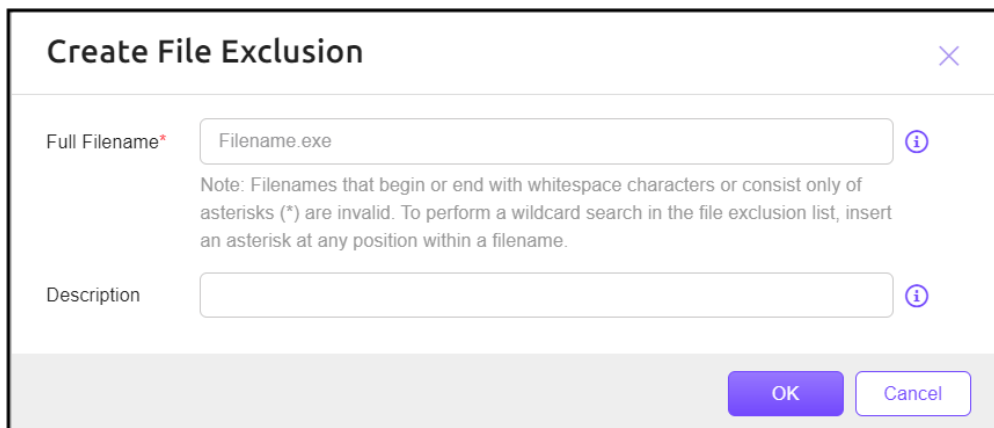

Create File Exclusion

Full Filename* ⓘ

Note: Filenames that begin or end with whitespace characters or consist only of asterisks (*) are invalid. To perform a wildcard search in the file exclusion list, insert an asterisk at any position within a filename.

Description ⓘ

OK **Cancel**

5. Click [OK]. Repeat the above steps 3-4 if you want to add multiple file exclusion items.

6. After you have completed the file exclusion settings by either of the methods, click [Save].

7. Use the search bar to search for the information you need if necessary.

5.2.4 Domain Name Profiles

Domain Name profiles contain lists of domain names and their types (domains or subdomains) which you can apply to Domain Name Filter rules.




For more information about the filtering mechanisms of Domain Name Filter rules, see [Domain Name Filter Rules](#).

5.2.4.1 Configuring Domain Name Profiles


Procedure

1. Go to [Objects & Profiles] > [Security Profiles] > [Domain Name Profiles].

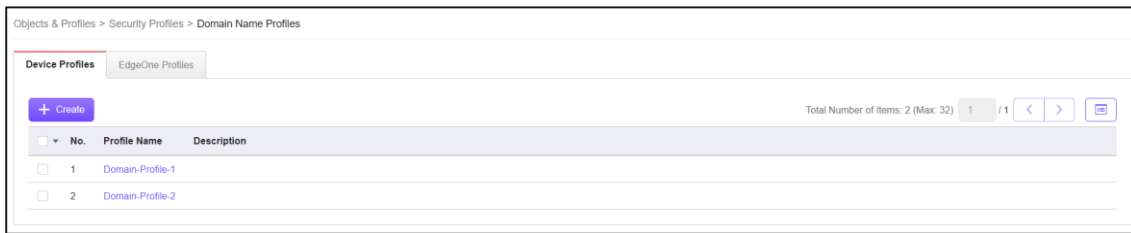

2. Do one of the following:

- Click [Create] to create a profile. The [Create Domain Name Profile] window will appear.
- Click a profile name to edit settings. The [Edit Domain Name Profile] window will appear.

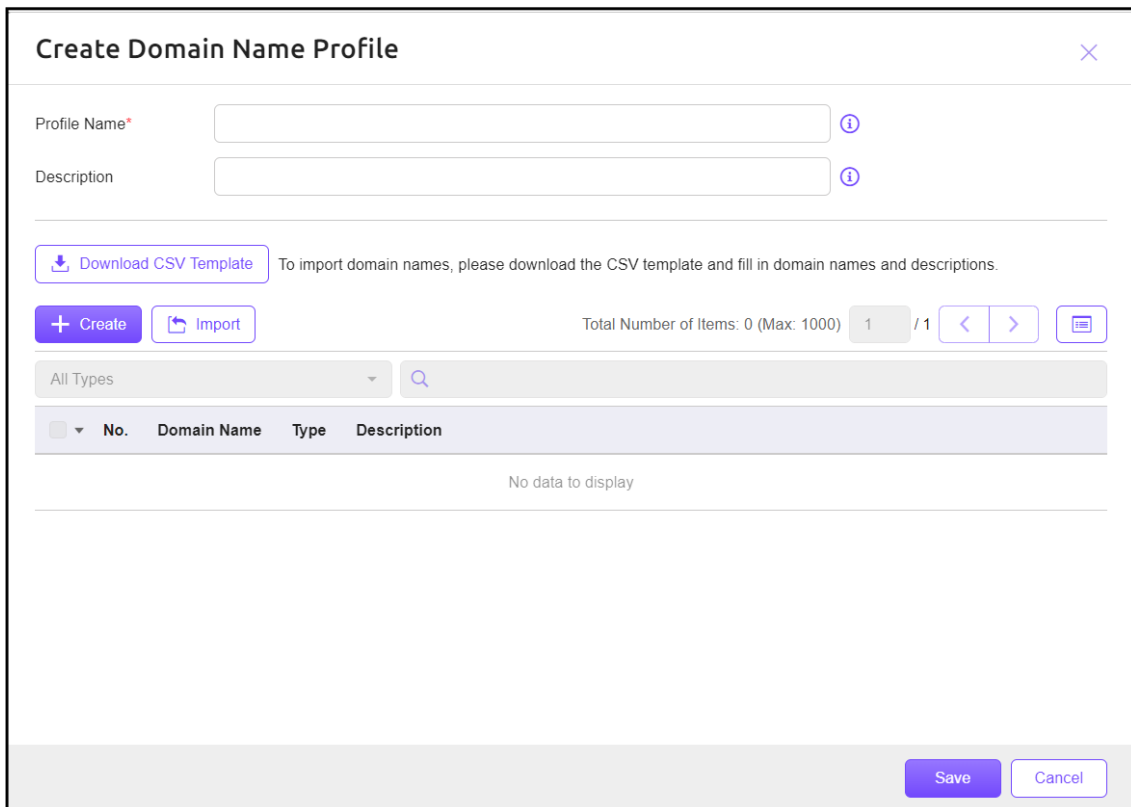

3. Configure the following Domain Name profile settings.

Item	Description
Profile Name	Type a profile name for this Domain Name profile.
Description	(Optional) Type a description.

- **Method 1 (Steps 4-6): Importing a Domain Name List Using the Built-in CSV File Template**

4. Click the [Download CSV Template] button to download the CSV template.

5. Open the downloaded CSV file and input the domain names (mandatory), their types (mandatory), and descriptions (optional). For example:

Domain Name	Type	Description
myhost.abc.com	domain	Domain 1
www.def.com	subdomain	Domain 2




When inputting the domain name types, please input either “domain” or “subdomain” with all the letters in lowercase.

6. Click the [Import] button to import the edited CSV file.

- **Method 2 (Steps 4-6): Manually Adding Domain Names to the Domain Name List**

4. Click the [Create] button to open the [Create Domain Name] window.

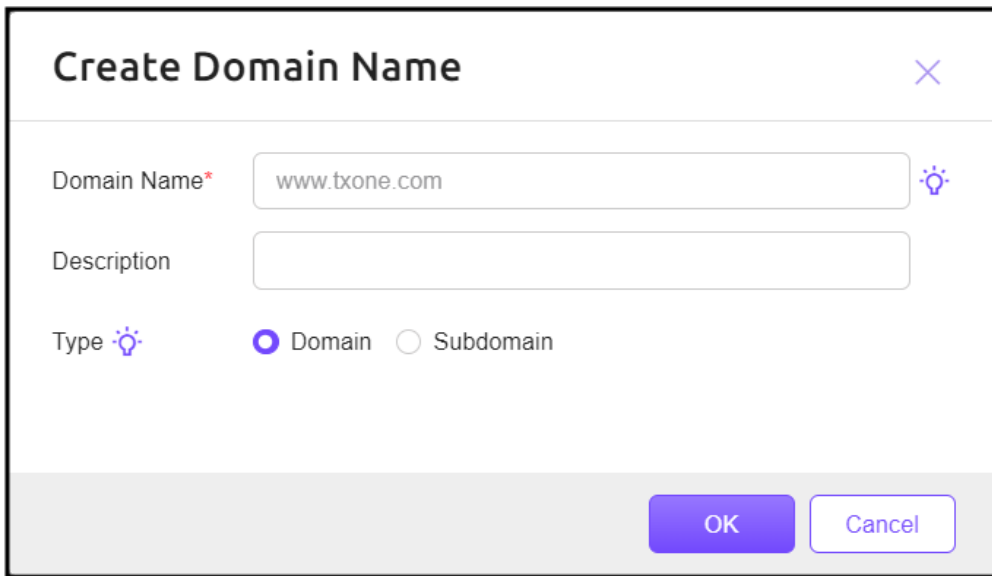

The dialog box titled "Create Domain Name" has a close button (X) in the top right corner. It contains three input fields: "Domain Name*" with the value "www.txone.com" and a lightbulb icon, "Description" which is empty, and "Type" with a lightbulb icon. Under "Type", there are two radio buttons: "Domain" (selected) and "Subdomain". At the bottom right, there are two buttons: "OK" and "Cancel".

5. Input a domain name and select its type, either **Domain** or **Subdomain**. The description is optional.

6. Click [OK]. Repeat the above steps 3-4 if you want to add multiple domain names.

7. After you have completed the Domain Name profile settings by either of the methods, click [Save].

8. Use the search bar to search for the information you need if necessary.

6 Security

This chapter describes how to configure security features on your Edge device to protect your assets.

6.1 General Settings

Configure device operational settings.

- [Security Mode Settings](#)
- [Deny Action Setting](#)

6.1.1 Security Mode Settings


You can configure the security operation mode of the Edge device on the [Security Mode Settings] page. The device offers two operation modes:

- Inline Mode
- Offline Mode

The following sections describe these two modes in detail.


Inline Mode

The Edge device sits in the direct communication path between source and destination, actively analyzing, filtering, and taking actions on all traffic that passes through it.

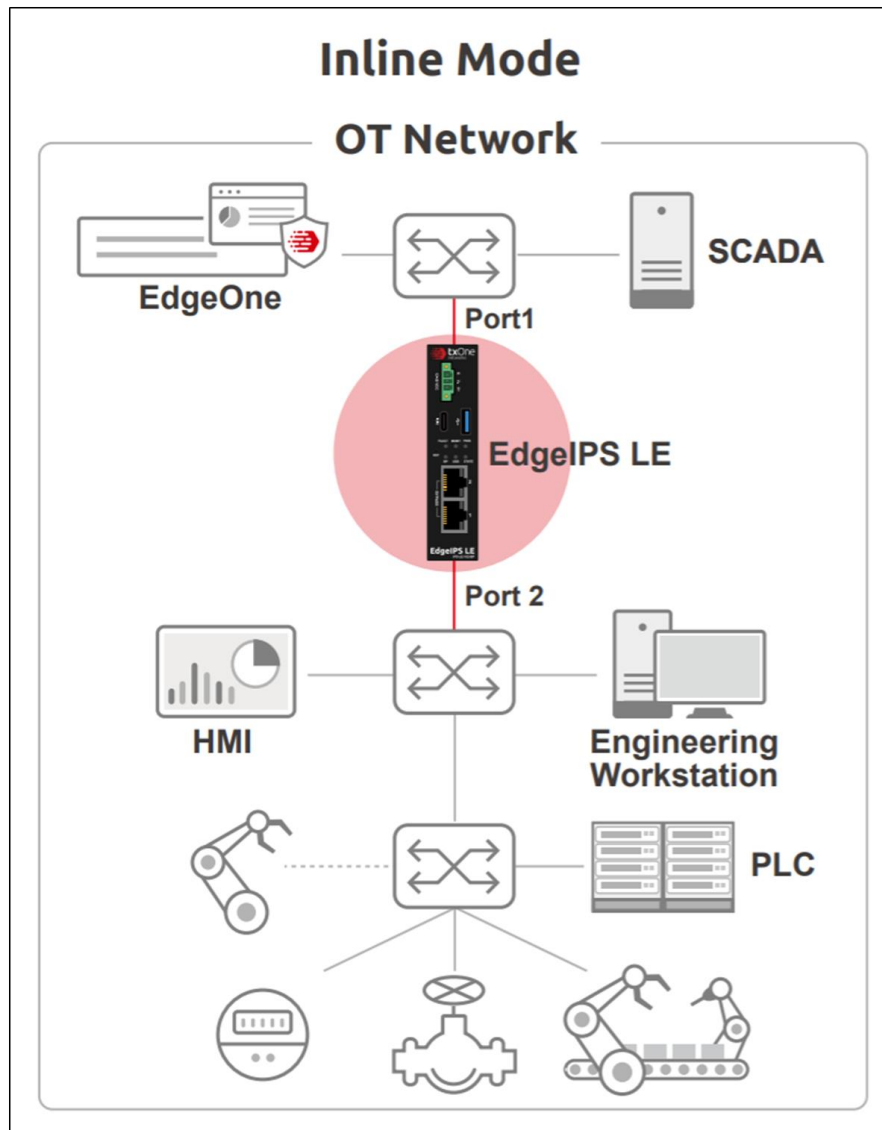

Offline Mode

Data packets are mirrored from a core or other type of switch to port 2 of the Edge device, which keeps detecting, monitoring, as well as outputting detection logs if threat events are detected.

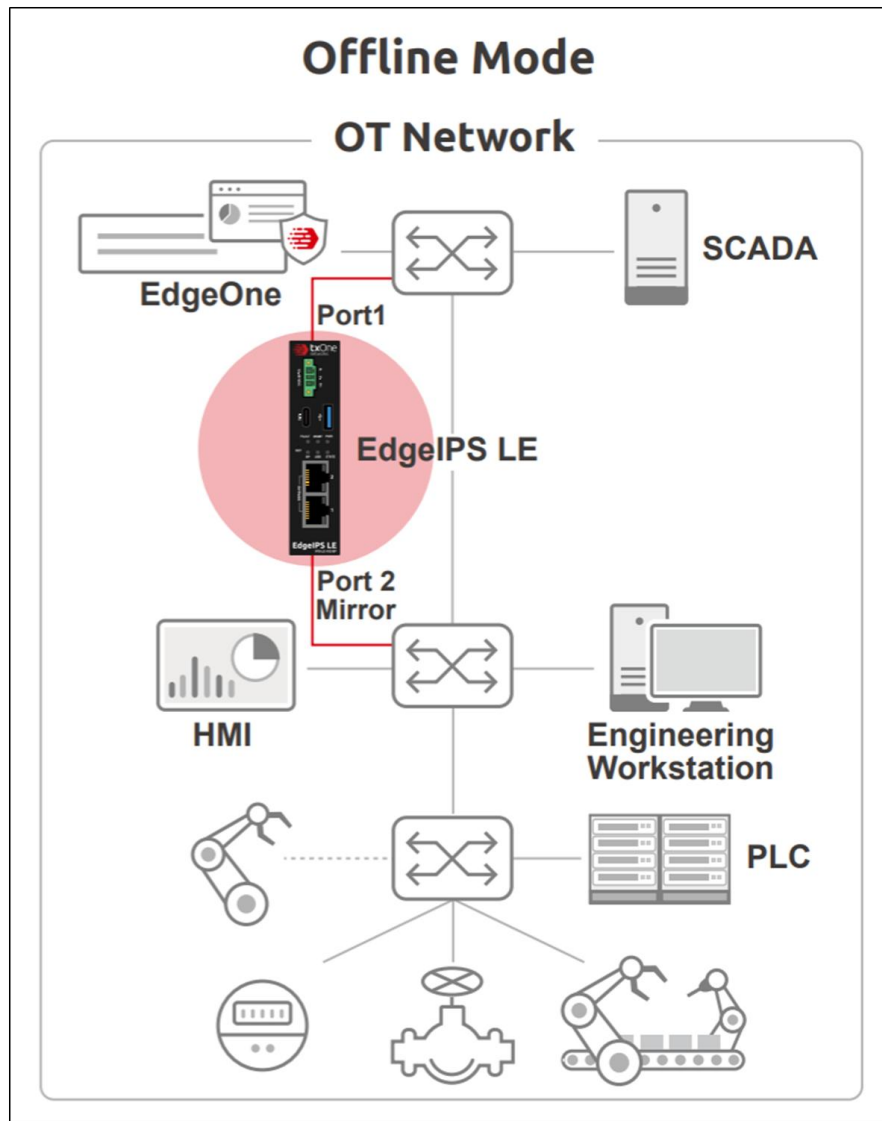

 When the EdgeIPS LE is in offline mode, **Port 1** of the EdgeIPS LE will function as a management port, which connects to another switch, allowing the EdgeIPS LE to be managed by EdgeOne.

6.1.1.1 Configuring Security Operation Mode

Procedure

1. Go to [Security] > [General Settings] > [Security Mode Settings].

Security > General Settings > Security Mode Settings

Security Operation Mode

☒ Inline Mode
 ☐ Offline Mode

Save
Cancel

Security > General Settings > Security Mode Settings

Security Operation Mode

☐ Inline Mode
 ☒ Offline Mode

Management Port 

PORT1

Save
Cancel

2. Configure the following settings.

Security Operation Mode	Description
Inline Mode	Select [Inline Mode], and the device will work as an IPS (Intrusion Prevention System) and check the traffic based on Policy Enforcement Rules and IPS profiles for cyber threats. Configured IP settings on the [Network Settings] page can be connected from Port 1 or Port 2 at the same time.  For more information about network settings, see Configuring Network and LLDP Settings.
Offline Mode	Select [Offline Mode], and the device will work as an IDS (Intrusion Detection System). Configured IP settings on the [Network Settings] page can be connected from the selected management port (default: Port1). The management port will receive the traffic from the mirror port (default: Port 2), which is used to manage switch/firewall and detect/log cyber threats.

Security Operation Mode	Description
	 Starting from firmware 1.1, EdgeIPS LE can log the OT protocol activity from the mirror port of the switch if a Protocol Filter profile is configured and applied to the Policy Enforcement rule. If you select [Offline Mode] for the device, further configure the following settings. Management Port: Select a management port of the device, either Port 1 or Port 2 (default: Port 1) to receive traffic from the network device for monitoring and logging.

3. Click [Save].

	- When you switch from inline mode to offline mode for the first time, you MUST connect to the physical port for device management in case you are unable to access the web console. - Ensure that the operation mode is correctly selected. If EdgeIPS LE is deployed using inline network topology with the [Security Operation Mode] being set to [Offline Mode], then devices that connect to the non-management port will be unable to get through to outside.
---	---

	EdgeIPS LE supports a fail-open hardware bypass mechanism, ensuring that network traffic continues to flow even if the device experiences a failure.
---	--

6.1.2 Deny Action Setting

On the [Deny Action Setting] page, you can decide which specific action to take when a rule with the action "deny and log" is matched, based on your Edge device deployment scenario, adjacent network appliances, and OT assets. The setting on this page applies to all security-related features across the entire console.

6.1.2.1 Configuring Deny Action Setting

Procedure

1. Go to [Security] > [General Settings] > [Deny Action Setting].

Security > General Settings > Deny Action Setting

Deny Action Setting

This feature allows you to decide which specific action to take when a rule with the action "deny and log" is matched, based on your Edge device deployment scenario, adjacent network appliances, and OT assets. The setting here applies to all security-related features.

Action Setting  ☒ Reset Connection ☐ Drop Connection

2. Configure the deny action setting.

Deny Action	Description
Reset Connection	When the deny action is [Reset Connection], the Edge device sends a notification when it rejects any packets associated with an unwanted connection.
Drop Connection	When the deny action is [Drop Connection], the Edge device simply discards any packets without sending a notification.

3. Click [Save].

6.2 Security Policies

Create and manage various types of policy rules to safeguard your OT networks and assets.

- [Cyber Security](#)
- [Policy Enforcement](#)
- [Policy Rule Auto-Learning](#)
- [Domain Name Filter Rules](#)
- [Suspicious Objects](#)


6.2.1 Cyber Security

The Cyber Security feature is used to protect OT assets against denial of service attacks. The signature rules of intrusion prevention are called “TXOne DPI (Deep Packet Inspection) Pattern.” This pattern is provided by TXOne and can be regularly updated through EdgeOne or through manual import via the device's web management console.

6.2.1.1 Configuring DoS Prevention for Asset Protection

Procedure

1. Go to [Security] > [Security Policies] > [Cyber Security].

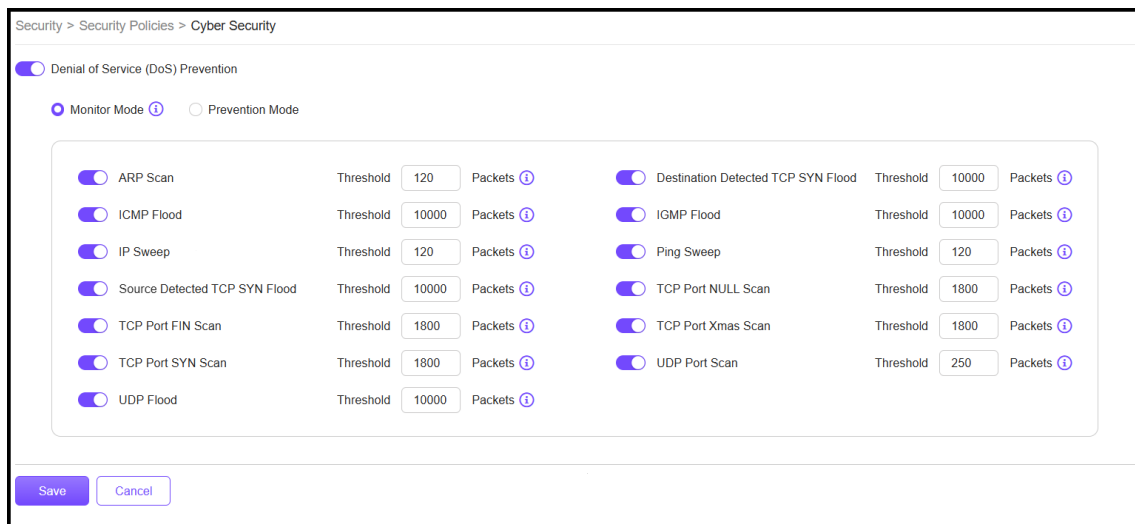

Security > Security Policies > Cyber Security

☒ Denial of Service (DoS) Prevention

☒ Monitor Mode ⓘ ☐ Prevention Mode

☒ ARP Scan	Threshold: 120	Packets ⓘ	☒ Destination Detected TCP SYN Flood	Threshold: 10000	Packets ⓘ
☒ ICMP Flood	Threshold: 10000	Packets ⓘ	☒ IGMP Flood	Threshold: 10000	Packets ⓘ
☒ IP Sweep	Threshold: 120	Packets ⓘ	☒ Ping Sweep	Threshold: 120	Packets ⓘ
☒ Source Detected TCP SYN Flood	Threshold: 10000	Packets ⓘ	☒ TCP Port NULL Scan	Threshold: 1800	Packets ⓘ
☒ TCP Port FIN Scan	Threshold: 1800	Packets ⓘ	☒ TCP Port Xmas Scan	Threshold: 1800	Packets ⓘ
☒ TCP Port SYN Scan	Threshold: 1800	Packets ⓘ	☒ UDP Port Scan	Threshold: 250	Packets ⓘ
☒ UDP Flood	Threshold: 10000	Packets ⓘ			

2. Enable the [Denial of Service (DoS) Prevention] function by clicking the toggle.

3. Select a mode, **Monitor Mode** or **Prevention Mode**, for the function.

4. (Optional) Enable and configure the thresholds of the denial of service rules.



The [Source Detected TCP SYN Flood] option is applicable to only Edge devices running firmware 2.2 or later.

5. Click [Save].

The following table summarizes the settings:

Security Operation Mode (Security Mode Settings)	DoS Mode	Action Performed
Inline Mode	Monitor Mode	- Detect and monitor abnormal protocol access attempts to the OT assets, without blocking network attacks. - Generate logs.
	Prevention Mode	- Block abnormal protocol access attempts to OT assets. - Generate logs.
Offline Mode	Monitor Mode	- Passively detect and monitor abnormal protocol access attempts to the OT assets, without blocking network attacks. - Generate logs.



When the Edge device is managed by EdgeOne, the Cyber Security settings here are synchronized with EdgeOne.

6.2.2 Policy Enforcement

Policy Enforcement allows you to define access rules with various conditions, including the well-known OT protocols for your own industry. Under which conditions the activity will be allowed or blocked is based on the rule settings in the adopted rules.

There are two types of Policy Enforcement rule lists for this device:

- Device Rule List:** Contains the policy rules created and configured by users with the Edge device local account privileges.
- EdgeOne Rule List:** Contains the policy rules synced from EdgeOne. Users with EdgeOne local account privileges can apply them to the devices managed by EdgeOne. Users with the Edge device local account privileges can only view these EdgeOne policy rules.



The device rules take higher priorities than the EdgeOne rules.

6.2.2.1 Configuring Policy Enforcement General Settings

Procedure

1. Go to [Security] > [Security Policies] > [Policy Enforcement].

Security > Security Policies > Policy Enforcement

Policy Enforcement General Settings

☐ Policy Enforcement
 Policy Enforcement Operation Mode: Monitor Mode
 Default Rule Action: Allow and Log [Configure Profiles for Default Rule](#)
 IPv6 Traffic: Allow

Policy Enforcement Rule List

Device Rule List | **EdgeOne Rule List**

[+ Create](#) Total Number of Items: 2 (Max: 512) 1 / 1 [<](#) [>](#) [🔍](#) [🗑️](#)

No.	Status	Rule Name	Connection Direction	Source IP / Object	Source IP / Object Info	Destination IP / Object	Destination IP / Object Info	Service Object	Service Object Info	VLAN IDs	Action
1	☒	PE_Rule_1	Bi-directional	Object (IP-Profile-4)	10.144.18.10-10.144.18.10	User-Defined	127.0.0.10-127.0.0.42	Object (Service-Profile-4)	TCP: (Port: 0), Cu...	Any	Deny
2	☒	PE_Rule_2	Bi-directional	Object (IP-Profile-2)	10.144.18.10/8	Object (IP-Profile-1)	10.144.18.7	User-Defined	Custom: 16	Any	Allow

[Save](#) [Cancel](#)

2. Enable or disable the Policy Enforcement function by clicking the toggle.
3. From the [Policy Enforcement Operation Mode] drop-down list, select a mode, **Monitor Mode** or **Prevention Mode**, for the function.
4. From the [Default Rule Action] drop-down list, select a default action, **Allow**, **Allow and Log** or **Deny and Log**, for when no Policy Enforcement rule is matched.
5. (Optional) If the default rule action is **Allow** or **Allow and Log**, click the [Configure Profiles for Default Rule] button to specify which IPS profile to use for traffic examination when no Policy Enforcement rule is matched.

Configure Profiles for Default Rule

☒ IPS Profile* Sys_Default_IPS [🔍](#) [🗑️](#)

[OK](#) [Cancel](#)

- a. Click the [IPS Profile] toggle to enable the setting.
- b. Select a pre-defined IPS profile from the drop-down list or use the system default IPS profile (Sys_Default_IPS).
- c. (Optional) To view/edit detailed IPS profile settings, click the [🔍](#) button.
- d. (Optional) To create an IPS profile, click the [🗑️](#) button.
- e. Click [OK].
6. From the [IPv6 Traffic] drop-down list, select an action, **Allow** or **Deny**, for the device to perform when it detects IPv6 packets.
7. Click [Save].

The following table summarizes the settings:

Security Operation Mode (Security General Settings)	Policy Enforcement Operation Mode	Action Performed
Inline Mode	Monitor Mode	- Detect and monitor abnormal protocol access attempts to the OT assets, without blocking network attacks. - Generate logs. (If the default rule action is [Allow and Log] or [Deny and Log].)
	Prevention Mode	- Block abnormal protocol access attempts to OT assets. - Generate logs. (If the default rule action is [Allow and Log] or [Deny and Log].)
Offline Mode	Monitor Mode	- Passively detect and monitor abnormal protocol access attempts to the OT assets, without blocking network attacks. - Generate logs. (If the default rule action is [Allow and Log] or [Deny and Log].)

6.2.2.2 Configuring Policy Enforcement Rules

Procedure

1. Configure the required objects and profiles.

- IP Objects



For more information, see [Configuring IP Objects](#).

- Service Objects



For more information, see [Configuring Service Objects](#).

- Protocol Filter Profiles



For more information, see [Configuring Protocol Filter Profiles](#).

- IPS Profiles



For more information, see [Configuring IPS Profiles](#).

- File Filter Profiles



For more information, see [Configuring File Filter Profiles](#).

2. Go to [Security] > [Security Policies] > [Policy Enforcement].

Security > Security Policies > Policy Enforcement

Policy Enforcement General Settings

☐ Policy Enforcement

Policy Enforcement Operation Mode  Monitor Mode

Default Rule Action  Allow and Log [Configure Profiles for Default Rule](#)

IPv6 Traffic Allow

Policy Enforcement Rule List

Device Rule List EdgeOne Rule List

[+ Create](#) Total Number of Items: 2 (Max: 512) 1 / 1    

No.	Status	Rule Name	Connection Direction	Source IP / Object	Source IP / Object Info	Destination IP / Object	Destination IP / Object Info	Service Object	Service Object Info	VLAN IDs	Action
1		PE_Rule_1	Bi-directional	Object (IP-Profile-4)	10.144.18.10-10.144.18.10/8	User-Defined	127.0.0.1-127.0.0.1	Object (Service-Profile-4)	TCP: (Port: 0),Cu...	Any	Deny
2		PE_Rule_2	Bi-directional	Object (IP-Profile-2)	10.144.18.10/8	Object (IP-Profile-1)	10.144.18.7	User-Defined	Custom: 16	Any	Allow

[Save](#) [Cancel](#)

3. Do one of the following.

- Click [Create] to create a new Policy Enforcement rule. The [Create Policy Enforcement Rule] window will appear.
- Click a rule name to edit settings. The [Edit Policy Enforcement Rule] window will appear.

Create Policy Enforcement Rule

Status

Rule Name*

Description

Basic Filters

Connection Direction

Source IP / Object

Destination IP / Object

Service Object

VLAN IDs

Action

Advanced Filters

Protocol Filter Profile

Action

IPS Profile

File Filter Profile

OK

Cancel

4. Configure the following settings.

Item	Description
Status	Enable the operational status of this Policy Enforcement rule by clicking the toggle.
Rule Name	Type a rule name for this Policy Enforcement rule.
Description	(Optional) Type a description.

- Basic Filters

Item	Description
Connection Direction	Select one of the following directions: Bi-directional: The Edge device doesn't consider the direction of a detected connection as a rule matching criterion in the basic filter. Towards Asset: The Edge device considers the direction of a detected connection as a rule matching criterion in the basic filter. When the connection direction is set to Towards Asset and the detected connection is initiated from a non-asset towards an asset, this criterion is met, and the Edge device takes the specified rule action accordingly. If the detected connection does not meet this

Item	Description
	criterion, the Edge device proceeds to check the next specified criterion in the basic filter. • Away from Asset: The Edge device considers the direction of a detected connection as a rule matching criterion in the basic filter. When the connection direction is set to Away from Asset and the detected connection is initiated from an asset towards a non-asset, this criterion is met, and the Edge device takes the specified rule action accordingly. If the detected connection does not meet this criterion, the Edge device proceeds to check the next specified criterion in the basic filter.
Source IP/Object	Select one of the following for the source IP addresses: • Any • Single IP • IP Range • IP Subnet • IP Object  If you select [IP Object], you can select an IP object that has been created beforehand on the [IP Objects] page or click the  button to create a new IP object.
Destination IP/Object	Select one of the following for the destination IP addresses: • Any • Single IP • IP Range • IP Subnet • IP Object
Service Object	Select one of the following for the layer 4 criteria: • Any • TCP: You can further specify the port range for this protocol. • UDP: You can further specify the port range for this protocol. • ICMP: You can further specify the Type and Code for this protocol. • Custom: You can further specify the protocol number for this protocol. The term “protocol number” refers to the one defined in the Internet protocol suite. • Service Object  If you select [Service Object], you can select a service object that has been created beforehand on the [Service

Item	Description
	Objects] page or click the  button to create a new service object.
VLAN IDs	Select either one of the following for the VLAN IDs: - Any - Custom: Specify at least one VLAN ID for this protocol.  A maximum of five VLAN IDs can be applied to one policy rule.
Action	Select one of the following actions: Allow: Select this option to allow network traffic that matches this rule. Allow and Log: Select this option to allow network traffic that matches this rule and output a log. Deny and Log: Select this option to block network traffic that matches this rule and output a log.

- Advanced Filters: If you select [Allow] or [Allow and Log] for [Action], you can set advanced filters (Protocol Filter profile, IPS profile, and File Filter profile) to conduct further actions.

Item	Description
Protocol Filter Profile	Select a Protocol Filter profile you have defined beforehand or click the  button to create a new profile. From the [Action] drop-down menu, select whether to allow or deny network traffic that matches the protocol filter.
IPS Profile	Select an IPS profile you have defined beforehand or click the  button to create a new profile.
File Filter Profile	Select a File Filter profile you have defined beforehand or click the  button to create a new profile.

5. Click [OK].

6. Click [Save] on the [Policy Enforcement] page.



You may click the :column_display_order_adjustment_button: button in the upper right corner of the table to show/hide certain type of information and adjust the column order. For more information, see [Viewing in Table View Mode](#).

6.2.2.3 Managing Policy Enforcement Rules

The following tables list the common tasks for managing Policy Enforcement rules.

- Device Rule List:**

Task	Action
To create a Policy Enforcement rule	Click the [Create] button to create a new Policy Enforcement rule.
To delete a Policy Enforcement rule	Click the checkbox of a rule and click the [Delete] button.
To duplicate a Policy Enforcement rule	Click the checkbox of a rule and click the [Duplicate] button.
To edit a Policy Enforcement rule	Click the name of a rule, and an [Edit Policy Enforcement Rule] window will appear.
To change the priority of a Policy Enforcement rule	Click the checkbox of a rule, click the [Change Priority] button, and specify a new priority for this rule.



When more than one Policy Enforcement rule is matched, the device takes action based on the rule with the highest priority and ignores the rest of the rules. The rules listed in the table on the [Policy Enforcement] page are ordered by priority, with the highest priority rule listed on the first row of the table.

- **EdgeOne Rule List:**

Task	Description
N/A	The Policy Enforcement rules on the EdgeOne rule list are view-only.

6.2.3 Policy Rule Auto-Learning

Policy Rule Auto-Learning allows you to create a learning task within a scheduled period of time to collect information about legitimate network traffic, and then use it to generate a trust list of Policy Enforcement baseline rules for your network environment.



Before you create a policy rule auto-learning task, ensure that IPS profiles are properly configured. For more information about IPS profiles, see [IPS Profiles](#).

6.2.3.1 Creating Policy Rule Auto-Learning Tasks

Procedure

1. Go to [Security] > [Security Policies] > [Policy Rule Auto-Learning].

Security > Security Policies > Policy Rule Auto-Learning

Policy Rule Auto-Learning Task

This feature allows the Edge device to learn the traffic passing through it and automatically build up Policy Enforcement rules. All generated rules are allowlists and are added to the device rule list on the [Policy Enforcement] page. We recommend that you configure the NTP settings to sync the system time before you create an auto-learning task. During the task, the Policy Enforcement default rule action is skipped.



2. Click the [Create Task] button to create an auto-learning task. The [Create Task] window will appear.

Create Task

Traffic Learning Scope
☒ All
☐ Custom

⚙️

0 Scope Entries

IPS Profile

Sys_Default_IPS

📄 📄

IPS Mode
☒ Monitor Mode
☐ Prevention Mode

Schedule
☒ Start Now
☐ Start Time

📅

2025-05-06

at

🕒

06

:

🕒

10

Duration

1 Day

0 Hours

0 Minutes

End Time
2025-05-07T06:10:14Z

Save

Cancel

3. Configure the following settings.

Item	Description												
Traffic Learning Scope	Select All to perform the learning task based on all traffic flowing through the device, or Custom to define the specific types of traffic the device should use for learning. If you select Custom, click the  button to further configure traffic learning scopes. Configure Custom Scopes + Create Total Number of Items: 1 (Max: 32) 1 / 1 < >  <table><tr><th>☐</th><th>No.</th><th>IP Address</th><th>MAC Address</th><th>VLAN IDs</th><th>Action</th></tr><tr><td>☐</td><td>1</td><td>192.168.10.15</td><td>Any</td><td>Any</td><td></td></tr></table> OK Cancel 1. On the [Configure Custom Scopes] window, do one of the following. - Click [Create] to create a scope entry. The [Create Custom Scope Settings] window will appear. - Click  to edit scope settings. The [Edit Custom Scope Settings] window will appear. Create Custom Scope Settings Set at least one traffic source type (IP address, MAC address, or VLAN ID) to define the traffic learning scope. IP Address* Any MAC Address* Any VLAN IDs* Any OK Cancel 2. Set at least one traffic source type, including IP address, MAC address, and VLAN ID to define the traffic learning scope. IP Address: Select one of the following for the source IP addresses:	☐	No.	IP Address	MAC Address	VLAN IDs	Action	☐	1	192.168.10.15	Any	Any	
☐	No.	IP Address	MAC Address	VLAN IDs	Action								
☐	1	192.168.10.15	Any	Any									

Item	Description
	○ Any ○ Single IP: Specify an IP address. ○ IP Range: Specify an IP range. ○ IP Subnet: Specify an IP subnet. • MAC Address: Select either one of the following for the source MAC addresses: ○ Any ○ Custom: Specify a MAC address. • VLAN IDs: Select either one of the following for the source VLAN IDs: ○ Any ○ Custom: Specify one to five VLAN IDs. 3. Click [OK] on the [Create Custom Scope Settings] or [Edit Custom Scope Settings] window, then click [OK] on the [Configure Custom Scopes] window.
IPS Profile	Select an IPS profile to apply to the learning task.
IPS Mode	Select Monitor Mode or Prevention Mode to apply to the learning task.
Schedule	Select Start Now to start the task once you complete the task settings, or Start Time and specify a specific time to schedule the task. • Duration: Specify the duration of the task. • End Time: The system will calculate the end time based on your task start time and duration.

4. Click [Save] to create the task.



When a learning task is running, you cannot upload a configuration file to restore settings.

6.2.3.2 Stopping Policy Rule Auto-Learning Tasks

Procedure

1. When a learning task is in progress, go to [Security] > [Security Policies] > [Policy Rule Auto-Learning].

Security > Security Policies > Policy Rule Auto-Learning

Policy Rule Auto-Learning Task Details

Learning Status	• Task Ongoing
Traffic Learning Scope	Custom 
IPS Profile for Task	Sys_Default_IPS
IPS Mode for Task	Monitor Mode
Start Time	2025-05-06T07:08:18Z
End Time	2025-05-07T07:08:18Z

 Stop Task
  Delete Task

2. Click the [Stop Task] button to stop the auto-learning task. After you stop the task, a learning result will still be generated for your review.

6.2.3.3 Deleting Policy Rule Auto-Learning Tasks

Procedure

1. When a learning task is in progress, go to [Security] > [Security Policies] > [Policy Rule Auto-Learning].

Security > Security Policies > Policy Rule Auto-Learning

Policy Rule Auto-Learning Task Details

Learning Status	• Task Ongoing
Traffic Learning Scope	Custom 
IPS Profile for Task	Sys_Default_IPS
IPS Mode for Task	Monitor Mode
Start Time	2025-05-06T07:08:18Z
End Time	2025-05-07T07:08:18Z

 Stop Task
  Delete Task

2. Click the [Delete Task] button to delete the auto-learning task. Note that if you delete the task, the learning result will be erased.

6.2.3.4 Restarting Policy Rule Auto-Learning Tasks

Procedure

1. After a learning task is completed/stopped, go to [Security] > [Security Policies] > [Policy Rule Auto-Learning].

Security > Security Policies > Policy Rule Auto-Learning

Policy Rule Auto-Learning Task Details

Learning Status	● Task Completed
Traffic Learning Scope	Custom 
IPS Profile for Task	Sys_Default_IPS
IPS Mode for Task	Monitor Mode
Start Time	2025-05-06T08:44:12Z
End Time	2025-05-07T08:44:12Z
Number of Learned Protocol Filter Profiles / Remaining Quota	0 / 64
Number of Learned Policy Rules / Remaining Quota	151 / 512

 Apply All Policy Rules
  Generate

 Restart Task
  Delete Learning Result
  Download Learning Result

2. Click the [Restart Task] button to restart the auto-learning task. Note that if you restart the task, the previous learning result will be erased.

6.2.3.5 Generating and Applying Learned Policy Enforcement Rules

Procedure

1. After a learning task is completed/stopped, go to [Security] > [Security Policies] > [Policy Rule Auto-Learning].

Security > Security Policies > Policy Rule Auto-Learning

Policy Rule Auto-Learning Task Details


Learning Status	● Task Completed
Traffic Learning Scope	Custom 
IPS Profile for Task	Sys_Default_IPS
IPS Mode for Task	Monitor Mode
Start Time	2025-05-06T08:44:12Z
End Time	2025-05-07T08:44:12Z
Number of Learned Protocol Filter Profiles / Remaining Quota	0 / 64
Number of Learned Policy Rules / Remaining Quota	151 / 512

 Apply All Policy Rules
  Generate

 Restart Task
  Delete Learning Result
  Download Learning Result

2. To apply all the learned policy rules to the device, click [Apply All Policy Rules].



3. To review the learned policy rules and decide which rules to apply, click [Generate]. The [Review Generated Policy Rules] window will appear.


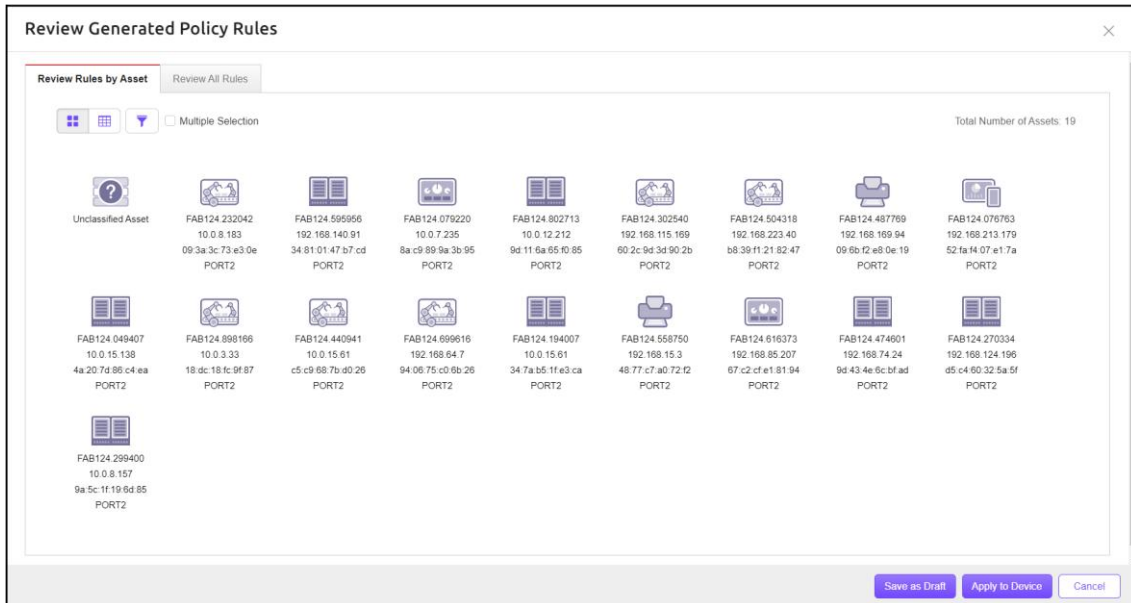


The following table lists the tasks that you can perform on the [Review Generated Policy Rules] window.

Task	Procedure
To review policy rules based on network traffic from one asset	- Go to the [Review Rules by Asset] tab. - Select an asset. The following window will appear. - All learned policy rules are retained by default. To discard unwanted rules, click the toggles in the [Status] column. - Click [OK]. The number of retained policy rules and Protocol Filter profiles must not exceed their respective remaining quotas.
To review policy rules based on network traffic from multiple assets	- Go to the [Review Rules by Asset] tab. - Check the [Multiple Selection] checkbox. - Select multiple assets and click [Review Rules for Selected Assets]. The following window will appear.

Task	Procedure
	- All learned policy rules are retained by default. To discard unwanted rules, click the toggles in the [Status] column. - Click [OK].  The number of retained policy rules and Protocol Filter profiles must not exceed their respective remaining quotas.
To review all learned policy rules	- Go to the [Review All Rules] tab. - All learned policy rules are retained by default. To discard unwanted rules, click the toggles in the [Status] column.  The number of retained policy rules and Protocol Filter profiles must not exceed their respective remaining quotas.
To switch between the grid view and table view modes under the [Review Rules by Asset] tab	Click the grid/table view buttons  .
To search for specific assets under the [Review Rules by Asset] tab	- Click the  button. The [Add Filters] window will appear. Add Filters × Add up to 5 filters to search for specific assets. In each filter you can include up to 10 search values. Field Asset Hostname Operator is + Value Search Apply Cancel - Create up to five search filters. In each filter you can include up to 10 search values. - Click [Apply].
To edit a policy rule name	- Go to the generated policy rule list under either tab. - Click a policy rule name in the [Rule Name] column. The [Edit Rule Name] window will appear.

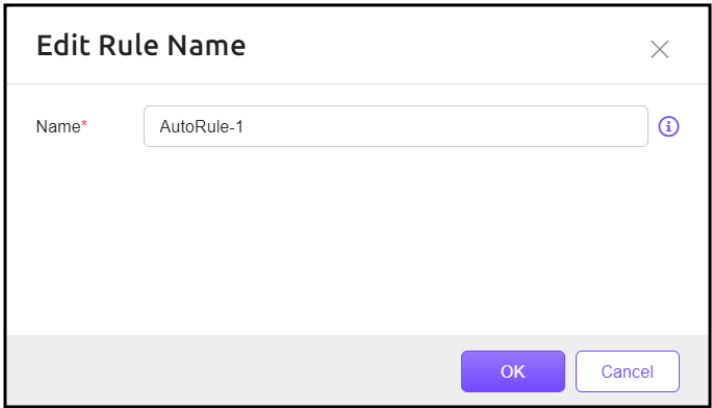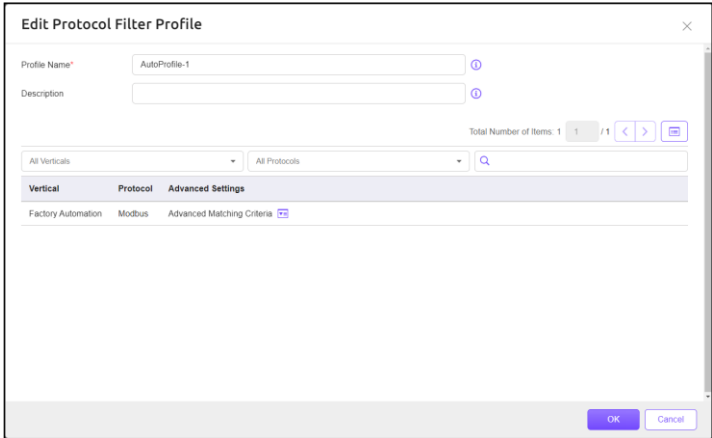Task	Procedure
	 - Input a new name. - Click [OK].
To edit a Protocol Filter profile name and description	- Go to the generated policy rule list under either tab. - Click a Protocol Filter profile name in the [Protocol Filter Profile] column. The [Edit Protocol Filter Profile] window will appear.  - Input a new name and/or description. - Click [OK].
To view details of a learned Protocol Filter profile	- Go to the generated policy rule list under either tab. - Click a Protocol Filter profile name in the [Protocol Filter Profile] column. The [Edit Protocol Filter Profile] window will appear.

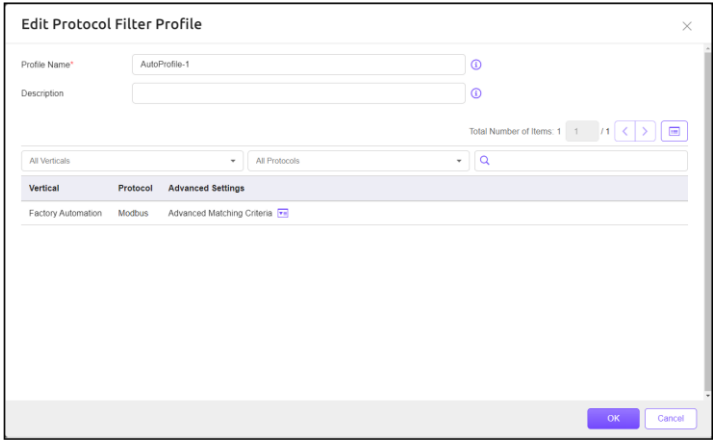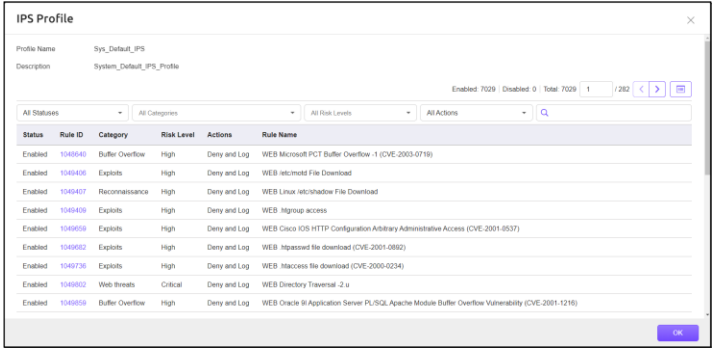Task	Procedure
	 3. Click the [View Detailed Information] button .
To view details of the applied IPS profile	- Go to the generated policy rule list under either tab. - Click the name of the applied IPS profile in the [IPS Profile] column. The following window will appear. 
To save a draft of the generated policy rule list	Click [Save as Draft]. To edit a saved draft, click [Generate] on the [Policy Rule Auto-Learning].
To apply retained policy rules and Protocol Filter profiles to the Edge device	Click [Apply to Device]. The applied policy rules and Protocol Filter profiles will be added to the [Policy Enforcement] and [Protocol Filter Profiles] pages.

6.2.3.6 Deleting Learning Results

Procedure

- After a learning task is completed/stopped, go to [Security] > [Security Policies] > [Policy Rule Auto-Learning].

Security > Security Policies > Policy Rule Auto-Learning

Policy Rule Auto-Learning Task Details

Learning Status	● Task Completed
Traffic Learning Scope	Custom 
IPS Profile for Task	Sys_Default_IPS
IPS Mode for Task	Monitor Mode
Start Time	2025-05-06T08:44:12Z
End Time	2025-05-07T08:44:12Z
Number of Learned Protocol Filter Profiles / Remaining Quota	0 / 64
Number of Learned Policy Rules / Remaining Quota	151 / 512

 Apply All Policy Rules
  Generate

 Restart Task
  Delete Learning Result
  Download Learning Result

2. Click the [Delete Learning Result] button.

6.2.3.7 Downloading Learning Results

Procedure

1. After a learning task is completed/stopped, go to [Security] > [Security Policies] > [Policy Rule Auto-Learning].

Security > Security Policies > Policy Rule Auto-Learning

Policy Rule Auto-Learning Task Details

Learning Status	● Task Completed
Traffic Learning Scope	Custom 
IPS Profile for Task	Sys_Default_IPS
IPS Mode for Task	Monitor Mode
Start Time	2025-05-06T08:44:12Z
End Time	2025-05-07T08:44:12Z
Number of Learned Protocol Filter Profiles / Remaining Quota	0 / 64
Number of Learned Policy Rules / Remaining Quota	151 / 512

 Apply All Policy Rules
  Generate

 Restart Task
  Delete Learning Result
  Download Learning Result

2. Click the [Download Learning Result] button.

6.2.4 Domain Name Filter Rules


Domain Name Filter rules allow users to define rules to block malicious or allow reliable traffic by identifying the DNS queries sent from the OT assets. This provides users with access controls, ensuring that all traffic passing through their network is secure.

When an OT asset sends a DNS query to a DNS server, the DNS query will be examined by the asset's uplink Edge device, before it arrives at the DNS server. If the Edge device allows the

DNS query, it will then be sent to the DNS server. Otherwise, it will be blocked, terminating the DNS query process.

To examine these DNS queries coming from assets, we must define Domain Name Filter rules for the Edge device to determine whether or not a DNS query should be sent out. The Domain Name Filter rule's functioning depends on how it's configured.

Let's assume the default action for the Domain Name Filter rule is "Deny and Log."

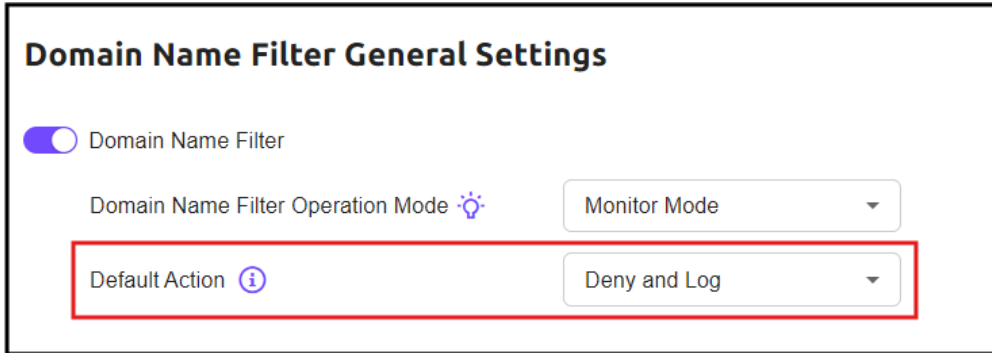

Domain Name Filter General Settings


☒ Domain Name Filter

Domain Name Filter Operation Mode  Monitor Mode

Default Action  Deny and Log

We have two Domain Name Filter rules, each containing a Domain Name Object with its action set to "Allow."

- Domain_Name_Filter_Rule_1:
 - Domain Name Object:
 - Domain Name: cs.txone.com
 - Type: **Domain**
 - Rule Action if Matched: Allow

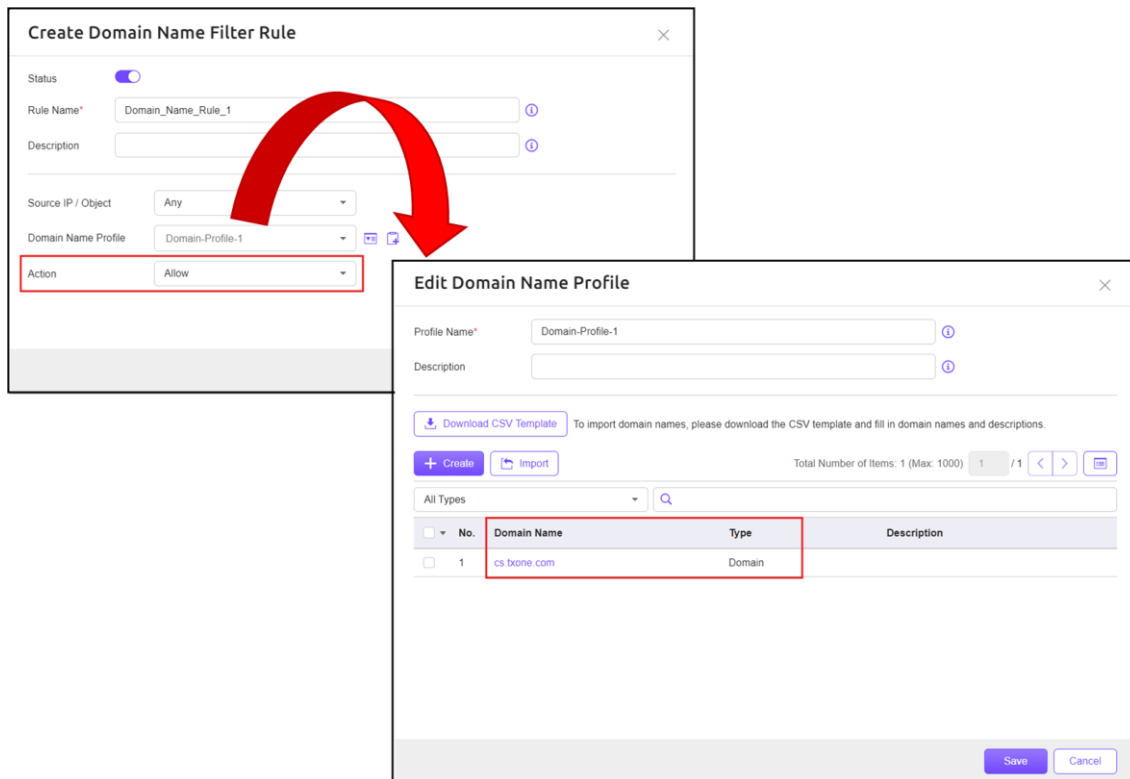

Create Domain Name Filter Rule

Status ☒

Rule Name* Domain_Name_Rule_1 

Description 

Source IP / Object Any

Domain Name Profile Domain-Profile-1  

Action Allow

Edit Domain Name Profile

Profile Name* Domain-Profile-1 

Description 

[Download CSV Template](#) To import domain names, please download the CSV template and fill in domain names and descriptions.

[+ Create](#) [Import](#) Total Number of Items: 1 (Max: 1000) 1 / 1   


All Types 

No.	Domain Name	Type	Description
1	cs.txone.com	Domain	

[Save](#) [Cancel](#)

- Domain_Name_Filter_Rule_2:
 - Domain Name Object:
 - Domain Name: cs.txone.com

- Type: **Subdomain**
- Rule Action if Matched: Allow

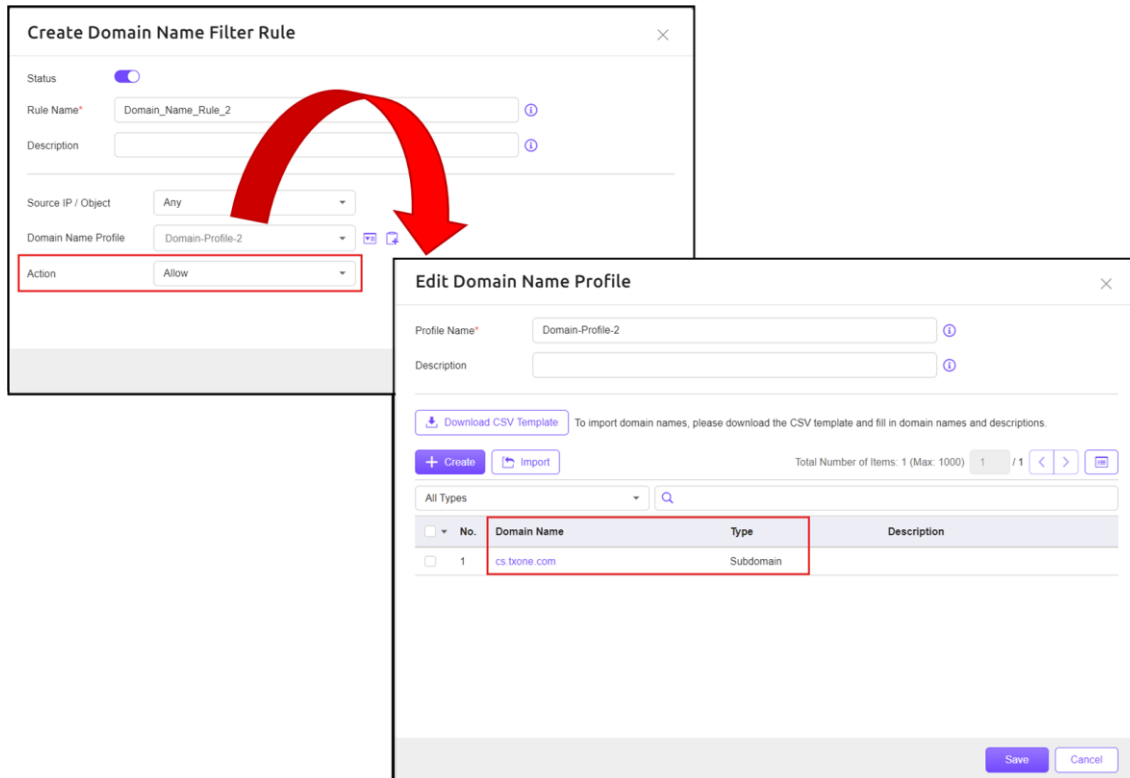

Create Domain Name Filter Rule

Status: ☒

Rule Name*: Domain_Name_Rule_2 ⓘ

Description: ⓘ

Source IP / Object: Any

Domain Name Profile: Domain-Profile-2 ⓘ

Action: Allow

Edit Domain Name Profile

Profile Name*: Domain-Profile-2 ⓘ

Description: ⓘ

[Download CSV Template](#) To import domain names, please download the CSV template and fill in domain names and descriptions.

[+ Create](#) [Import](#) Total Number of Items: 1 (Max: 1000) 1 / 1 < > ⓘ

All Types


No.	Domain Name	Type	Description
1	cs.txone.com	Subdomain	

Save Cancel

Now, consider DNS queries of these three domains:

- cs.txone.com
- download-center.cs.txone.com
- txone.com

With "Domain_Name_Filter_Rule_1", DNS queries are filtered as follows:

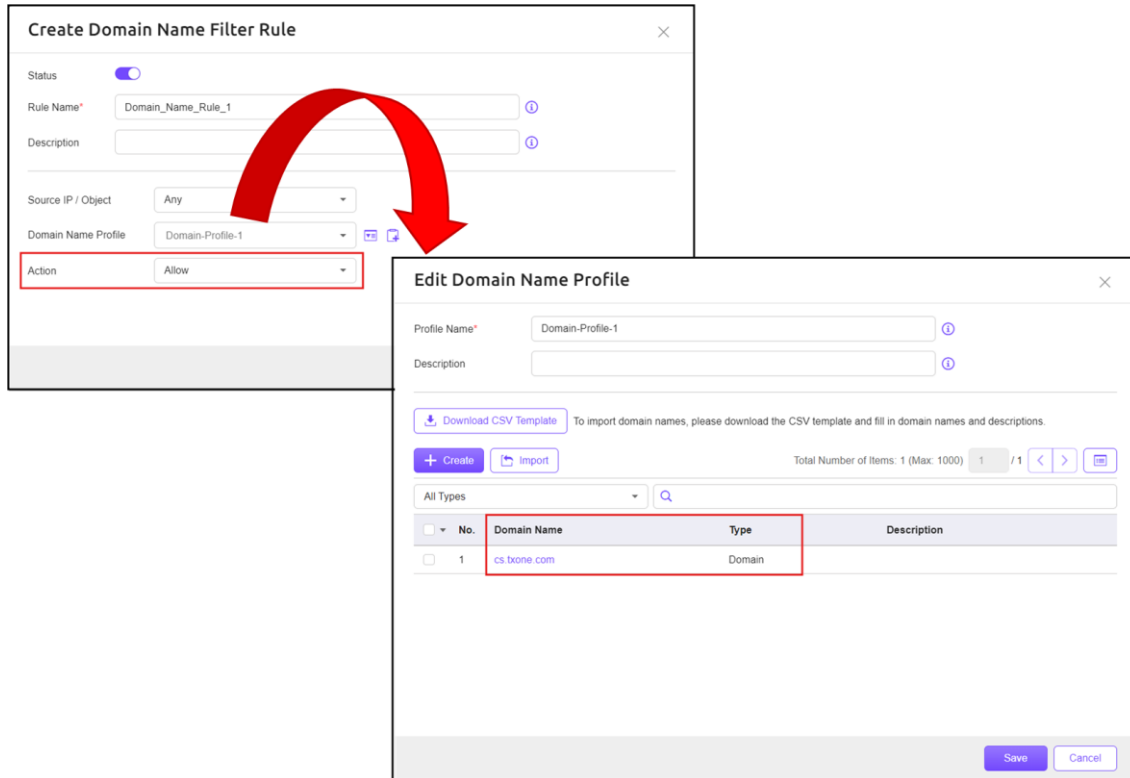

Create Domain Name Filter Rule

Status: ☒

Rule Name*: Domain_Name_Rule_1

Description:

Source IP / Object: Any

Domain Name Profile: Domain-Profile-1

Action: Allow

Edit Domain Name Profile

Profile Name*: Domain-Profile-1

Description:

[Download CSV Template](#) To import domain names, please download the CSV template and fill in domain names and descriptions.

[+ Create](#) [Import](#) Total Number of Items: 1 (Max: 1000) 1 / 1

All Types


No.	Domain Name	Type	Description
1	cs.txone.com	Domain	

[Save](#) [Cancel](#)

This rule allows the DNS query of "cs.txone.com" and denies queries of all other domains.

- cs.txone.com: This DNS query is **allowed**, as it matches the domain specified.
- download-center.cs.txone.com: This DNS query is **denied**, as it doesn't match the domain specified.
- txone.com: This DNS query is **denied**, as it doesn't match the domain specified.

With "Domain_Name_Filter_Rule_2", DNS queries are filtered differently:

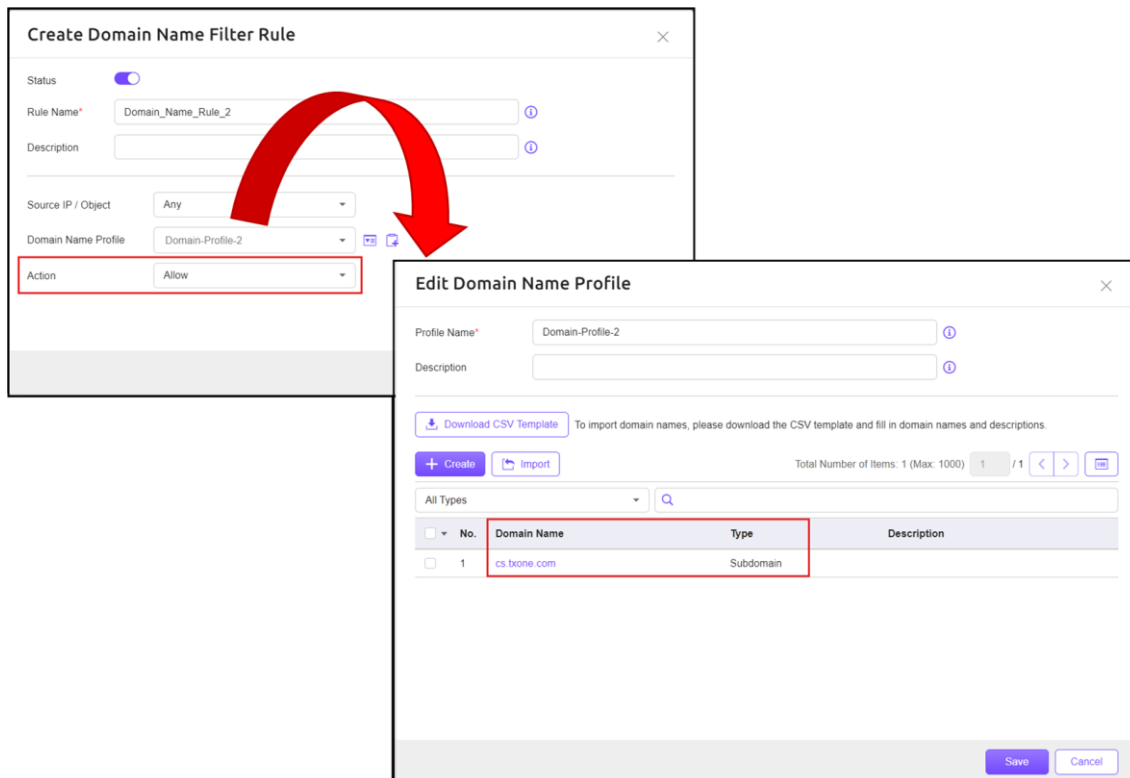

Create Domain Name Filter Rule

Status: ☒

Rule Name*: Domain_Name_Rule_2

Description:

Source IP / Object: Any

Domain Name Profile: Domain-Profile-2

Action: Allow

Edit Domain Name Profile

Profile Name*: Domain-Profile-2

Description:

[Download CSV Template](#) To import domain names, please download the CSV template and fill in domain names and descriptions.

[+ Create](#) [Import](#) Total Number of Items: 1 (Max: 1000) 1 / 1

All Types

No.	Domain Name	Type	Description
1	cs.txone.com	Subdomain	

Save Cancel


This rule allows DNS queries of any subdomain under "cs.txone.com" and denies all other queries.

- cs.txone.com: This DNS query is **denied**, as it is not a query of a subdomain under "cs.txone.com".
- download-center.cs.txone.com: This DNS query is **allowed**, as it is a query of a subdomain under "cs.txone.com".
- txone.com: This DNS query is **denied**, as it is not a query of a subdomain under "cs.txone.com".

6.2.4.1 Configuring Domain Name Filter General Settings

Procedure

1. Go to [Security] > [Security Policies] > [Domain Name Filter Rules].

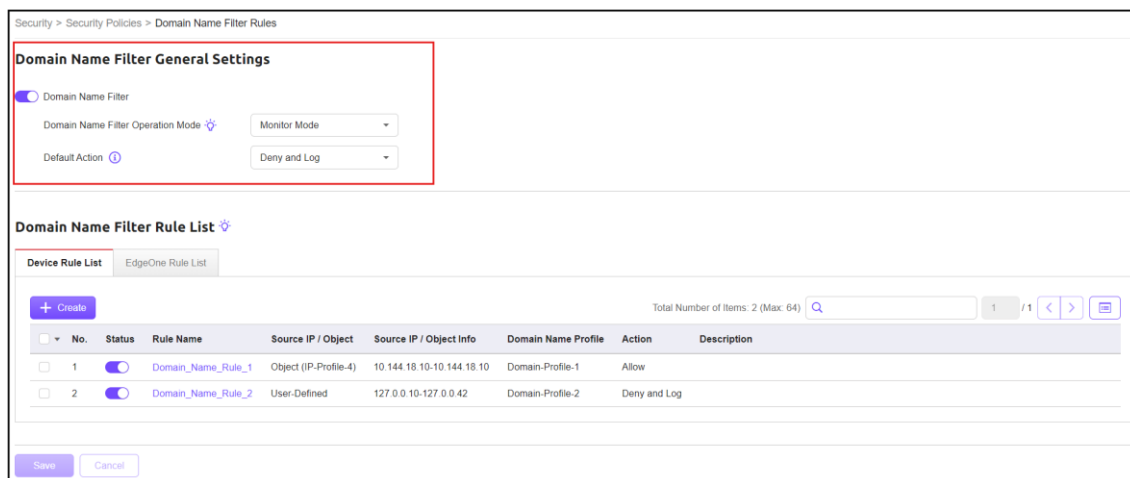

Security > Security Policies > Domain Name Filter Rules

Domain Name Filter General Settings

☒ Domain Name Filter

Domain Name Filter Operation Mode: Monitor Mode

Default Action: Deny and Log

Domain Name Filter Rule List

Device Rule List EdgeOne Rule List

[+ Create](#) Total Number of Items: 2 (Max: 64) 1 / 1

No.	Status	Rule Name	Source IP / Object	Source IP / Object Info	Domain Name Profile	Action	Description
1	☒	Domain_Name_Rule_1	Object (IP-Profile-4)	10.144.18.10-10.144.18.10	Domain-Profile-1	Allow	
2	☒	Domain_Name_Rule_2	User-Defined	127.0.0.10-127.0.0.42	Domain-Profile-2	Deny and Log	

Save Cancel

2. Enable or disable the [Domain Name Filter] function by clicking the toggle.

3. From the [Domain Name Filter Operation Mode] drop-down list, select a mode, **Monitor Mode** or **Prevention Mode**, for the function.

4. From the [Default Action] drop-down list, select a default action, **Allow**, **Allow and Log** or **Deny and Log**, for when no Domain Name Filter rule is matched.
5. Click [Save].

The following table summarizes the settings:

Security Operation Mode (Security General Settings)	Domain Name Filter Operation Mode	Action Performed
Inline Mode	Monitor Mode	- Detect and monitor abnormal protocol access attempts to the OT assets, without blocking network attacks. - Generate logs. (If the default rule action is [Allow and Log] or [Deny and Log].)
	Prevention Mode	- Block abnormal protocol access attempts to OT assets. - Generate logs. (If the default rule action is [Allow and Log] or [Deny and Log].)
Offline Mode	Monitor Mode	- Passively detect and monitor abnormal protocol access attempts to the OT assets, without blocking network attacks. - Generate logs. (If the default rule action is [Allow and Log] or [Deny and Log].)

6.2.4.2 Configuring Domain Name Filter Rules

Procedure

1. Configure the required objects and profiles.
 - IP Objects

 For more information, see [Configuring IP Objects](#).

- Domain Name Profiles

 For more information, see [Configuring Domain Name Profiles](#).

2. Go to [Security] > [Security Policies] > [Domain Name Filter Rules].

Security > Security Policies > Domain Name Filter Rules

Domain Name Filter General Settings

☒ Domain Name Filter

Domain Name Filter Operation Mode  Monitor Mode

Default Action  Deny and Log

Domain Name Filter Rule List

Device Rule List | EdgeOne Rule List

[+ Create](#) Total Number of Items: 2 (Max: 64) 1 / 1   

No.	Status	Rule Name	Source IP / Object	Source IP / Object Info	Domain Name Profile	Action	Description
1	☒	Domain_Name_Rule_1	Object (IP-Profile-4)	10.144.18.10-10.144.18.10	Domain-Profile-1	Allow	
2	☒	Domain_Name_Rule_2	User-Defined	127.0.0.10-127.0.0.42	Domain-Profile-2	Deny and Log	

[Save](#) [Cancel](#)

3. Do one of the following.

- Click [Create] to create a new Domain Name Filter rule. The [Create Domain Name Filter Rule] window will appear.
- Click a rule name to edit settings. The [Edit Domain Name Filter Rule] window will appear.

Create Domain Name Filter Rule

Status ☒

Rule Name* 

Description 

Source IP / Object

Domain Name Profile 

Action

[OK](#) [Cancel](#)

4. Configure the following settings.

Item	Description
Status	Enable the operational status of this Domain Name Filter rule by clicking the toggle.
Rule Name	Type a rule name for this Domain Name Filter rule.
Description	(Optional) Type a description.
Source IP / Object	Select one of the following for the source IP addresses: - Any - Single IP

Item	Description
	• IP Range • IP Subnet • IP Object  If you select [IP Object], you can select an IP object that has been created beforehand on the [IP Objects] page or click the  button to create a new IP object.
Domain Name Profile	Select a Domain Name profile you have defined beforehand or click the  button to create a new profile.
Action	Select one of the following actions: • Allow: Select this option to allow network traffic that matches this rule. • Allow and Log: Select this option to allow network traffic that matches this rule and output a log. • Deny and Log: Select this option to block network traffic that matches this rule and output a log.

5. Click [OK].

6. Click [Save] on the [Domain Name Filter Rules] page.

6.2.4.3 Managing Domain Name Filter Rules

The following tables list the common tasks for managing Domain Name Filter rules.

- **Device Rule List:**

Task	Action
To create a Domain Name Filter rule	Click the [Create] button to create a new Domain Name Filter rule.
To delete a Domain Name Filter rule	Click the checkbox of a rule and click the [Delete] button.
To duplicate a Domain Name Filter rule	Click the checkbox of a rule and click the [Duplicate] button.
To edit a Domain Name Filter rule	Click the name of a rule, and an [Edit Domain Name Filter Rule] window will appear.
To change the priority of a Domain Name Filter rule	Click the checkbox of a rule, click the [Change Priority] button, and specify a new priority for this rule.



When more than one Domain Name Filter rule is matched, the device takes action based on the rule with the highest priority and ignores the rest of the rules. The rules listed in the table on the [Domain Name Filter Rules] page are ordered by priority, with the highest priority rule listed on the first row of the table.

- **EdgeOne Rule List:**

Task	Description
N/A	The Domain Name Filter rules on the EdgeOne rule list are view-only.

6.2.5 Suspicious Objects

The [Suspicious Objects] feature allows you to define a custom node-based/link-based Suspicious Object list from EdgeOne. If any identical IP address or MAC address on the node level, or identical IP address, protocol and port numbers on the link level are detected, the activity will be allowed or blocked according to your pre-defined action for the suspicious objects.



Before you enable the [Suspicious Objects] function, ensure that the Edge device authentication settings ([Admin] > [System] > [EdgeOne Connection Settings]) are properly configured and that EdgeOne is connected with the third-party API from the source of the suspicious objects.

6.2.5.1 Configuring Suspicious Object Settings

Procedure

1. Go to [Security] > [Security Policies] > [Suspicious Objects].

Security > Security Policies > Suspicious Objects

Suspicious Object General Settings ⚠️ Unable to enable Suspicious Object because the Edge device is not connected to EdgeOne. To connect the device, log in to EdgeOne and go to the [Connection Settings] page.

☒ Suspicious Object ⚙️

Suspicious Object Operation Mode: ☒ Monitor Mode ☐ Prevention Mode

Suspicious Object Rule List ⚠️ Suspicious Object is prioritized over Policy Enforcement during traffic examination if this feature is enabled.

Deny: 52 | Allow: 48 | Total: 100 | 1 / 4

All Types	All Sources	All Risk Levels	All Actions						
No.	ID	Type	Source	Object Contents	Risk Level	Last Updated	Expiration Time	Action	
☐	1	dSYGgWwh	Link	NOZOM1	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Medium	2024-07-19T15:14:06+08:00	Never Expires	Deny and Log
☐	2	yYapdq2N	Link	DDI2	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	High	2024-07-19T15:14:06+08:00	2050-02-10T05:18:44+08:00	Deny and Log
☐	3	vZQlyLzpt	Link	NOZOM1	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Low	2024-07-19T15:14:06+08:00	2047-05-31T06:24:48+08:00	Allow and Log
☐	4	XphZcqORag	Link	DDI1	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Medium	2024-07-19T15:14:06+08:00	2039-08-20T15:09:54+08:00	Deny and Log
☐	5	AlxPpHjMDs	Link	NOZOM1	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Low	2024-07-19T15:14:06+08:00	2068-01-15T02:05:55+08:00	Allow and Log
☐	6	lmaAaPCTZR	Link	DDI2	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Medium	2024-07-19T15:14:06+08:00	2065-05-21T10:39:21+08:00	Deny and Log
☐	7	IMQLFkwSN	Node	NOZOM1	10.10.10.1	Medium	2024-07-19T15:14:06+08:00	2057-01-11T03:12:31+08:00	Allow and Log
☐	8	MUEIPKaZBu	Node	DDI1	10.10.10.1	High	2024-07-19T15:14:06+08:00	2053-03-29T04:10:07+08:00	Allow and Log
☐	9	zsdKOoebSb	Node	DDI1	10.10.10.1	High	2024-07-19T15:14:06+08:00	2062-09-01T11:28:54+08:00	Deny and Log
☐	10	hdiRlHahF	Node	DDI2	10.10.10.1	High	2024-07-19T15:14:06+08:00	2064-06-04T07:24:56+08:00	Allow and Log
☐	11	LzZYyudlq	Node	NOZOM1	10.10.10.1	High	2024-07-19T15:14:06+08:00	Never Expires	Allow and Log
☐	12	TkZzEmDmu	Link	NOZOM1	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Low	2024-07-19T15:14:06+08:00	2075-06-06T15:15:09+08:00	Deny and Log
☐	13	FloxxKIGJN	Node	DDI2	10.10.10.1	Medium	2024-07-19T15:14:06+08:00	2066-01-30T13:44:31+08:00	Allow and Log
☐	14	UQVMlMlMC	Link	DDI2	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Medium	2024-07-19T15:14:06+08:00	2054-12-21T00:09:20+08:00	Deny and Log
☐	15	bjlmVyydga	Link	NOZOM1	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	High	2024-07-19T15:14:06+08:00	2040-09-07T12:08:12+08:00	Allow and Log

2. Enable the [Suspicious Objects] function by clicking the toggle.



You cannot enable Suspicious Objects if:

1. The Edge device is not connected to EdgeOne.
2. The Edge device is not managed within an Edge group in EdgeOne.
3. The [Suspicious Objects] group setting is not enabled for the Edge group to which the Edge device belongs.
4. The [Dispatch Suspicious Objects to Edge Devices] option in EdgeOne ([Nodes] > [Suspicious Objects] > [Suspicious Object Settings]) is not enabled.

3. Select a mode, **Monitor Mode** or **Prevention Mode**, for the function.

4. To change the action (listed in the [Action] column) of a suspicious object, check the checkbox of an item and select an action, **Deny and Log** or **Allow and Log**, for when the pattern is matched.

Suspicious Object Rule List
⚠ Suspicious Object is prioritized over Policy Enforcement during traffic examination if this feature is enabled.

2 selected

All Types
All Sources
All Risk Levels
All Actions

☒	No.	ID	Type	Source	Object Contents	Risk Level
☒	1	dtSfYGGWeh	Link	NOZOMI1	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Medium
☒	2	yYYapdqQzN	Link	DDI2	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	High
☐	3	vZQlyLzqpl	Link	NOZOMI1	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Low
☐	4	XphZcqORAg	Link	DDI1	Source IP=10.10.10.1, Source Port=Any, Destination IP=192.168.1.1, Destination Port=Any, Protocol=6	Medium

5. Click [Save].

The following table summarizes the settings.

Mode	Suspicious Object Operation Mode	Action Setting	Action Performed
Inline Mode	Monitor Mode	Monitor and Log	• Detects network node or network link, but does not block communication related to the network node or network link. • Generates logs.
	Prevention Mode	Prevent and Log	• Blocks network node or network link. • Generates logs.
Offline Mode	Monitor Mode	Monitor and Log	• Detects network node or network link. • Generates logs.



The Suspicious Object is of higher priority than the Policy Enforcement.

7 Patterns

This chapter describes how to view the pattern information and import security patterns to the Edge series device.

7.1 Pattern Updates

Manage and update patterns for up-to-date threat prevention.

- [Security Patterns](#)


7.1.1 Security Patterns

Security Patterns contain DPI (Deep Packet Inspection) patterns (a.k.a. IPS patterns) with signatures to enable intrusion prevention features on the device. The intrusion prevention feature detects and prevents behaviors related to network intrusion attempts or targeted attacks at the network level.

7.1.1.1 Viewing IPS Pattern Information

Procedure

1. Go to [Patterns] > [Pattern Updates] > [Security Patterns].

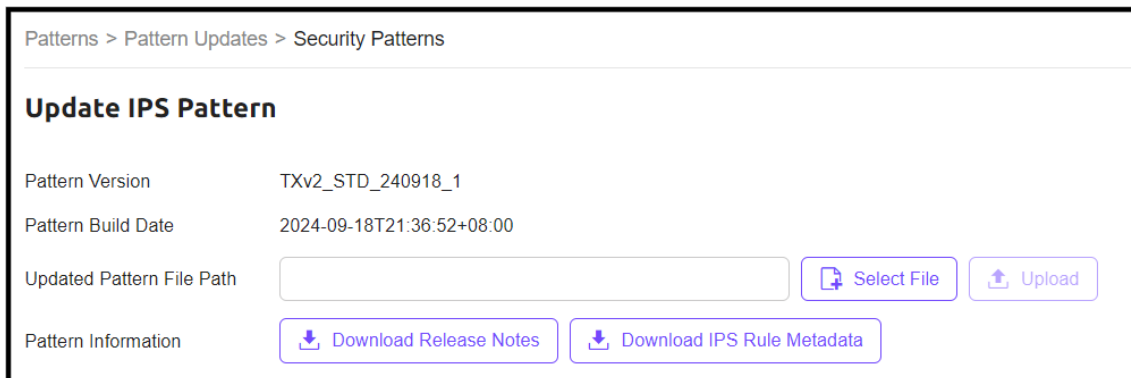

Patterns > Pattern Updates > Security Patterns

Update IPS Pattern

Pattern Version TXv2_STD_240918_1

Pattern Build Date 2024-09-18T21:36:52+08:00

Updated Pattern File Path [Select File](#) [Upload](#)


Pattern Information [Download Release Notes](#) [Download IPS Rule Metadata](#)

2. In the [Update IPS Pattern] pane, you will see the pattern version, pattern build date, release notes, and IPS rule metadata.

7.1.1.2 Updating IPS Patterns

Procedure

1. Go to [Patterns] > [Pattern Updates] > [Security Patterns].

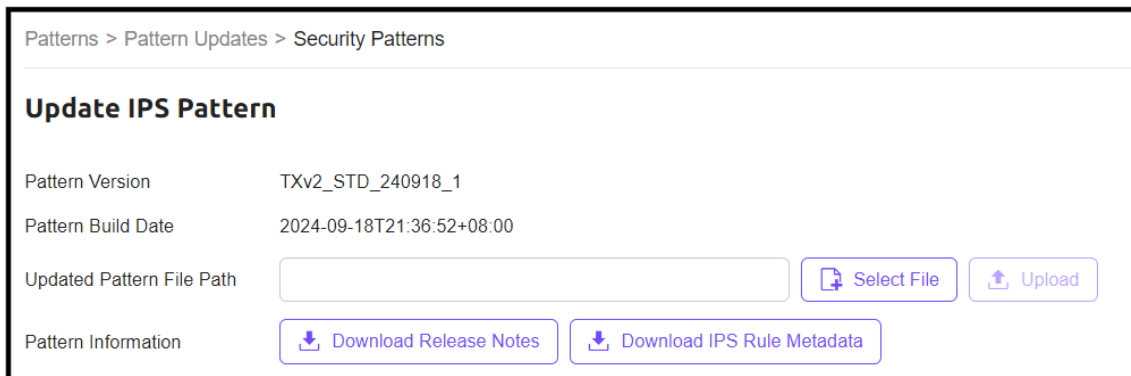

Patterns > Pattern Updates > Security Patterns

Update IPS Pattern

Pattern Version TXv2_STD_240918_1

Pattern Build Date 2024-09-18T21:36:52+08:00

Updated Pattern File Path [Select File](#) [Upload](#)

Pattern Information [Download Release Notes](#) [Download IPS Rule Metadata](#)

2. In the [Update IPS Pattern] pane, click [Select File].

3. Select a pattern file from your local disk.
4. Click [Upload].



Before updating the IPS pattern, ensure that you have activated the Edge device software license.



Various versions of the pattern files can be downloaded at the MyTXOne Portal at <https://my.txone.com/>.

7.1.1.3 Downloading Pattern Release Notes and IPS Rule Metadata

Procedure

1. Go to [Patterns] > [Pattern Updates] > [Security Patterns].

Patterns > Pattern Updates > Security Patterns

Update IPS Pattern

Pattern Version	TXv2_STD_240918_1
Pattern Build Date	2024-09-18T21:36:52+08:00
Updated Pattern File Path	 Select File  Upload
Pattern Information	 Download Release Notes  Download IPS Rule Metadata

2. Click the [Download Release Notes] button to download and view detailed pattern release information.
3. Click the [Download IPS Rule Metadata] button to download and view the IPS rule metadata.

8 Applications

This chapter describes how to configure and use additional applications and tools for advanced network management and control.

8.1 Backup Storage

Configure settings for storing device configuration backup files in a compatible USB disk.

- [USB Disk Storage](#)

8.1.1 USB Disk Storage

The Edge device supports backing up configurations and loading patterns, configurations, and firmware from a compatible USB disk. On the [USB Disk Storage] page, you can configure the relevant USB backup settings to meet your specific needs.

8.1.1.1 Configuring USB Application Settings

Procedure

1. Go to [Applications] > [Backup Storage] > [USB Disk Storage].

Applications > Backup Storage > USB Disk Storage

☒ USB Application Settings

USB Application Settings

USB Disk Status	Connected
USB Disk Capacity	8.00 GB
Free Capacity	4.70 GB

Advanced USB Application Settings

☒ Enable adaptive configuration backup to USB disk

Automatically back up administration settings to a USB disk (Zero Configuration).

Backup Behavior

☒ Back up configurations regularly

Every 6 Hours ▾

☐ Back up configurations only when they are changed ⓘ

Most Recent Backup

2024-07-19T17:02:27+08:00

Save

Cancel

2. Click the [USB Application Settings] toggle to enable the USB backup storage.
3. Once the USB Application function is enabled and a compatible USB disk is plugged in, you can view the status and information about the disk capacity and remaining free space.



If the USB Application function is disabled, the USB port on the front panel will not be active and cannot be used.



Regarding the supported USB devices, see [Extended Functions via Supported USB Device](#).

8.1.1.2 Configuring Advanced USB Application Settings

Procedure

1. Go to [Applications] > [Backup Storage] > [USB Disk Storage].

Applications > Backup Storage > USB Disk Storage

☒ USB Application Settings

USB Application Settings

USB Disk Status	Connected
USB Disk Capacity	8.00 GB
Free Capacity	4.70 GB

Advanced USB Application Settings

☒ Enable adaptive configuration backup to USB disk

Automatically back up administration settings to a USB disk (Zero Configuration).

Backup Behavior

☒ Back up configurations regularly

Every 6 Hours

☐ Back up configurations only when they are changed

?

Most Recent Backup

2024-07-19T17:02:27+08:00

Save

Cancel

2. Click the [Enable adaptive configuration backup to a USB disk] toggle to allow backups of configurations to a compatible USB disk.

3. Select one of the following backup behavior options:

- Back up configurations regularly:** If this option is selected, further specify the backup interval:
 - Every 6 Hours
 - Every 12 Hours
 - Every 24 Hours
 - Every 48 Hours
 - Every 72 Hours
- Back up configurations only when they are changed:** If this option is selected, the Edge device creates backed-up configuration files whenever settings are updated in the web console.



The advanced USB application settings are configurable only when the [USB Application Settings] option is enabled.

8.2 Cyber Forensic Tools

Utilize forensic tools for cybersecurity analysis.

- [IPS Event Packet Capture](#)
- [Captured Packet Downloads](#)
- [Pcap File Server Settings](#)


8.2.1 IPS Event Packet Capture

The IPS Event Packet Capture feature enables you to capture packets that trigger IPS events for detailed analysis. This capability allows precise control over packet capture settings for each IPS event rule, aiding support teams in quickly addressing false positive/false negative matching of IPS rules in the security module.

8.2.1.1 Enabling IPS Event Packet Capture

Procedure

1. Go to [Applications] > [Cyber Forensic Tools] > [IPS Event Packet Capture].

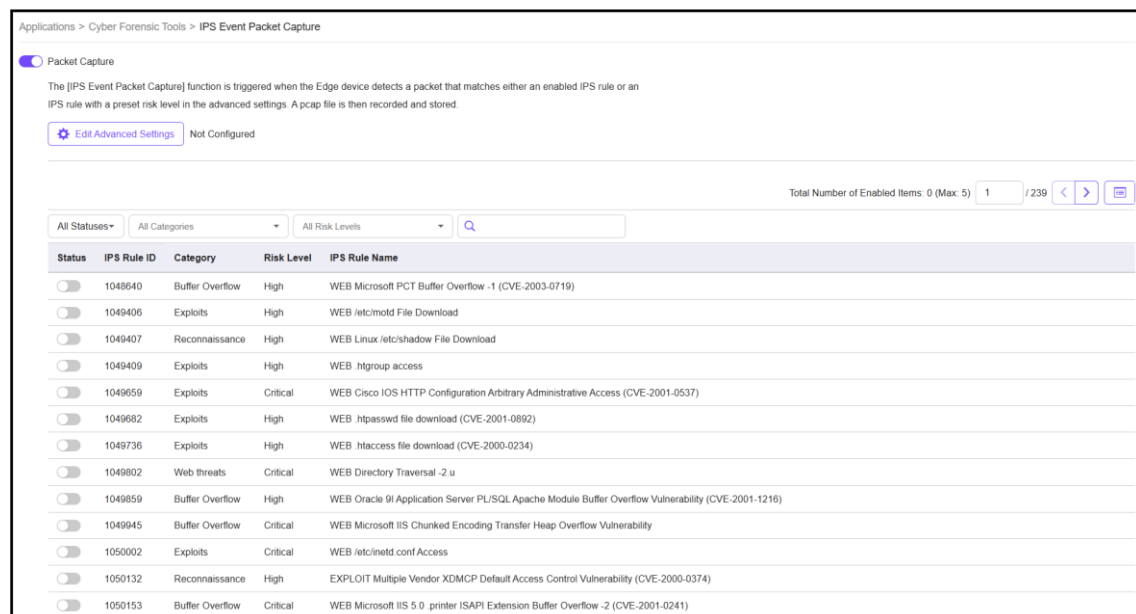

Applications > Cyber Forensic Tools > IPS Event Packet Capture

☐ Packet Capture


The [IPS Event Packet Capture] function is triggered when the Edge device detects a packet that matches either an enabled IPS rule or an IPS rule with a preset risk level in the advanced settings. A pcap file is then recorded and stored.

[Edit Advanced Settings](#) Not Configured

Total Number of Enabled Items: 0 (Max: 5) 1 / 239

Status	IPS Rule ID	Category	Risk Level	IPS Rule Name
☐	1048640	Buffer Overflow	High	WEB Microsoft PCT Buffer Overflow -1 (CVE-2003-0719)
☐	1049406	Exploits	High	WEB /etc/mold File Download
☐	1049407	Reconnaissance	High	WEB Linux /etc/shadow File Download
☐	1049409	Exploits	High	WEB htgroup access
☐	1049659	Exploits	Critical	WEB Cisco IOS HTTP Configuration Arbitrary Administrative Access (CVE-2001-0537)
☐	1049682	Exploits	High	WEB htpasswd file download (CVE-2001-0892)
☐	1049736	Exploits	High	WEB htaccess file download (CVE-2000-0234)
☐	1049802	Web threats	Critical	WEB Directory Traversal -2.u
☐	1049859	Buffer Overflow	High	WEB Oracle 9i Application Server PL/SQL Apache Module Buffer Overflow Vulnerability (CVE-2001-1216)
☐	1049945	Buffer Overflow	Critical	WEB Microsoft IIS Chunked Encoding Transfer Heap Overflow Vulnerability
☐	1050002	Exploits	Critical	WEB /etc/inetd.conf Access
☐	1050132	Reconnaissance	High	EXPLOIT Multiple Vendor XDMCP Default Access Control Vulnerability (CVE-2000-0374)
☐	1050153	Buffer Overflow	Critical	WEB Microsoft IIS 5.0 printer ISAPI Extension Buffer Overflow -2 (CVE-2001-0241)

2. Enable the Packet Capture function by clicking the [Packet Capture] toggle.

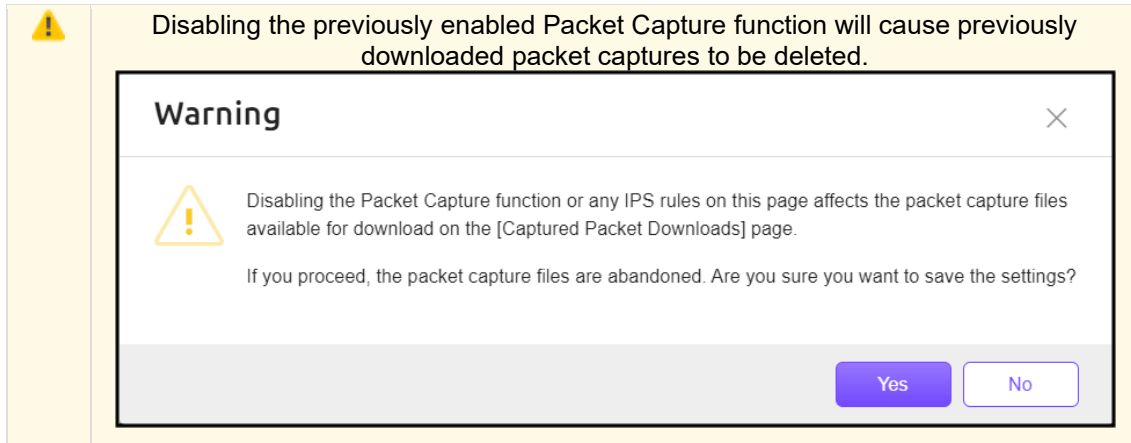

3. After the function is enabled, you can see the entire IPS rule list. Select and enable one or multiple rules for IPS event packet capture.


1. You can select up to five rules for the IPS Event Packet Capture feature.
2. The Edge device will save IPS event packets when the selected IPS rules are triggered. Only the last five packets of each IPS rule are saved. Older event packets will be overwritten.

4. Click [Save].

8.2.1.2 Configuring IPS Event Packet Capture Advanced Settings

Procedure

1. Go to [Applications] > [Cyber Forensic Tools] > [IPS Event Packet Capture].

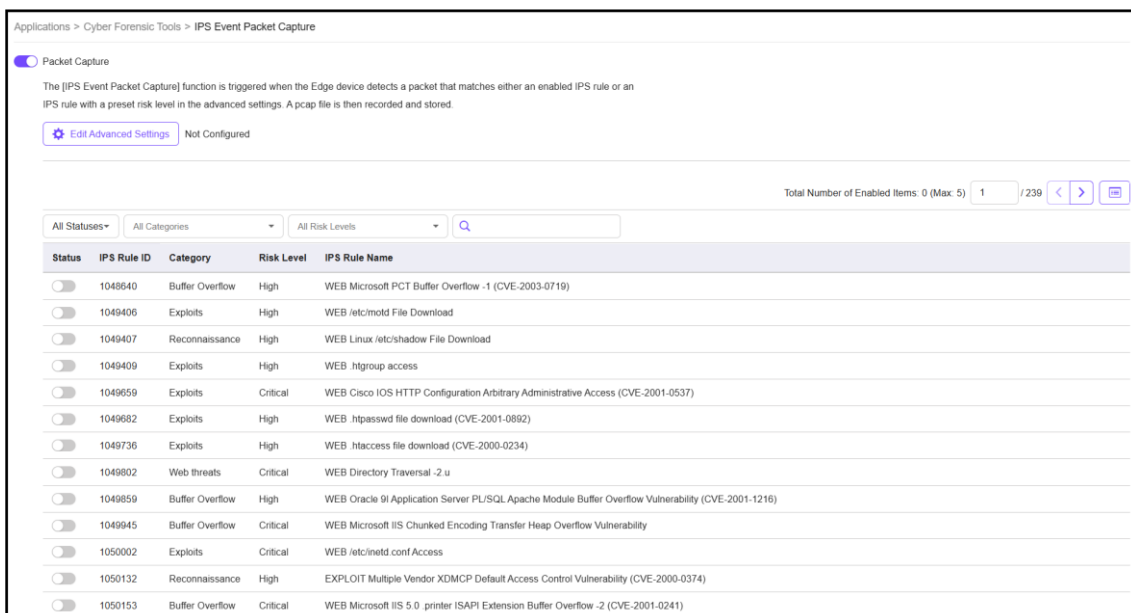

2. Enable the Packet Capture function by clicking the [Packet Capture] toggle.

3. Click [Edit Advanced Settings]. The [Edit Advanced Settings] window will appear.

Edit Advanced Settings



The Edge device detects packets using IPS rules with the selected risk level below. If a match is found, a pcap file is recorded and stored on the device.

Risk Level

☐ Critical
 ☐ High

OK

Cancel

4. Select one or multiple risk levels. When the Edge device detects packets matching IPS rules with the specified risk levels, it will record and store the relevant pcap files.
5. Click [OK] on [Edit Advanced Settings] window, then click [Save] on the packet capture page.

8.2.2 Captured Packet Downloads

When the Edge device captures IPS event packets, you can download the captured packets on the [Captured Packet Downloads] page.

8.2.2.1 Downloading Captured IPS Event Packets

Procedure

1. Go to [Applications] > [Cyber Forensic Tools] > [Captured Packet Downloads].

Applications > Cyber Forensic Tools > Captured Packet Downloads

Clear Captured Packets

Total Number of Items: 5 / 1

All Categories

All Risk Levels

No.	IPS Rule ID	Category	Risk Level	IPS Rule Name	Last Updated	Actions
1	1048640	Buffer Overflow	High	WEB Microsoft PCT Buffer Overflow -1 (CVE-2003-0719)	2025-05-07T03:38:39Z	
2	1049406	Exploits	High	WEB /etc/motd File Download	2025-05-07T03:38:28Z	
3	1049407	Reconnaissance	High	WEB Linux /etc/shadow File Download	2025-05-07T03:38:39Z	
4	1049409	Exploits	High	WEB .htgroup access	2025-05-07T03:38:39Z	
5	1049556	Exploits	Medium	WEB Microsoft IIS 5.1 Frontpage fprsvadm.exe File Download	2025-05-07T03:38:39Z	

2. Click the download buttons  to download the zipped packet files to your local disk.



The download list is refreshed every 10 seconds. To get the latest update, click the refresh button .

8.2.2.2 Clearing Captured IPS Event Packets

Procedure

1. Go to [Applications] > [Cyber Forensic Tools] > [Captured Packet Downloads].

Applications > Cyber Forensic Tools > Captured Packet Downloads

Clear Captured Packets

Total Number of Items: 5 / 1

All Categories

All Risk Levels

No.	IPS Rule ID	Category	Risk Level	IPS Rule Name	Last Updated	Actions
1	1048640	Buffer Overflow	High	WEB Microsoft PCT Buffer Overflow -1 (CVE-2003-0719)	2025-05-07T03:38:39Z	
2	1049406	Exploits	High	WEB /etc/motd File Download	2025-05-07T03:38:28Z	
3	1049407	Reconnaissance	High	WEB Linux /etc/shadow File Download	2025-05-07T03:38:39Z	
4	1049409	Exploits	High	WEB .htgroup access	2025-05-07T03:38:39Z	
5	1049556	Exploits	Medium	WEB Microsoft IIS 5.1 Frontpage fprsvadm.exe File Download	2025-05-07T03:38:39Z	

2. Click [Clear Captured Packets].

8.2.3 Pcap File Server Settings

In addition to downloading IPS event packets to your local disk, you can also transmit these packet files to a designated remote server using the SMB protocol. On the [Pcap File Server Settings] page, configure the necessary settings to facilitate the transmission of packet files to the server.

8.2.3.1 Viewing Pcap File Server Information

Procedure

1. Go to [Applications] > [Cyber Forensic Tools] > [Pcap File Server Settings].

Applications > Cyber Forensic Tools > Pcap File Server Settings

Pcap File Server Information

SMB Service Status: **ON**

Server Address: smb:\\192.168.5.24:445\\filesesr\\pkt 

Last Sent Time: -

Pcap File Server Settings

☒ SMB Service

Recorded Event Source* ☒ IPS Event Packet Capture ☒ CPSDR Event Packet Capture

IP Address / Hostname*

Destination Folder* 

Port* 

Username*

Password* 

Sending Interval

 Test Connection

2. In the [Pcap File Server Information] pane, you will see the SMB service status, server address (click the  button to copy the address), and last packet file sent time.

8.2.3.2 Configuring Pcap File Server Settings

Procedure

1. Go to [Applications] > [Cyber Forensic Tools] > [Pcap File Server Settings].

Applications > Cyber Forensic Tools > Pcap File Server Settings

Pcap File Server Information

SMB Service Status: **ON**

Server Address: smb:\\192.168.5.24:445\\filesesr\\pkt 

Last Sent Time: -

Pcap File Server Settings

☒ SMB Service

Recorded Event Source* ☒ IPS Event Packet Capture ☒ CPSDR Event Packet Capture

IP Address / Hostname*

Destination Folder* 

Port* 

Username*

Password* 

Sending Interval

 Test Connection

2. In the [Pcap File Server Settings] pane, configure the following settings.

Item	Description
SMB Service	Enable the SMB service by clicking the toggle.
Recorded Event Source	Select one or multiple sources of the packet files to be sent to the remote server.
IP Address / Hostname	Input the IP address or hostname of the server where the packet files will be sent.

Item	Description
Destination Folder	Input the destination folder on the server where the packet files will be sent.
Port	Input the port number for initiating an SMB connection. (Default: 445)
Username	Input the username for initiating an SMB connection.
Password	Input the password for initiating an SMB connection.
Sending Interval	Select a packet file sending interval, 30 Minutes , 1 Hour , 6 Hours , 12 Hours , or 24 Hours , from the drop-down list.

3. Click [Save].

8.3 Diagnostics

Troubleshoot root causes for device failures.

- [Hardware Diagnostics](#)

8.3.1 Hardware Diagnostics

On the [Hardware Diagnostics] page, you can conduct thorough tests on various hardware components. The specific components tested may vary depending on the Edge series model.

If any hardware failures are detected after running the diagnostic test, please report the issue by visiting <https://my.txone.com/> or contacting support@txone.com.

8.3.1.1 Running Diagnostic Tests

Procedure

1. Go to [Admin] > [Diagnostics] > [Hardware Diagnostics].

Applications > Diagnostics > Hardware Diagnostics

Hardware Diagnostics

The Hardware Diagnostics function allows you to conduct thorough tests on various hardware components. The specific components tested may vary depending on the Edge series model. If any hardware failures are detected after running the diagnostic test, please read the instructions in the note section below and submit the debugging logs along with your hardware diagnostic report via the MyTXOne portal.

Run Diagnostic Test

Export

Basic Hardware Test	Test Result
Storage Disk	-
LED Indicator	-



If you encounter a hardware failure, please follow the instructions below to report a technical issue via the MyTXOne portal or contact support@txone.com for customer service.

View Ticket Submission Instructions

Debugging Tool

The debugging logs are intended for customer service use only and do not contain sensitive user credential information.

Collect Logs for Debugging

2. Click [Run Diagnostic Test]. Please wait about 10 to 20 seconds for the test result.

8.3.1.2 Viewing Diagnostic Results


Procedure

1. Go to [Admin] > [Diagnostics] > [Hardware Diagnostics].

Applications > Diagnostics > Hardware Diagnostics

Hardware Diagnostics

The Hardware Diagnostics function allows you to conduct thorough tests on various hardware components. The specific components tested may vary depending on the Edge series model. If any hardware failures are detected after running the diagnostic test, please read the instructions in the note section below and submit the debugging logs along with your hardware diagnostic report via the MyTXOne portal.




Basic Hardware Test	Test Result
Storage Disk	-
LED Indicator	-



If you encounter a hardware failure, please follow the instructions below to report a technical issue via the MyTXOne portal or contact support@txone.com for customer service.

[View Ticket Submission Instructions](#)

Debugging Tool

The debugging logs are intended for customer service use only and do not contain sensitive user credential information.

Collect Logs for Debugging

2. On the [Hardware Diagnostics] page, you can view the result of the most recent diagnostic test.

Basic Hardware Test	Test Result	Last Updated: 2025-05-07T09:37:18Z
Storage Disk	✓ Passed	
LED Indicator	✗ LED Indicator failure detected (Test1, Test2 indicators)	

8.3.1.3 Exporting Diagnostic Reports

Procedure

1. Go to [Admin] > [Diagnostics] > [Hardware Diagnostics].

Applications > Diagnostics > Hardware Diagnostics

Hardware Diagnostics

The Hardware Diagnostics function allows you to conduct thorough tests on various hardware components. The specific components tested may vary depending on the Edge series model. If any hardware failures are detected after running the diagnostic test, please read the instructions in the note section below and submit the debugging logs along with your hardware diagnostic report via the MyTXOne portal.




Basic Hardware Test	Test Result	Last Updated: 2025-05-07T09:37:18Z
Storage Disk	✓ Passed	
LED Indicator	✗ LED Indicator failure detected (Test1, Test2 indicators)	



If you encounter a hardware failure, please follow the instructions below to report a technical issue via the MyTXOne portal or contact support@txone.com for customer service.

[View Ticket Submission Instructions](#)

Debugging Tool

The debugging logs are intended for customer service use only and do not contain sensitive user credential information.

Collect Logs for Debugging

2. Click [Export] to download a PDF file containing the result of the most recent diagnostic test.

8.3.1.4 Collecting Debugging Logs

Procedure

1. Go to [Admin] > [Diagnostics] > [Hardware Diagnostics].

Applications > Diagnostics > Hardware Diagnostics

Hardware Diagnostics

The Hardware Diagnostics function allows you to conduct thorough tests on various hardware components. The specific components tested may vary depending on the Edge series model. If any hardware failures are detected after running the diagnostic test, please read the instructions in the note section below and submit the debugging logs along with your hardware diagnostic report via the MyTXOne portal.




Basic Hardware Test	Test Result
Storage Disk	-
LED Indicator	-



If you encounter a hardware failure, please follow the instructions below to report a technical issue via the MyTXOne portal or contact support@txone.com for customer service.

[View Ticket Submission Instructions](#)

Debugging Tool

The debugging logs are intended for customer service use only and do not contain sensitive user credential information.

Collect Logs for Debugging

2. In the [Debugging Tool] pane, click [Collect Logs for Debugging]. A tgz file will be downloaded to your local storage.

9 Logs

This chapter describes the security and system logs you can view in the management console.

9.1 Security Logs

Review and analyze logs for security incidents.

- [Cyber Security Logs](#)
- [Policy Enforcement Logs](#)
- [Protocol Filter Logs](#)
- [Domain Name Filter Logs](#)
- [File Filter Logs](#)
- [Suspicious Object Logs](#)

9.1.1 Cyber Security Logs

Cyber Security logs contain details about cybersecurity events detected by both Intrusion Prevention and Denial of Service Prevention features.

9.1.1.1 Viewing Cyber Security Logs

Procedure

1. Go to [Logs] > [Security Logs] > [Cyber Security Logs].

The following table describes the Cyber Security log information.

Field	Description
Time	The time when the log entry was created.
Function Type	The function type of the log, either Cyber Security or System Security.
Protocol Layer	The layer of OSI models that the matched signature belongs to.
Policy Rule Name	The name related to the matched policy rule triggering this log.
Profile Name	The name of the IPS profile triggering this log.
Event ID	The ID of the matched signature.
TIDs	MITRE TID Information
Security Category	The category of the matched signature.
Security Severity	The severity level assigned to the matched signature.
Security Rule Name	The name of the matched signature.
Interface	The physical port interface which receives the packet.
Attacker	The IP address of the host device which initiated the cyber incident.

Field	Description
Victim	The IP address of the host device which was attacked in the cyber incident.
Source MAC Address	The source MAC address of the packet.
Source IP Address	The source IP address of the packet.
Source Asset Hostname	The hostname of the asset from which the packet originated.
Source Asset Alias Name	The user-defined alias name of the asset from which the packet originated.
Source Asset Type	The type of the asset from which the packet originated.
Source Port	The source port of the packet, if protocol is TCP/UDP. The ICMP type of the packet, if protocol is ICMP
Destination MAC Address	The destination MAC address of the packet.
Destination IP Address	The destination IP address of the packet.
Destination Asset Hostname	The hostname of the asset to which the packet was sent.
Destination Asset Alias Name	The user-defined alias name of the asset to which the packet was sent.
Destination Asset Type	The type of the asset to which the packet was sent.
Destination Port	The destination port of the packet if the protocol is TCP/UDP. The ICMP code of the packet if the protocol is ICMP.
VLAN ID	The VLAN ID of the packet.
Ethernet Type	The Ethernet type of the packet.
IP Protocol Name	The IP protocol name of the packet.
Extra Information	Extra information provided with the cyber security log.
Preset Action	The action configured in the policy rule settings.
Enforced Action	The actual action executed by the device.
Count	The number of detected network packets within the detection period after the detection threshold is reached.

2. To query logs, select a time period, **Last 1 Hour**, **Last 24 Hours**, **Last 7 Days**, **Last 30 Days** or **Custom Time Range** from the drop-down list.

Custom Time Range ▾

+ Add Filters

Search

Last 1 Hour

Last 24 Hours

Last 7 Days

Last 30 Days

✓ Custom Time Range

2024-07-19

17:41:14

to

2024-07-19

17:41:14

<

July 2024

>

Sun	Mon	Tue	Wed	Thu	Fri	Sat
30	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31	1	2	3
4	5	6	7	8	9	10

<

July 2024

>

Sun	Mon	Tue	Wed	Thu	Fri	Sat
30	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31	1	2	3
4	5	6	7	8	9	10

Apply

Cancel

3. Click the [Add Filters] button and the following [Add Filters] window will appear.

Add Filters

×

Add up to 10 filters to search for specific logs. In each filter you can include up to 10 search values.

Field

Function Type ▾

Operator

is ▾

+

Value*

Cyber Security ×

System Security

×

Apply

Cancel

4. Select parameters from the [Field] and [Operator] drop-down lists.


5. Select/Input up to 10 search values in the [Value] field.

6. To add more filters, click the add button **+**.

7. Click [Apply] to apply these filters for querying logs. Afterwards, the filters that you just applied will be listed.
8. Click the [Search] button to query logs.
9. Click the [Clear Filters] button to remove all the applied search filters.
10. To export a CSV file of your current search results, click the  button.
11. To show/hide certain type of information and adjust the column order, click the  button.

 For more information, see [Viewing in Table View Mode](#).

12. Right click on a log entry and a pop-up menu will appear. You can take one of the following actions.

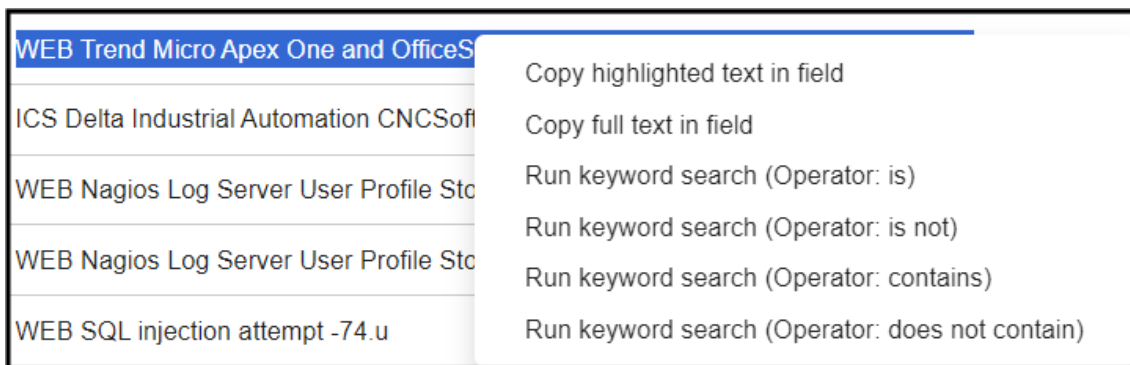

9.1.2 Policy Enforcement Logs

Policy Enforcement logs are generated by the [Policy Enforcement] feature without [Protocol Filter] being enabled, i.e., the action of the Policy Enforcement rule is either [Allow] or [Deny]. The Protocol Filter profiles are not used in policy rules.

9.1.2.1 Viewing Policy Enforcement Logs

Procedure

1. Go to [Logs] > [Security Logs] > [Policy Enforcement Logs].

The following table describes the Policy Enforcement log information.

Field	Description
Time	The time when the log entry was created.
Protocol Layer	The layer of OSI models that the Policy Enforcement rule belongs to.
Policy Rule Name	The name related to the matched policy rule triggering this log.
Interface	The physical port interface which receives the packet.
Source MAC Address	The source MAC address of the packet.
Source IP Address	The source IP address of the packet.

Field	Description
Source Asset Hostname	The hostname of the asset from which the packet originated.
Source Asset Alias Name	The user-defined alias name of the asset from which the packet originated.
Source Asset Type	The type of the asset from which the packet originated.
Source Port	The source port, if protocol is TCP/UDP. The ICMP type, if protocol is ICMP.
Destination MAC Address	The destination MAC address of the packet.
Destination IP Address	The destination IP address of the packet.
Destination Asset Hostname	The hostname of the asset to which the packet was sent.
Destination Asset Alias Name	The user-defined alias name of the asset to which the packet was sent.
Destination Asset Type	The type of the asset to which the packet was sent.
Destination Port	The destination port, if protocol is TCP/UDP. The ICMP code, if protocol is ICMP.
VLAN ID	The VLAN ID of the packet.
Ethernet Type	The Ethernet type of the packet.
IP Protocol Name	The IP protocol name of the packet.
Preset Action	The action configured in the policy rule settings.
Enforced Action	The actual action executed by the device.

 To query logs, see [Viewing Cyber Security Logs](#).

9.1.3 Protocol Filter Logs

Protocol Filter logs contain details about network traffic detected by the [Protocol Filter] feature. The [Protocol Filter] is an advanced setting option that can be configured under the [Policy Enforcement] settings.

9.1.3.1 Viewing Protocol Filter Logs

Procedure

1. Go to [Logs] > [Security Logs] > [Protocol Filter Logs].

The following table describes the Protocol Filter log information.

Field	Description
Time	The time when the log entry was created.

Field	Description
Protocol Layer	The layer of OSI models that the Policy Enforcement rule belongs to.
Policy Rule Name	The name related to the matched policy rule triggering this log.
Profile Name	The name of the Protocol Filter profile triggering this log.
Interface	The physical port interface which receives the packet.
Source MAC Address	The source MAC address of the packet.
Source IP Address	The source IP address of the packet.
Source Asset Hostname	The hostname of the asset from which the packet originated.
Source Asset Alias Name	The user-defined alias name of the asset from which the packet originated.
Source Asset Type	The type of the asset from which the packet originated.
Source Port	The source port, if protocol is TCP/UDP. The ICMP type, if protocol is ICMP.
Destination MAC Address	The destination MAC address of the packet.
Destination IP Address	The destination IP address of the packet.
Destination Asset Hostname	The hostname of the asset to which the packet was sent.
Destination Asset Alias Name	The user-defined alias name of the asset to which the packet was sent.
Destination Asset Type	The type of the asset to which the packet was sent.
Destination Port	The destination port, if protocol is TCP/UDP. The ICMP code, if protocol is ICMP.
VLAN ID	The VLAN ID of the packet.
Ethernet Type	The Ethernet type of the packet.
IP Protocol Name	The IP protocol name of the packet.
L7 Protocol Name	The layer 7 protocol name of the connection. The term layer 7 refers to the one defined in the OSI (Open Systems Interconnection) model.
Cmd/Fun No.	The command or function number that triggered the log.
Extra Information	Extra information provided with the log.
Preset Action	The action configured in the policy rule settings.
Enforced Action	The actual action executed by the device.
Count	The number of detected network packets.

 To query logs, see [Viewing Cyber Security Logs](#).

9.1.4 Domain Name Filter Logs

Domain Name Filter logs are generated by the [Domain Name Filter Rule] feature with the action being either [Allow] or [Deny].

9.1.4.1 Viewing Domain Name Filter Logs

Procedure

1. Go to [Logs] > [Security Logs] > [Domain Name Filter Logs].

The following table describes the Domain Name Filter log information.

Field	Description
Time	The time when the log entry was created.
Policy Rule Name	The name of the Domain Name Filter rule triggering this log.
Interface	The physical port interface which receives the packet.
Source MAC Address	The source MAC address of the packet.
Source IP Address	The source IP address of the packet.
Source Asset Hostname	The hostname of the asset from which the packet originated.
Source Asset Alias Name	The user-defined alias name of the asset from which the packet originated.
Source Asset Type	The type of the asset from which the packet originated.
Source Port	The source port, if protocol is TCP/UDP. The ICMP type, if protocol is ICMP.
Destination MAC Address	The destination MAC address of the packet.
Destination IP Address	The destination IP address of the packet.
Destination Asset Hostname	The hostname of the asset to which the packet was sent.
Destination Asset Alias Name	The user-defined alias name of the asset to which the packet was sent.
Destination Asset Type	The type of the asset to which the packet was sent.
Destination Port	The destination port, if protocol is TCP/UDP. The ICMP code, if protocol is ICMP.
VLAN ID	The VLAN ID of the packet.
Domain Name	The domain name in the DNS query.
Preset Action	The action configured in the Domain Name Filter rule settings.
Enforced Action	The actual action executed by the device.



To query logs, see [Viewing Cyber Security Logs](#).

9.1.5 File Filter Logs

File Filter logs contain details about network traffic detected by the [File Filter] feature. The [File Filter] is an advanced setting option that can be configured under the [Policy Enforcement] settings.

9.1.5.1 Viewing File Filter Logs

Procedure

1. Go to [Logs] > [Security Logs] > [File Filter Logs].

The following table describes the File Filter log information.

Field	Description
Time	The time when the log entry was created.
Policy Rule Name	The name related to the matched policy rule triggering this log.
Profile Name	The name of the File Filter profile triggering this log.
Interface	The physical port interface which receives the packet.
Source MAC Address	The source MAC address of the packet.
Source IP Address	The source IP address of the packet.
Source Asset Hostname	The hostname of the asset from which the packet originated.
Source Asset Alias Name	The user-defined alias name of the asset from which the packet originated.
Source Asset Type	The type of the asset from which the packet originated.
Source Port	The source port, if the protocol is TCP/UDP.
Destination MAC address	The destination MAC address of the packet.
Destination IP Address	The destination IP address of the packet.
Destination Asset Hostname	The hostname of the asset to which the packet was sent.
Destination Asset Alias Name	The user-defined alias name of the asset to which the packet was sent.
Destination Asset Type	The type of the asset to which the packet was sent.
Destination Port	The destination port, if protocol is TCP/UDP.
VLAN ID	The VLAN ID of the packet.
L7 Protocol Name	The layer 7 protocol name of the connection. The term layer 7 refers to the one defined in the OSI (Open Systems Interconnection) model.
Extra Information	Extra information provided with the file filter log.
Preset Action	The action configured in the policy rule settings.
Enforced Action	The actual action executed by the device.

 To query logs, see [Viewing Cyber Security Logs](#).

9.1.6 Suspicious Object Logs

Suspicious Object logs contain details about network traffic detected by the [Suspicious Objects] feature.

9.1.6.1 Viewing Suspicious Object Logs

Procedure

1. Go to [Logs] > [Security Logs] > [Suspicious Object Logs].

The following table describes the Suspicious Object log information.

Field	Description
Time	The time when the log entry was created.
ID	The hash ID of the matched suspicious object.
Type	The suspicious object type, which is node type or link type.
Source	The source of the suspicious object.
Risk Level	The threat level of the suspicious object.
Expiration Time	The expiration time of the suspicious object. When the expiration time reaches, the suspicious object will be deleted.
Interface	The physical port interface which receives the suspicious object.
Source MAC Address	The source MAC address of the connection.
Source IP Address	The source IP address of the connection.
Source Asset Hostname	The hostname of the asset from which the suspicious object originated.
Source Asset Alias Name	The user-defined alias name of the asset from which the packet originated.
Source Asset Type	The type of the asset from which the suspicious object originated.
Source Port	The source port of the connection.
Destination MAC Address	The destination MAC address of the connection.
Destination IP Address	The destination IP address of the connection.
Destination Asset Hostname	The hostname of the asset to which the suspicious object was sent.
Destination Asset Alias Name	The user-defined alias name of the asset to which the packet was sent.
Destination Asset Type	The type of the asset to which the suspicious object was sent.
Destination Port	The destination port of the connection.

Field	Description
VLAN ID	The VLAN ID of the connection.
Ethernet Type	The Ethernet type of the connection.
IP Protocol Name	The IP protocol name of the connection.
Preset Action	The action configured in the Suspicious Object settings.
Enforced Action	The actual action executed by the device.
Count	The number of detected suspicious object within the detection threshold.

 To query logs, see [Viewing Cyber Security Logs](#).

9.2 System Logs

Review and analyze logs for system activities and operational events.

- [Asset Detection Logs](#)
- [System Event Logs](#)
- [Audit Logs](#)

9.2.1 Asset Detection Logs

Asset detection logs contain details about the system status changes of the managed assets.

9.2.1.1 Viewing Asset Detection Logs

Procedure

1. Go to [Logs] > [System Logs] > [Asset Detection Logs].

The following table describes the asset detection log information.

Field	Description
Time	The time when the log entry was created.
Event Type	The log event description.
Interface	The physical port interface which receives the asset information.
Asset MAC Address	The MAC address of the asset.
Asset IP Address	The IP address of the asset.
Asset Hostname	The hostname of the asset.
Asset Type	The type of the asset.

 To query logs, see [Viewing Cyber Security Logs](#).

9.2.2 System Event Logs

System event logs contain details about system events on the device.

9.2.2.1 Viewing System Event Logs

Procedure

1. Go to [Logs] > [System Logs] > [System Event Logs].

The following table describes the system event log information.

Field	Description
Time	The time when the log entry was created.
Severity	The severity level of the logs.
Message	The log event description.

 To query logs, see [Viewing Cyber Security Logs](#).

9.2.3 Audit Logs

Audit logs contain details about user access, configuration changes, and other events that occur when the device is operating.

 To view audit logs, please log in with an auditor account.

9.2.3.1 Viewing Audit Logs

Procedure

1. Go to [Logs] > [System Logs] > [Audit Logs].

The following table describes the audit log information.

Field	Description
Time	The time when the log entry was created.
User ID	The user account used to execute the task.
User IP Address	The IP address of the host used to access the management console.
Severity	The severity level of the logs.
Message	The log event description.

 To query logs, see [Viewing Cyber Security Logs](#).

10 Admin

This chapter describes the available administrative settings for the Edge device.



Log in to the management console with an admin account to access the Admin tab.

10.1 Accounts

Manage account-related settings, including role-based account management, account logout timer, and third-party account authentication methods.

- [Account Management](#)
- [Logout Timer](#)
- [Auth Services](#)

10.1.1 Account Management

This system uses role-based administration to grant and control access to the management console. Use this feature to assign specific management console privileges to the accounts and present them with only the tools and permissions necessary to perform specific tasks. Each account is assigned a specific role. A role defines the level of access to the management console. Users log on to the management console by using custom user accounts.

The following table outlines the tasks available on the [Account Management] page.

Task	Description
Create accounts	Click [Create] to create a new user account.  For more information, see Creating User Accounts .
Delete existing accounts	Select existing user accounts and click [Delete].
Edit existing accounts	Click the name of an existing user account to view or modify the current account settings.  For more information, see Configuring User Accounts .
Configure password policy	Click the [Password Policy] button to adjust password complexity settings.  For more information, see Configuring Password Policy .



The maximum number of user accounts on an Edge web console is 32.

10.1.1.1 User Roles

The following table describes the permission matrix for user roles.

		User Role			
Tab	Action	Admin	Operator	Viewer	Auditor
Visibility	View	✓	✓	✓	✓ (Can only view the [System Dashboard] page)
	All operations	✓	✓	✓ (Cannot create profiles)	✗
Device	View	✓	✓	✗	✗
	All operations	✓	✗	✗	✗
Objects & Profiles	View	✓	✓	✗	✗
	All operations	✓	✓	✗	✗
Security	View	✓	✓	✗	✗
	All operations	✓	✓	✗	✗
Patterns	View	✓	✓	✗	✗
	All operations	✓	✓	✗	✗
Applications	View	✓	✓	✓ (Can only view the [Captured Packet Downloads] page)	✗
	All operations	✓	✓	✗	✗
Logs - excluding Audit Logs	View	✓	✓	✓	✗
Logs - Audit Logs	View	✗	✗	✗	✓
Admin	View	✓	✗	✗	✗
	All operations	✓	✗	✗	✗

10.1.1.2 Built-in Admin Account Login Credential

The following table lists the default login credential of the built-in admin account.

Built-in Default Account ID	User Role	Default Password
admin	Admin	txone



The built-in admin account cannot be deleted from the system. Ensure that the password of the built-in admin account is changed when you first set up the device.

10.1.1.3 Account Input Format

Input format validation will apply to the account management form text fields. The following table describes the format restrictions on user input.

Field	Length	Format	Reserved Name
ID	1-32 characters	- Letters a-z & A-Z - Numbers 0-9 - Special characters: - periods [.] - underscores [_]  - Leading and trailing characters cannot be special characters. - Successive special characters are not allowed.	- admin - administ rator - root
Name	1-32 characters	- Letters a-z & A-Z - Numbers 0-9 - Special characters: - periods [.] - underscores [_] - white spaces []  Single spaces are not allowed.	
Description	0-64 characters	- Letters a-z & A-Z - Numbers 0-9 - Special characters: - periods [.] - underscores [_] - white spaces [] - parentheses [() & []] - hyphens [-]	

10.1.1.4 Account ID/Password Reset

In some specific situations, for security reasons, users are required to reset their IDs or passwords the next time they log in.

User Role	Scenario	
	First Time Login	Password Changed by Admin
Admin	Reset ID and Password	N/A
Operator	Reset Password	Reset Password
Viewer	Reset Password	Reset Password


User Role	Scenario	
Auditor	Reset Password	Reset Password

10.1.1.5 Configuring User Accounts

When you log in to the web console using an administrator account (admin), you can create new user accounts to access the system or edit account settings.


Procedure

1. Go to [Admin] > [Accounts] > [Account Management].

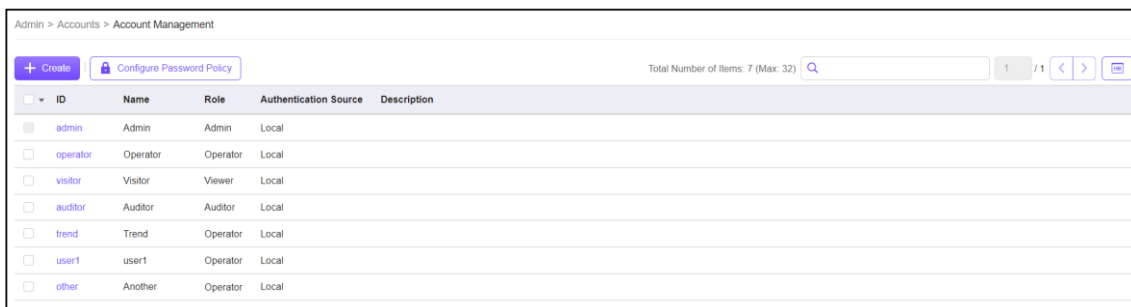

2. Do one of the following.

- Click [Create] to create a new user account. The [Create User Account] window will appear.
- Click a user ID to edit settings. The [Edit User Account] window will appear.

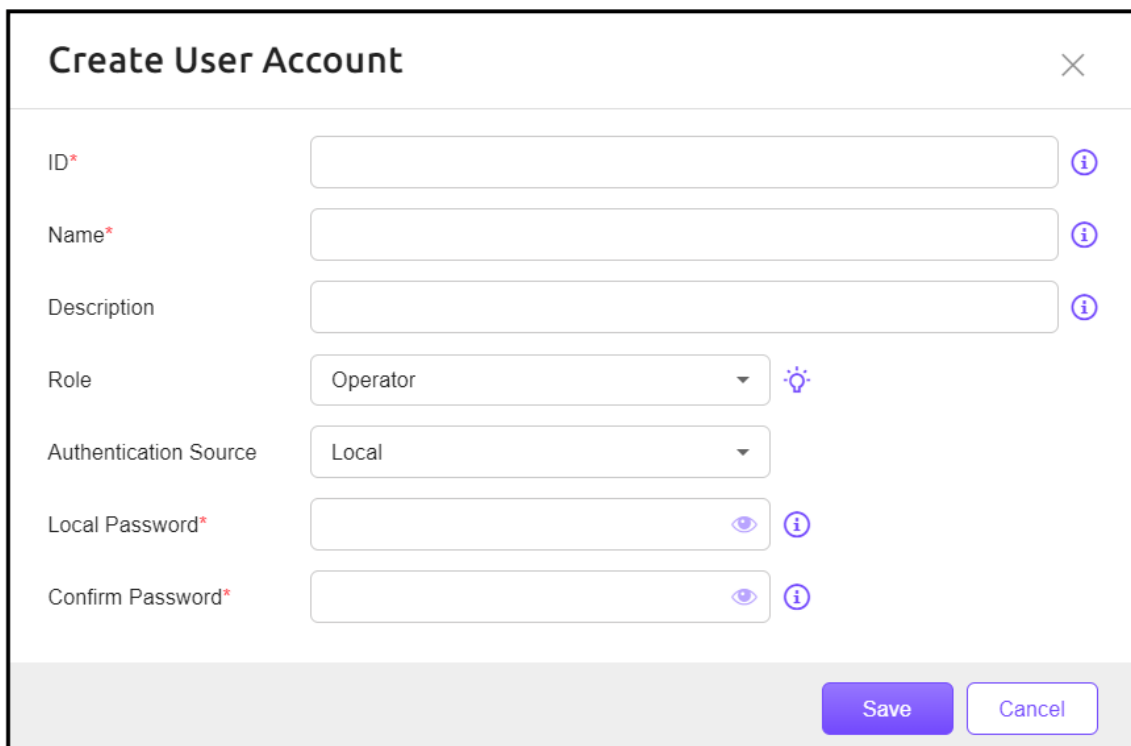

3. Configure the account settings.

Field	Description
ID	Input a user ID to log on to the management console.
Name	Input the name of the user for this account.
Description	Add a description for this account.
Role	Select a user role, Operator or Viewer , for this account.  For more information, see User Roles.
Authentication Source	Select an authentication source, Local or External Authentication Server . If you select External Authentication Server, further select an authentication protocol, TACACS+ , RADIUS , or SAML SSO , for this account.  For more information, see Auth Services.
Local Password	(Only for the “Local” authentication source) Input an account password.
Confirm password	(Only for the “Local” authentication source) Re-type the account password to confirm.


4. Click [Save].

10.1.1.6 Changing Account ID/Password

Procedure

- **Method 1: Access [Change Password] Window** (only for changing password)

1. On the web console banner, click your account  at the top right corner.

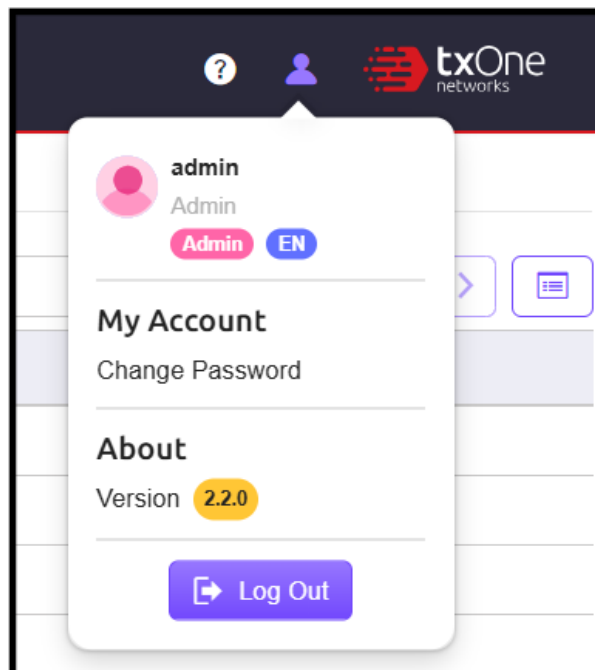

2. Click [Change Password]. The [Change Password] window will appear.

Change Password

Current Password*

.....

New Password*

.....

Confirm Password*

.....

Save

Cancel

3. Modify the password settings.

- Current password
- New password
- Confirm password

4. Click [Save].

- **Method 2: Access [Account Management] Page** (Only accessible with an admin account)

1. Go to [Admin] > [Accounts] > [Account Management].

Admin > Accounts > Account Management

+ Create

Configure Password Policy

Total Number of Items: 7 (Max: 32)

1 / 1

ID	Name	Role	Authentication Source	Description
☒ admin	Admin	Admin	Local	
☐ operator	Operator	Operator	Local	
☐ visitor	Visitor	Viewer	Local	
☐ auditor	Auditor	Auditor	Local	
☐ trend	Trend	Operator	Local	
☐ user1	user1	Operator	Local	
☐ other	Another	Operator	Local	

2. Click an ID in the [ID] column. The [Edit User Account] window will appear.

Edit User Account

ID*

Name*

Description

Role

Admin

Authentication Source

Local

Local Password

Confirm Password

Save

Cancel

3. Modify the ID/password settings.

- ID
- Local Password (new password)
- Confirm Password

4. Click [Save].

10.1.1.7 Configuring Password Policy

By configuring the password policy, users may enhance web console access security.

Configure password complexity settings to enforce strong passwords. For example, you can specify that users must create strong passwords that contain a combination of both upper-case and lower-case letters, numbers, and symbols, and which are at least eight characters in length.



When a user submits a new password, the password policy determines whether the password meets your company's established requirements. If strong passwords are required, strict password policies may sometimes increase costs to an organization when users select passwords that are too difficult to remember. Users call the help desk when they forget their passwords, or keep passwords in easily accessible locations that would increase their vulnerability to threats. When establishing a password policy, balance the necessity of highly secured password with the utility of easily-recalling password to make the policy easy for users to follow.

Procedure

1. Go to [Admin] > [Accounts] > [Account Management].
2. Click the [Configure Password Policy] button. The [Configure Password Policy] window will appear.

Configure Password Policy

Minimum password length* (8 - 32)

- ☐ Must not include user account ID
- ☐ Must not include user account name
- ☐ Must include at least one uppercase letter (A-Z)
- ☐ Must include at least one lowercase letter (a-z)
- ☐ Must include at least one number (0-9)
- ☐ Must include at least one non-alphanumeric character (~!@#\$%^&* _+=`|()\{\}[]:;'"<>,.?/)
- ☐ Must not be the same as the last password

Save Cancel

- Select one or multiple options that meet your required password policy.
- Click [Save].

10.1.2 Logout Timer

On the [Logout Timer] page, you may set a specific time to automatically terminate login sessions after users have been idle for a specified time.

10.1.2.1 Configuring Logout Timer

Procedure

- Go to [Admin] > [Accounts] > [Logout Timer].

Admin > Accounts > Logout Timer

Logout Timer Setting

Log off idle users after ⓘ

Save Cancel

- Select a session timeout value, **10 minutes** (default), **15 minutes**, **30 minutes** or **60 minutes**, from the drop-down list.
- Click [Save].



The logout timer setting applies to both Edge device web console and CLI.


10.1.3 Auth Services

On the [Auth Services] page, you may configure the settings of authentication servers (TACACS+, RADIUS, and SAML SSO) for the Edge device's external authentication service.

10.1.3.1 Configuring TACACS+

Procedure

1. Go to [Admin] > [Accounts] > [Auth Services].

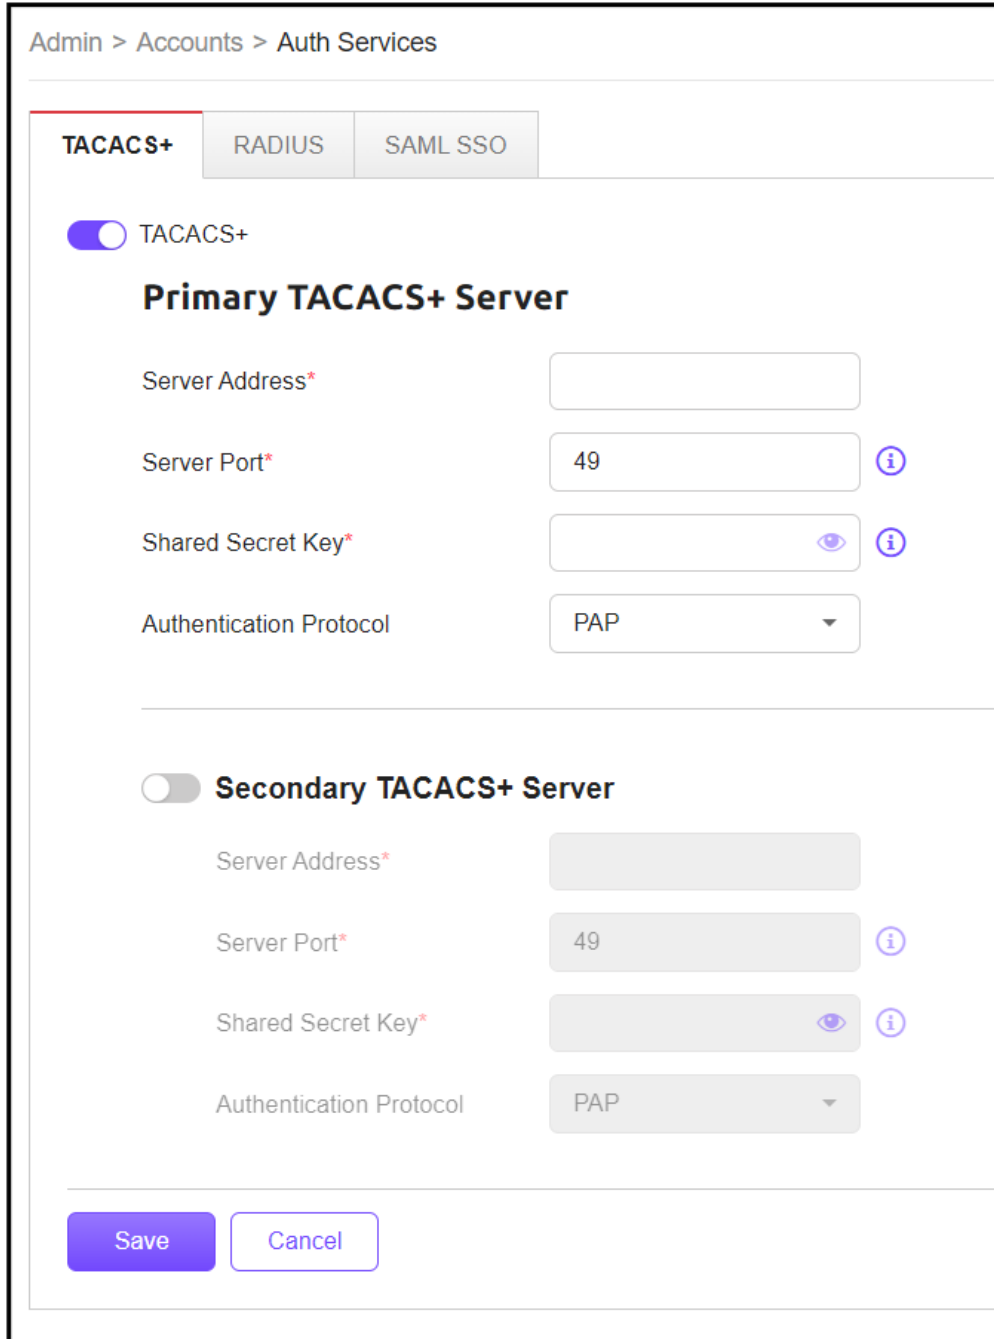

The screenshot shows the 'Admin > Accounts > Auth Services' configuration page. At the top, there are three tabs: 'TACACS+', 'RADIUS', and 'SAML SSO'. The 'TACACS+' tab is selected and highlighted with a red border. Below the tabs, there is a toggle switch for 'TACACS+' which is currently turned on. Underneath, the 'Primary TACACS+ Server' section is visible. It contains four fields: 'Server Address*' (empty), 'Server Port*' (set to 49), 'Shared Secret Key*' (empty), and 'Authentication Protocol' (set to PAP). To the right of the 'Server Port' and 'Shared Secret Key' fields are information icons (i). Below the primary server section, there is a 'Secondary TACACS+ Server' section which is currently disabled (toggle switch is off). It has the same four fields as the primary server, but they are all disabled (grayed out). At the bottom of the form, there are two buttons: 'Save' and 'Cancel'.

2. Under the [TACACS+] tab, enable TACACS+ and configure the following settings for the primary TACACS+ server.

- Server Address
- Server Port (Default Port: 49)
- Share Secret Key (Maximum Length: 64 characters)

- Authentication Protocol (MS-CHAPv1, CHAP, PAP or ASCII)
3. (Optional) Enable the secondary TACACS+ server and configure its settings if necessary.
 4. Click [Save].

 For more information about TACACS+, see the document RFC 8907.

10.1.3.2 Configuring RADIUS

Procedure

1. Go to [Admin] > [Accounts] > [Auth Services].

Admin > Accounts > Auth Services

TACACS+ **RADIUS** SAML SSO

☒ RADIUS

Primary RADIUS Server

Server IP / Name*

Server Port*

1812



Shared Secret Key*





Authentication Protocol

MS-CHAPv2



☐ **Secondary RADIUS Server**

Server IP / Name*

Server Port*

1812



Shared Secret Key*





Authentication Protocol

MS-CHAPv2



Save

Cancel

2. Under the [RADIUS] tab, enable RADIUS server and configure the following settings for the primary RADIUS server.

- Server IP/Name
- Server Port (Default Port: 1812)

- Shared Secret Key (Maximum Length: 64 characters)
 - Authentication Protocol (MS-CHAPv2, MS-CHAPv1, CHAP, or PAP)
3. (Optional) Enable the secondary RADIUS server and configure its settings if necessary.
 4. Click [Save].



For more information about RADIUS, see the document RFC 2865.

10.1.3.3 Configuring SAML SSO

SAML SSO (Single Sign-On) allows users to log on to the Edge device after the Edge device metadata file with the external identity provider information is provided. The metadata file indicates the data that provide information about the basic configuration data for authentication and authorization.

Procedure

1. Go to [Admin] > [Accounts] > [Auth Services].
2. Under the [SAML SSO] tab, enable SAML SSO login by clicking the toggle.

Admin > Accounts > Auth Services

TACACS+

RADIUS

SAML SSO

General

When SAML SSO is enabled, users can log in to EdgeIPS via single sign-on (SSO) using SAML authentication. For the SAML SSO settings, EdgeIPS uses its management IP address as the service provider (SP) IP address in the [Entity ID] and [ACS URL] fields.

☒ SAML SSO

Service Provider Information

Entity ID `http://192.168.1.42:10001/rest/admin/saml/spmeta`

ACS URL `http://192.168.1.42:10001/rest/saml-sso/acs`

[Download SP Metadata File](#)

Identity Provider Information

Entity ID -

Single Sign-On URL -

Single Logout URL -

Certificate

[Select and Upload IdP Metadata File](#)

3. In the [Service Provider Information] pane, the following information is shown on the page.
 - Entity ID

- ACS URL
4. Click the [Download SP Metadata File] button to download the service provider metadata file in XML format.
 5. Go to the external identity provider server and import the metadata file. An integrated metadata file will be generated.
 6. In the [Identity Provider Information] pane, the following information will be automatically shown on the screen.
 - Entity ID
 - Single Sign-On URL
 - Single Logout URL
 - Certificate
 7. After confirming the information above, click the [Select and Upload IdP Metadata File] button to import the integrated authentication and authorization data to the Edge device.
 8. Click [Save].



For more information about SAML SSO, see the document RFC 7522.

10.2 Notifications

Configure notification settings.

- [SNMP](#)
- [Syslog](#)


10.2.1 SNMP

The Simple Network Management Protocol is a protocol used for exchanging management information between an Edge series device and its management console. The device supports SNMPv1/v2c and a more secure v3, as well as SNMP traps.

10.2.1.1 Configuring SNMP General Settings

Procedure

1. Go to [Admin] > [Notifications] > [SNMP].

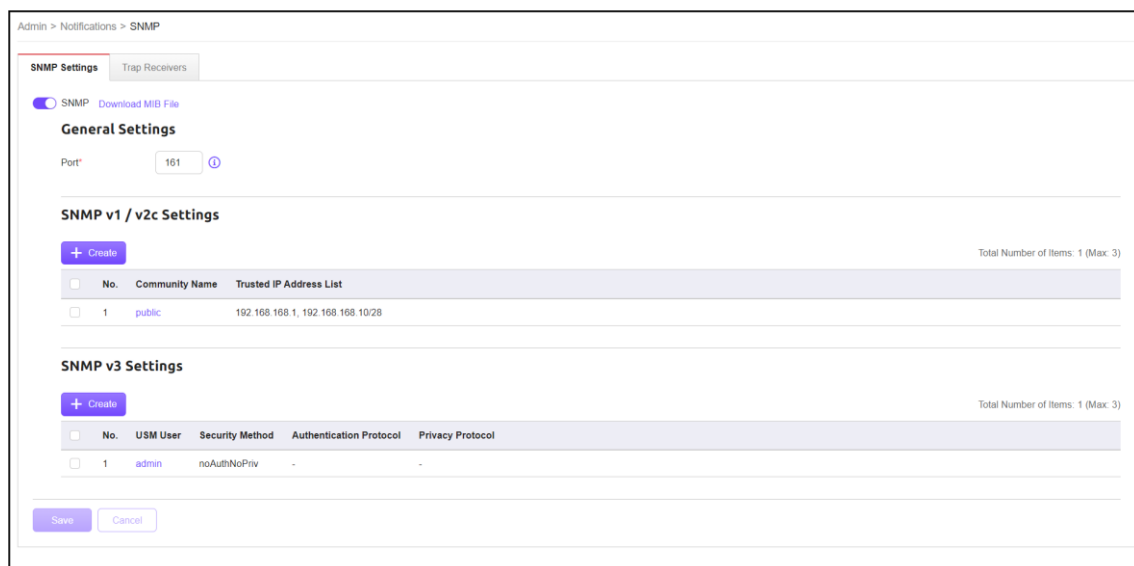

The screenshot shows the 'Admin > Notifications > SNMP' configuration page. It has two tabs: 'SNMP Settings' (active) and 'Trap Receivers'. Under 'SNMP Settings', there is a toggle for 'SNMP' which is turned on, and a link to 'Download MIB File'. Below this is the 'General Settings' section with a 'Port' field set to 161. The 'SNMP v1 / v2c Settings' section includes a '+ Create' button and a table with columns 'No.', 'Community Name', and 'Trusted IP Address List'. It contains one entry with '1' as the number, 'public' as the community name, and '192.168.168.1, 192.168.168.10/28' as the trusted IP address list. The 'SNMP v3 Settings' section also has a '+ Create' button and a table with columns 'No.', 'USM User', 'Security Method', 'Authentication Protocol', and 'Privacy Protocol'. It contains one entry with '1' as the number, 'admin' as the USM user, and 'noAuthNoPriv' as the security method. At the bottom, there are 'Save' and 'Cancel' buttons.

2. Under the [SNMP Settings] tab, enable the SNMP function by clicking the toggle.
3. In the [General Settings] pane, you can change the SNMP port. The default port is 161.
4. To download the Edge device MIB file, click the [Download MIB File] link.

10.2.1.2 Configuring SNMP v1/v2c Communities

Procedure

1. Go to [Admin] > [Notifications] > [SNMP]. Then switch to the [SNMP Settings] tab.
2. In the [SNMP v1/v2c Settings] pane, do one of the following.
 - Click [Create] to create an SNMP v1/v2c community. The [Create Community] window will appear.
 - Click an SNMP v1/v2c community name. The [Edit Community] window will appear.

Create Community

Community Name*

Trusted IP Address List

(Max: 3)

No.1

Single IP

+

OK

Cancel

3. Configure the following settings.

Item	Description
Community Name	Input an SNMP v1/v2c community name.
Trusted IP Address List	Specify an IP address or an IP subnet. Click the add button  to add another entry, or the remove button  to remove an entry.

4. Click [OK].
5. Click [Save] on the [SNMP] page.

10.2.1.3 Configuring SNMP v3 USM Users

Procedure

1. Go to [Admin] > [Notifications] > [SNMP]. Then switch to the [SNMP Settings] tab.
2. In the [SNMP v3 Settings] pane, do one of the following.
 - Click [Create] to create an SNMP v3 USM user. The [Create USM User] window will appear.
 - Click an SNMP v3 USM username. The [Edit USM User] window will appear.

Create USM User

USM User*

Security Method

No Authentication or Privacy

OK

Cancel

3. Configure the following settings.

Item	Description
USM User	Input an SNMP v3 USM username.
Security Method	Select one of the following options. • No Authentication or Privacy

Item	Description
	• Authentication without Privacy: Further select an appropriate authentication protocol (SHA or MD5) and enter an authentication key. • Authentication with Privacy: Further select an appropriate authentication protocol (SHA or MD5), enter an authentication key, select an appropriate privacy protocol (AES or DES), and enter a privacy key.


4. Click [OK].

5. Click [Save] on the [SNMP] page.

10.2.1.4 Configuring SNMP Trap Receivers

Procedure

1. Go to [Admin] > [Notifications] > [SNMP].

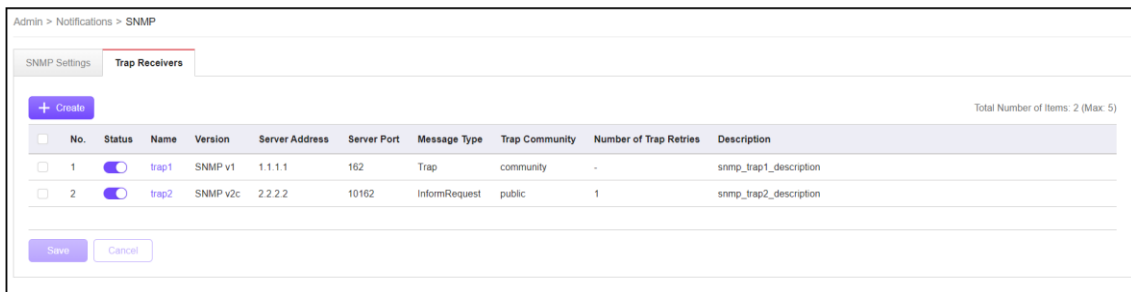

2. Under the [Trap Receivers] tab, do one of the following.

- Click [Create] to create a new trap receiver. The [Create Trap Receiver] window will appear.
- Click a trap receiver item. The [Edit Trap Receiver] window will appear.

Create Trap Receiver

Status

Name*

Description

Version

SNMP v1

SNMP v2c

Server Address*

Server Port*

162

Message Type

Trap

InformRequest

Trap Community*

Number of Trap Retries

10

Event Notification*

High CPU Usage

Usage rate above 70% within every 10 seconds

High CPU Temperature

Temperature above 60°C within every 10 seconds

High Memory Usage

Usage rate above 80% within every 10 seconds

Low Disk Space for Logs

Usage rate above 95% within every 10 seconds

Interface IP Address Changed

Network Interface Linked Up

Network Interface Linked Down

Local Disk Failed

Incorrect Edge Device Port Connection Detected for Assets


Check Interval: 24 Hours

OK

Cancel

3. Configure the following trap receiver settings.

Item	Description
Status	Enable this trap receiver by clicking the toggle.
Name	Type a name for this trap receiver.
Description	(Optional) Type a description.
Version	Select an SNMP version, SNMP v1 or SNMP v2c .
Server Address	Input a server IP address.
Server Port	Input a server port. The default server port is 162.
Message Type	Select a message type, Trap or informRequest .
Trap Community	Input a trap community name. The default name is PUBLIC.
Number of Trap Retries	Set the number of trap retries ranging from 1 to 10.
Event Notification	Select what will trigger an event notification. For [High CPU Usage], [High CPU Temperature], [High Memory Usage], [Low Disk Space for Logs], and [Incorrect Edge Device Port

Item	Description
	Connection Detected for Assets], click the  button to adjust the threshold for triggering the notification and check interval.  Due to differences in CPU operating temperature ranges between commercial-grade and industrial-grade Edge products, the SNMP trap setting for CPU temperature is not interchangeable. As a result, when a user imports a configuration file from one product type to another, the CPU temperature setting reverts to its default value (based on the specific Edge model) rather than applying the value from the imported file. ☐ High CPU Usage  Usage rate above 70% within every 10 seconds ☐ High Memory U Trigger an SNMP trap within every 10 seconds (Range: 10-3600 seconds, Default: 10) ☐ Low Disk Space if CPU utilization rate reaches: ☐ Interface IP Address ☐ Network Interface ☐ Network Interface  70% 75% 80% 85% 90% 95% 100% ☐ Local Disk Failure ☐ Incorrect Edge OK Cancel ☐ Network Interface Linked Up ☐ Network Interface Linked Down ☐ Local Disk Failed ☐ Incorrect Edge Device Port Connection Detected for Assets  Check Interval: 24 Hours Check Interval: 24 Hours  OK Cancel

4. Click [OK].

5. Click [Save] on the [SNMP] page.

10.2.2 Syslog

The system of this Edge series device maintains Syslog events that provide summaries of security and system events. Common Event Format (CEF) and Log Event Extended Format (LEEF) syslog messages are used in the device.

Configure the Syslog settings to enable the Edge device to send the Syslog to a Syslog server.

10.2.2.1 Configuring Syslog Settings

Procedure

1. Go to [Admin] > [Notifications] > [Syslog].

Admin > Notifications > Syslog

Create

Total Number of Items: 2 (Max: 10)

☐	No.	Profile Status	Name	Transmission Status	Server Address	Port	Protocol	Format	Facility Level	Log Output	Description
☐	1		Syslog_1	Transmission Failed	192.168.3.46	601	TCP	CEF	Local 0	Cyber Security Logs, Policy Enforcement Logs, Protocol Filter Logs	
☐	2		Syslog_2	Log Sent	10.35.1.64	601	UDP	LEEF	Local 1	Asset Detection Logs, System Event Logs, Audit Logs	

2. Do one of the following.

- Click [Create] to create a Syslog profile. The [Create Syslog Settings] window will appear.
- Click a profile name to edit settings. The [Edit Syslog Settings] window will appear.

Create Syslog Settings

Profile Status

☒

Name*

Description

Syslog Settings

Server Address*

Port*

601

Protocol*

☒ TCP
☐ UDP
☐ TLS

Format*

☒ CEF
☐ LEEF

Facility Level

Local 0

Log Output*

Security Logs

☐ Cyber Security Logs
Security Severity: All, Enforced Action: All

☐ Policy Enforcement Logs
Enforced Action: All

☐ Protocol Filter Logs
Enforced Action: All

☐ Domain Name Filter Logs
Enforced Action: All

☐ File Filter Logs
Enforced Action: All

☐ Suspicious Object Logs
Risk Level: All, Enforced Action: All

☐ CPSDR Logs
Impact Severity: All, Risk Level: All, Enforced Action: All

System Logs

☐ Asset Detection Logs
Event Type: All

☐ System Event Logs
Severity: All

☐ Audit Logs
Severity: All

Save

Cancel

3. Configure the following settings.

Field	Description
Profile Status	Click the toggle to enable the Syslog settings configured in this profile.
Name	Type a name for this Syslog profile.

Field	Description
Description	(Optional) Type a description.

- Syslog Settings

Field	Description
Server address	Type the IP address of the Syslog server.
Port	Type the port number.
Protocol	Select a protocol for the communication.
Format	Select a syslog format, either CEF or LEEF.
Facility Level	Select a facility level to determine the source and priority of the logs.
Log Output	Select the types of logs to send. To configure detailed log filter settings for log output, click the  button.  For Cyber Security, Suspicious Object, and CPSDR logs, you can configure the severity/risk levels of the output logs. For more information about Syslog severity and risk levels, see Syslog Severity Levels.

- Click [Save].

10.2.2.2 Syslog Severity Levels

The Syslog severity level specifies the type of messages to be sent to a Syslog server.

Level	Severity	Description
0	Emergency	Complete system failure Take immediate action.
1	Alert	Primary system failure Take immediate action.
2	Critical	Urgent failure Take immediate action.
3	Error	Non-urgent failure Resolve issues quickly.
4	Warning	Error pending Take action to avoid errors.
5	Notice	Unusual events Immediate action is not required.
6	Informational	Normal operational messages useful for reporting, measuring throughput, and other purposes No action is required.
7	Debugging	Useful information when debugging the application.

Level	Severity	Description
		 Setting the debugging level can lead to a large amount of Syslog traffic in a busy network. Use with caution.

10.2.2.3 Syslog Severity Level Mapping Table

The following table summarizes the logs of Policy Enforcement/Protocol Filter/Cybersecurity and their equivalent Syslog severity levels.

Policy Enforcement/ Protocol Filter Action	Cyber Security Severity Level	Syslog Severity Level
		0 - Emergency
	Critical	1 – Alert
	High	2 – Critical
		3 – Error
Deny	Medium	4 - Warning
	Low	5 - Notice
Allow	Informational	6 - Informational
		7 - Debugging

10.3 Licensing & Updates

Manage product licenses and firmware updates.

- [License Management](#)
- [Firmware Updates & Management](#)

10.3.1 License Management

To fully access all functionalities of the Edge device, including pattern updates, you must first activate a valid Edge device software license. On the [License Management] page, you can activate your Edge device license using either a license key or a license file, and view detailed information about your license.

To activate a license, you can either enter a license key or upload a license file. If an Internet connection is unavailable, please upload your license file for activation.

10.3.1.1 Viewing License Information

Procedure

1. Go to [Admin] > [Licensing & Updates] > [License Management].

Admin > Licensing & Updates > License Management

License Management

A valid Edge device license is required for updating patterns via the Edge device console. Please activate the Edge device license before updating patterns under [Patterns] > [Pattern Updates].

License Key XXXXXXXXXXXX-XXXX-XXXX-XXXX-XXXX

Expiration Date 2026-12-22T08:00:00+08:00

To activate a license, you can either enter a license key or upload a license file. If Internet connection is unavailable, please upload your license file for activation.



License Key

- ✓ License Key
- ✓ Internet Connection



License File

- ✓ License File (.txt)

2. On the [License Management] page, you will see the license key and expiration date of the activated license.

10.3.1.2 Activating/Renewing License with License Key

Procedure

1. Go to [Admin] > [Licensing & Updates] > [License Management].

Admin > Licensing & Updates > License Management

License Management

A valid Edge device license is required for updating patterns via the Edge device console. Please activate the Edge device license before updating patterns under [Patterns] > [Pattern Updates].

License Key XXXXXXXXXXXX-XXXX-XXXX-XXXX-XXXX

Expiration Date 2026-12-22T08:00:00+08:00

To activate a license, you can either enter a license key or upload a license file. If Internet connection is unavailable, please upload your license file for activation.



License Key

- ✓ License Key
- ✓ Internet Connection



License File

- ✓ License File (.txt)

2. Select [License Key] and input a valid Edge device license key.
3. Click [Verify].
4. Verify the license information shown and click [Activate].



License Key

- ✓ License Key
- ✓ Internet Connection



License File

- ✓ License File (.txt)

License Key

Expiration Date 2026-12-22T08:00:00+08:00

Do you want to activate this license?

 Internet connectivity is required for activating/renewing a license using a license key.

10.3.1.3 Activating/Renewing License with License File

Procedure

1. Go to [Admin] > [Licensing & Updates] > [License Management].

Admin > Licensing & Updates > License Management

License Management

A valid Edge device license is required for updating patterns via the Edge device console. Please activate the Edge device license before updating patterns under [Patterns] > [Pattern Updates].

License Key XXXXXXXXXXXX-XXXX-XXXX-XXXX

Expiration Date 2026-12-22T08:00:00+08:00

To activate a license, you can either enter a license key or upload a license file. If Internet connection is unavailable, please upload your license file for activation.



License Key

- ✓ License Key
- ✓ Internet Connection



License File

- ✓ License File (.txt)

2. Select [License File], and then click [Get License File] to connect to the TXOne License File Management server. (This step requires an Internet connection.)

License File Management 

 License File

© 2024 TXOne Networks. All rights reserved.



1. The Edge device serial number is provided on the license file management server.
2. If you do not have an Internet connection, you can click [Copy Download Link] to copy the link of the TXOne License File Management server, and then open the link to download the license file when your Internet connection is restored. The

3. Input your license key to download your license file.

5. Verify the license information shown and click [Activate].



License Key

- ✓ License Key
- ✓ Internet Connection



License File

- ✓ License File (.txt)

License Key

Expiration Date 2026-12-22T08:00:00+08:00

Do you want to activate this license?


 If you don't have a license file, please click [Get License File] to obtain one or [Copy Download Link] to request it later.

[Get License File](#)
[Copy Download Link](#)

10.3.2 Firmware Updates & Management

On the [Firmware Updates & Management] page, you can view the device firmware information, update the device firmware, and switch to the standby firmware.

10.3.2.1 Viewing Device Firmware Information

Procedure

1. Go to [Admin] > [Licensing & Updates] > [Firmware Updates & Management].

Admin > Licensing & Updates > Firmware Updates & Management

No.	Partition Name	Partition Status	Firmware Version	Firmware Build Time	Actions
1	p1	Running	2.1.6	2024-04-29T12:00:00+08:00	
2	p2	Standby	2.0.0	2019-05-09T08:00:00+08:00	 

2. The table on this page lists the two available firmware partitions and shows information including the partition name, partition status, firmware version, and firmware build time.

The device can have up to two firmwares to be installed. Each firmware is installed in its own separate partition. At any given point in time, one partition will have the status [Running], which indicates the currently running and active firmware. The other partition will have the status [Standby], which indicates an alternative or standby partition.

10.3.2.2 Updating Device Firmware

Procedure

1. Go to [Admin] > [Licensing & Updates] > [Firmware Updates & Management].

Admin > Licensing & Updates > Firmware Updates & Management					
No.	Partition Name	Partition Status	Firmware Version	Firmware Build Time	Actions
1	p1	Running	2.1.6	2024-04-29T12:00:00+08:00	
2	p2	Standby	2.0.0	2019-05-09T08:00:00+08:00	

2. Click the [Update Firmware] button  to install firmware to the [Standby] partition. The [Update Firmware] window will appear.

Update Firmware

Firmware Information

Running Firmware

2.0.0

Firmware Build Time

2019-05-09T08:00:00+08:00

Firmware Update

Uploaded Firmware File

Select File

Upload

Close

During a firmware update, firmware will always be installed to the [Standby] partition. As such, the [Update Firmware] button is only available in the [Standby] partition row.

3. On the [Update Firmware] window, click [Select File] to select a firmware file from your local device, and then click [Upload] to install the firmware to the standby partition.

4. Click [Close].

Various versions of the firmware files can be downloaded at the MyTXOne portal at <https://my.txone.com/>.

10.3.2.3 Switching to Standby Firmware

To boot into an updated firmware or to revert to a previous firmware, you would need to boot into the [Standby] partition and load the firmware from it.


Procedure

1. Go to [Admin] > [Licensing & Updates] > [Firmware Updates & Management].

Admin > Licensing & Updates > Firmware Updates & Management					
No.	Partition Name	Partition Status	Firmware Version	Firmware Build Time	Actions
1	p1	Running	2.1.6	2024-04-29T12:00:00+08:00	
2	p2	Standby	2.0.0	2019-05-09T08:00:00+08:00	

2. Click the [Switch to Standby Firmware] button  in the [Standby] partition row.

3. The below warning will be shown to the user. Click [Yes] to proceed with rebooting into the [Standby] partition and making it the [Running] partition.

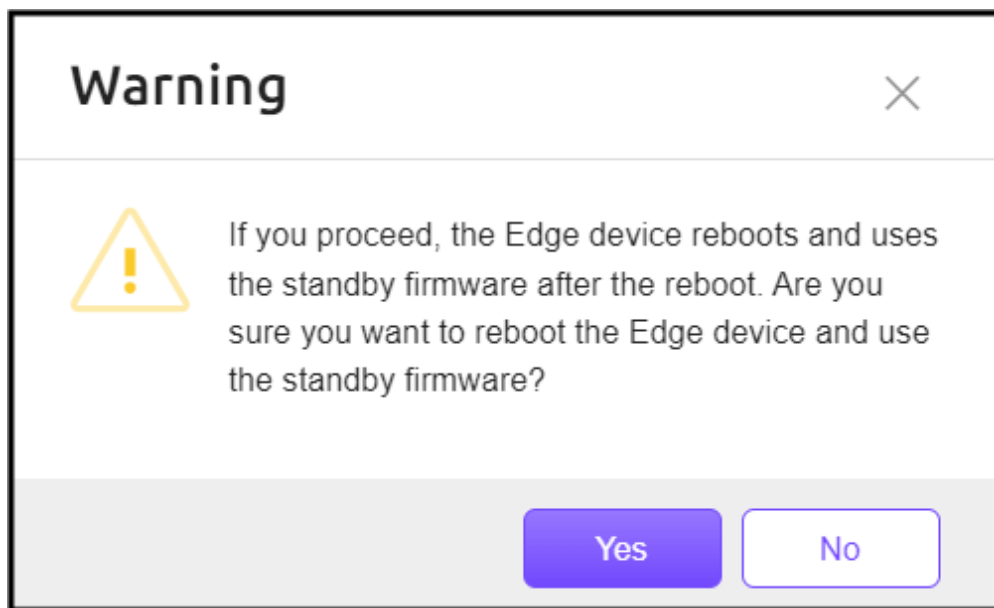

10.4 System

Configure administrative settings to optimize device operations.

- [System Management](#)
- [Edge Device Security](#)
- [EdgeOne Connection Settings](#)
- [Language Package](#)
- [API Management](#)
- [SSL Certificate](#)
- [Backup/Restore](#)
- [System Time](#)
- [System Reboot](#)

10.4.1 System Management

On the [System Management] page, you can do the following:

- Configure the hostname and location information of the device.
- Choose the protocols and ports that can be used to manage the device.
 - Configure the IP addresses that are allowed to access these protocols.
- Allow pings to the management interface.

10.4.1.1 Configuring Device Hostname and Location

Procedure

1. Go to [Admin] > [System] > [System Management].

Admin > System > System Management

Edge Device Information

Hostname*

IPSLE-local

Location

location

Example: Zone1, Network-1

OT Layer

L2

Management Methods

☒ HTTP*

10015

☐ HTTPS

443

☐ SSH

22

☐ Telnet

23

☐ Access Control List

Allowed IP Address 1

192.168.1.1

Allowed IP Address 2

Allowed IP Address 3

Allowed IP Address 4

Management Interface Ping Settings

☒ Allow ping to management interface

Save

Cancel

2. In the [Edge Device Information] pane, input a hostname and location, and select an OT layer for the device.
3. Click [Save].

10.4.1.2 Configuring Management Protocols and Ports

Procedure

1. Go to [Admin] > [System] > [System Management].

Admin > System > System Management

Edge Device Information

Hostname*

IPSLE-local

Location

location

Example: Zone1, Network-1

OT Layer

L2

Management Methods

☒ HTTP*

10015

☐ HTTPS

443

☐ SSH

22

☐ Telnet

23

☐ Access Control List

Allowed IP Address 1

192.168.1.1

Allowed IP Address 2

Allowed IP Address 3

Allowed IP Address 4

Management Interface Ping Settings

☒ Allow ping to management interface

Save

Cancel

2. In the [Management Methods] pane:

- Select the protocols that are allowed to be used.
- Input port numbers for the protocols.

 The HTTP and HTTPS protocols are used for connecting to the web management console. The SSH and Telnet protocols are used for connecting to the CLI commands.

3. Click [Save].

10.4.1.3 Configuring Access Control List

Procedure

1. Go to [Admin] > [System] > [System Management].

Admin > System > System Management

Edge Device Information

Hostname* ⓘ

Location ⓘ
Example: Zone1, Network-1

OT Layer

Management Methods

☒ HTTP* ⓘ

☐ HTTPS ⓘ

☐ SSH ⓘ

☐ Telnet ⓘ

☐ Access Control List

Allowed IP Address 1

Allowed IP Address 2

Allowed IP Address 3

Allowed IP Address 4

Management Interface Ping Settings

☒ Allow ping to management interface

2. Click the [Access Control List] toggle to enable or disable access control of the management clients.

3. List the IP addresses that are allowed for accessing the device.

4. If the connection between the Edge device and your network is not stable or is disconnected, enable the toggle to ping to the management Interface.

Management Interface Ping Settings

☒ Allow ping to management interface

5. Click [Save].

10.4.2 Edge Device Security

The feature, Edge Device Security, is used to protect the Edge device itself against file vulnerabilities, buffer overflow, denial of service attacks, exploits, etc. by applying pre-defined IPS profiles and configuring the thresholds of the denial of service rules.

10.4.2.1 Applying IPS Profile for Self-Protection

Procedure

1. Configure the required IPS profile.

For more information, see [Configuring IPS Profiles](#).

2. Go to [Admin] > [System] > [Edge Device Security].

Admin > System > Edge Device Security

IPS for Self-Protection

☒ Apply IPS profiles to secure Edge device - Select - 

DoS Settings for Self-Protection

☒ Denial of Service (DoS) Prevention

☒ Destination Detected TCP SYN Flood	Threshold	100	Packets 	☒ ICMP Flood	Threshold	100	Packets 
☒ IGMP Flood	Threshold	100	Packets 	☒ Source Detected TCP SYN Flood	Threshold	100	Packets 
☒ TCP Port NULL Scan	Threshold	100	Packets 	☒ TCP Port FIN Scan	Threshold	100	Packets 
☒ TCP Port Xmas Scan	Threshold	100	Packets 	☒ TCP Port SYN Scan	Threshold	100	Packets 
☒ UDP Port Scan	Threshold	100	Packets 	☒ UDP Flood	Threshold	100	Packets 


3. In the [IPS for Self-Protection] pane, enable [Apply IPS profiles to secure Edge device] by clicking the toggle.
4. Select an IPS profile from the drop-down list or click the  button to create a profile.
5. Click [Save].

10.4.2.2 Configuring DoS Prevention for Self-Protection

Procedure

1. Go to [Admin] > [System] > [Edge Device Security].

2. In the [DoS Settings for Self-Protection] pane, enable the [Denial of Service (DoS) Prevention] function by clicking the toggle.

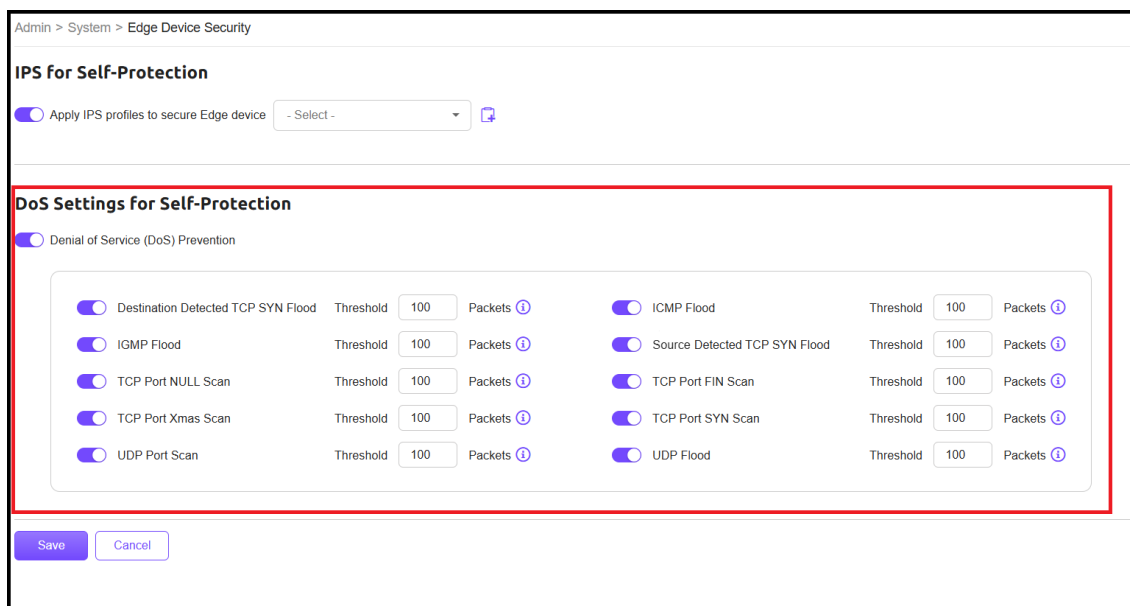

3. Configure the thresholds of the denial of service rules.

 The [Source Detected TCP SYN Flood] option is applicable to only Edge devices running firmware 2.2 or later.

4. Click [Save].


10.4.3 EdgeOne Connection Settings

This Edge series device can be managed by TXOne EdgeOne, a centralized management system. Use this tab to register your device to EdgeOne.

10.4.3.1 Enabling EdgeOne Management

Procedure

1. Go to [Admin] > [System] > [EdgeOne Connection Settings].

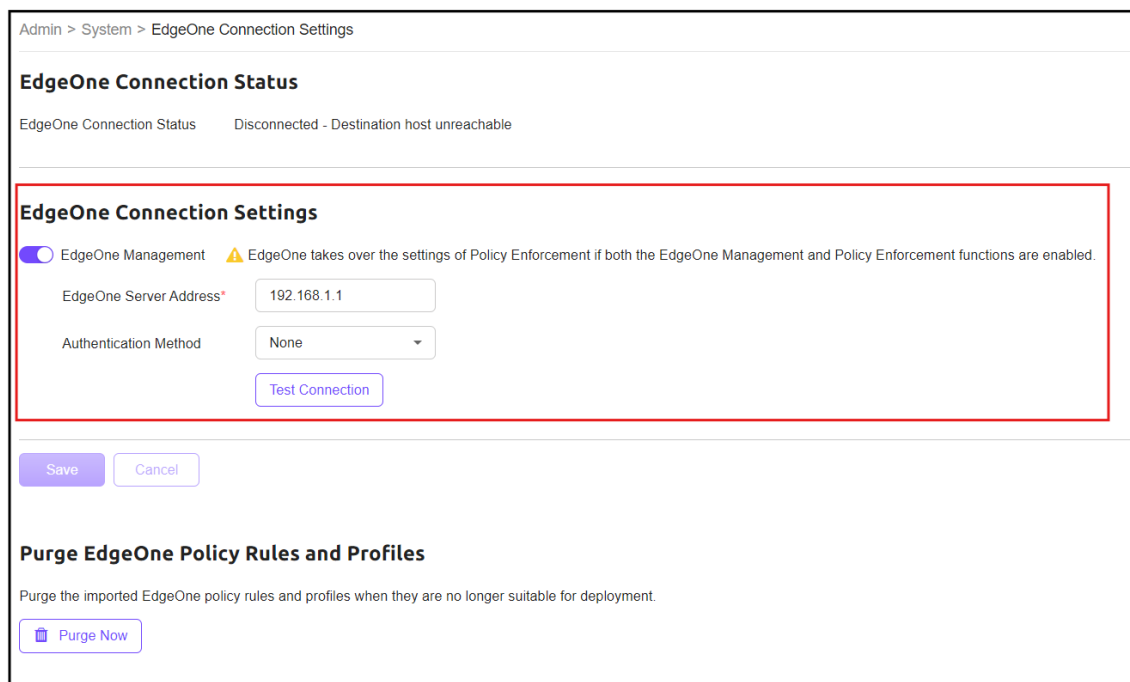

2. In the [EdgeOne Connection Settings] pane, enable [EdgeOne Management] by clicking the toggle.
3. Configure the following connection settings.

Item	Description
EdgeOne Server Address	Input the IP address of the EdgeOne server.
Authentication Method	Select None or Passcode from the drop-down list. To test connectivity between the Edge device and EdgeOne, click the [Test Connection] button.  If you have selected passcode as the authentication method in the EdgeOne system, please select "Passcode" as the authentication method here accordingly and input the passcode specified in the EdgeOne system for onboarding. The passcode is used only for first-time onboarding to EdgeOne.

4. Click [Save].

 The following settings/functions cannot be configured/performed on the device management console when the Edge device is connected to EdgeOne.

- Cyber Security
- Policy Enforcement
- Packet Capture
- File Exclusion
- Suspicious Objects
- Pattern Update
- EdgeOne Rule & Profile Deletion

10.4.3.2 Purging EdgeOne Policy Rules and Profiles

Procedure

1. Go to [Admin] > [System] > [EdgeOne Connection Settings].

Admin > System > EdgeOne Connection Settings

EdgeOne Connection Status

EdgeOne Connection Status Disconnected - Destination host unreachable

EdgeOne Connection Settings

☒ EdgeOne Management ⚠ EdgeOne takes over the settings of Policy Enforcement if both the EdgeOne Management and Policy Enforcement functions are enabled.

EdgeOne Server Address* 192.168.1.1

Authentication Method None ▼

[Test Connection](#)

[Save](#) [Cancel](#)

Purge EdgeOne Policy Rules and Profiles

Purge the imported EdgeOne policy rules and profiles when they are no longer suitable for deployment.

[Purge Now](#)

2. In the [Purge EdgeOne Policy Rules and Profiles] pane, click the [Purge Now] button to delete objects, profiles, and Policy Enforcement rules synced from EdgeOne.

10.4.4 Language Package

You can import language packages on the [Language Package] page. To change the displayed language, select your preferred language on the login page. The system retains only the most recently uploaded package. To add support for a new language, import a language package containing the necessary data for your target language. Note that updating the firmware with major or minor version changes, or resetting the system, reverts the language settings to English.

10.4.4.1 Importing Language Packages

Procedure

1. Go to [Admin] > [System] > [Language Package].

Admin > System > Language Package

This page is for importing language packages. To change the displayed language, select your preferred language on the login page. The system retains only the most recently uploaded package. To add support for a new language, import a language package containing the necessary data for your target language. Note that updating the firmware with major or minor version changes, or resetting the system, reverts the language settings to English.

Language Package Version 2.1.2

Release Date 2024-07-08T09:35:09+08:00

[Import Language Package](#) Total Number of Items: 1

No.	Language	Language Version
1	English (EN)	2.1.27

2. Click [Import Language Package] and select a language package file (ACF file) from your local disk. The [Import Language Package] window will appear.

Import Language Package

×

Language Package Version

2.1.2

Release Date

2024-07-08T18:25:00+08:00

Description

English (EN), Language Version: 2.1.27
日本語 (JP), Language Version: 2.1.27

Import

Cancel

3. Click [Import].

10.4.5 API Management

The API Key and API Secret are the software-level credentials for external systems to access the device via the RESTful APIs. It's a common practice to provide separate API Key/Secret for each API client. The API Key Management function allows the administrator to create and manage up to 10 API Keys.



This API key management function is provided by request. To utilize this function, please contact local sales representative for more information.

10.4.5.1 Creating API Clients

Procedure

1. Go to [Admin] > [System] > [API Management].

Admin > System > API Management

+ Create

Total Number of Items: 2 (Max: 10)

☐	No.	Status	Name	API Key	Cert. Fingerprint	Expiration Date	Trusted IP Address	Created At	Last Used	Action	Description
☐	1	☒	API_1	M2FYzhYzMI	-	-	Any	2024-07-22T10:44:14+08:00	-	Reset	
☐	2	☒	API_2	-	504c30c4448b1b50c31700c176a8f15a2964c210008a411204a091c40f8a2c17a539	2034-07-14	Any	2024-07-22T10:44:57+08:00	-		

2. Click the [Create] button to create a new API client.

Create API Client

Status

Name*

Description

Authentication Method

Trusted IP Address

Generate


Cancel

3. Configure the following settings.

Item	Description
Status	Click the toggle to enable this API client.
Name	Type a name for this API client profile.
Description	(Optional) Type a description.
Authentication Method	Select an authentication method for accessing this API client, either Use API Key or Use Certificate. Use API Key: Authenticate using a randomly generated API key and secret. Use Certificate: Authenticate using a user-defined authentication credential embedded within a certificate. If this option is selected, click [Upload] to import a certificate from your local disk.
Trusted IP Address	Select Any or Custom . If you select Custom , specify an IP address. The system will reject API requests if the client's IP address does not match the given trusted IP address.

4. Click [Generate].


5. If the authentication method is **Use API Key**, a new API key and API secret will be generated and displayed on the screen. Click the copy button  to copy the API key and API secret.

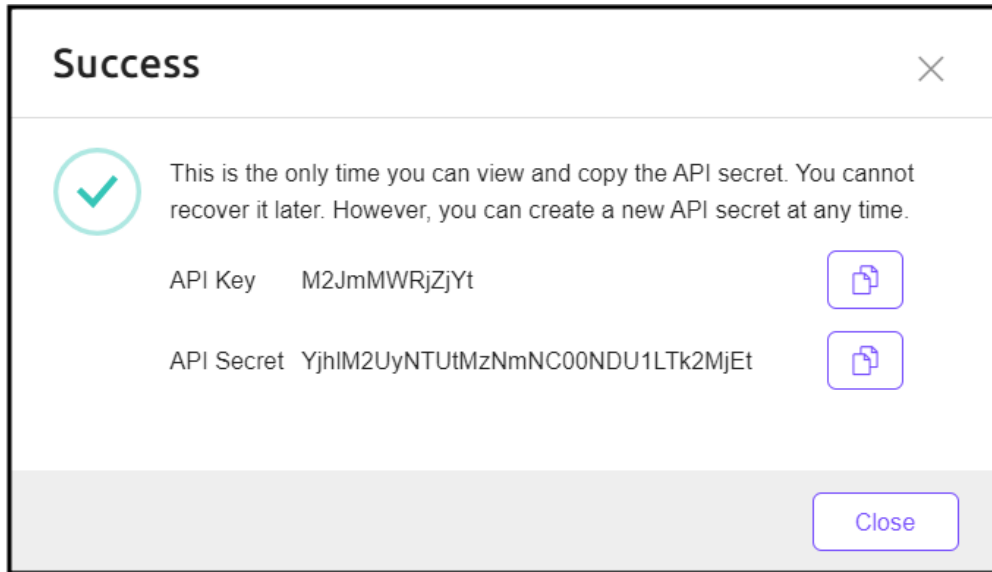


10.4.5.2 Resetting API Clients

Procedure

1. Go to [Admin] > [System] > [API Management].
2. Click [Reset] for the selected API client. A warning window will appear.

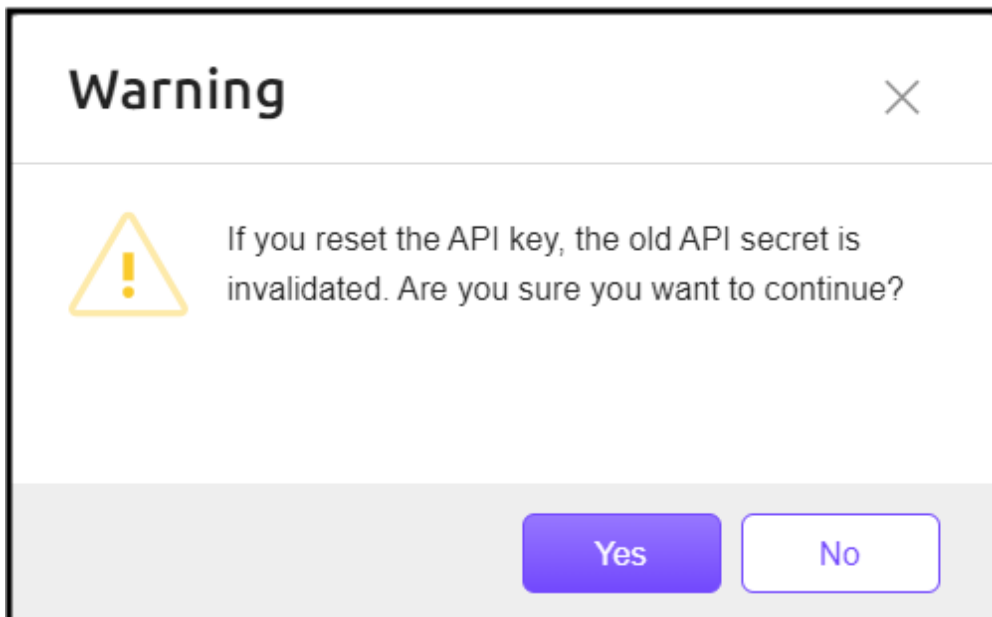


3. Click [Yes]. Please note that the old API secret will be invalidated then.
4. A new API key and API secret will be generated and displayed on the screen. Click the copy button  to copy the API key and API secret and paste them onto the API client.

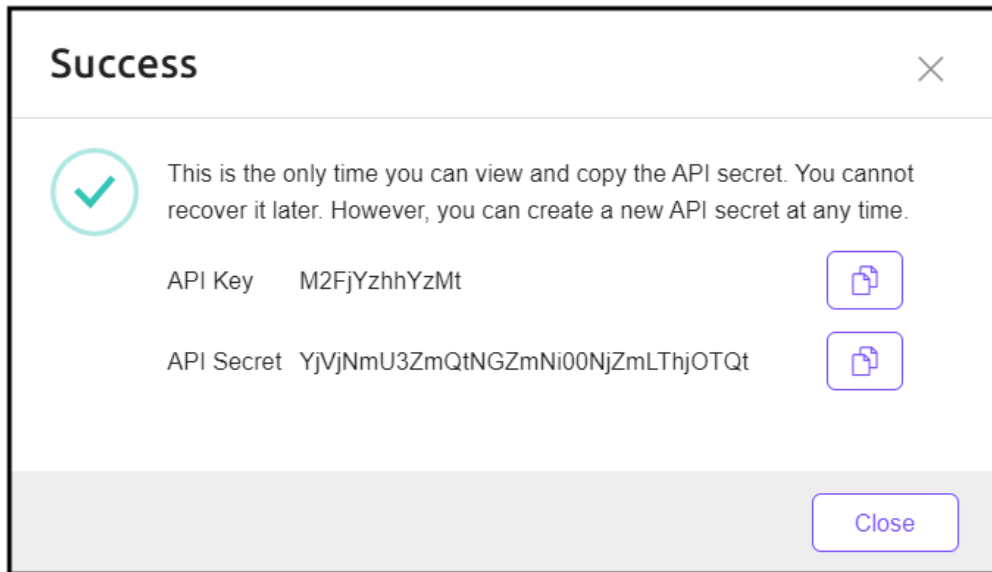

10.4.5.3 Deleting API Clients

Procedure

1. Go to [Admin] > [System] > [API Management].
2. Select the API clients to be deleted.
3. Click the [Delete] button. A warning window will appear.

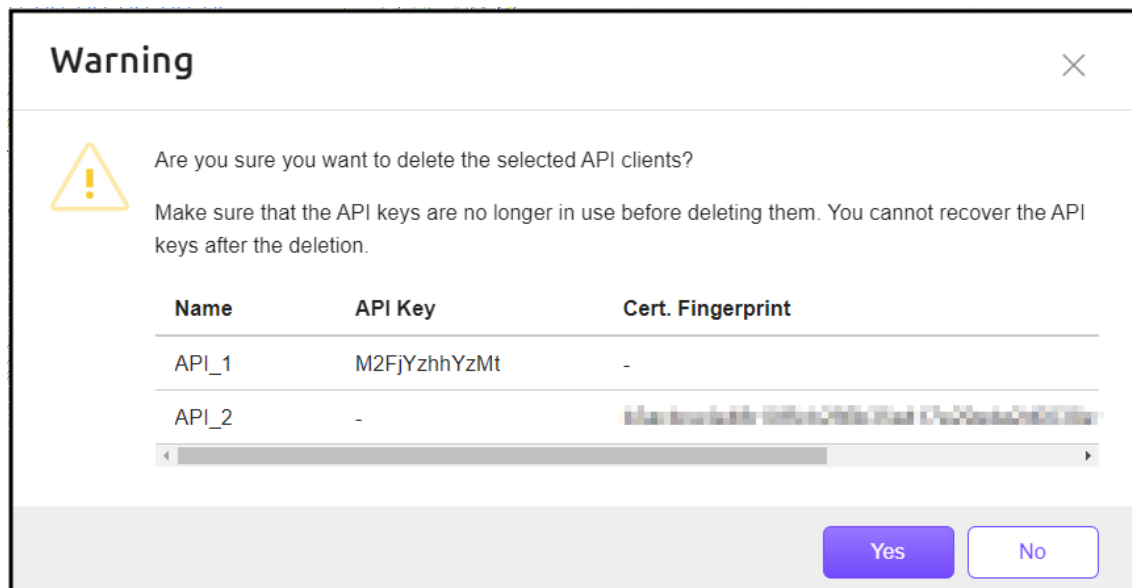

4. Click [Yes].

10.4.6 SSL Certificate

The Edge device uses the HTTPS protocol to encrypt web traffic between the user's web browser and the Edge device web server. By default, the Edge device web server uses an auto-generated and self-signed SSL certificate for the HTTPS connections. This chapter introduces how to change the SSL certificate.

10.4.6.1 Importing SSL Certificates

Procedure

1. Go to [Admin] > [System] > [SSL Certificate]. If the Edge device is currently using its default certificate (auto-generated and self-signed), you will see the following page. The information shown on the page is the default Edge device certificate information.

Admin > System > SSL Certificate

Certificate	CN=Self-Signed CA,OU=TXOne,O=TXOne Networks,C=TW
Issuer	CN=Self-Signed CA,OU=TXOne,O=TXOne Networks,C=TW
Expiration	2034-07-17T15:14:06+08:00

 Import Certificate

2. Click [Import Certificate]. The [Import Certificate] window will appear.

Import Certificate



You must restart the virtual instance to activate an imported certificate. After importing a certificate, please close the current web page, reopen the browser, and access the Edge device console again.

Certificate*

 Select File

Private Key*

 Select File

Passphrase



Import and Restart

Cancel

3. Import your certificate file by clicking the [Select File] button next to the [Certificate] field.
4. Import the private key (PEM-encoded PKCS#1 format) for the certificate file by clicking the [Select File] button next to the [Private Key] field.
5. Input the passphrase of the private key if the private key is encrypted.
6. Click [Import and Restart].
7. Close the current web page, reopen the browser, and access the Edge device web console again.

10.4.6.2 Replacing SSL Certificates

Procedure

1. Go to [Admin] > [System] > [SSL Certificate]. If the Edge device is currently using an imported certificate, you will see the following page. The information shown on the page is the current Edge device certificate information.

Admin > System > SSL Certificate

Certificate	CN=TPS Certificate,OU=TPS,O=TXOne Networks,L=Taipei,C=TW
Issuer	CN=TXOne Certificate Authority,OU=MgmtPlane,O=TXOne Networks,L=Taipei,C=TW
Expiration	2033-10-23T16:00:54+08:00

Delete Certificate
Replace Certificate

2. Click [Replace Certificate]. The [Replace Certificate] window will appear.

Replace Certificate

 You must restart the virtual instance to replace the current certificate. Please close the current web page, reopen the browser, and access the Edge device console again after importing a new certificate.

Certificate*	 Select File
Private Key*	 Select File
Passphrase	

Import and Restart
Cancel

3. Import your certificate file by clicking the [Select File] button next to the [Certificate] field.
4. Import the private key (PEM-encoded PKCS#1 format) for the certificate file by clicking the [Select File] button next to the [Private Key] field.
5. Input the passphrase of the private key if the private key is encrypted.
6. Click [Import and Restart].
7. Close the current web page, reopen the browser, and access the Edge device web console again.

10.4.6.3 Verifying SSL Certificates

After adding a new certificate to the Edge device web console, you can verify whether the certificate is valid.

Procedure

1. Log in to the Edge device web console with the Chrome browser.
2. Go to the Three Dots Menu > More Tools > Developer Tools.
3. Go to the [Security] Tab. It will give you a security overview.
4. In the [Security Overview] pane, click the [View certificate] button, and you will see the certificate details of the Edge device web console.

10.4.6.4 Deleting SSL Certificates

Procedure

1. Go to [Admin] > [System] > [SSL Certificate].

Admin > System > SSL Certificate

Certificate	CN=TPS Certificate,OU=TPS,O=TXOne Networks,L=Taipei,C=TW
Issuer	CN=TXOne Certificate Authority,OU=MgmtPlane,O=TXOne Networks,L=Taipei,C=TW
Expiration	2033-10-23T16:00:54+08:00

 Delete Certificate
  Replace Certificate

2. Click [Delete Certificate].

3. Close the current web page, reopen the browser, and access the Edge device web console again.

10.4.7 Backup/Restore

You can export settings from the management console to back up the configuration of your Edge series device. If a system failure occurs, you can restore the settings by importing the configuration file that you previously backed up.

We recommend the following:

- Backing up the current configuration before each import operation.
- Performing the backup operation when the device is idle. Importing and exporting configuration settings affect the performance of your device.

10.4.7.1 Configuring Backup Settings

Procedure

1. Go to [Admin] > [System] > [Backup/Restore].

Admin > System > Backup / Restore

Back Up Configuration

Periodic Backup: **OFF**

Backup Server Address: -

Last Backup Time: -

 Edit Backup Settings

Back up Edge device policies and administration settings to a file on your computer.

 Back Up Now


Restore Configuration

Restore the Edge device configuration from a backup file. We recommend that you back up your current configuration before replacing it.

Note: By restoring the configuration to a previous state, the current configuration settings are replaced.

 Select File

2. Click [Edit Backup Settings]. The [Edit Backup Settings] window will appear.

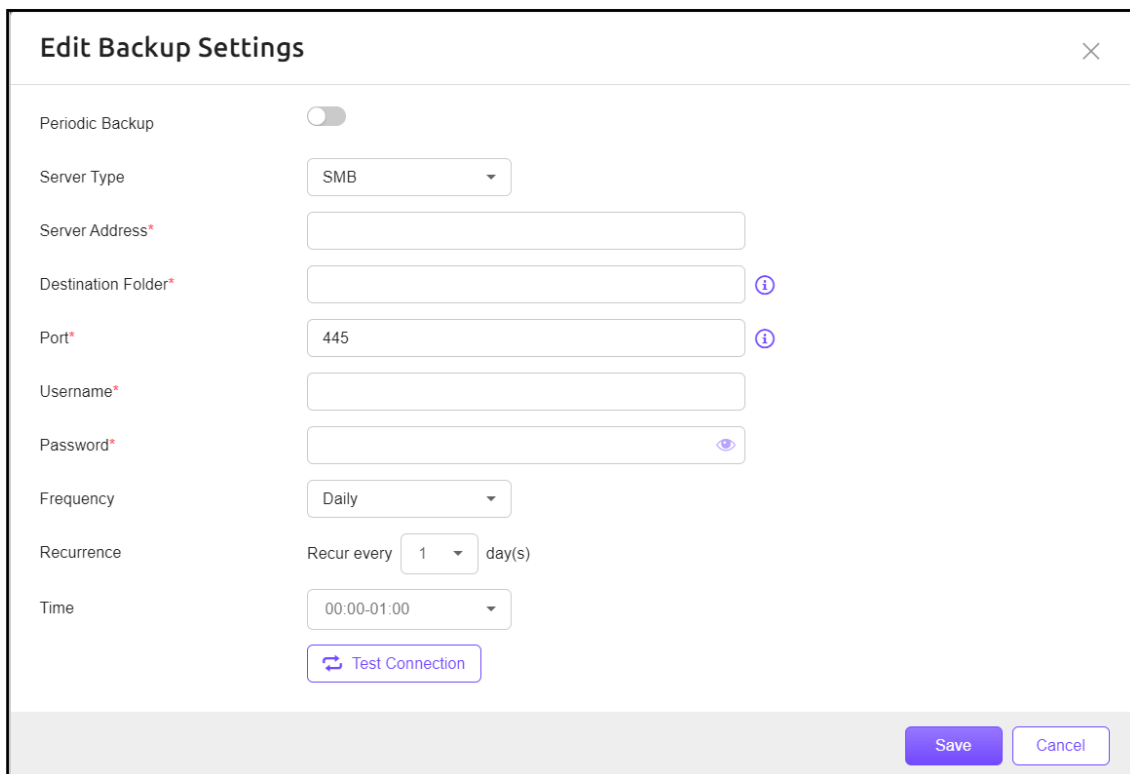

3. Configure the following settings.

Item	Description
Periodic Backup	Click the toggle to enable or disable backing up configuration to a remote server periodically.
Server Type	Select a protocol, SMB or SFTP , for sending backed-up files to a remote server.
Server Address	Input the IP address of the server where the backed-up files will be sent.
Destination Folder	Input the destination folder on the server where the backed-up files will be sent.
Port	Input the port number for initializing an SMB or SFTP connection. (Default: 445)
Username	Input the username for initializing an SMB or SFTP connection.
Password	Input the password for initializing an SMB or SFTP connection.
Frequency	Select a backup frequency, Daily or Weekly , from the drop-down list.
Recurrence	Specify the exact days when the backups should run.
Time	Specify the exact times when the backups should run.

4. Click [Save].

10.4.7.2 Backing Up Device Configuration

Procedure

1. Go to [Admin] > [System] > [Backup/Restore].

Admin > System > Backup / Restore

Back Up Configuration

Periodic Backup: **OFF**

Backup Server Address: -

Last Backup Time: -

 Edit Backup Settings

Back up Edge device policies and administration settings to a file on your computer.

 Back Up Now

Restore Configuration

Restore the Edge device configuration from a backup file. We recommend that you back up your current configuration before replacing it.

Note: By restoring the configuration to a previous state, the current configuration settings are replaced.

 Select File

2. Click [Back Up Now]. A configuration backup file will automatically be saved to your computer.

10.4.7.3 Restoring Device Configuration

Procedure

1. Go to [Admin] > [System] > [Backup/Restore].

Admin > System > Backup / Restore

Back Up Configuration

Periodic Backup: **OFF**

Backup Server Address: -

Last Backup Time: -

 Edit Backup Settings

Back up Edge device policies and administration settings to a file on your computer.

 Back Up Now

Restore Configuration

Restore the Edge device configuration from a backup file. We recommend that you back up your current configuration before replacing it.

Note: By restoring the configuration to a previous state, the current configuration settings are replaced.

 Select File

2. In the [Restore Configuration] pane, click [Select File], then import a configuration file from your local disk. All services will restart. It can take some time to restart services after applying imported settings and rules.


10.4.8 System Time

Network Time Protocol (NTP) synchronizes computer system clocks across the Internet. Configure NTP settings to synchronize the server clock with an NTP server, or manually set the system time.

10.4.8.1 Configuring System Time

Procedure

1. Go to [Admin] > [System] > [System Time].

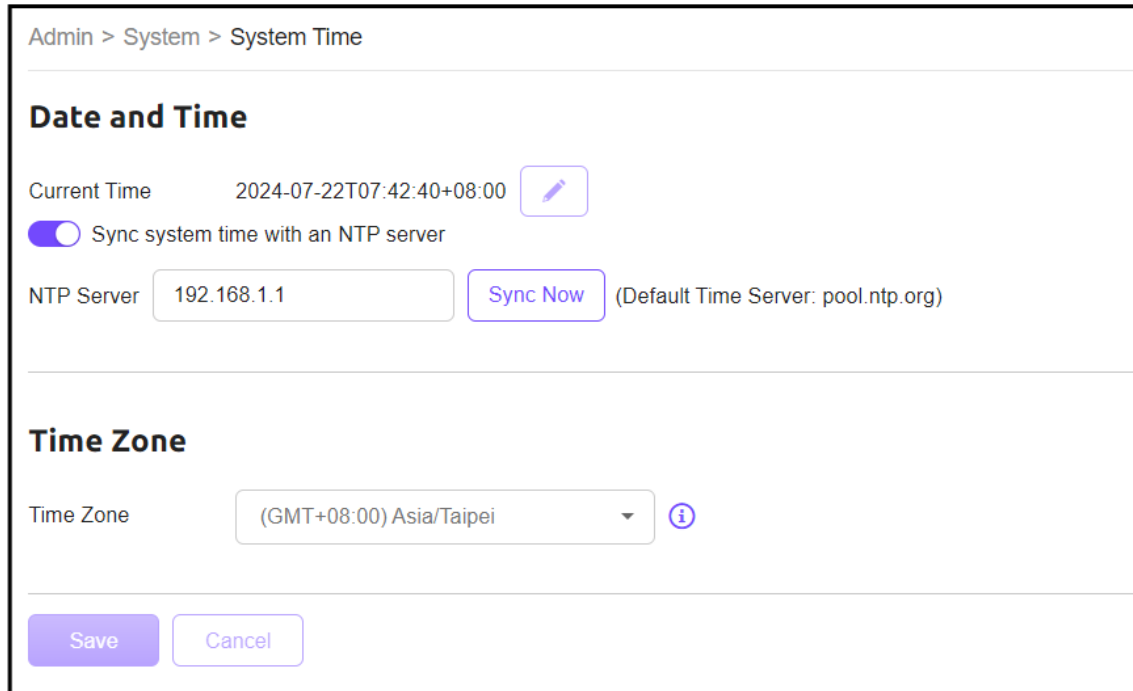

2. In the [Date and Time] pane, you can choose to synchronize the system time with an NTP server or set the system time manually.

- Synchronize the system time with an NTP server:
 - a. Enable the [Sync system time with an NTP server] setting.
 - b. Specify the domain name or IP address of the NTP server.
 - c. Click [Sync Now].
- Set the system time manually:
 - a. Click the edit button .
 - b. Set the date and time.
 - c. Click [Apply].

3. From the [Time Zone] drop-down list, select a time zone.

4. Click [Save].



EdgeOne system synchronizes the system time with its managed instances.

10.4.9 System Reboot

Access the [System Reboot] page to reboot the Edge device.

10.4.9.1 Rebooting Edge Device

Procedure

1. Go to [Admin] > [System] > [System Reboot].
2. Click [Reboot Now] to reboot the Edge device.

Admin > System > System Reboot

Use the current configuration and reboot the Edge device now.



Reboot Now

11 Extended Functions via Supported USB Device

This chapter describes the use of supported USB devices with the Edge series device for extended or supported functions.

To ensure optimal operation, only the USB devices listed below are currently supported.

	Model		Device Type
1	MOXA Backup Configurator (ABC-02 Series) Model: ABC-02-USB-T		USB Disk Drive
2	Innodisk Industrial USB 2.0 16GB (USB Drive 2SE)		USB Disk Drive
3	Apacer industrial USB disk 16GB & 32GB (AH355)		USB Disk Drive

After a supported USB device is plugged in, you can perform the following tasks.

- [Back up configuration](#)
- [Load pattern from USB device](#)
- [Load configuration from USB device](#)
- [Load firmware from USB device](#)




Given that this feature allows anyone with a supported USB disk to perform the above tasks, the physical security of your Edge series device must be considered carefully.

11.1 Backing Up Configuration

Procedure

1. Plug a supported USB disk device into the USB port on the front panel of your Edge series device.
2. Upon successful detection of the USB disk device, the corresponding LED as listed below will change to a steady green. Relevant system logs can also be checked to confirm that a supported USB disk device was detected when inserted. This state is referred to as the "Default Action" state.

State/Action	LED	LED Color/State
Default State – USB Disk Plugged in	USB	Green – Steady

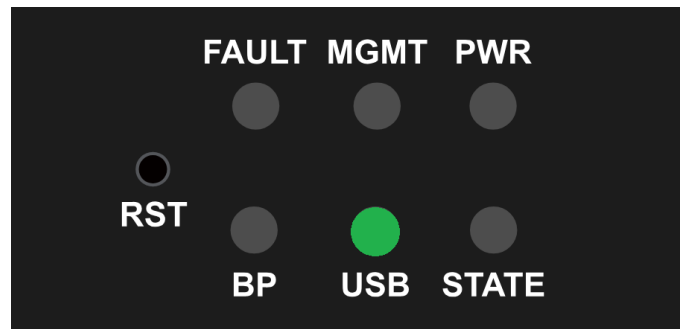

If an unsupported USB device is plugged in, it will simply be ignored, and no further action will be taken.

3. The function of the reset button will also change until the USB device is unplugged. When a USB device is plugged in, the reset button will not serve the as the reboot/factory reset button. It will instead serve as a button to cycle through a set of possible actions that may be taken during this time.
4. Press the reset button for more than 10 seconds to back up configuration. The corresponding LED as listed below will blink.

State/Action	LED	LED Color/State
Back Up Configuration	USB	Green – Blinking once every 0.5 seconds

5. Once the reset button is released, the LED will be restored to the default state (as shown in the table in step 2).
6. If any error occurs, the corresponding LED as listed below will indicate it.

State/Action	LED	LED Color/State
Error	FAULT	Red – Blinking once every second



An error can only be cleared if:

1. the reset button is pressed once more (LEDs return to default states with no action selected), or
2. the USB disk is unplugged.

7. Relevant system logs can be checked to verify if the configuration backup was completed successfully or not.
8. Unplug the USB disk, after which the LEDs will return to their states prior to the USB disk device being plugged in (USB LED off), and relevant system logs will show that the USB disk has been unplugged.



Since configuration files are usually not very large, this process may finish quickly.

11.2 Loading Pattern from USB Device

A DPI pattern file may be easily and quickly loaded from a USB disk device. This function allows for a floor operator to update/restore the pattern file on the physical floor of the ICS environment without the need of a client computer to log in to the device.

Procedure

1. Create a folder “**TXOne**” and a subfolder “**pattern**” in the TXOne folder on a supported USB disk.
2. Save a pattern file you would like to load onto your Edge series device on your USB disk under the path “**/TXOne/pattern/**”. Assuming the filename of the pattern file is “pattern.acf”, the file path on the USB disk would be “**/TXOne/pattern/pattern.acf**”.




Saving pattern files under other paths or incorrect folder names will cause the file to not be detected during the pattern load process.



1. Folder names are case-insensitive. If multiple pattern files exist in the folder, the newest one will be used.
2. Various versions of the pattern files can be downloaded at the MyTXOne portal at <https://my.txone.com/>.

3. Plug your USB disk into the USB port on the front panel of your Edge series device.
4. Upon successful detection of the USB disk, the corresponding LED as listed below will change to a steady green. Relevant system logs can also be checked to confirm that a supported USB disk was detected when inserted. This state is referred to as the “Default Action” state.

State/Action	LED	LED Color/State
Default State – USB Disk Plugged in	USB	Green – Steady

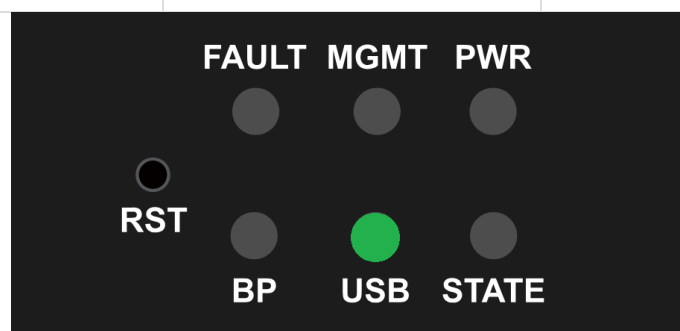

If an unsupported USB device is plugged in, it will simply be ignored, and no further action will be taken.

5. The function of the reset button will also change until the USB disk is unplugged. When a USB disk is plugged in, the reset button will not serve the as the reboot/factory reset button. It

will instead serve as a button to cycle through a set of possible actions that may be taken during this time.

6. Give the reset button one short press to toggle to the “Load Pattern from USB Disk” action. The LEDs will change to the following colors/states.

State/Action	LED 1	LED 1 Color/State	LED 2	LED 2 Color/State
Toggle to Pattern Load	USB	Green – Steady	STATE	Green – Blinking once every second

7. The action must be confirmed within 10 seconds by holding down the reset button for more than 3 seconds. After the reset button is pressed more than 3 seconds, the LEDs will change to the following colors/states.

State/Action	LED 1	LED 1 Color/State	LED 2	LED 2 Color/State
Pattern Load Action Confirmed	USB	Green – Steady	STATE	Green – Blinking once every 0.5 seconds

8. Once the reset button is released, pattern load will be in progress, and the LEDs will change to the following colors/states.

State/Action	LED 1	LED 1 Color/State	LED 2	LED 2 Color/State
Pattern Load in Progress	USB	Green – Blinking once every 0.5 seconds	STATE	Green – Blinking once every 0.5 seconds

9. If any error occurs, the corresponding LED as listed below will indicate it.

State/Action	LED	LED Color/State
Error	FAULT	Red – Blinking once every second



An error can only be cleared if:

1. the reset button is pressed once more (LEDs return to default states with no action selected), or
2. the USB disk is unplugged.

10. Relevant system logs can be checked to verify if the pattern load was completed successfully or not. If so, the LEDs will be restored to the default state (as shown in the table in step 4).

11. Unplug the USB disk, after which the LEDs will return to their states prior to the USB disk device being plugged in (USB LED off), and relevant system logs will show that the USB disk has been unplugged.

11.3 Loading Configuration from USB Device

A configuration file may be easily and quickly loaded from a USB disk device. This function allows for a floor operator to update/restore the configuration on the physical floor of the ICS environment without the need of a client computer to log in to the device.

Procedure

1. Create a folder “**TXOne**” and a subfolder “**config**” in the TXOne folder on a supported USB disk.
2. Save a configuration file you would like to load onto your Edge series device on your USB disk under the path “**/TXOne/config/**”. Assuming the filename of the configuration file is “**config.acf**”, the file path on the USB disk would be “**/TXOne/config/config.acf**”.




Saving configuration files under other paths or incorrect folder names will cause the file to not be detected during the configuration load process.



Folder names are case-insensitive. If multiple configuration files exist in the folder, the newest one will be used.

3. Plug your USB disk into the USB port on the front panel of your Edge series device.
4. Upon successful detection of the USB disk, the corresponding LED as listed below will change to a steady green. Relevant system logs can also be checked to confirm that a supported USB disk was detected when inserted. This state is referred to as the “Default Action” state.

State/Action	LED	LED Color/State
Default State – USB Disk Plugged in	USB	Green – Steady

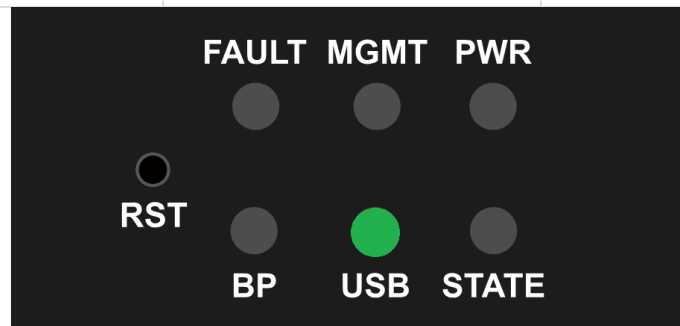

If an unsupported USB device is plugged in, it will simply be ignored, and no further action will be taken.

5. The function of the reset button will also change until the USB disk is unplugged. When a USB disk is plugged in, the reset button will not serve the as the reboot/factory reset button. It will instead serve as a button to cycle through a set of possible actions that may be taken during this time.
6. Give the reset button two short presses to toggle to the “Load Configuration from USB Disk” action. The LEDs will change to the following colors/states.

State/Action	LED 1	LED 1 Color/State	LED 2	LED 2 Color/State
Toggle to Configuration Load	USB	Green – Steady	MGMT	Green – Blinking once every second

7. The action must be confirmed within 10 seconds by holding down the reset button for more than 3 seconds. After the reset button is pressed more than 3 seconds, the LEDs will change to the following colors/states.

State/Action	LED 1	LED 1 Color/State	LED 2	LED 2 Color/State
Configuration Load Action Confirmed	USB	Green – Steady	MGMT	Green – Blinking once every 0.5 seconds

8. Once the reset button is released, the configuration load will be in progress, and the LEDs will change to the following colors/states.

State/Action	LED 1	LED 1 Color/State	LED 2	LED 2 Color/State
Configuration Load in Progress	USB	Green – Blinking once every 0.5 seconds	MGMT	Green – Blinking once every 0.5 seconds

9. If any error occurs, the corresponding LED as listed below will indicate it.

State/Action	LED	LED Color/State
Error	FAULT	Red – Blinking once every second



An error can only be cleared if:

1. the reset button is pressed once more (LEDs return to default states with no action selected), or
2. the USB disk is unplugged.

10. Relevant system logs can be checked to verify if the configuration load was completed successfully or not. If so, the LEDs will be restored to the default state (as shown in the table in step 4).

11. Unplug the USB disk, after which the LEDs will return to their states prior to the USB disk device being plugged in (USB LED off), and relevant system logs will show that the USB disk has been unplugged.

11.4 Loading Firmware from USB Device

Device firmware may be easily and quickly loaded from a USB disk device. This function allows for a floor operator to upgrade/change the firmware of a device on the physical floor of the ICS environment without the need of a client computer to log in to the device.

Procedure

1. Create a folder “**TXOne**” and a subfolder “**firmware**” in the TXOne folder on a supported USB disk.
2. Save a firmware file you would like to load onto your Edge series device on your USB disk under the path “**/TXOne/firmware/**”. Assuming the filename of the firmware file is “firmware.acf”, the file path on the USB disk would be “**/TXOne/firmware/firmware.acf**”.




Saving firmware files under other paths or incorrect folder names will cause the file to not be detected during the firmware load process.



1. Folder names are case-insensitive. If multiple firmware files exist in the folder, the newest one will be used.
2. Various versions of the firmware files can be downloaded at the MyTXOne portal at <https://my.txone.com/>.

3. Plug your USB disk into the USB port on the front panel of your Edge series device.
4. Upon successful detection of the USB disk, the corresponding LED as listed below will change to a steady green. Relevant system logs can also be checked to confirm that a supported USB disk was detected when inserted. This state is referred to as the “Default Action” state.

State/Action	LED	LED Color/State
Default State – USB Disk Plugged in	USB	Green – Steady

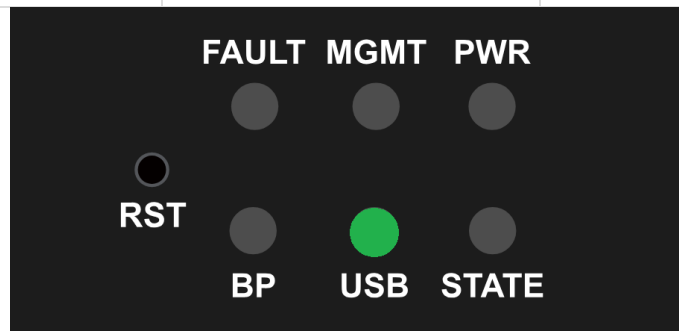

If an unsupported USB device is plugged in, it will simply be ignored, and no further action will be taken.

5. The function of the reset button will also change until the USB disk is unplugged. When a USB disk is plugged in, the reset button will not serve the as the reboot/factory reset button. It will instead serve as a button to cycle through a set of possible actions that may be taken during this time.
6. Give the reset button three short presses to toggle to the “Load Firmware from USB Disk” action. The LEDs will change to the following colors/states.

State/Action	LED 1	LED 1 Color/State	LED 2	LED 2 Color/State	LED 3	LED 3 Color/State
Toggle to Firmware Load	USB	Green – Steady	STATE	Green – Blinking once every second	MGMT	Green – Blinking once every second

7. The action must be confirmed within 10 seconds by holding down the reset button for more than 3 seconds. After the reset button is pressed more than 3 seconds, the LEDs will change to the following colors/states.

State/Action	LED 1	LED 1 Color/State	LED 2	LED 2 Color/State	LED 3	LED 3 Color/State
Firmware Load Action Confirmed	USB	Green – Steady	STATE	Green – Blinking once every 0.5 seconds	MGMT	Green – Blinking once every 0.5 seconds

8. Once the reset button is released, the firmware load will be in progress, and the LEDs will change to the following colors/states.

State/ Action	LED 1	LED 1 Color/State	LED 2	LED 2 Color/State	LED 3	LED 3 Color/State
Firmware Load in Progress	USB	Green – Blinking once every 0.5 seconds	STATE	Green – Blinking once every 0.5 seconds	MGMT	Green – Blinking once every 0.5 seconds

9. If any error occurs, the corresponding LED as listed below will indicate it.

State/Action	LED	LED Color/State
Error	FAULT	Red – Blinking once every second



An error can only be cleared if:

1. the reset button is pressed once more (LEDs return to default states with no action selected), or
2. the USB disk is unplugged.

10. Relevant system logs can be checked to verify if the firmware load was completed successfully or not. If so, the LEDs will be restored to the default state (as shown in the table in step 4).

11. Unplug the USB disk, after which the LEDs will return to their states prior to the USB disk device being plugged in (USB LED off), and relevant system logs will show that the USB disk has been unplugged.

12 Technical Support

This chapter includes the following topics.

- [Troubleshooting Resources](#)
- [Contacting TXOne](#)
- [Other Resources](#)

12.1 Troubleshooting Resources

Before contacting technical support, consider visiting the following TXOne online resources.

12.1.1 Help Center

TXOne Help Center provides 24/7 online resources that contain the most up-to-date information about both common and unusual problems.

To access the TXOne Help Center, click the  icon in the top right corner of the console or visit <https://help.txone.com/>, where you can learn more about:

- News & Releases
- Technical Advisory
- Security Advisory

12.1.2 Threat Encyclopedia

Most malware today consists of blended threats, which combine two or more technologies, to bypass computer security protocols. TXOne combats this complex malware with products that create a custom defense strategy. The Threat Encyclopedia provides a comprehensive list of names and symptoms for various blended threats, including known malware, spam, malicious URLs, and known vulnerabilities.

Visit <https://www.encyclopedia.txone.com/> to learn more about:

- Malware and malicious mobile code currently active or "in the wild"
- Correlated threat information pages to form a complete web attack story
- Internet threat advisories about targeted attacks and security threats
- Web attack and online trend information
- Weekly malware reports

12.2 Contacting TXOne

In the United States, TXOne representatives are available by phone or email:

Address	TXOne Networks, Incorporated 222 West Las Colinas Boulevard, Irving, Texas 75062, U.S.A.
Phone	Phone: +1 (817) 569-8900 Toll-free: (888) 762-8736
Website	https://www.txone.com/

Email Address

- Contact us: <https://www.txone.com/contact/> or mail to support@txone.com

12.2.1 Expediting Support Call

To accelerate the speed to reply and solve the problem, ensure that you have the following details available:

- Steps to reproduce the problem
- Appliance or network information
- Computer brand and model, as well as any additional connected hardware or devices
- Amount of memory and free hard disk space
- Operating system and service pack version
- Version of the installed agent
- Serial number or activation code
- Detailed description of install environment
- Exact text of any error message received

12.3 Other Resources

In addition to solutions and support, there are many other helpful resources available online to stay up to date, learn about innovations, and be aware of the latest security trends.

12.3.1 MyTXOne Portal

MyTXOne portal (<https://my.txone.com/>) is designed to consolidate everything you need all through a single pane of glass, aiming to maximize your efficiency when using TXOne products.

By visiting our MyTXOne portal, you are able to:

- Manage your TXOne product licenses, including license activation and license renewal, all at one place;
- Download the firmware and pattern files for your security appliances' regular updates and enhancement;
- Access our product documentation, such as user's guides, quick start guides, and release notes, enabling you to use our products efficiently and effectively;
- Read our white papers, case studies, security reports, etc. to gain insights into OT security and stay ahead of the curve;
- Submit support case tickets to resolve technical issues or other concerns.

12.3.2 Documentation Feedback

TXOne always seeks to improve its documentation. If you have questions, comments, or suggestions about this or any other TXOne document, please mail to support@txone.com.

13 Appendix A: Terms and Acronyms

The following table lists the terms and acronyms used in this document.

Term/Acronym	Definition
ALG	Application Layer Gateway
CEF	Common Event Format
CIDR	Classless Inter-Domain Routing
CPSDR	Cyber-Physical System Detection and Response
DPI	Deep Packet Inspection
EWS	Engineering Workstation
HMI	Human-Machine Interface
ICS	Industrial Control System
IT	Information Technology
NAT	Network Address Translation
OT	Operational Technology
PLC	Programmable Logic Controller
SCADA	Supervisory Control and Data Acquisition