


Quick Setup Guide

EdgeIPS™ LE

EdgeIPS LE is a Transparent Security Box fitted with dual Ethernet LAN ports. Users can efficiently adapt the palm-sized EdgeIPS LE into a flexible solution for the challenges of Ethernet communications.

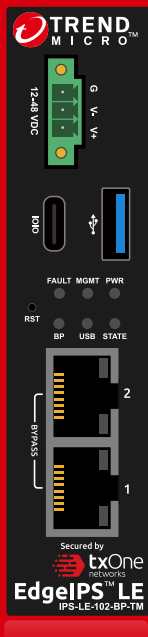


1

Opening and Inspecting the Package


Verify that the EdgeIPS LE package contains the following items:




EdgeIPS LE Appliance

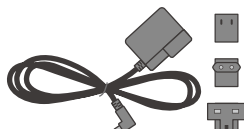

Adapter

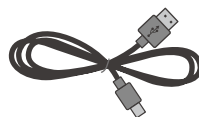

Console Cable
(USB-Type-C)

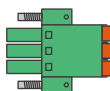

Terminal Block



Rubber Feet x 4



DIN-Rail Kit
(Install on the device)



Documents

2

Examining the EdgeIPS LE



EdgeIPS LE Front Panel




EdgeIPS LE Top Panel

3 Deployment Checklist

Requirement	Details
Ethernet Cables	- Connect to port 1 to access web console management. - Connect switches or field devices to port2.
Default IP Address of Web Console	Default web console access information: https://192.168.127.254  User name: admin Password: txone
Laptop with Ethernet Port (RJ-45 Type)	The computer must have one of the following browsers installed: - Microsoft Edge (version 15 or above) - Firefox (version 53 or above) - Safari (version 10.1 or above) - Google Chrome (version 63 or above)

4 Deployment Scenario and System Operation Mode

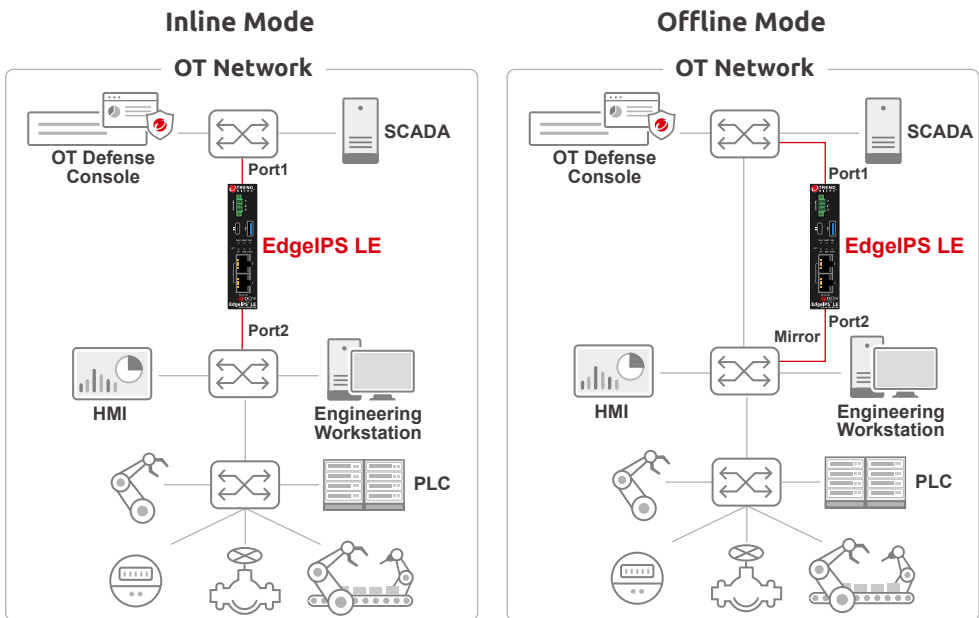

Inline mode In inline mode, EdgeIPS LE is installed directly in the path of traffic.

Offline mode In offline mode, EdgeIPS LE connects to a mirror port of network switch and mirrors traffic to itself.


5 LED Indicators

The function of each LED is described in the table below

PWR	● Green	Power is ON
	● Off	Power is OFF
STATE	● Green	System is running normal
	● Off	System fail, FAULT LED will also be lit
MGMT	● Green	OT Defense Console Sync (ODC) is enabled and ODC is connected
	● Off	OT Defense console sync is disabled
USB	● Green	LED will be turned on when USB is plugged in
	● Blinking	USB data transmission
	● Off	No USB Flash device is inserted
FAULT	● Red	Hardware or system fault
	● Off	System operates normally
BP	● Green	System and packet scanning operate normally
	● Red	Hardware bypass is active
	● Off	Hardware bypass is not active

6 Reset to Factory Default Settings

The reset button for the EdgeIPS LE is located on the front panel.

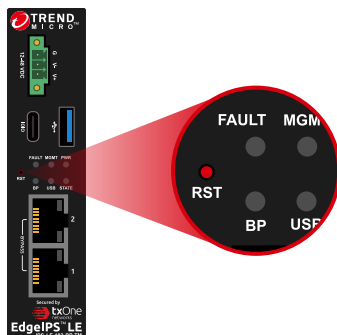

Reset type

Description

Reboot System


Press and hold the reset button for 2 to 10 seconds. The MANAGED LED will begin to blink on a 1-second pattern, which means the system is rebooting.

Restore Factory Default Settings

Press and hold the reset button for more than 10 seconds. The MANAGED LED will begin to blink every half-second, which means the system is resetting itself to factory defaults.

7 Installing the EdgeIPS LE - DIN Rail Mounting

The aluminum DIN rail attachment plate should already be fixed to the back panel of the EdgeIPS LE when you take it out of the box. If you need to reattach the DIN rail attachment plate to the EdgeIPS LE, make sure the stiff metal spring is oriented towards the back, as shown in the following pictures.

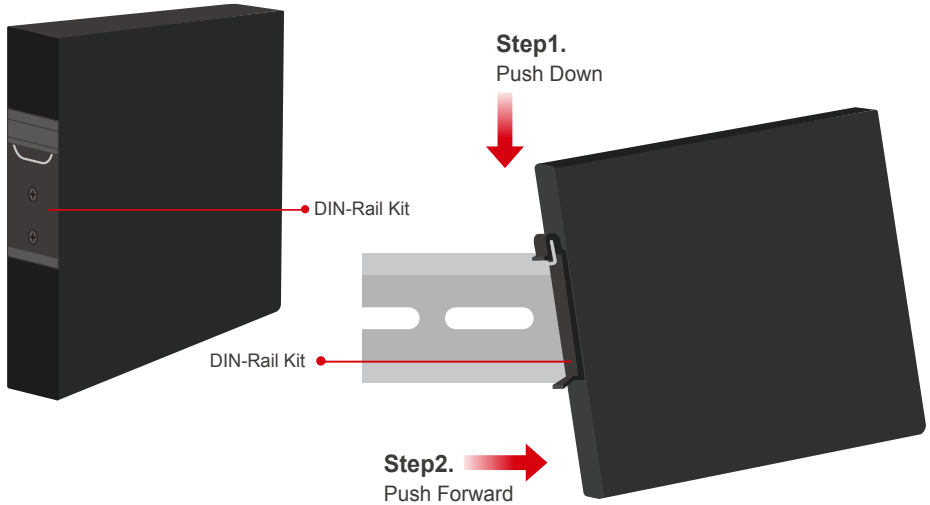


8 Wiring the Power Inputs

The Trend Micro EdgeIPS LE has two types of power inputs. Use the provided power adapter (DC-IN Jack) or other 12-48V DC power supply (Terminal Block).

Connect the power with the DC Power dapter

Insert the provided adapter into the DC-IN jack connect on the top side of EdgeIPS LE.

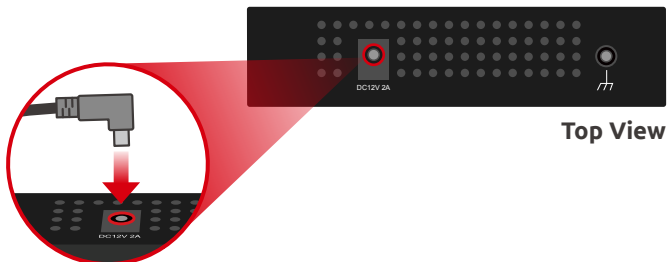

Connect the power with the Terminal Block

Step 1.

Open the terminal block's wire locks by pushing the buttons down.

Step 2.


Insert a positive / negative DC wire into the V+/V- terminals respectively.

Step 3.

When the wire is properly seated, the wire lock will be forced shut around it. Check whether the wire is properly fixed.


⚠ Consult electrician engineer before connecting EdgeIPS LE to use DC power source.

⚠ Electrostatic discharge (ESD) can damage your EdgeIPS LE.

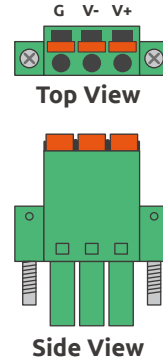

9 Connecting the Power


If the power is supplied properly, the "POWER" LED will glow steadily. The power input location and pin definition are shown in the following diagram.

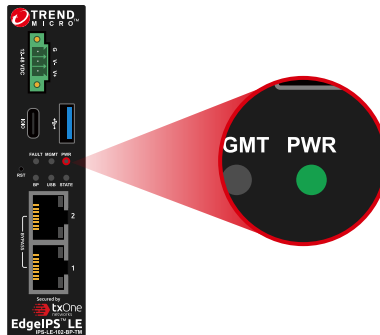

10 Grounding the Unit


Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the terminal block connector to the grounding surface prior to connecting the power. Please note that this product is intended to be mounted on a well-grounded mounting surface, such as a metal panel. The minimum cross-sectional area of the conductor must be equal to the input wiring cable's width/circumference.

11 Software Configuration

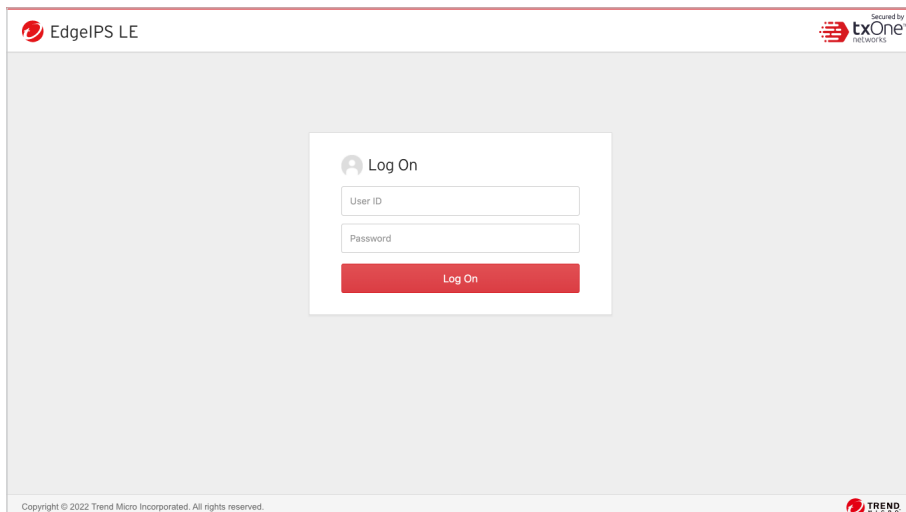

Before connecting the PC/Laptop to EdgelPS LE, the PC's IP address should be set to 192.168.127.100. After that, connect the PC and EdgelPS LE using an Ethernet cable. Open a web browser on your PC and type "<https://192.168.127.254>" into the address bar. A pop-up window will open to ask for user name and password. Please type the default username, "admin", and password, "txone".

Now, the main screen will pop up so you can configure EdgelPS LE.

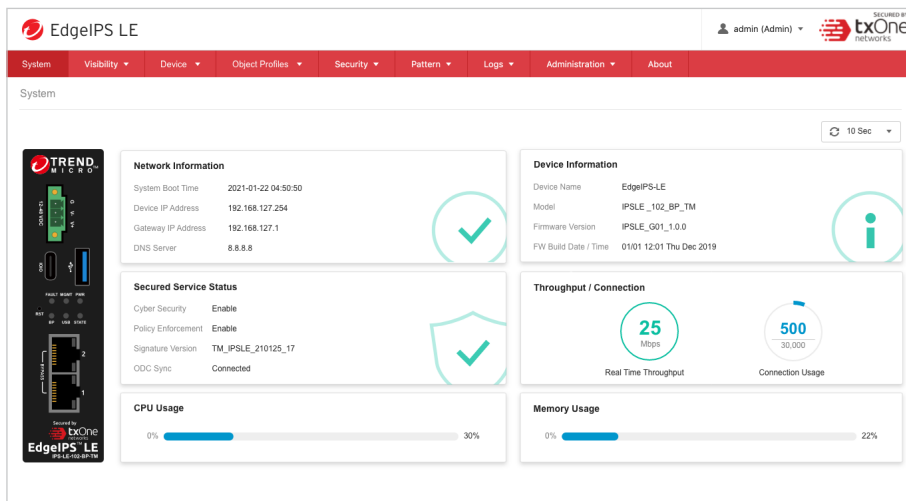

12 Setting the Management IP Address

1. Go to [Device] > [Device Setting]

Network Settings

Device IP Address*

192.168.127.254

Netmask*

255.255.255.0

Gateway*

192.168.127.1

DNS

8.8.8.8

☒ VLAN-ID

42

Port Configuration

Physical Interface Link Mode

PORT1

Auto Negotiation

PORT2

Auto Negotiation

2. In the [Network Setting] plane, configure management IP address for EdgeIPS LE

Task	Action
Device IP Address	Configure Management IP Address of the EdgeIPS LE
Netmask	Configure Netmask of the EdgeIPS LE
Gateway	Configure GatewayAddress of the EdgeIPS LE
DNS	Configure DNS setting of the EdgeIPS LE
Network VLAN-ID	Configure Network VLAN-ID of the device

13 Connecting to the Network

EdgeIPS LE's ports 1 and 2 make up a network segment.

- Port 1 is a "mixed" port design, functioning both as the management console port and to connect to a network node, so EdgeIPS LE's Port 1 can be connected either to your network switch/hub or to a laptop. Connecting this port to the network enables remote management of the device.
- EdgeIPS LE's Port 2 links the IPS to the device or small production zone you are targeting for protection.

14 Checking the LED to Confirm Status

The LED on each Ethernet port shows the deployment status.




RJ45

■ No Light	The EdgeIPS LE cannot communicate with the network.
■ Only Left LED	10Mbps LINK/ACT (off = no link, on = 10 Mbps, blinking = activity)
■ Only Right LED	100Mbps LINK/ACT (off = no link, on = 100 Mbps, blinking = activity)
■ Both Left / Right LED	GE LINK/ACT (Both LED ON = 1 Gbps link, blinking = activity)

Appendix: Connecting to the Console Port

The EdgeIPS LE console port is a USB Type-C Port located on the front panel of the case. It is designed for connection to serial console terminals for viewing messages during the boot sequence or for debugging system boot issues. To connect the console cable, remove the protective cover on the port.

Serial Console Port, Cable, & Pinouts

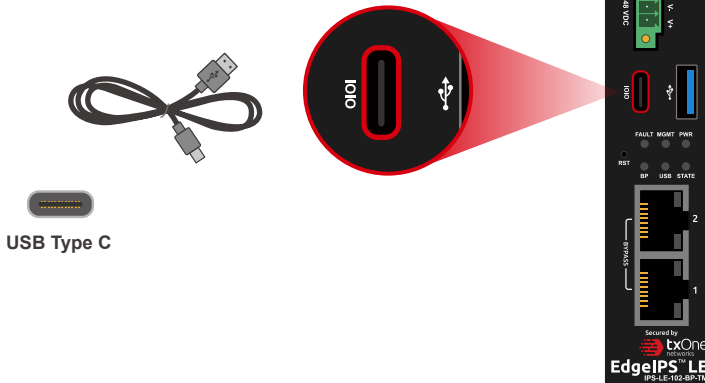

The initial configuration for the EdgeIPS LE using the command line interface (CLI) on a serial terminal client will use the following default settings:

- Baud Rate: 115200 bps
- Character size: 8 bits
- Parity: None
- Stop Bits: 1
- Flow Control: None

Contact Information

Website

<https://www.trendmicro.com>

List of worldwide offices and phone numbers

<https://www.trendmicro.com/us/about-us/contact/index.html>

Technical support page

<https://success.trendmicro.com/>

EULA

https://www.trendmicro.com/en_us/about/legal.html



The power cord adapter should be connected to a socket outlet with an earthing connection. The power cord and adapter must comply with Class II construction. This product is intended to be supplied by a UL Listed Power Adapter or DC power source marked 'L.P.S' or 'Limited Power Source', rated 12 to 48 VDC, 2.0A (min.)