




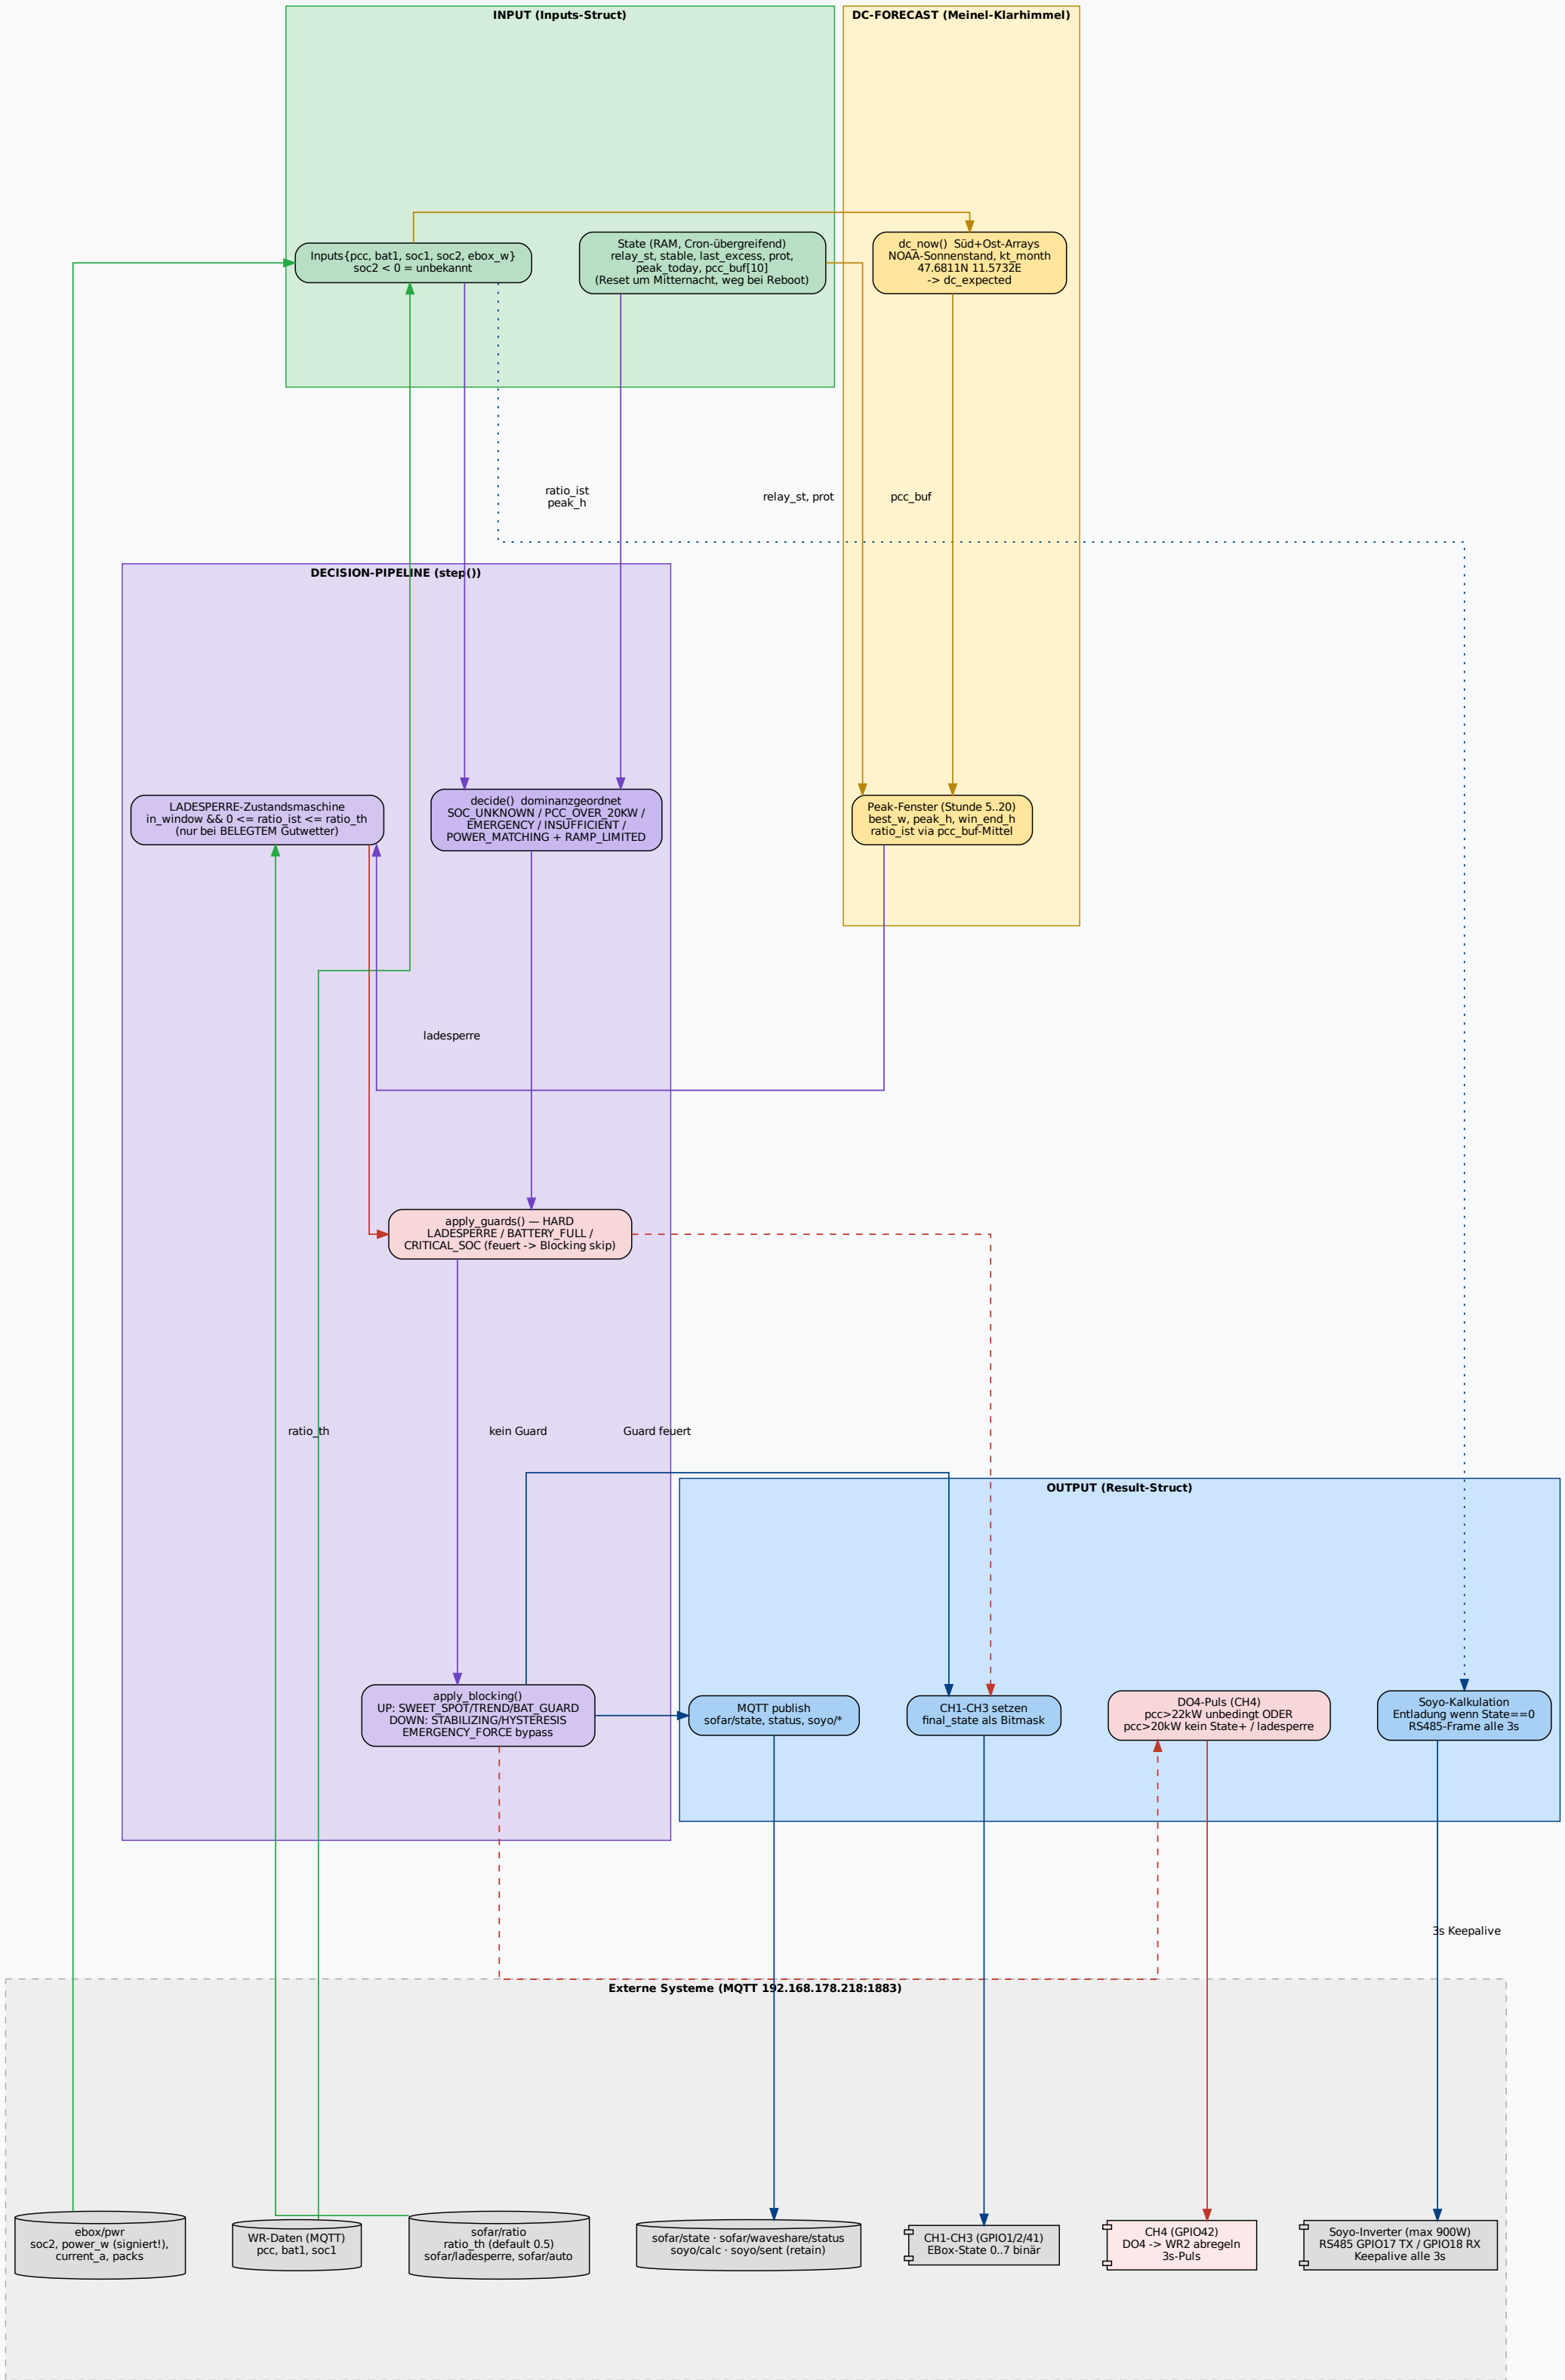


fox2db v3.3.31 — step() Gesamtablauf (alle 60s, fox2db_logic.h)

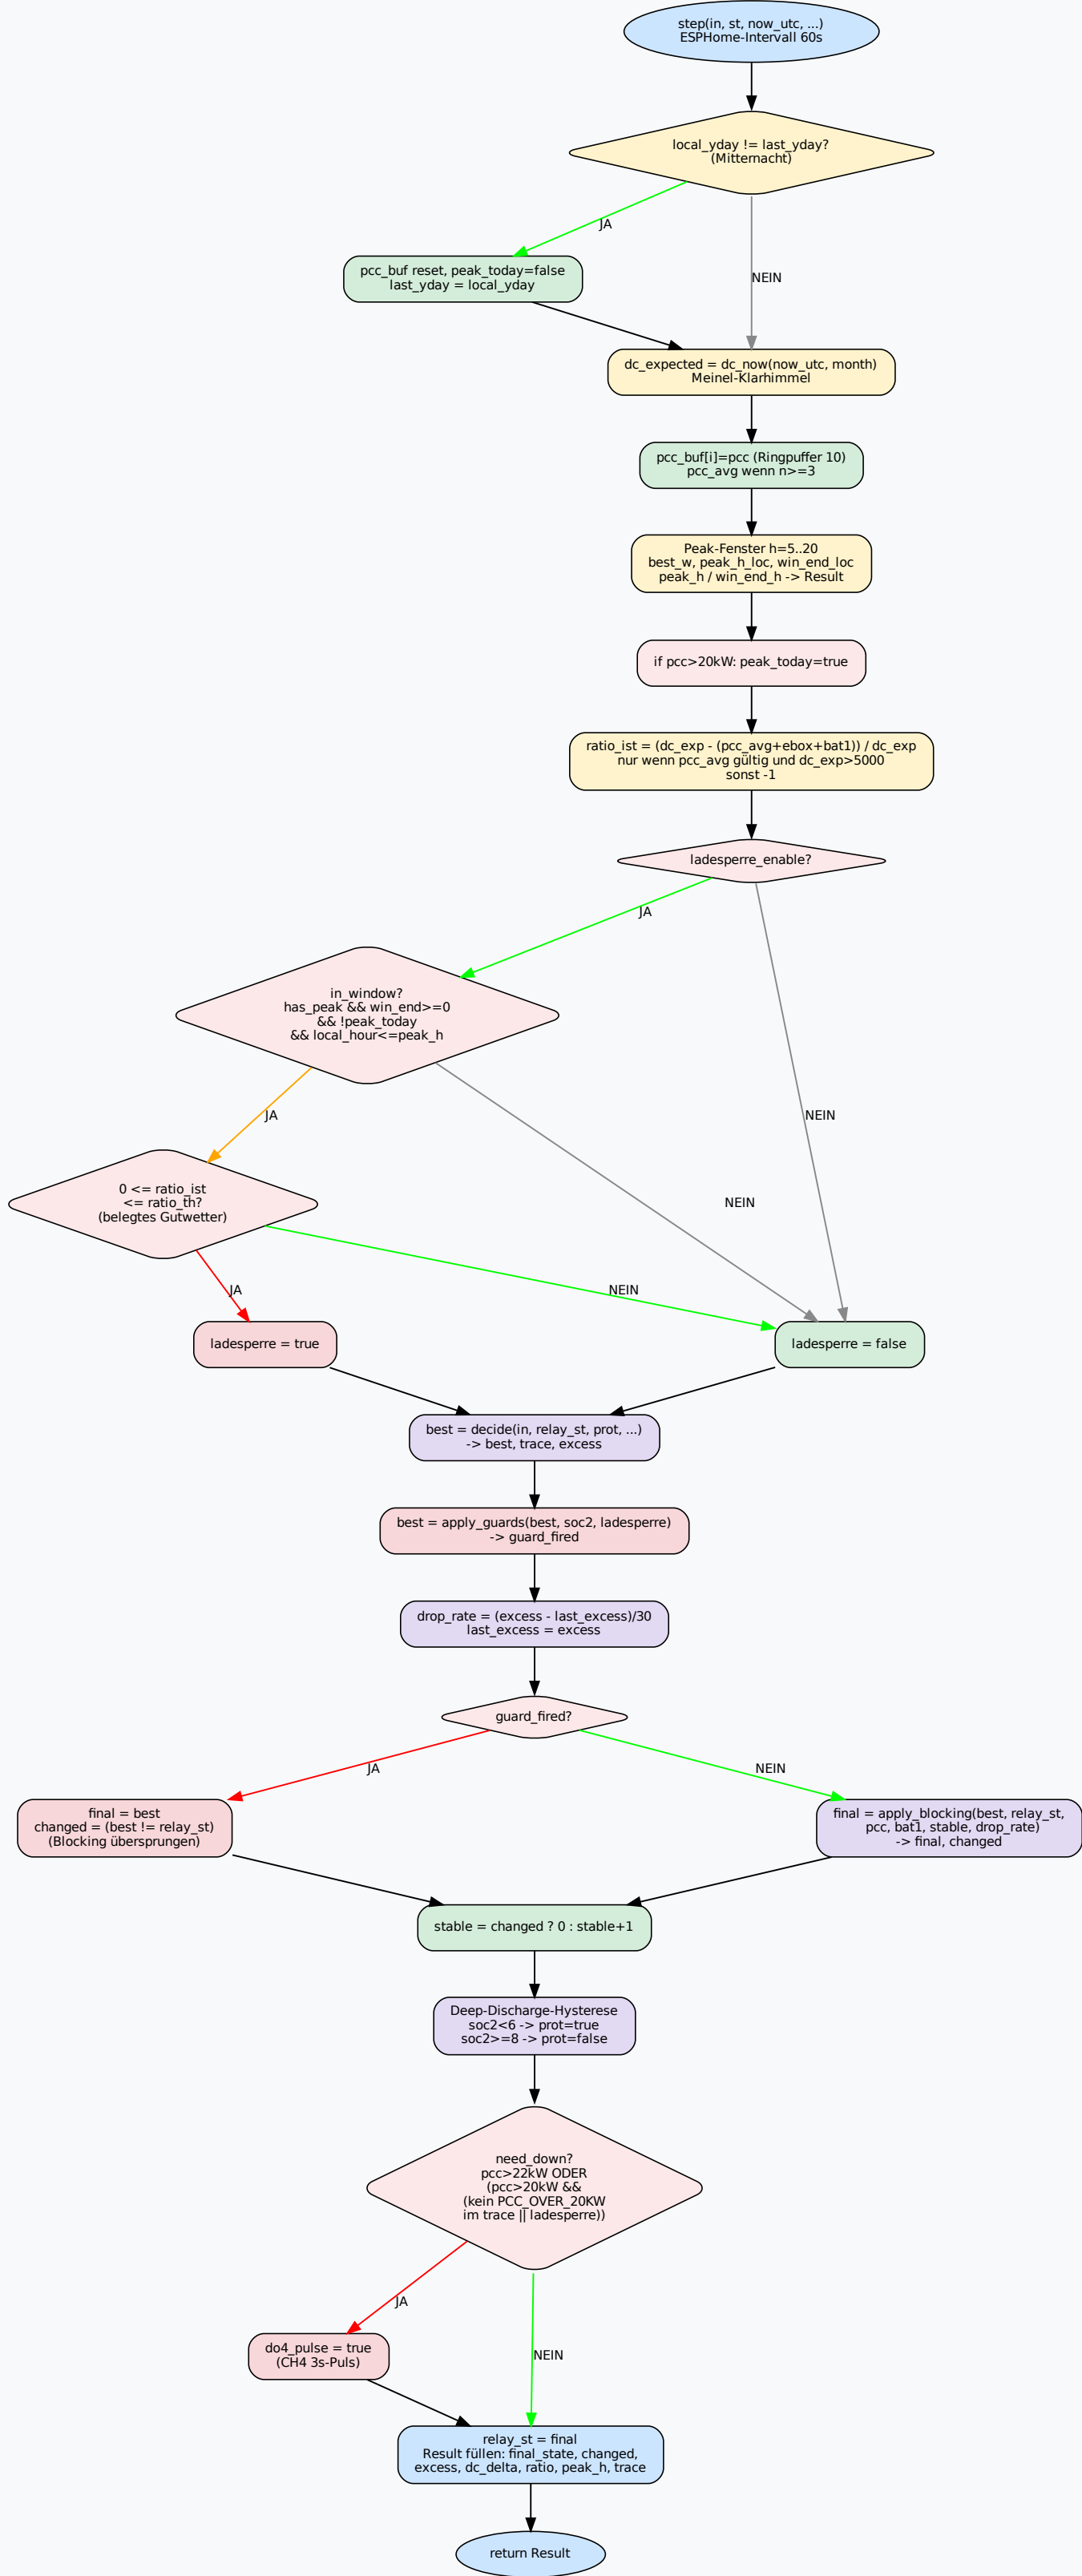

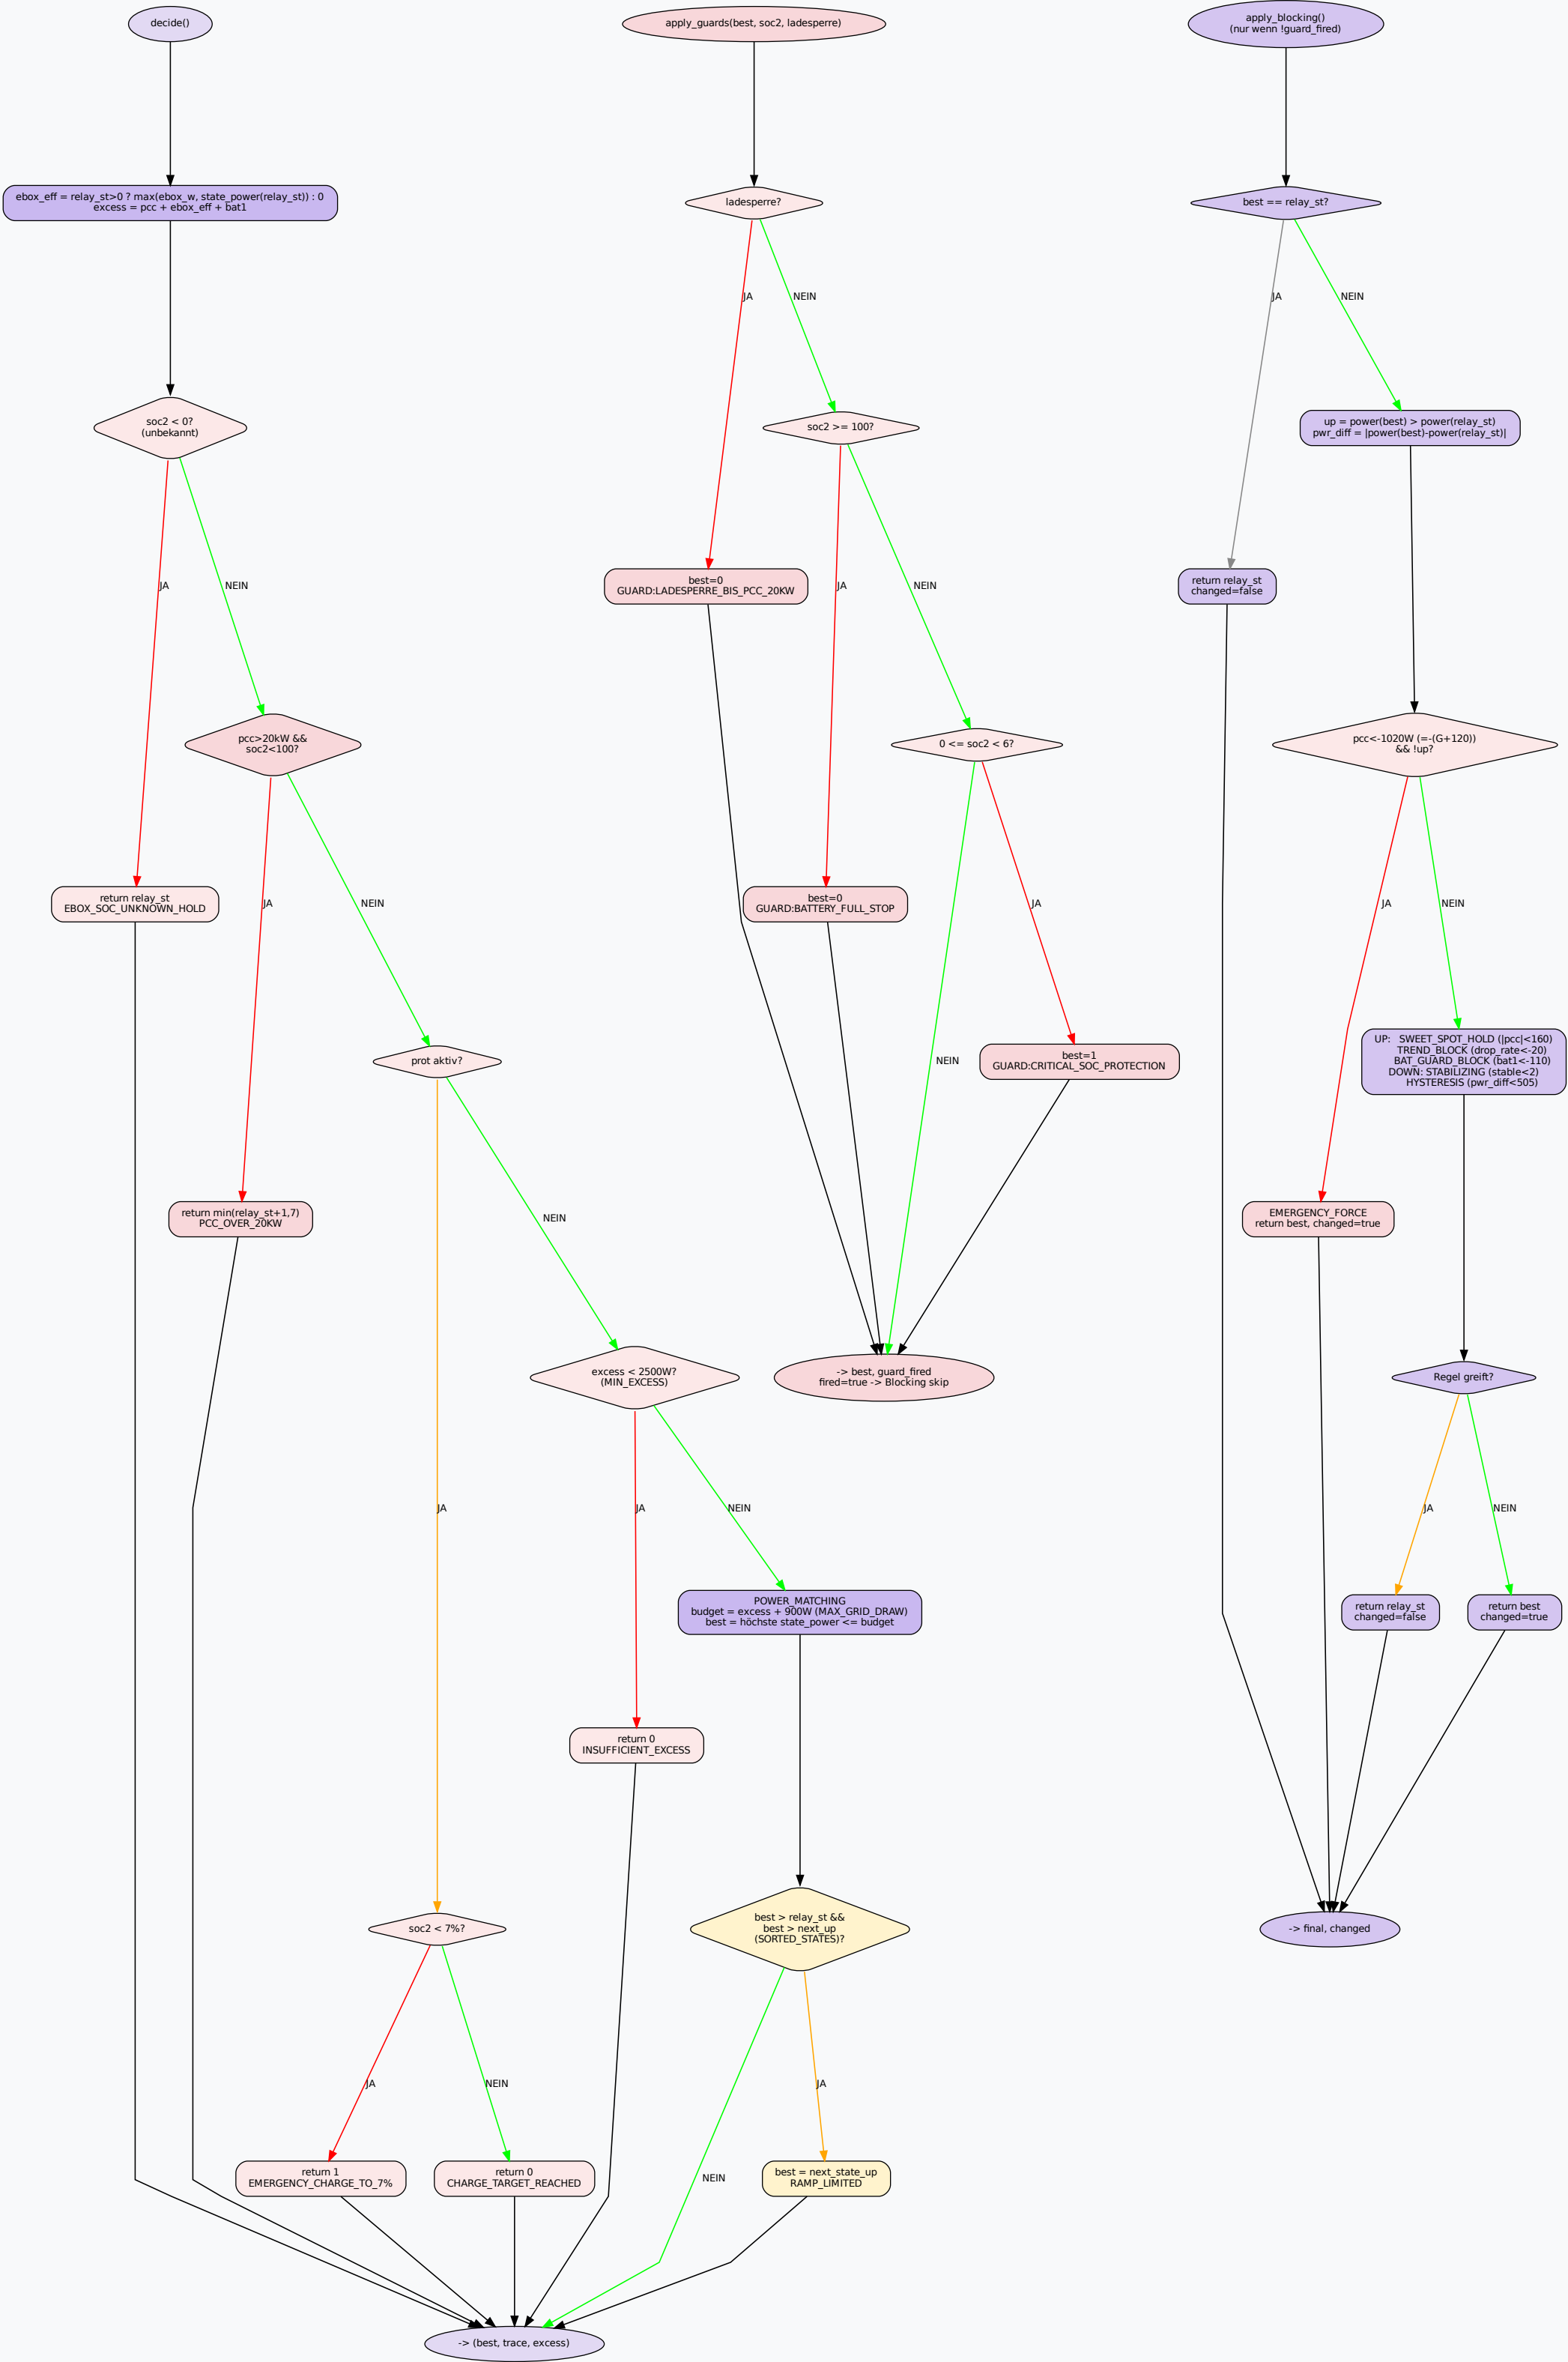

fox2db v3.3.31 — LADESPERRE-Logik + Soyo-Entladung (RS485)

LADESPERRE — Akku morgens leer halten für >20kW-Mittagspeak

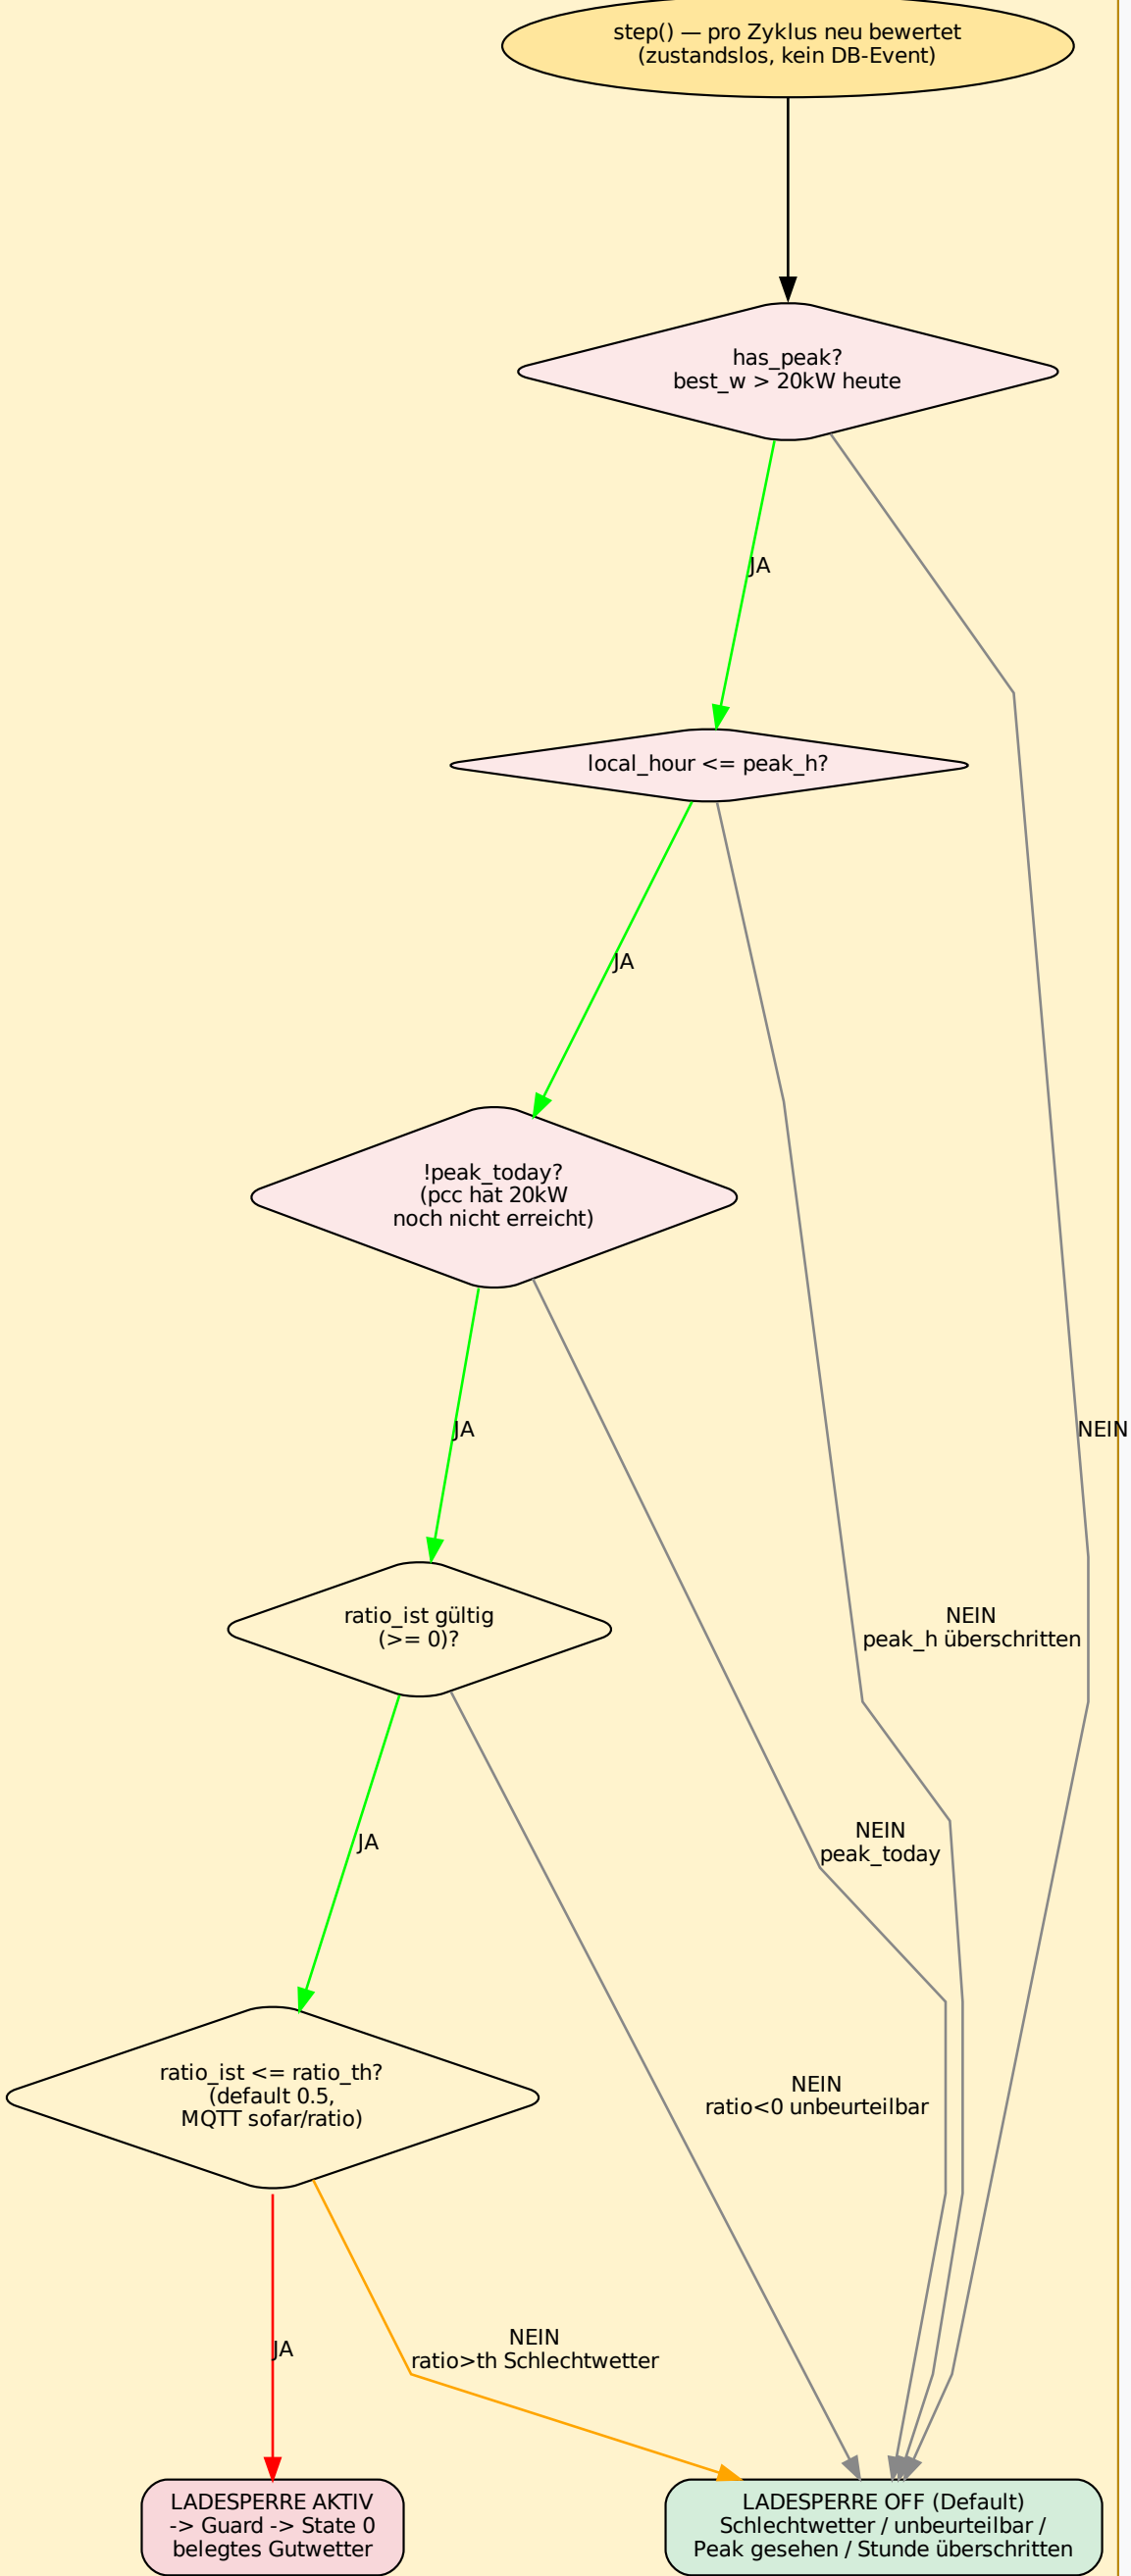

Soyo-Entladung (max 900W, alle 60s soyo/calc, RS485-TX alle 3s)

