Rev B | direct battery power

No Pololu board. Two insulated power buses. Two direct PWM wires. D2 is unused.

POWER | join all points on each bus; keep positive and ground separate

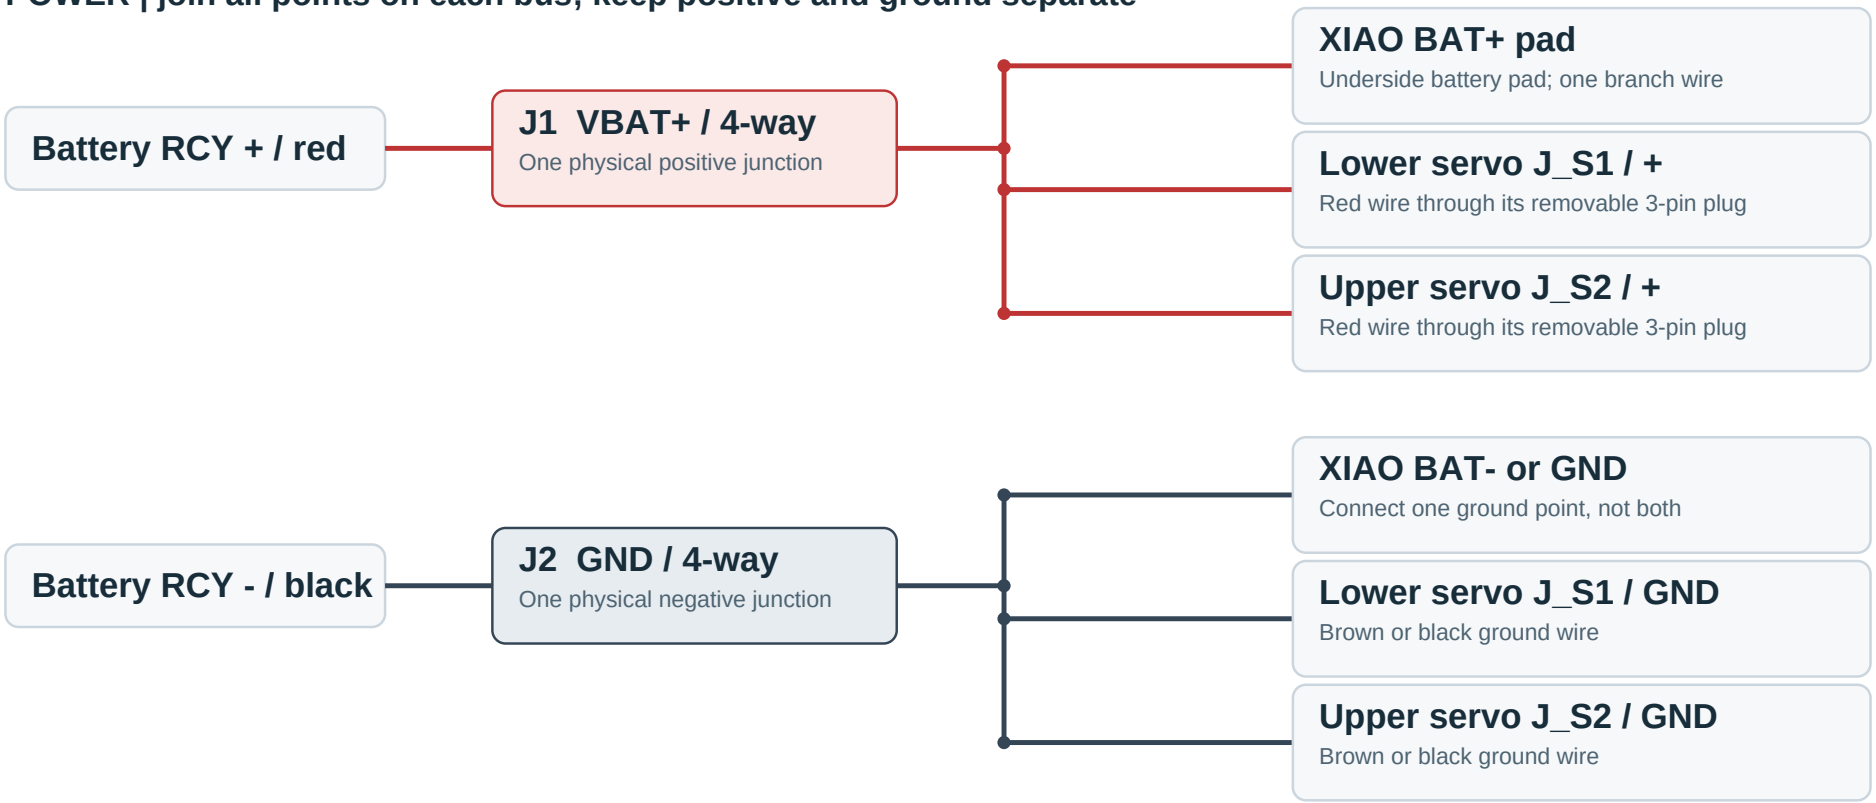

SIGNALS | the same J_S1 and J_S2 plugs also carry these PWM wires

D2: remove its old ON wire and leave unconnected. XIAO 3V3 and 5V are not servo supplies.

USB charging/programming: unplug BOTH complete 3-pin servo plugs.

Battery unplug = full OFF only with USB unplugged too. USB can feed the shared BAT+ bus.
off / ! stop PWM only. No electronic power cutoff remains. Keep the battery connected for charging.

Connection map, not a physical pad layout. Sources and operating steps: electrical/README.md