



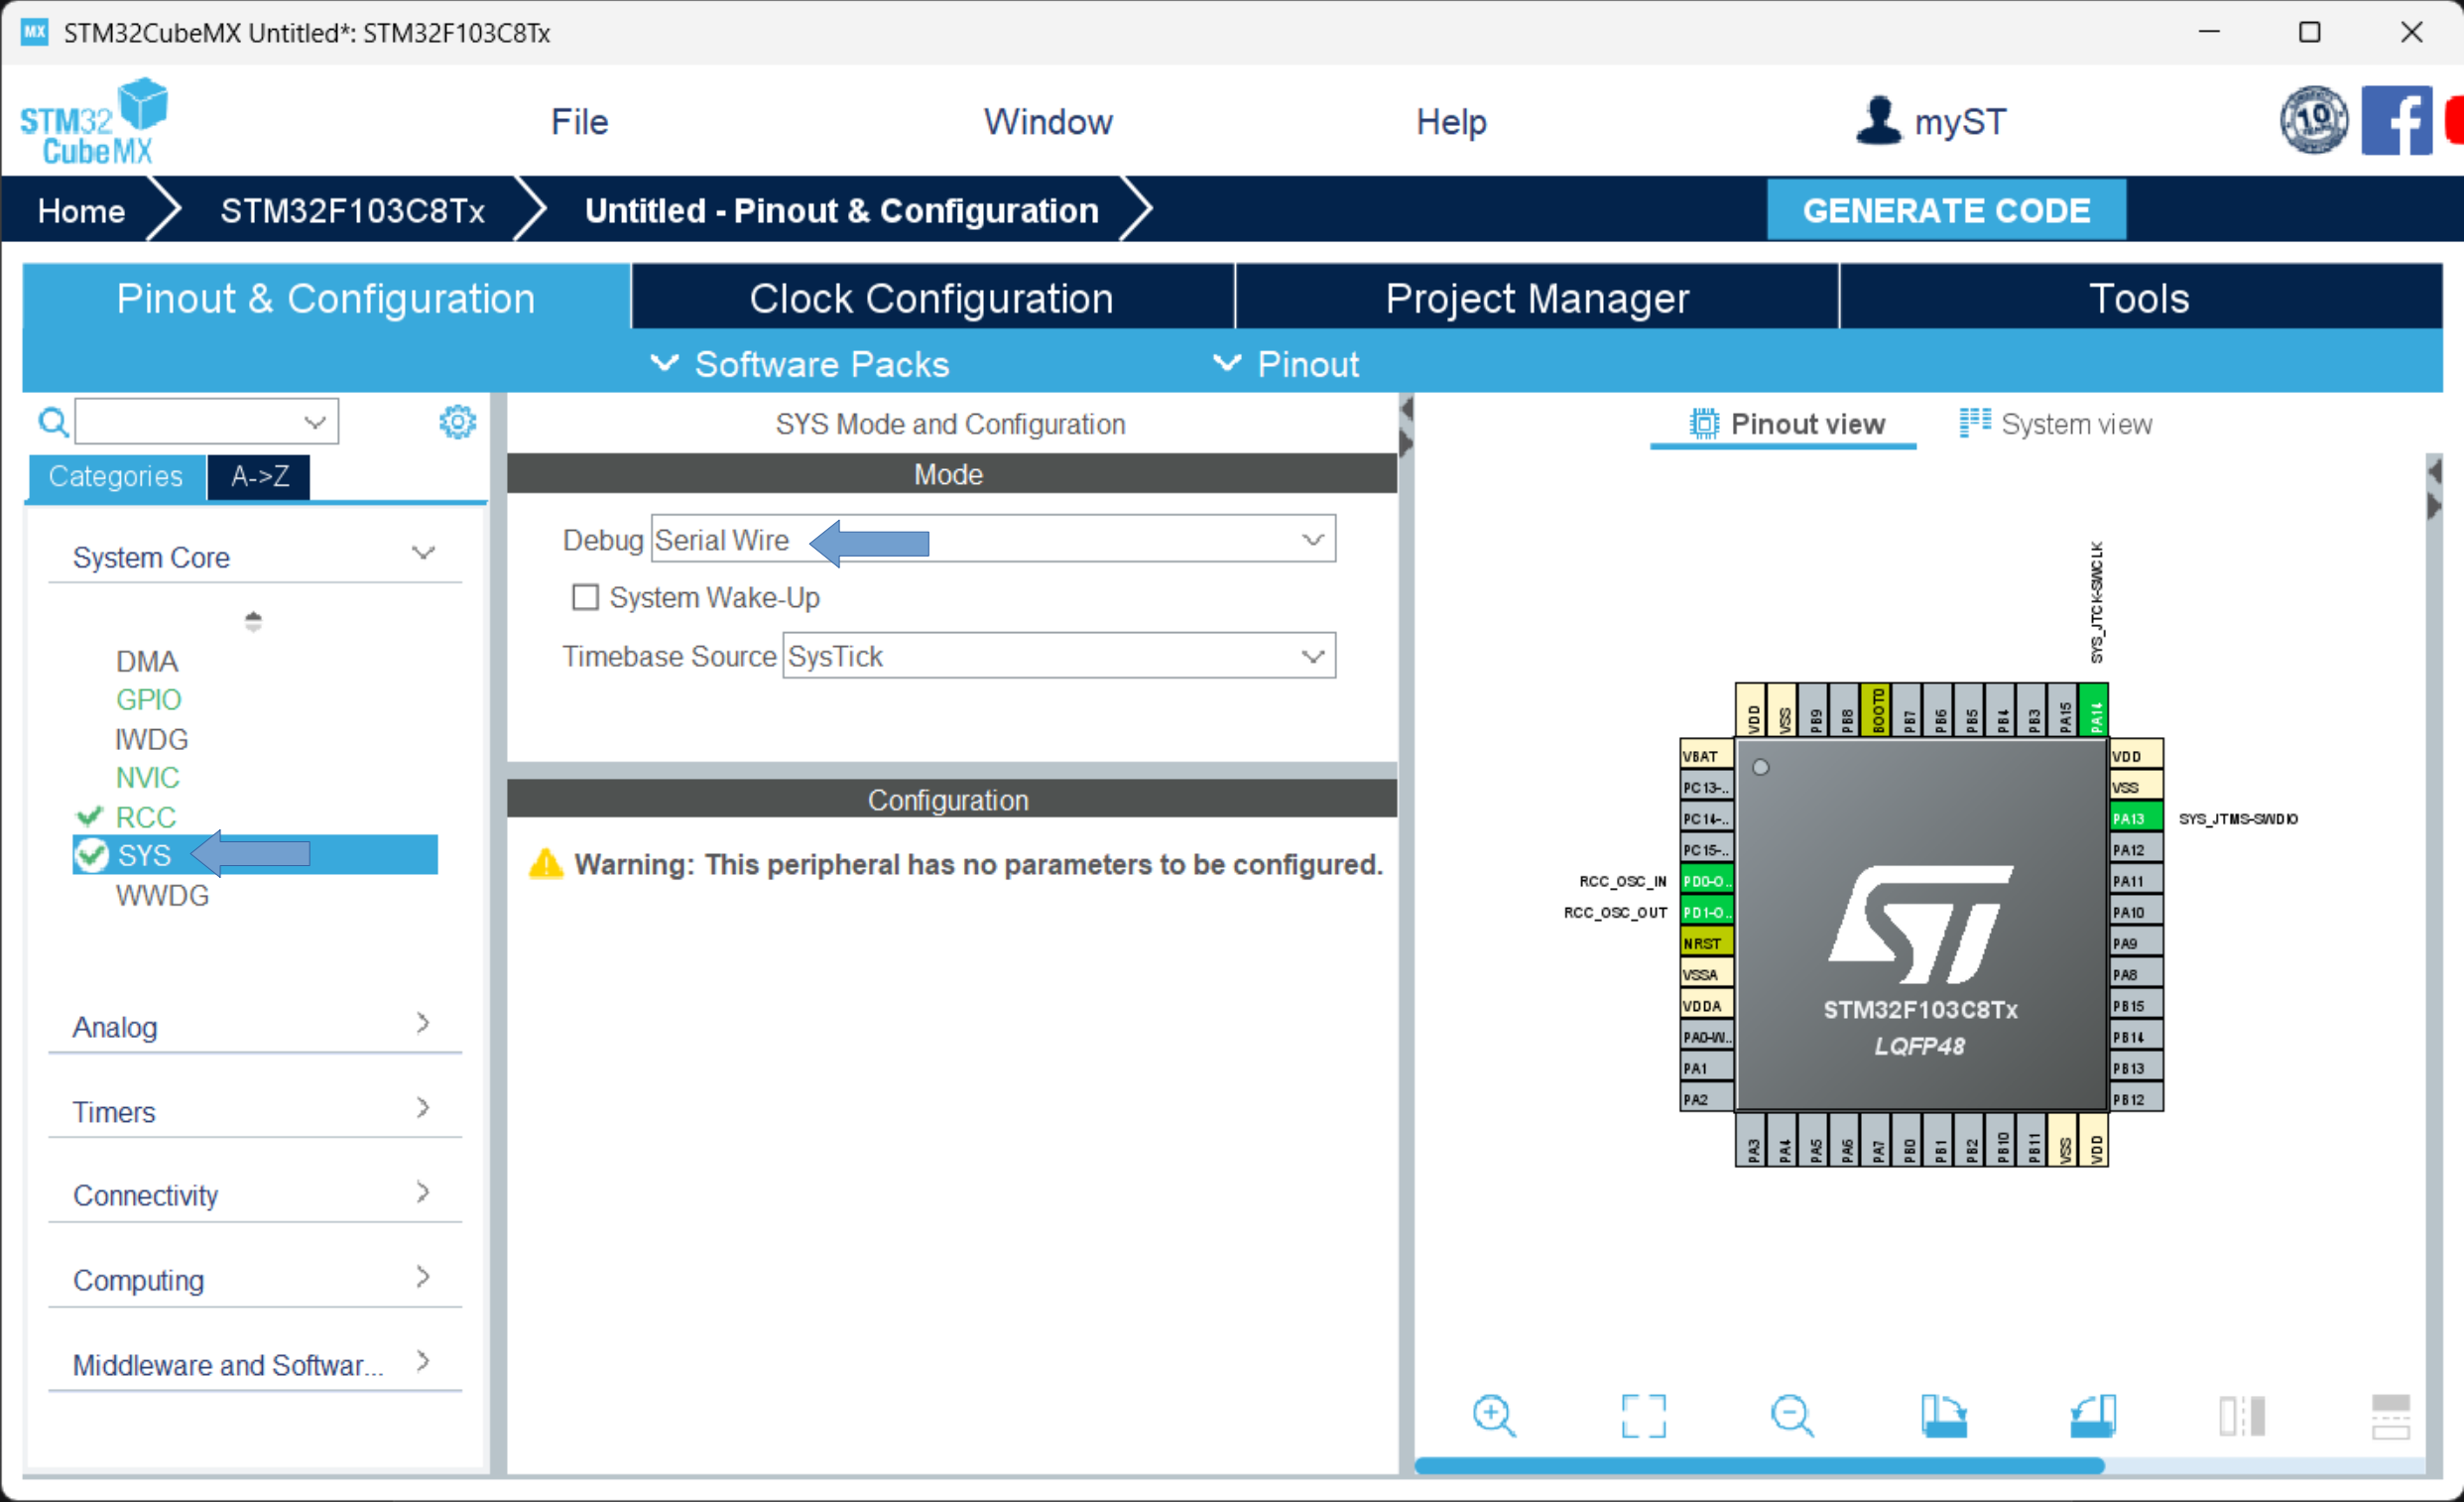

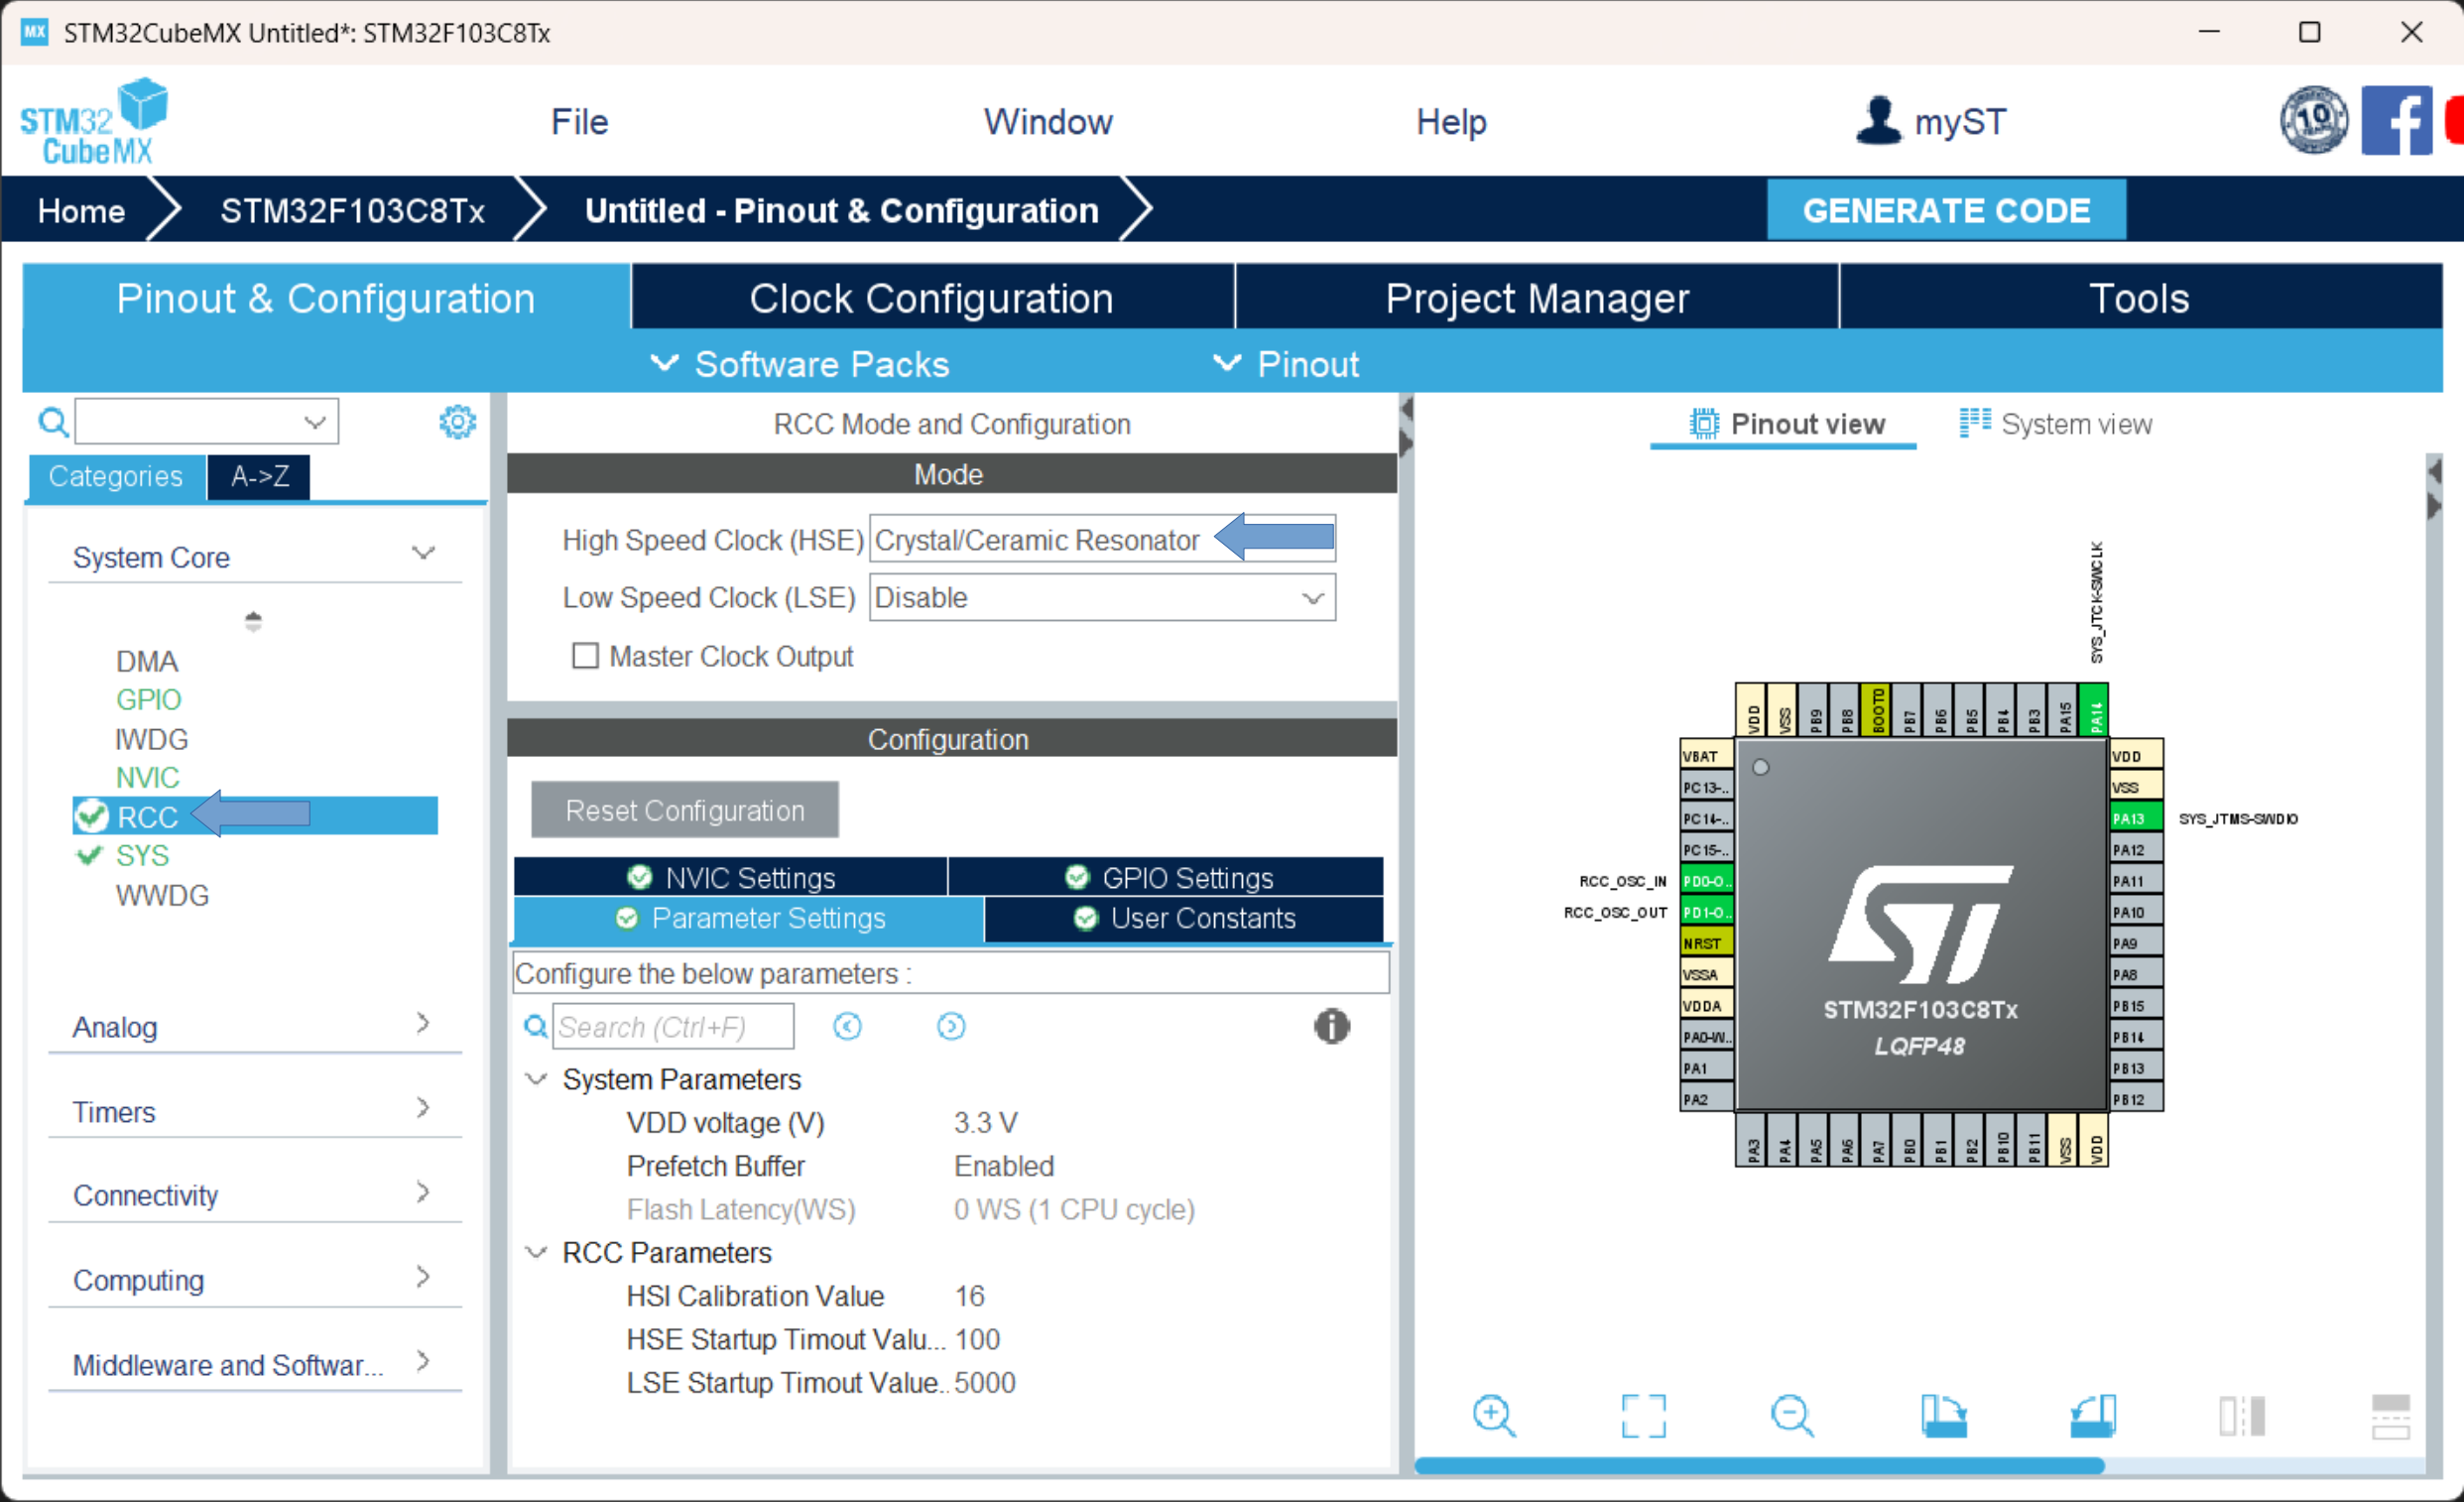

STM32CubeMX

FileWindowHelp

myST

HomeSTM32F103C8TxUntitled - Pinout & ConfigurationGENERATE CODE

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software PacksPinout

CategoriesA->Z

DMA
GPIO
IWDG
NVIC
✓ RCC
✓ SYS
WWDG

Analog>

Timers

RTC
TIM1
TIM2
✓ TIM3
TIM4

Connectivity>

Computing>

TIM3 Mode and Configuration

Mode

Slave ModeDisable

Trigger SourceDisable

✓ Internal Clock

Channel1Disable

Channel2Disable

Channel3Disable

Channel4Disable

Combined ChannelsDisable

Configuration

Reset Configuration

✓ NVIC Settings

✓ DMA Settings

✓ Parameter Settings

✓ User Constants

Configure the below parameters :

Search (Ctrl+F)

Prescaler (PSC - 16 bits ..0

Counter ModeUp

Counter Period (AutoRel65535

Pinout viewSystem view

RCC_OSC_IN
RCC_OSC_OUT

VDD
VSS
VDDA
VSSA
NRST
PD I-O
PD I-O
VDD
VSS


STM32F103C8Tx
LQFP48

PA13
PA12
PA11
PA10
PA9
PA8
PB15
PB14
PB13
PB12

PA3
PA4
PA5
PA6
PA7
PB0
PB1
PB2
PB10
PB11
VSS
VDD

SYS_JTCK-SWCLK

SYS_JTMS-SWDIO

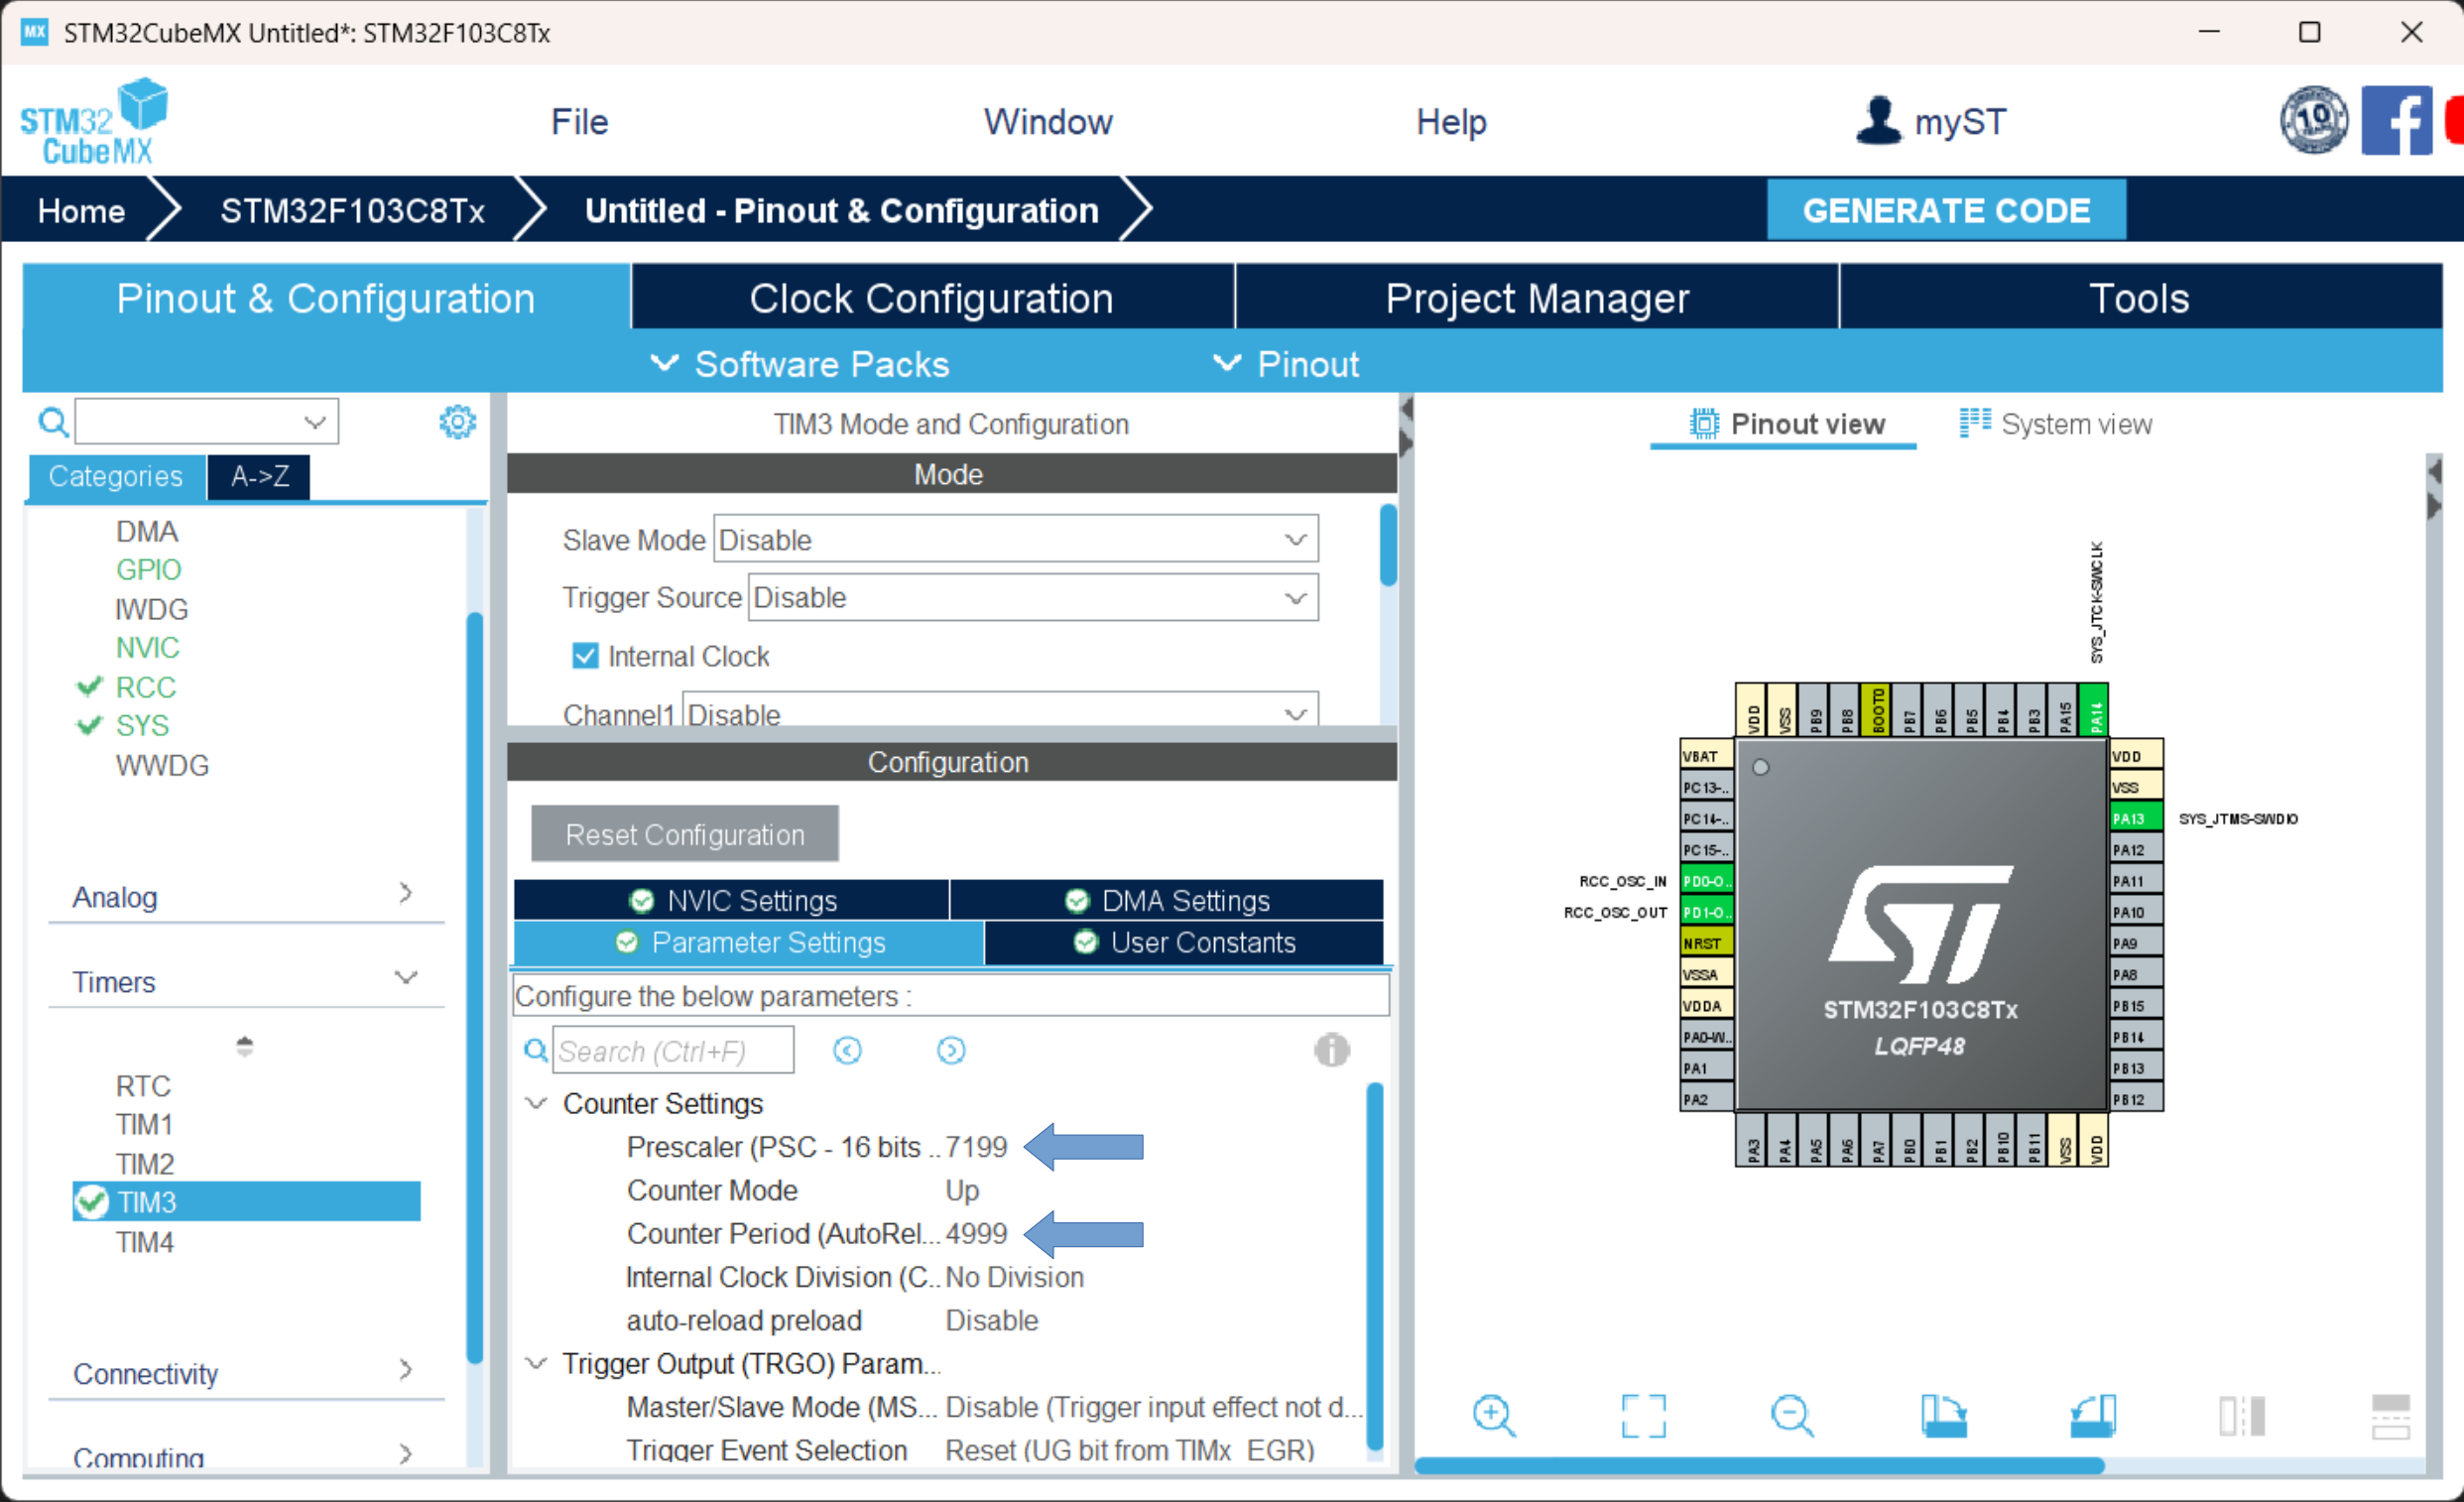

STM32CubeMX

FileWindowHelp

myST

HomeSTM32F103C8TxUntitled - Pinout & ConfigurationGENERATE CODE

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software PacksPinout

CategoriesA-Z

DMA
GPIO
IWDG
NVIC
RCC
SYS
WWDG

Analog>

Timers<

RTC
TIM1
TIM2
TIM3
TIM4

Connectivity>

Computing>

TIM3 Mode and Configuration

Mode

Slave ModeDisable

Trigger SourceDisable

☒ Internal Clock

Channel1Disable

Configuration

Reset Configuration

☒ NVIC Settings

☒ DMA Settings

☒ Parameter Settings

☒ User Constants

NVIC Interrupt Table

Enabled

Preemption Priority

Sub P

TIM3 global interrupt

☒

0

Pinout viewSystem view

RCC_OSC_IN
RCC_OSC_OUT

VDD
VSS
PB9
PB8
BOOT0
PB7
PB6
PB5
PB4
PB3
PA15
PA14

STM32F103C8Tx
LQFP48

PA3
PA4
PA5
PA6
PA7
PB0
PB1
PB2
PB10
PB11
VSS
VDD

VBAT
PC13-...
PC14-...
PC15-...
PDD-O-
PDI-O-
NRST
VSSA
VDDA
PA0-AN-...
PA1
PA2

VDD
VSS
PA13
PA12
PA11
PA10
PA9
PA8
PB15
PB14
PB13
PB12

SYS_JTCK-SWCLK
SYS_JTMS-SWDIO

