



iPhone 6 baseband EEPROM block diagram

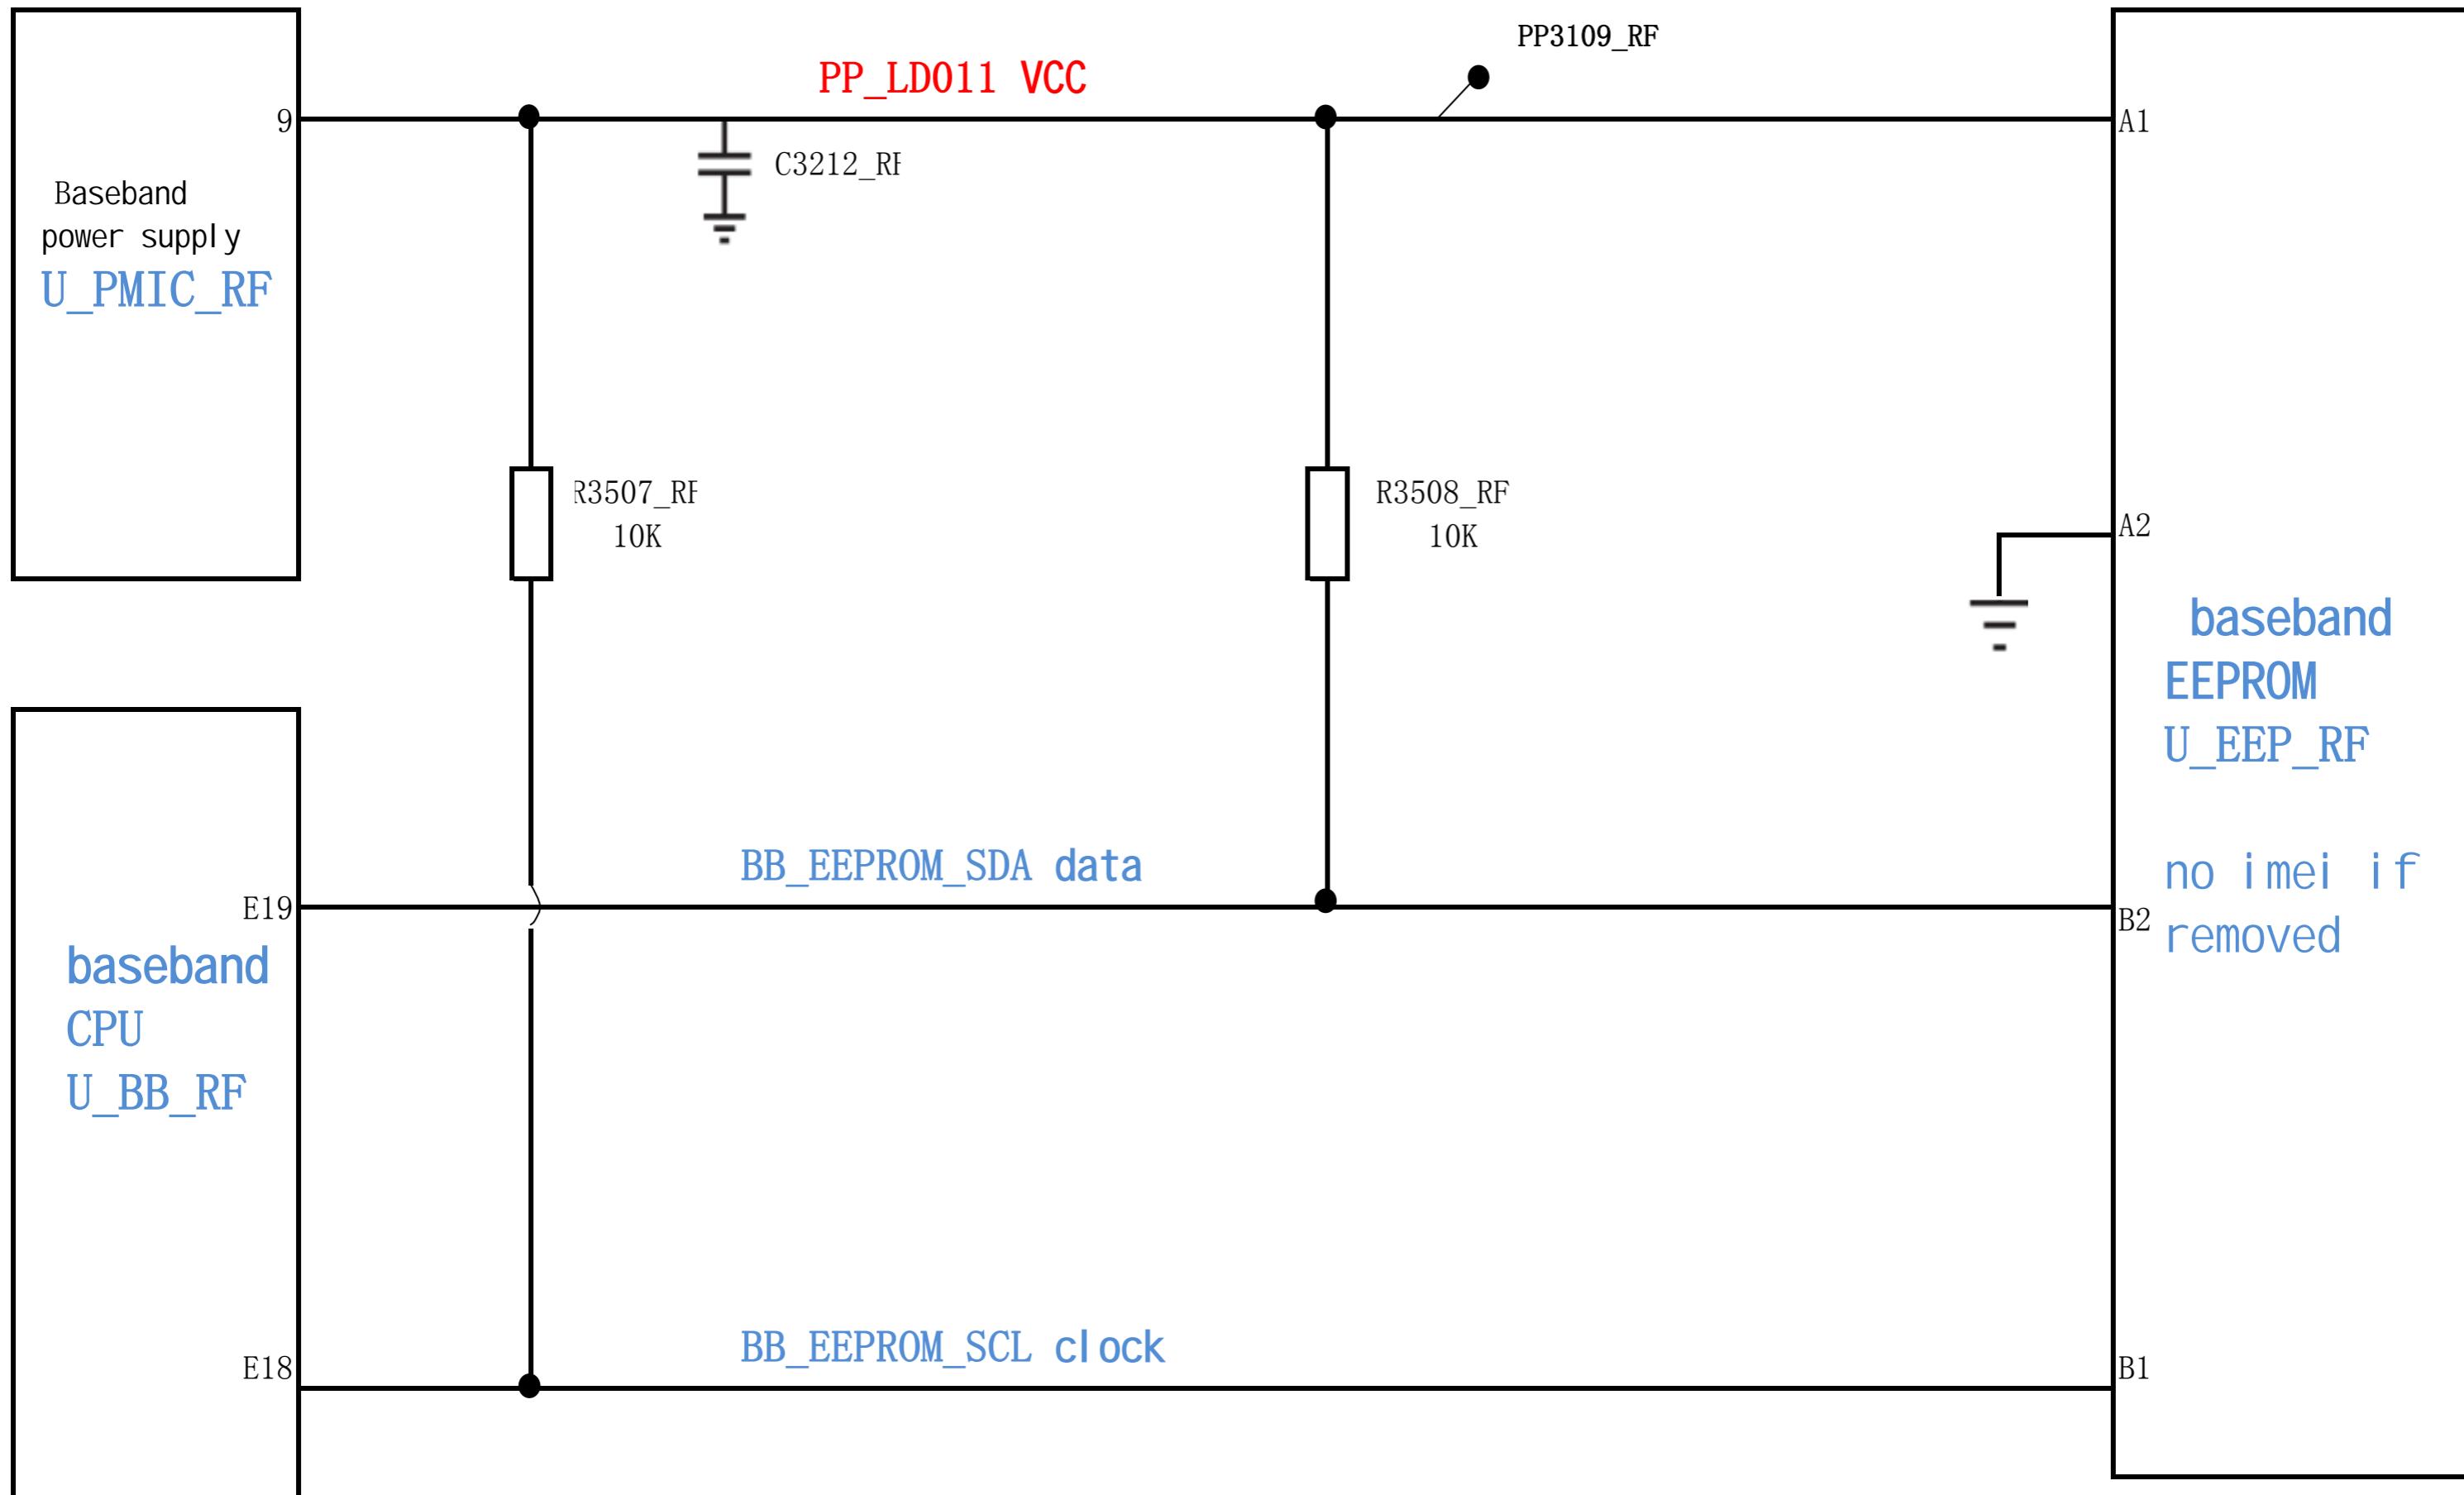


苹果6开机线电路方框图


主电源
U1202

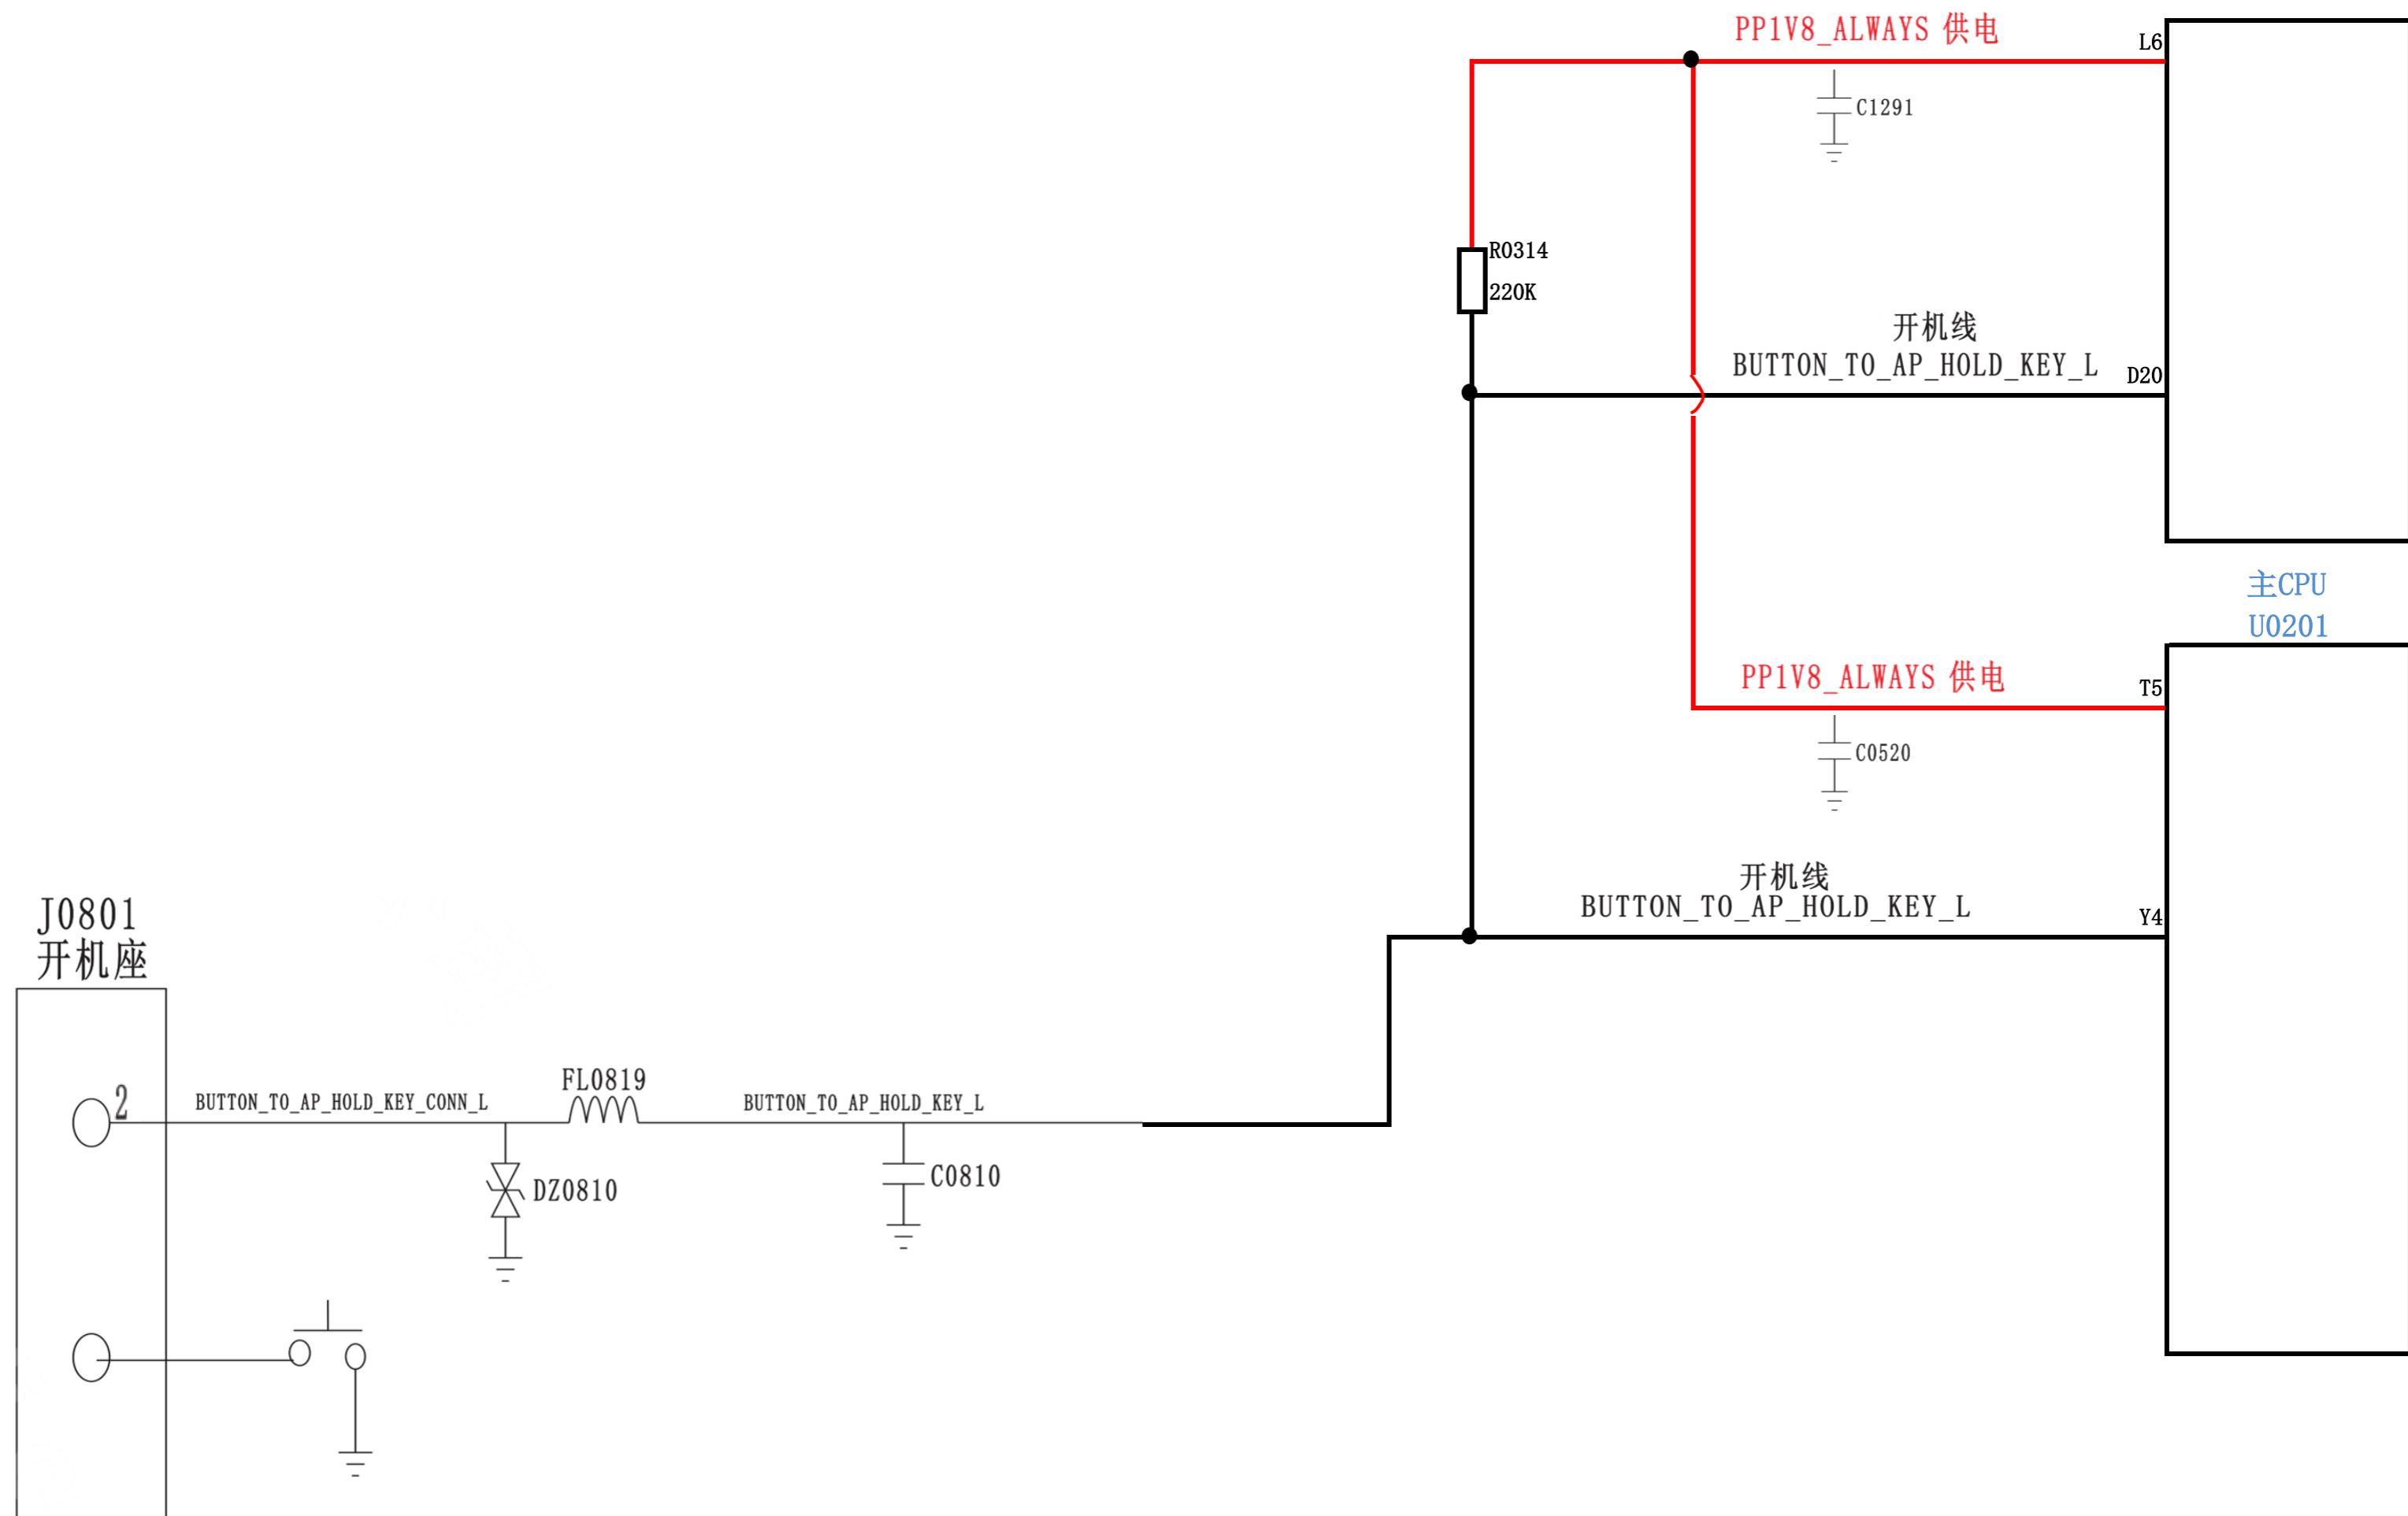


i phone 6 boot block di agarm

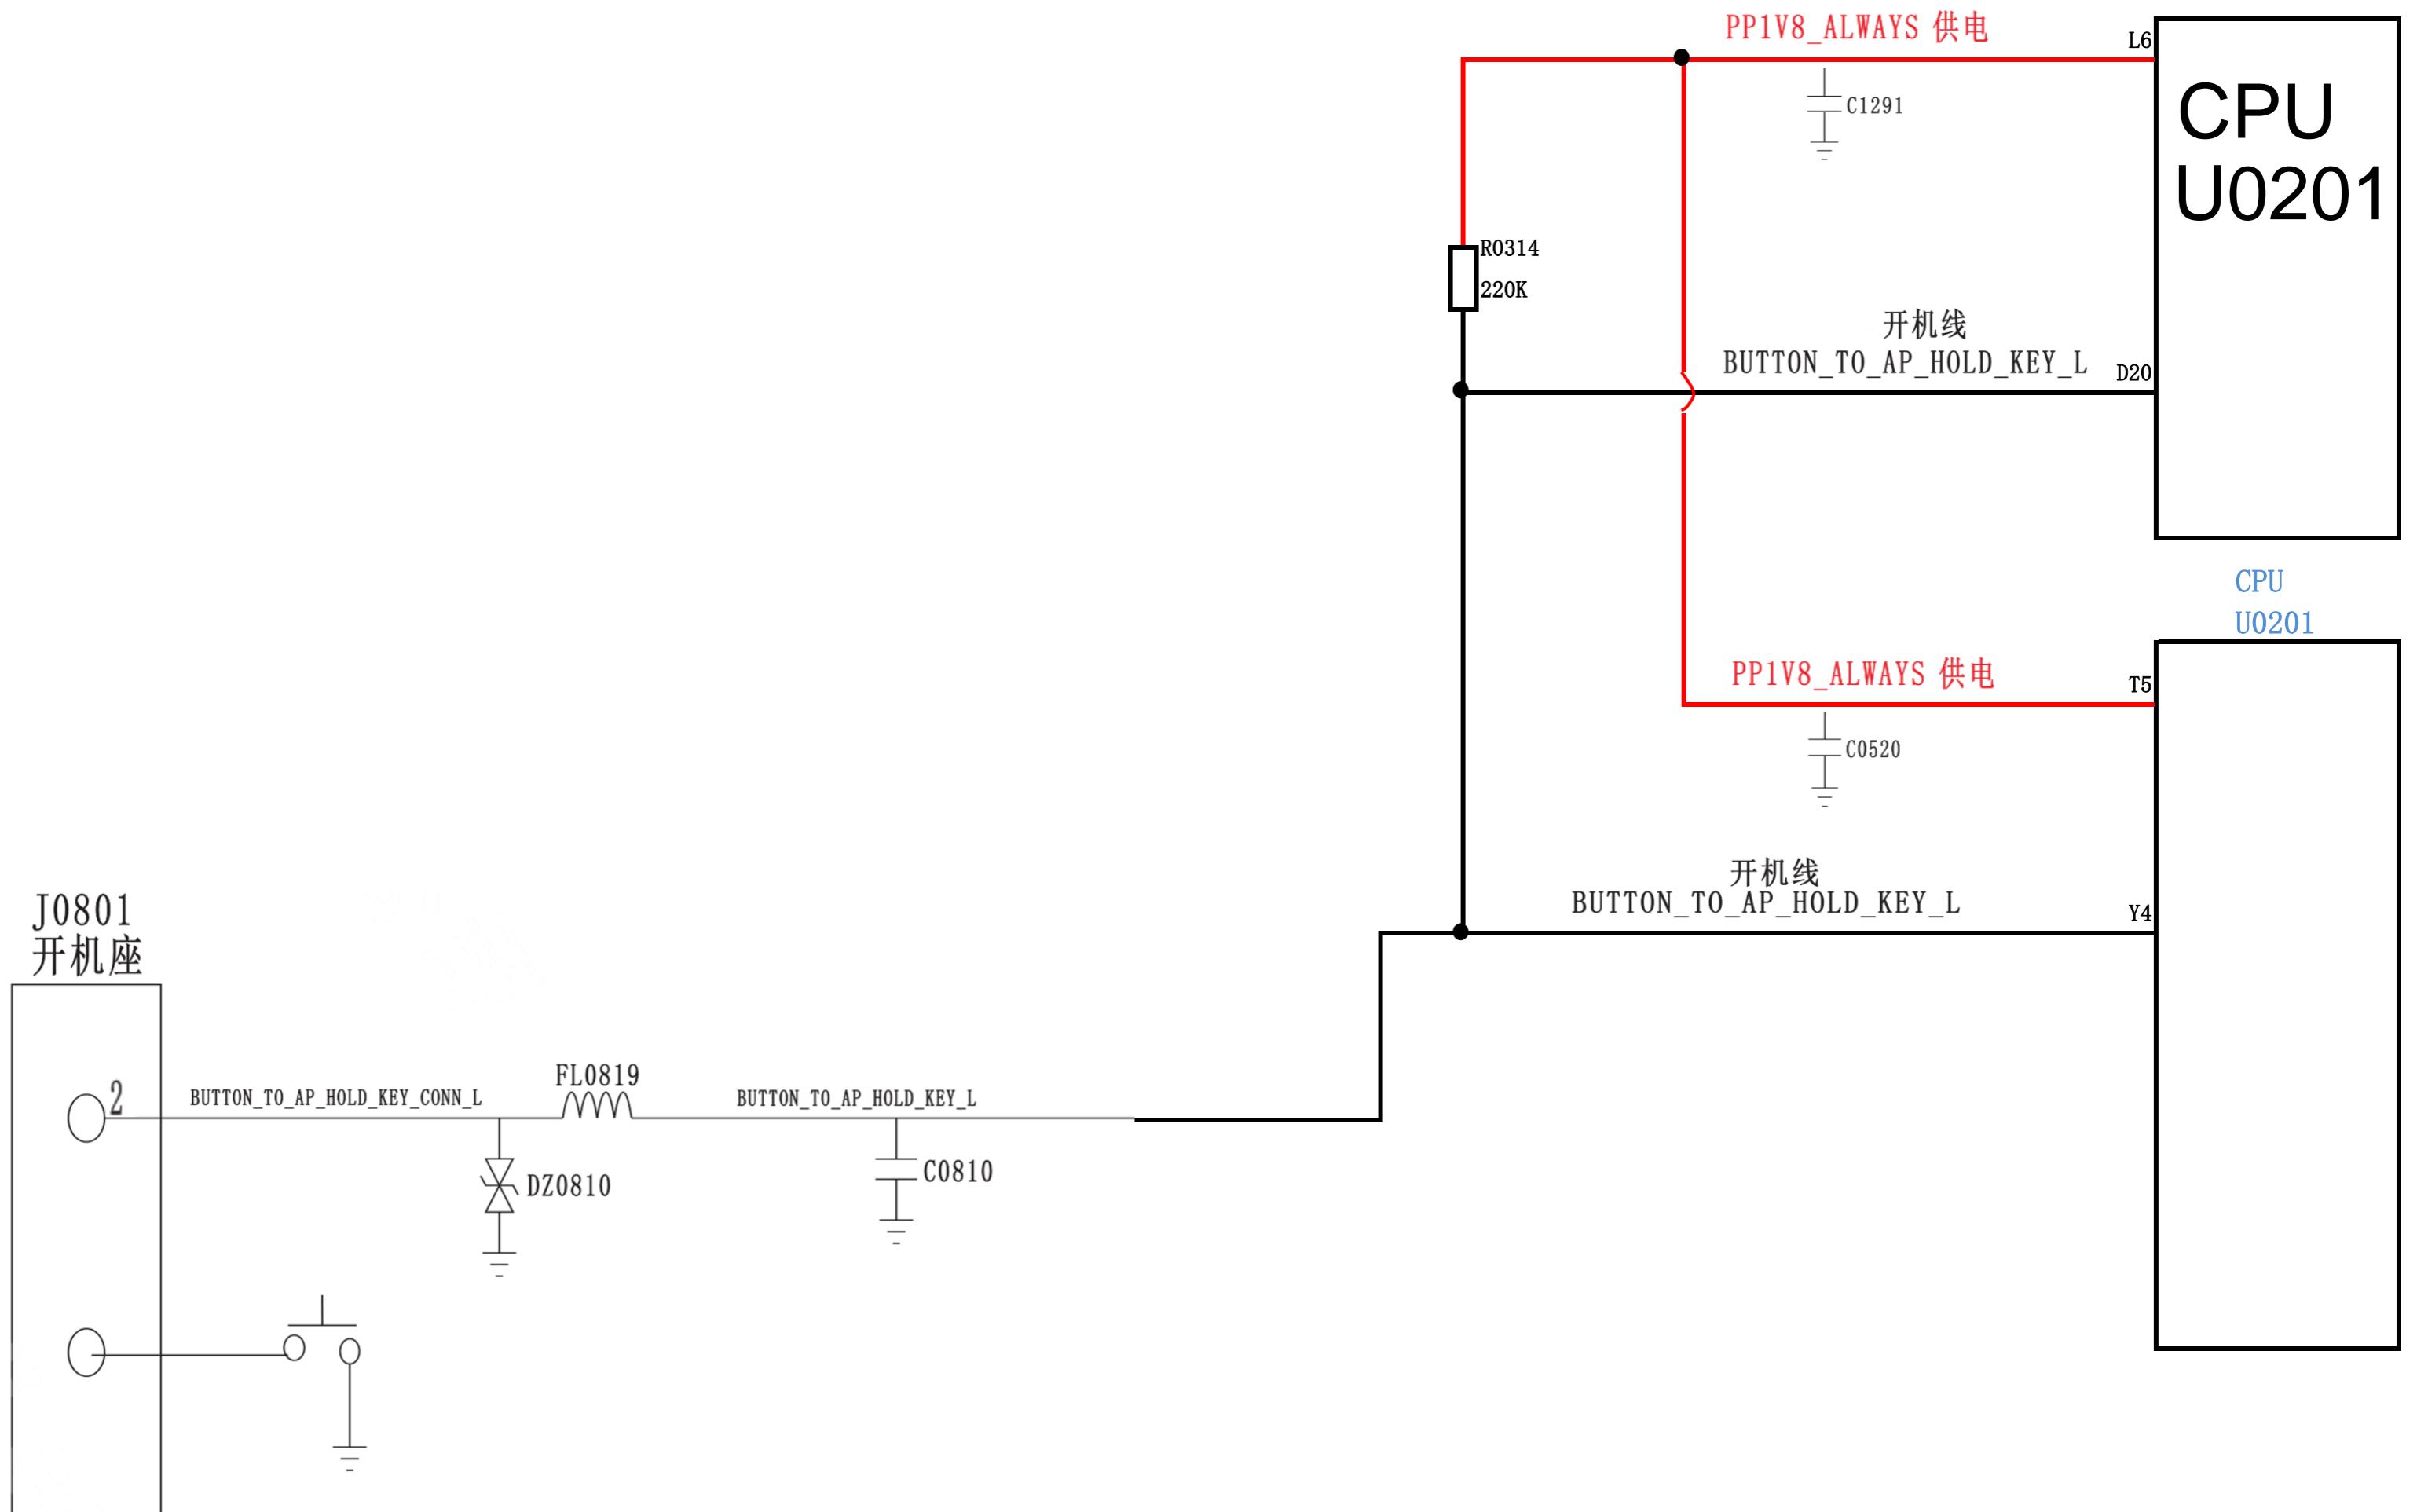


苹果6开机线电路方框图

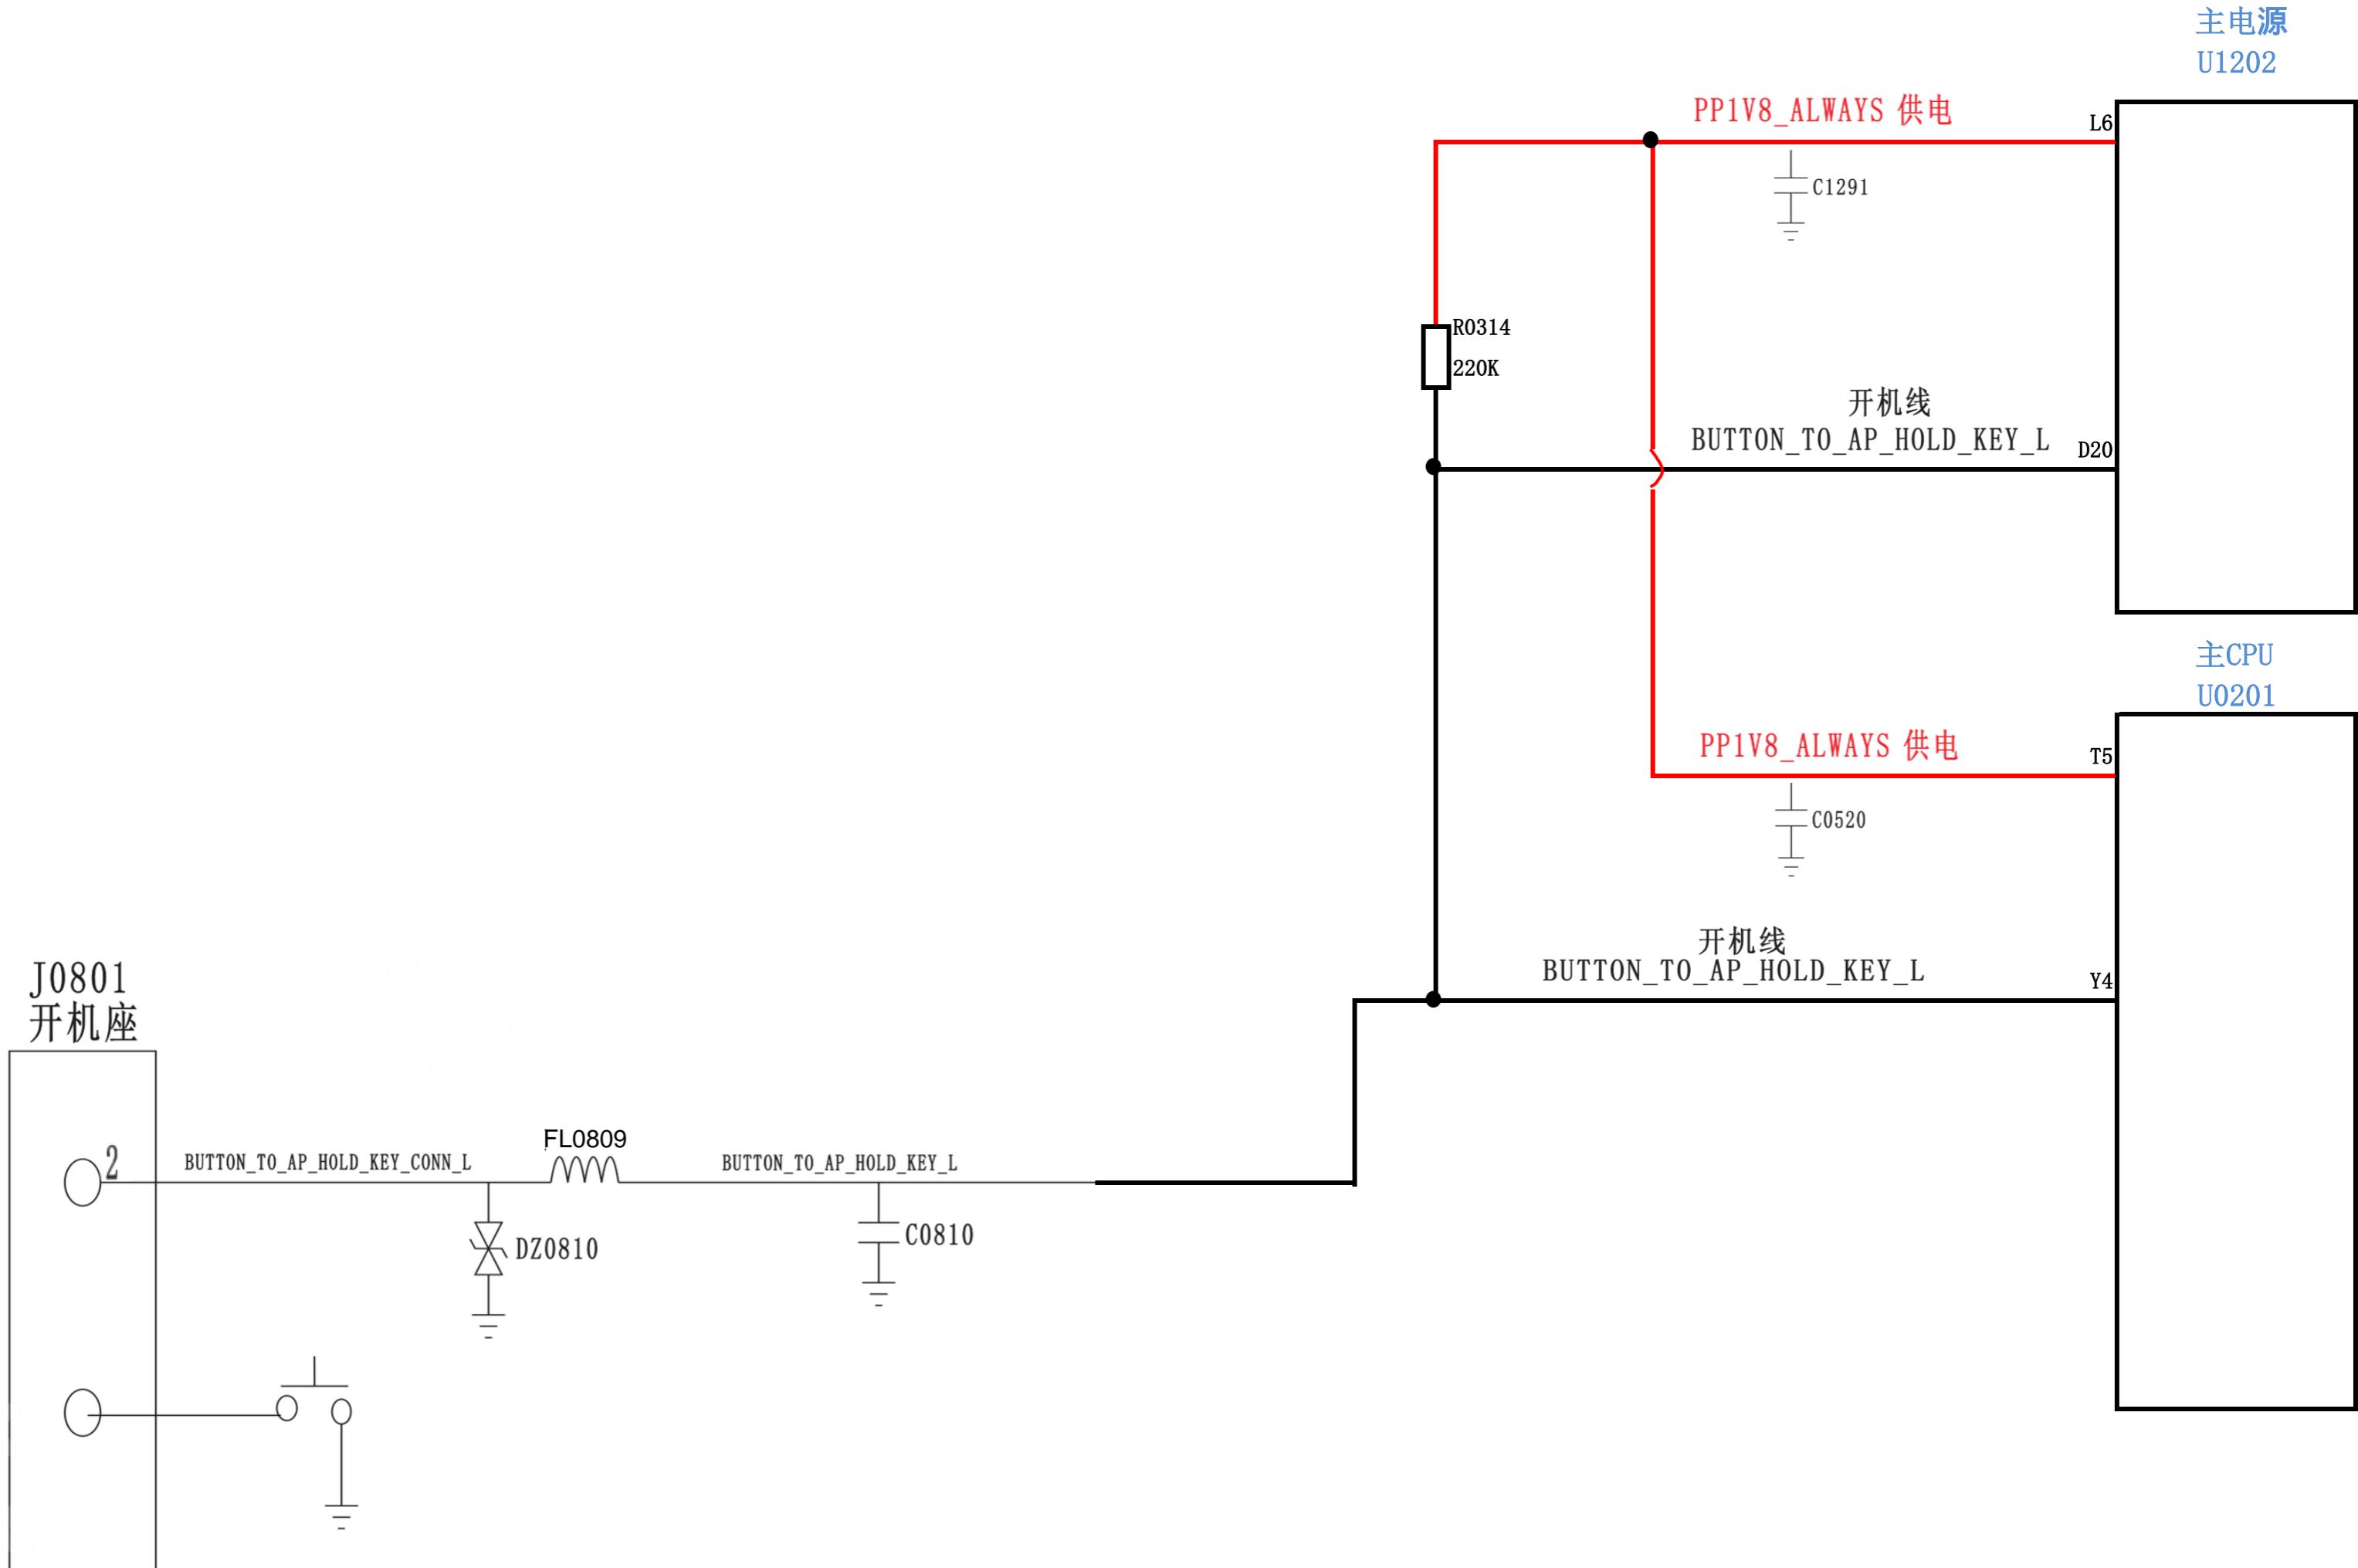


iphone logic eeprom

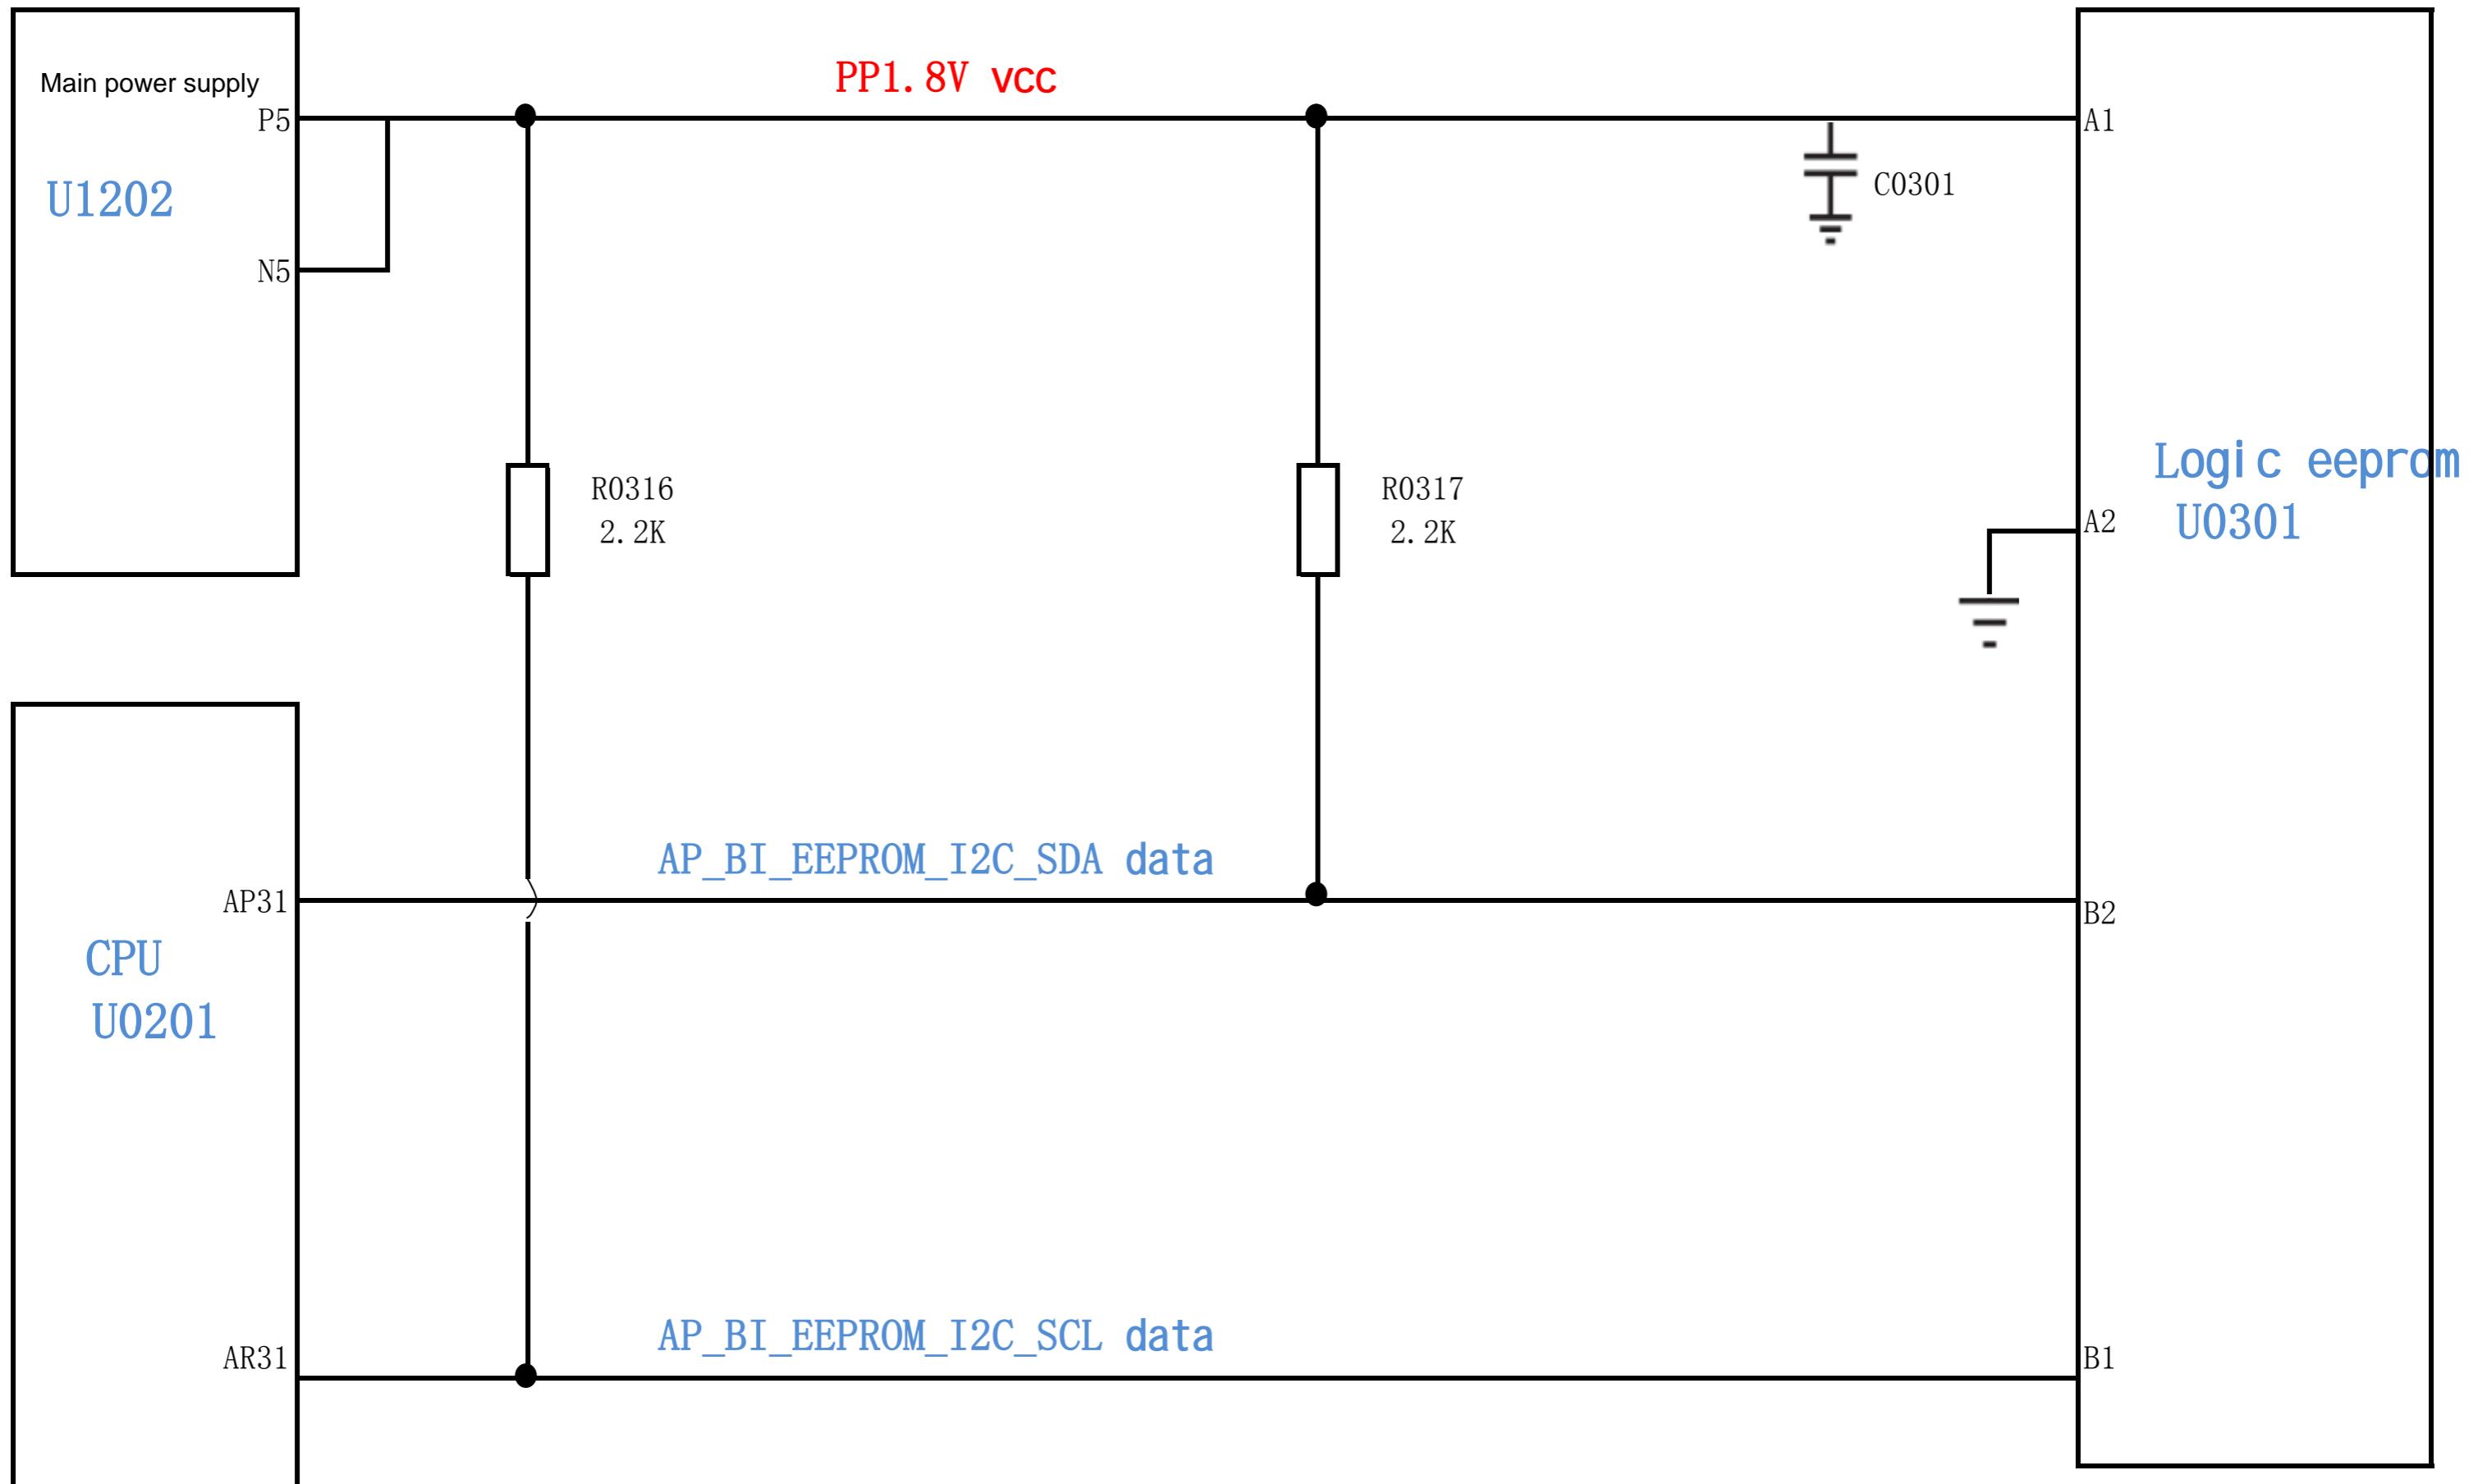

iPhone 6 microphone block diagram

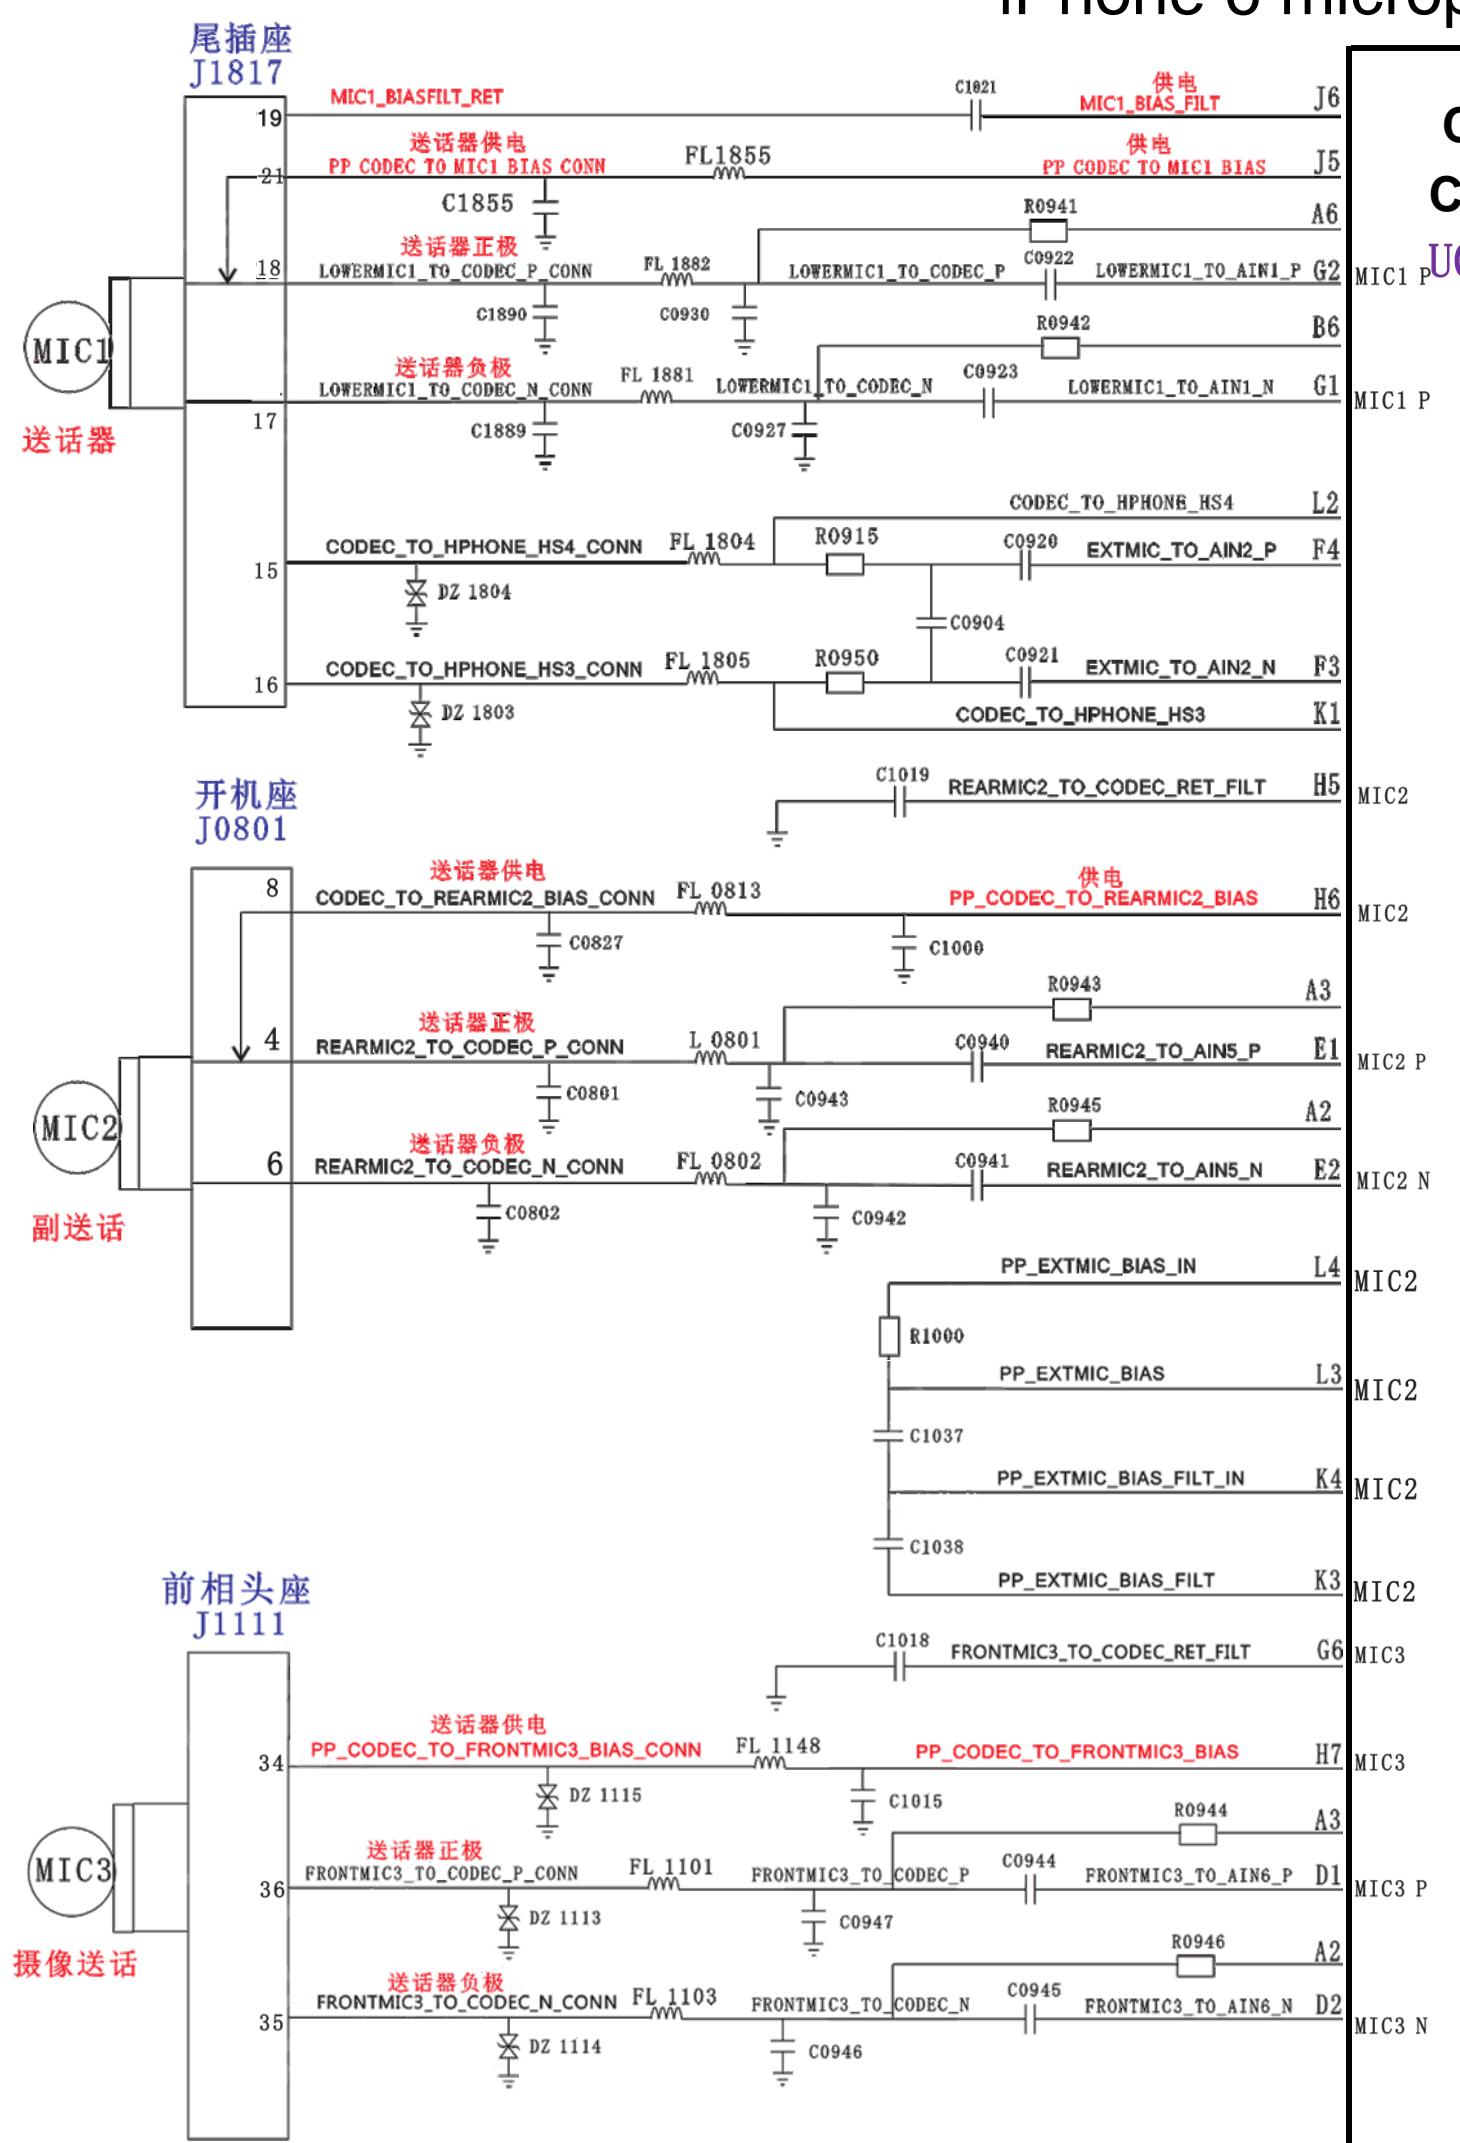


CODEC Chip J0900

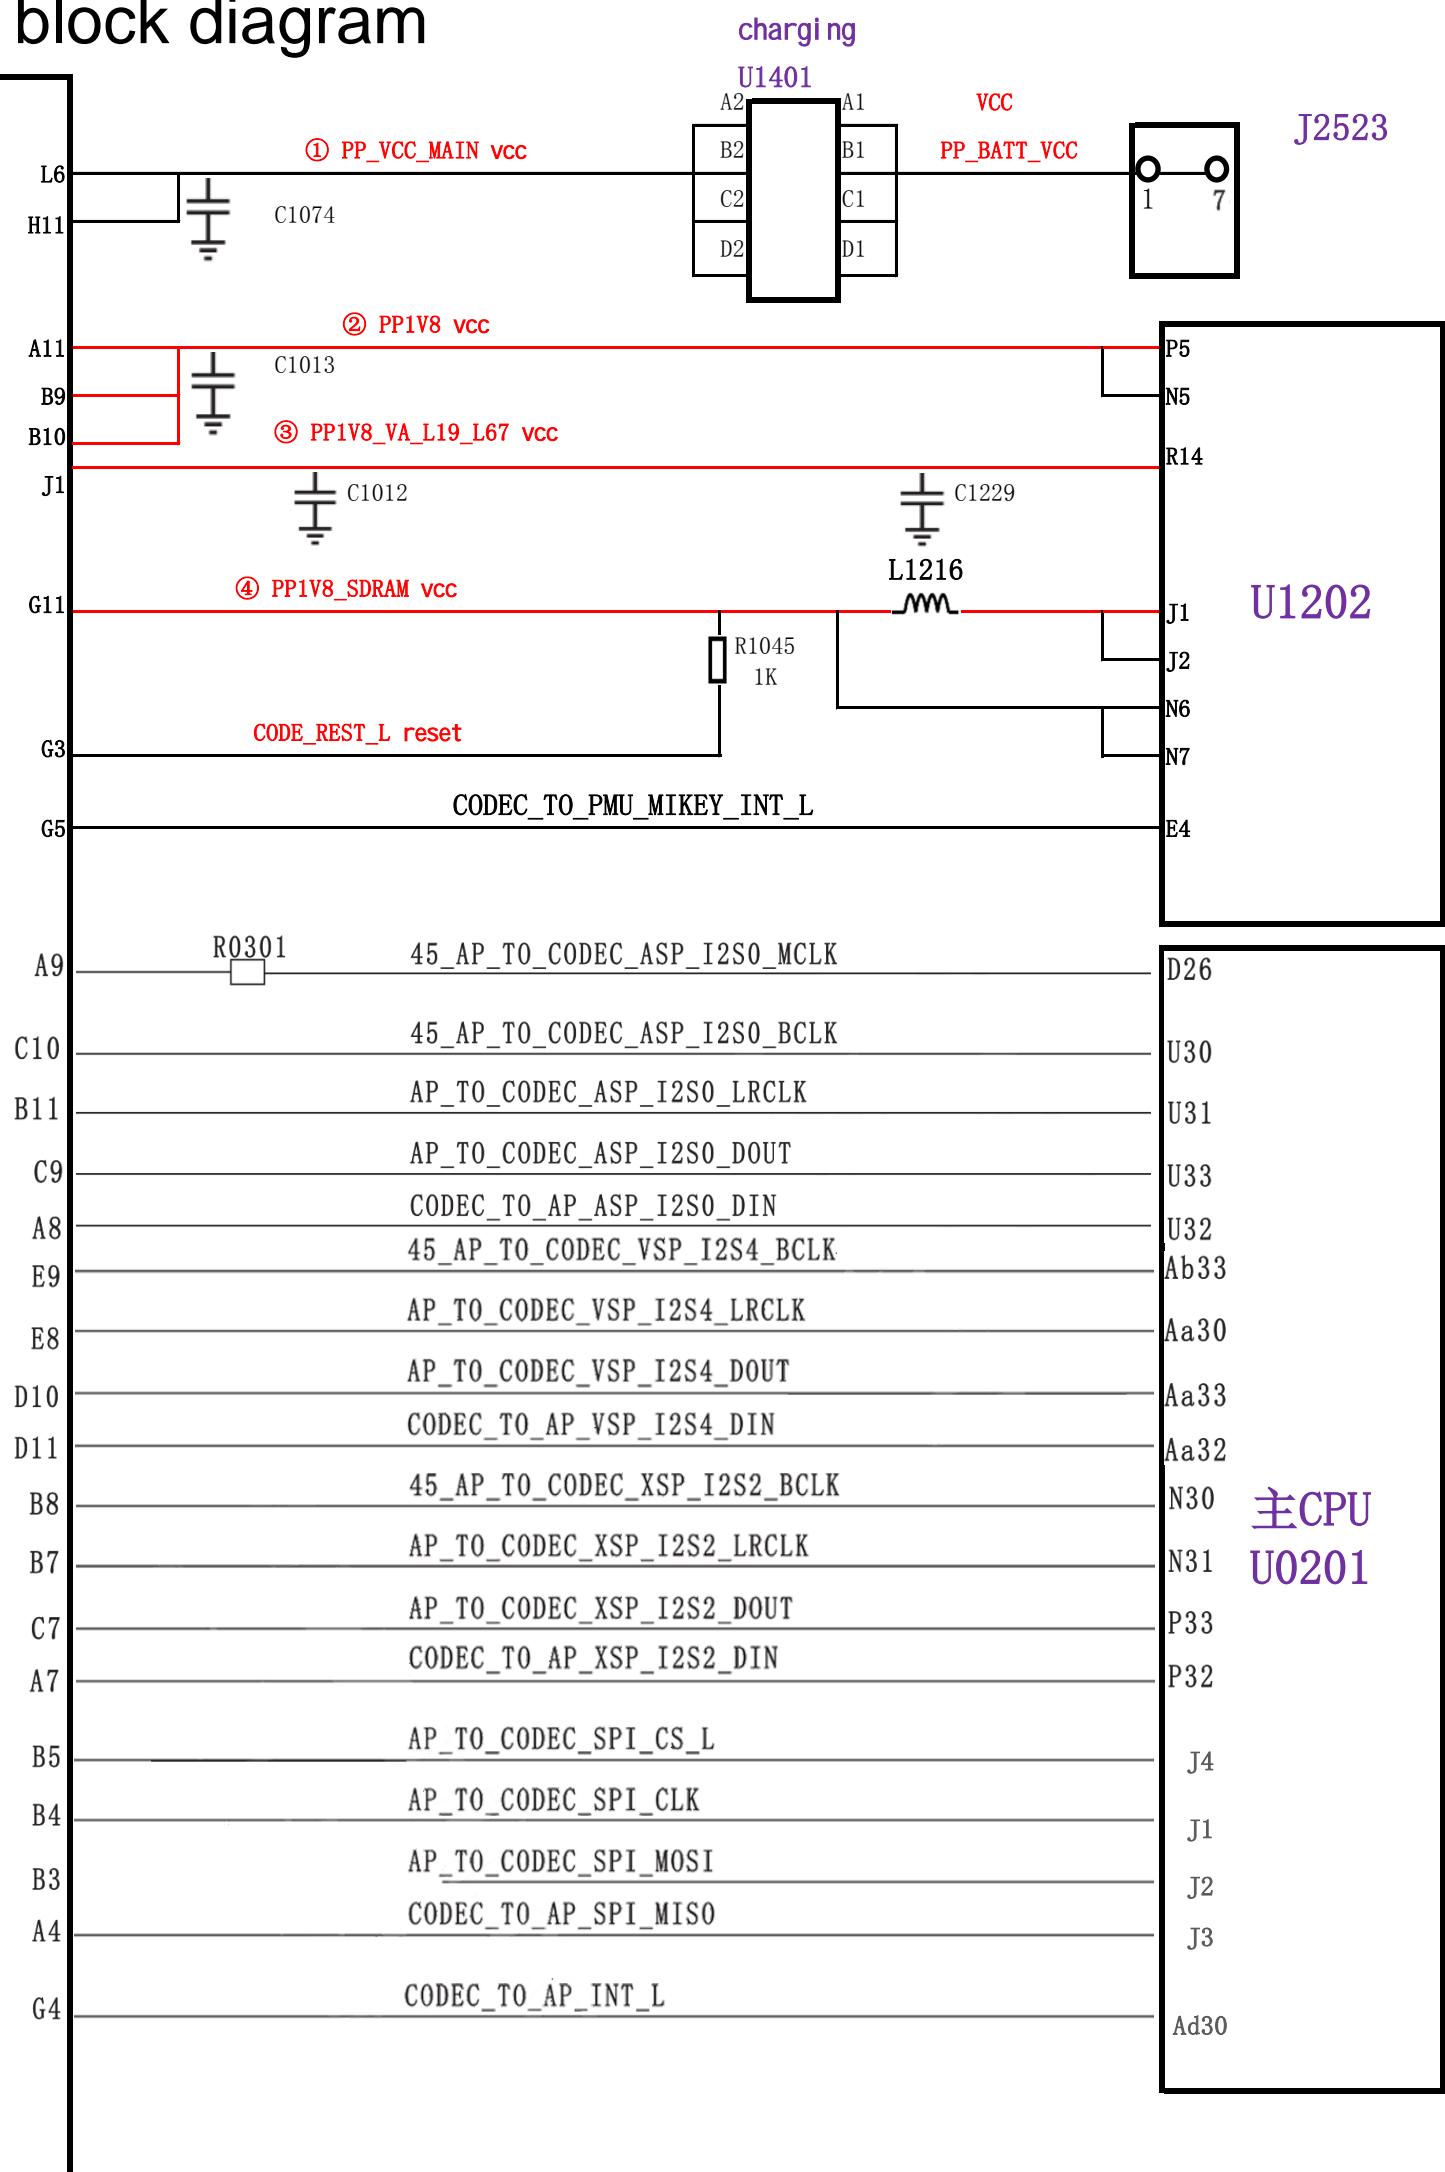



iphone6 Bs2503 block diagram (break wire no display)

主电源 U1202

J2019
显示座




29

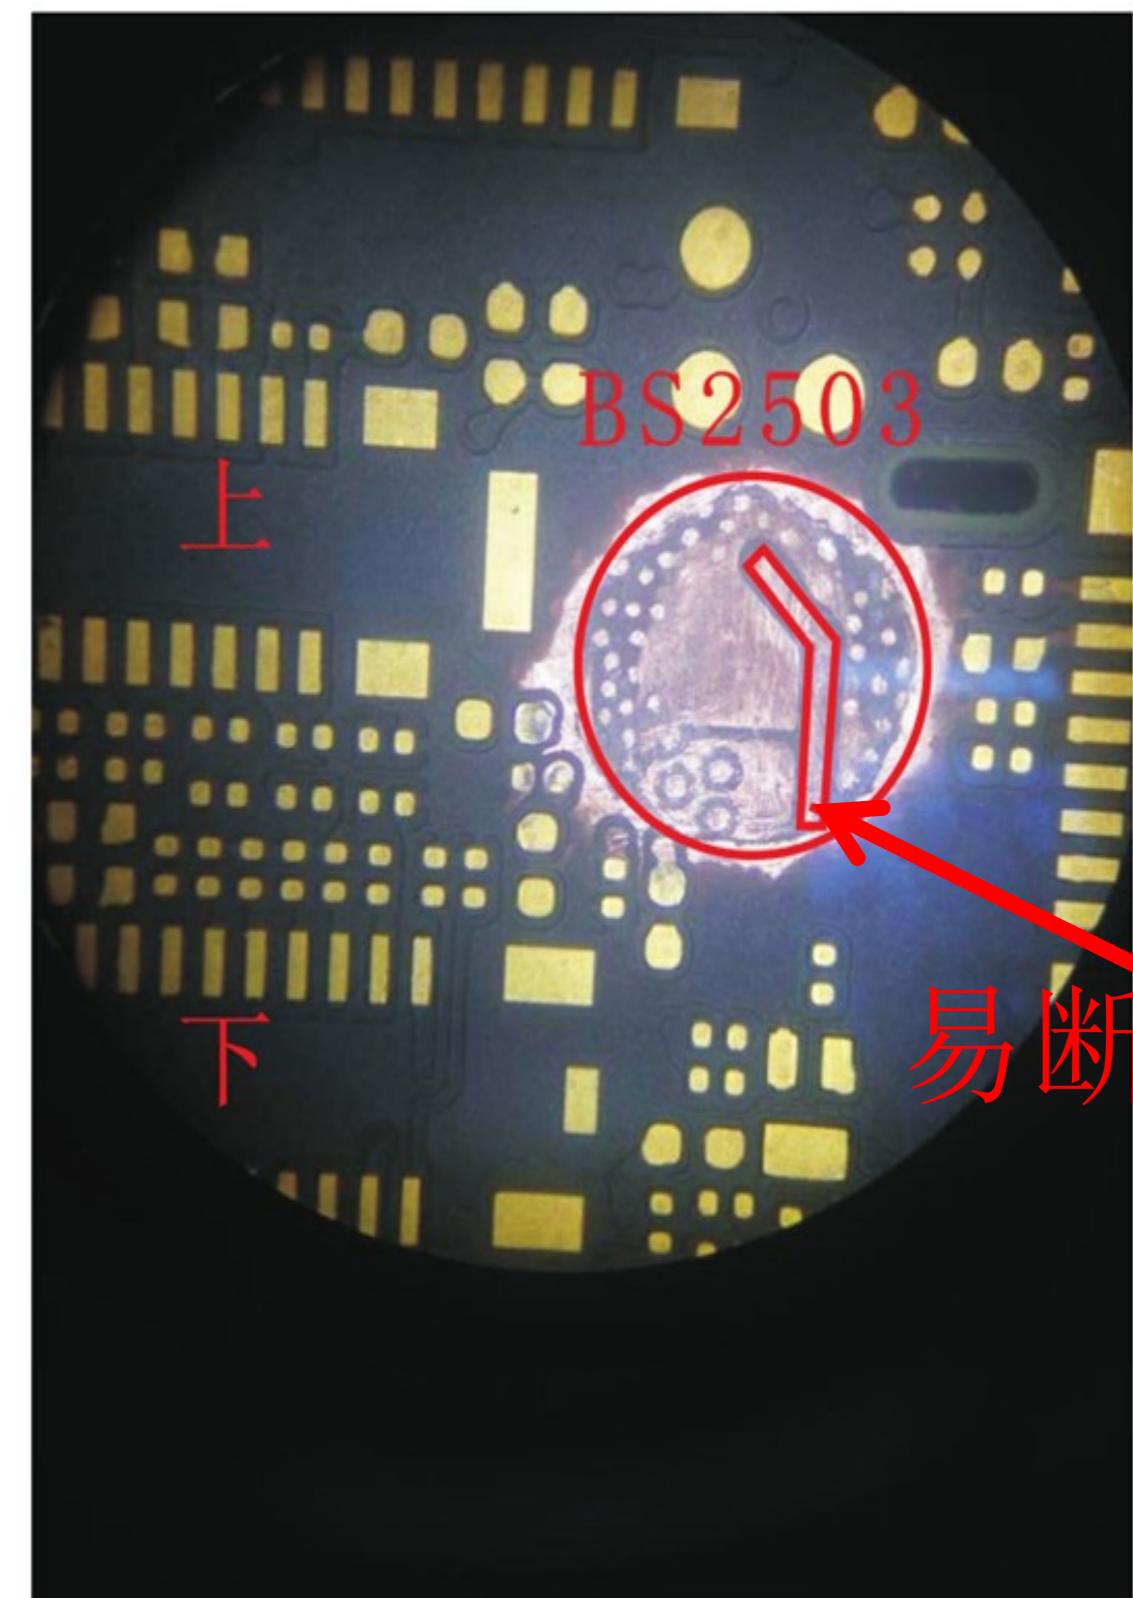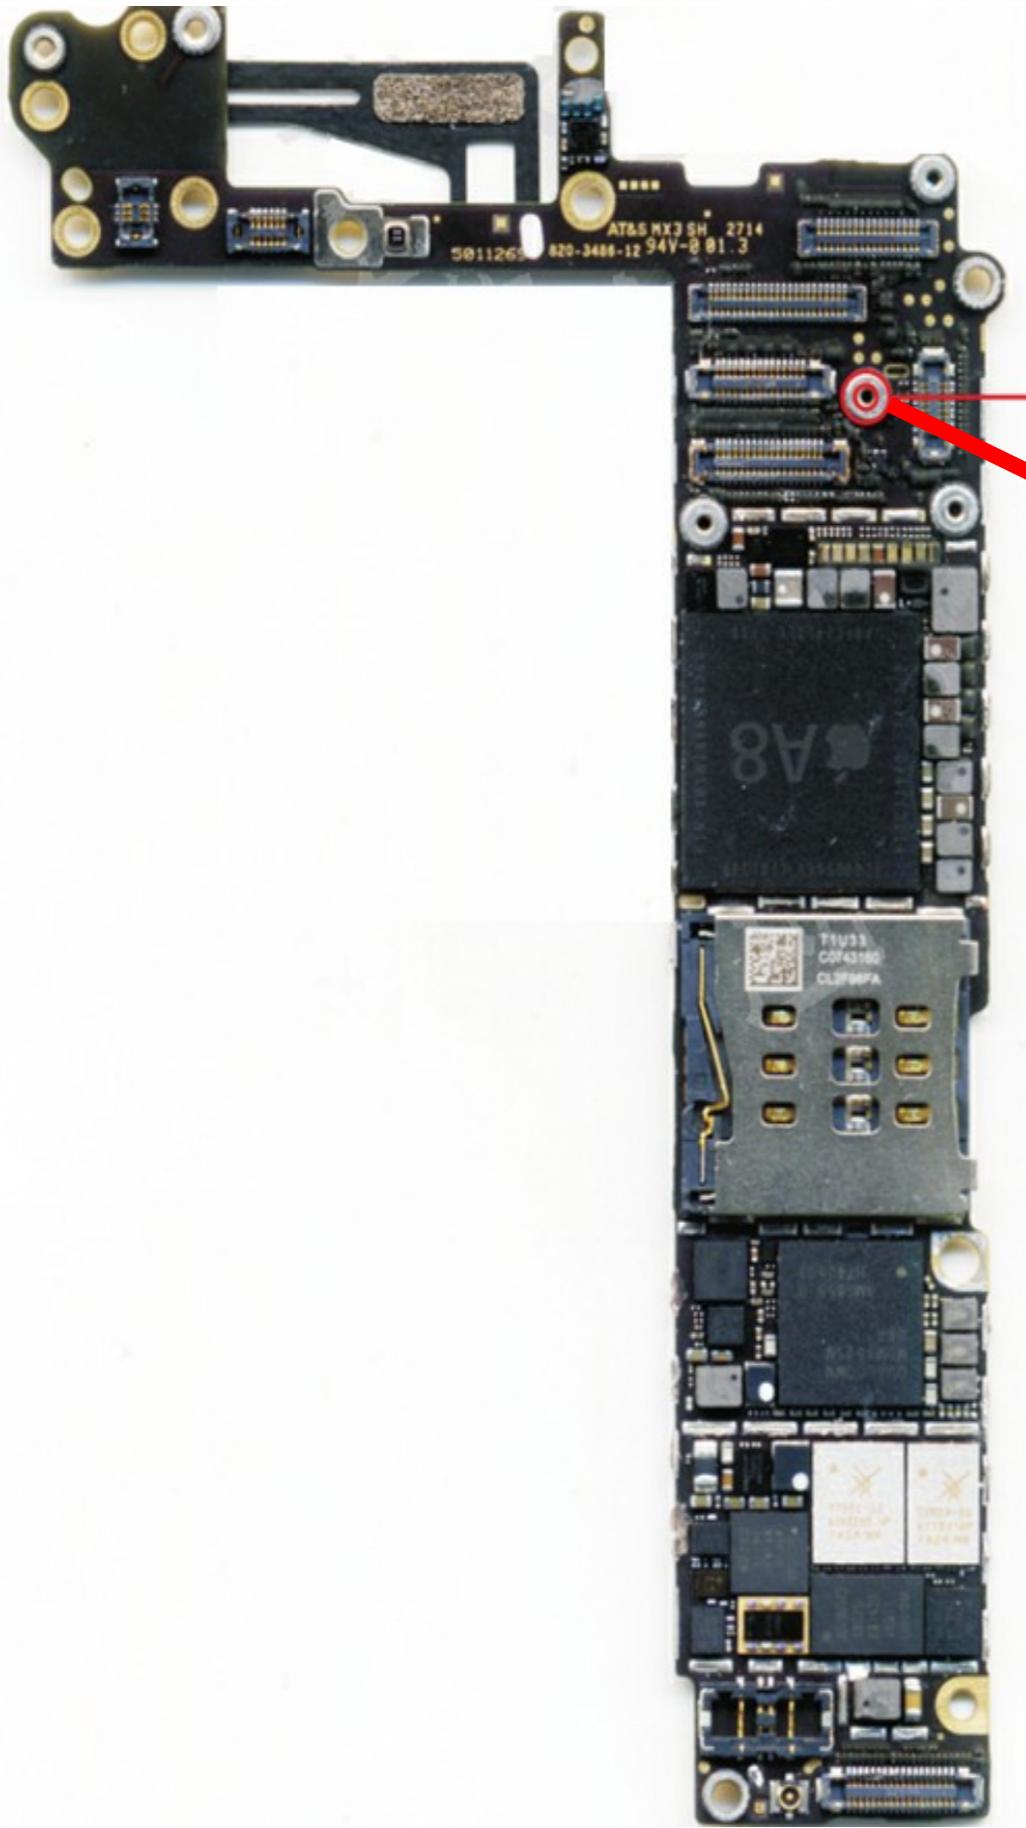


易断线


iphone 6 receiver block diagram

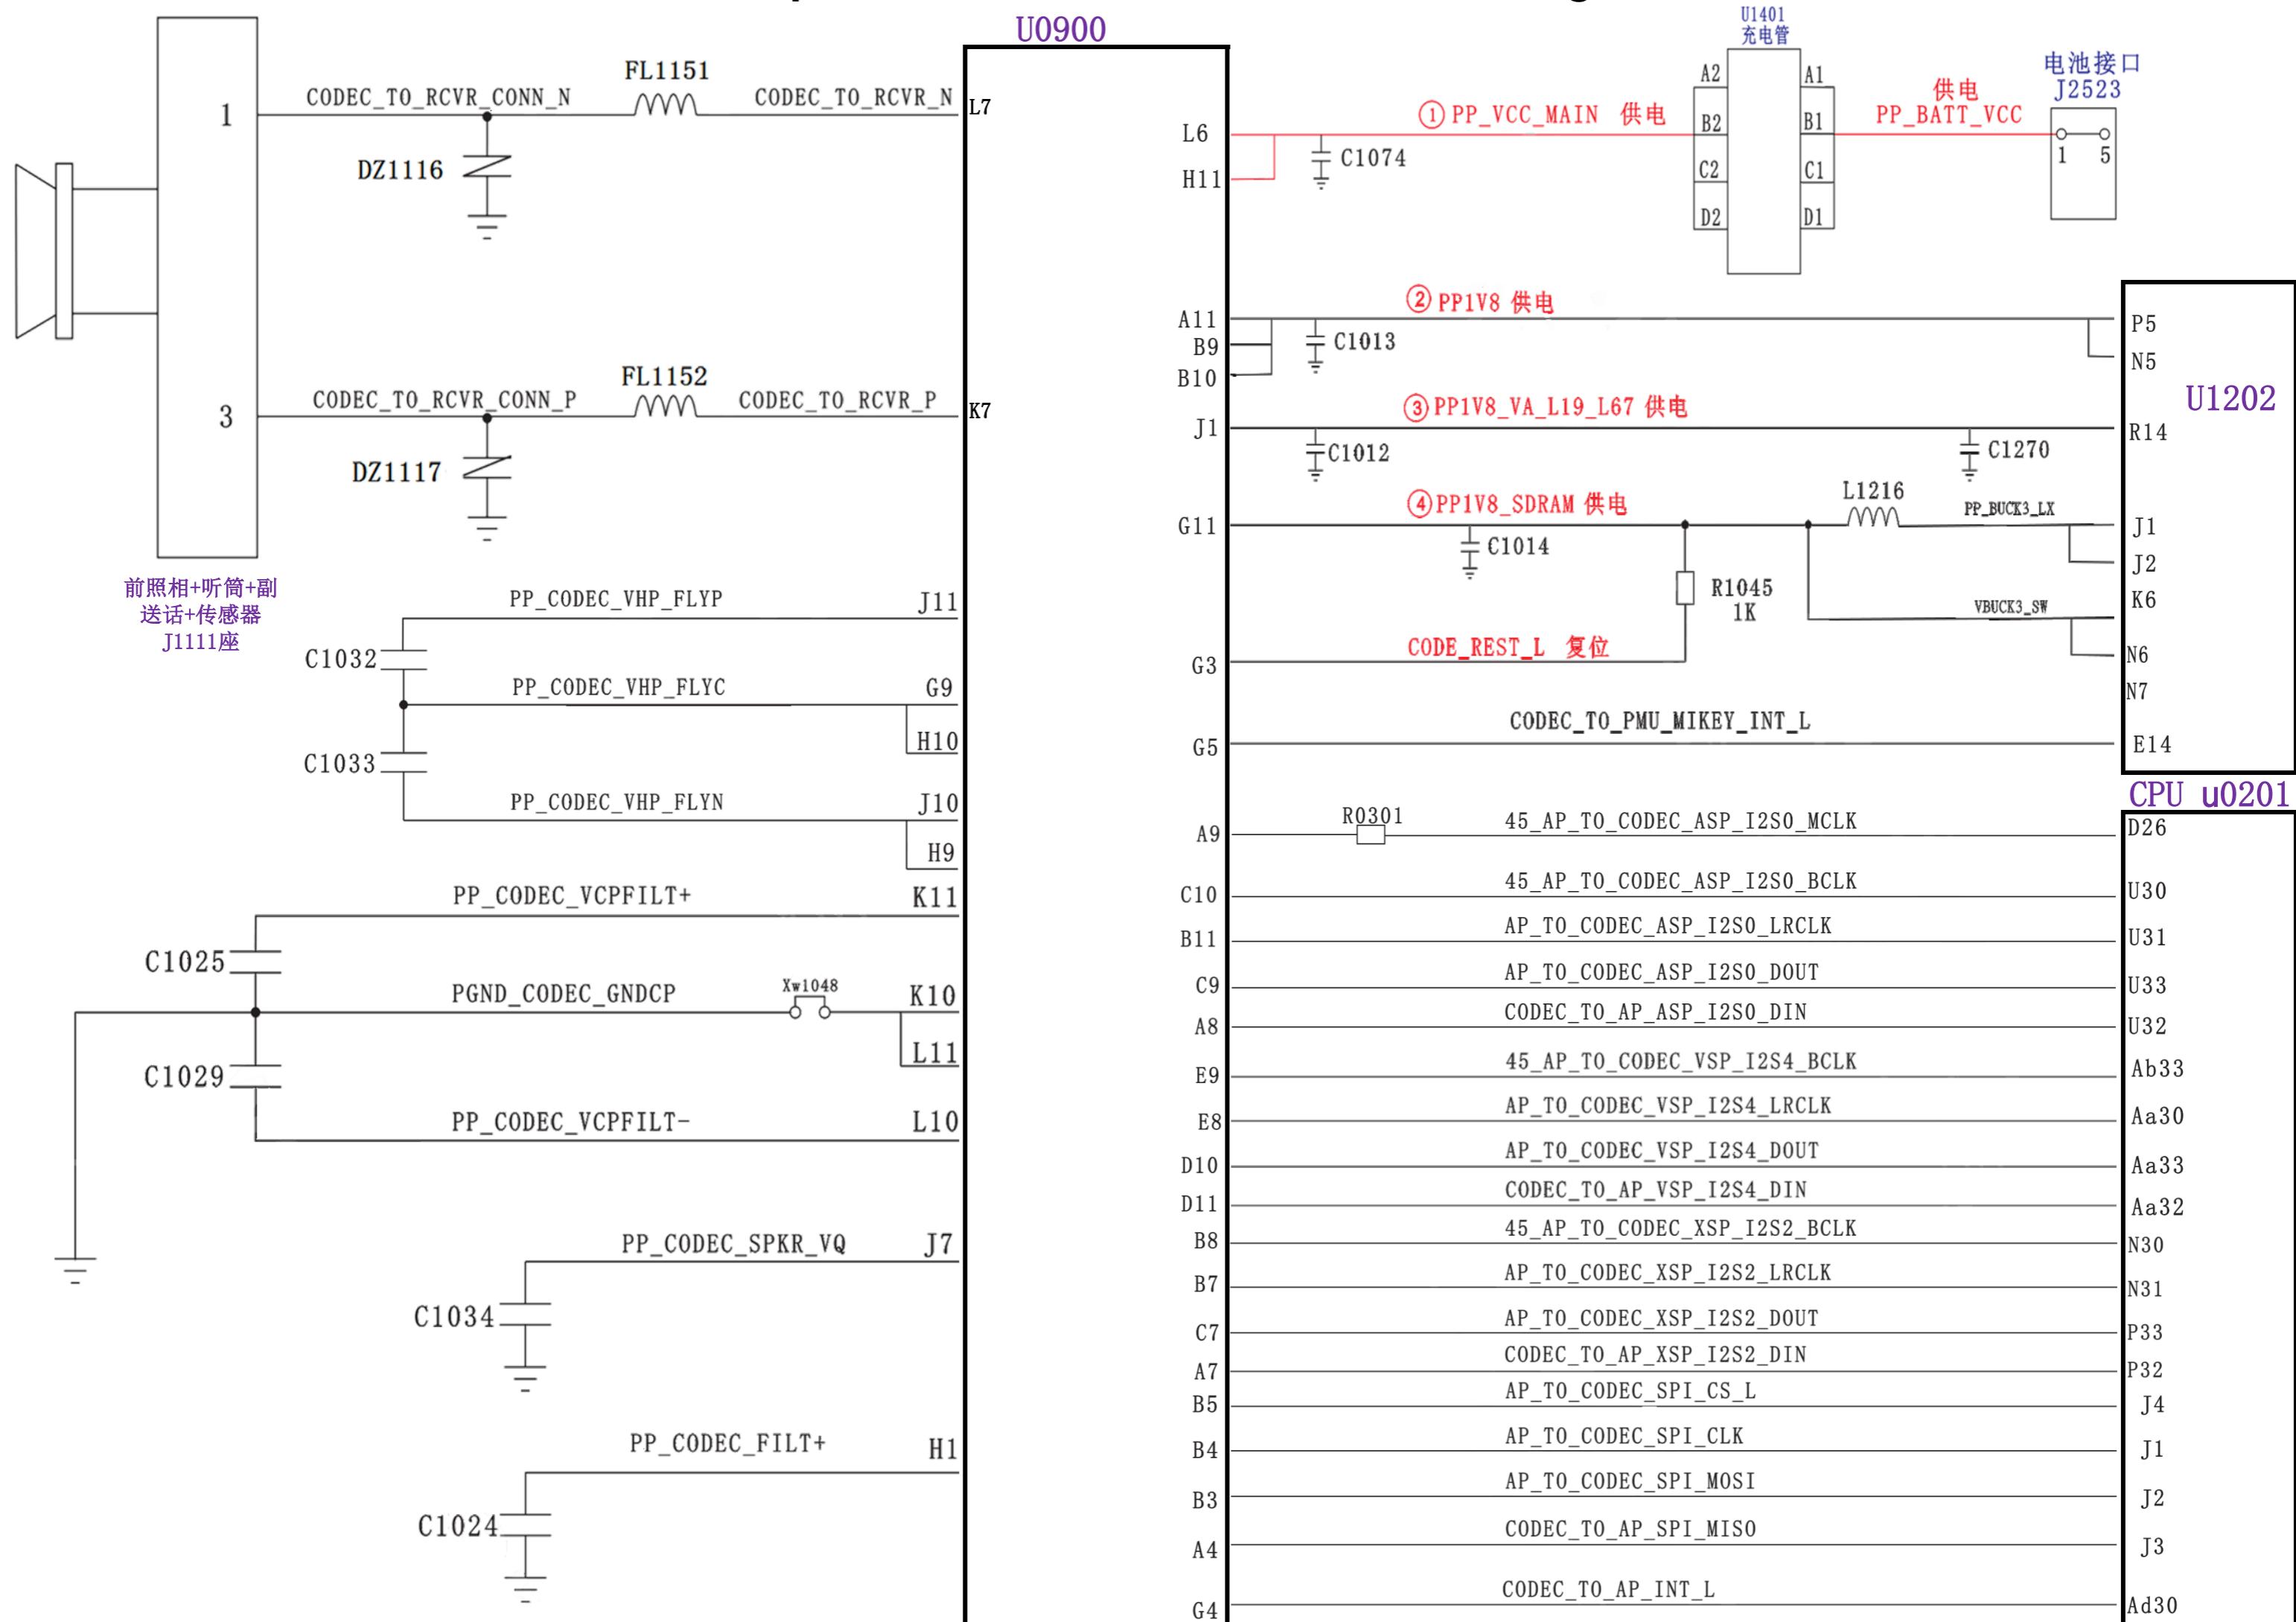


iphone 6 return key block di agram

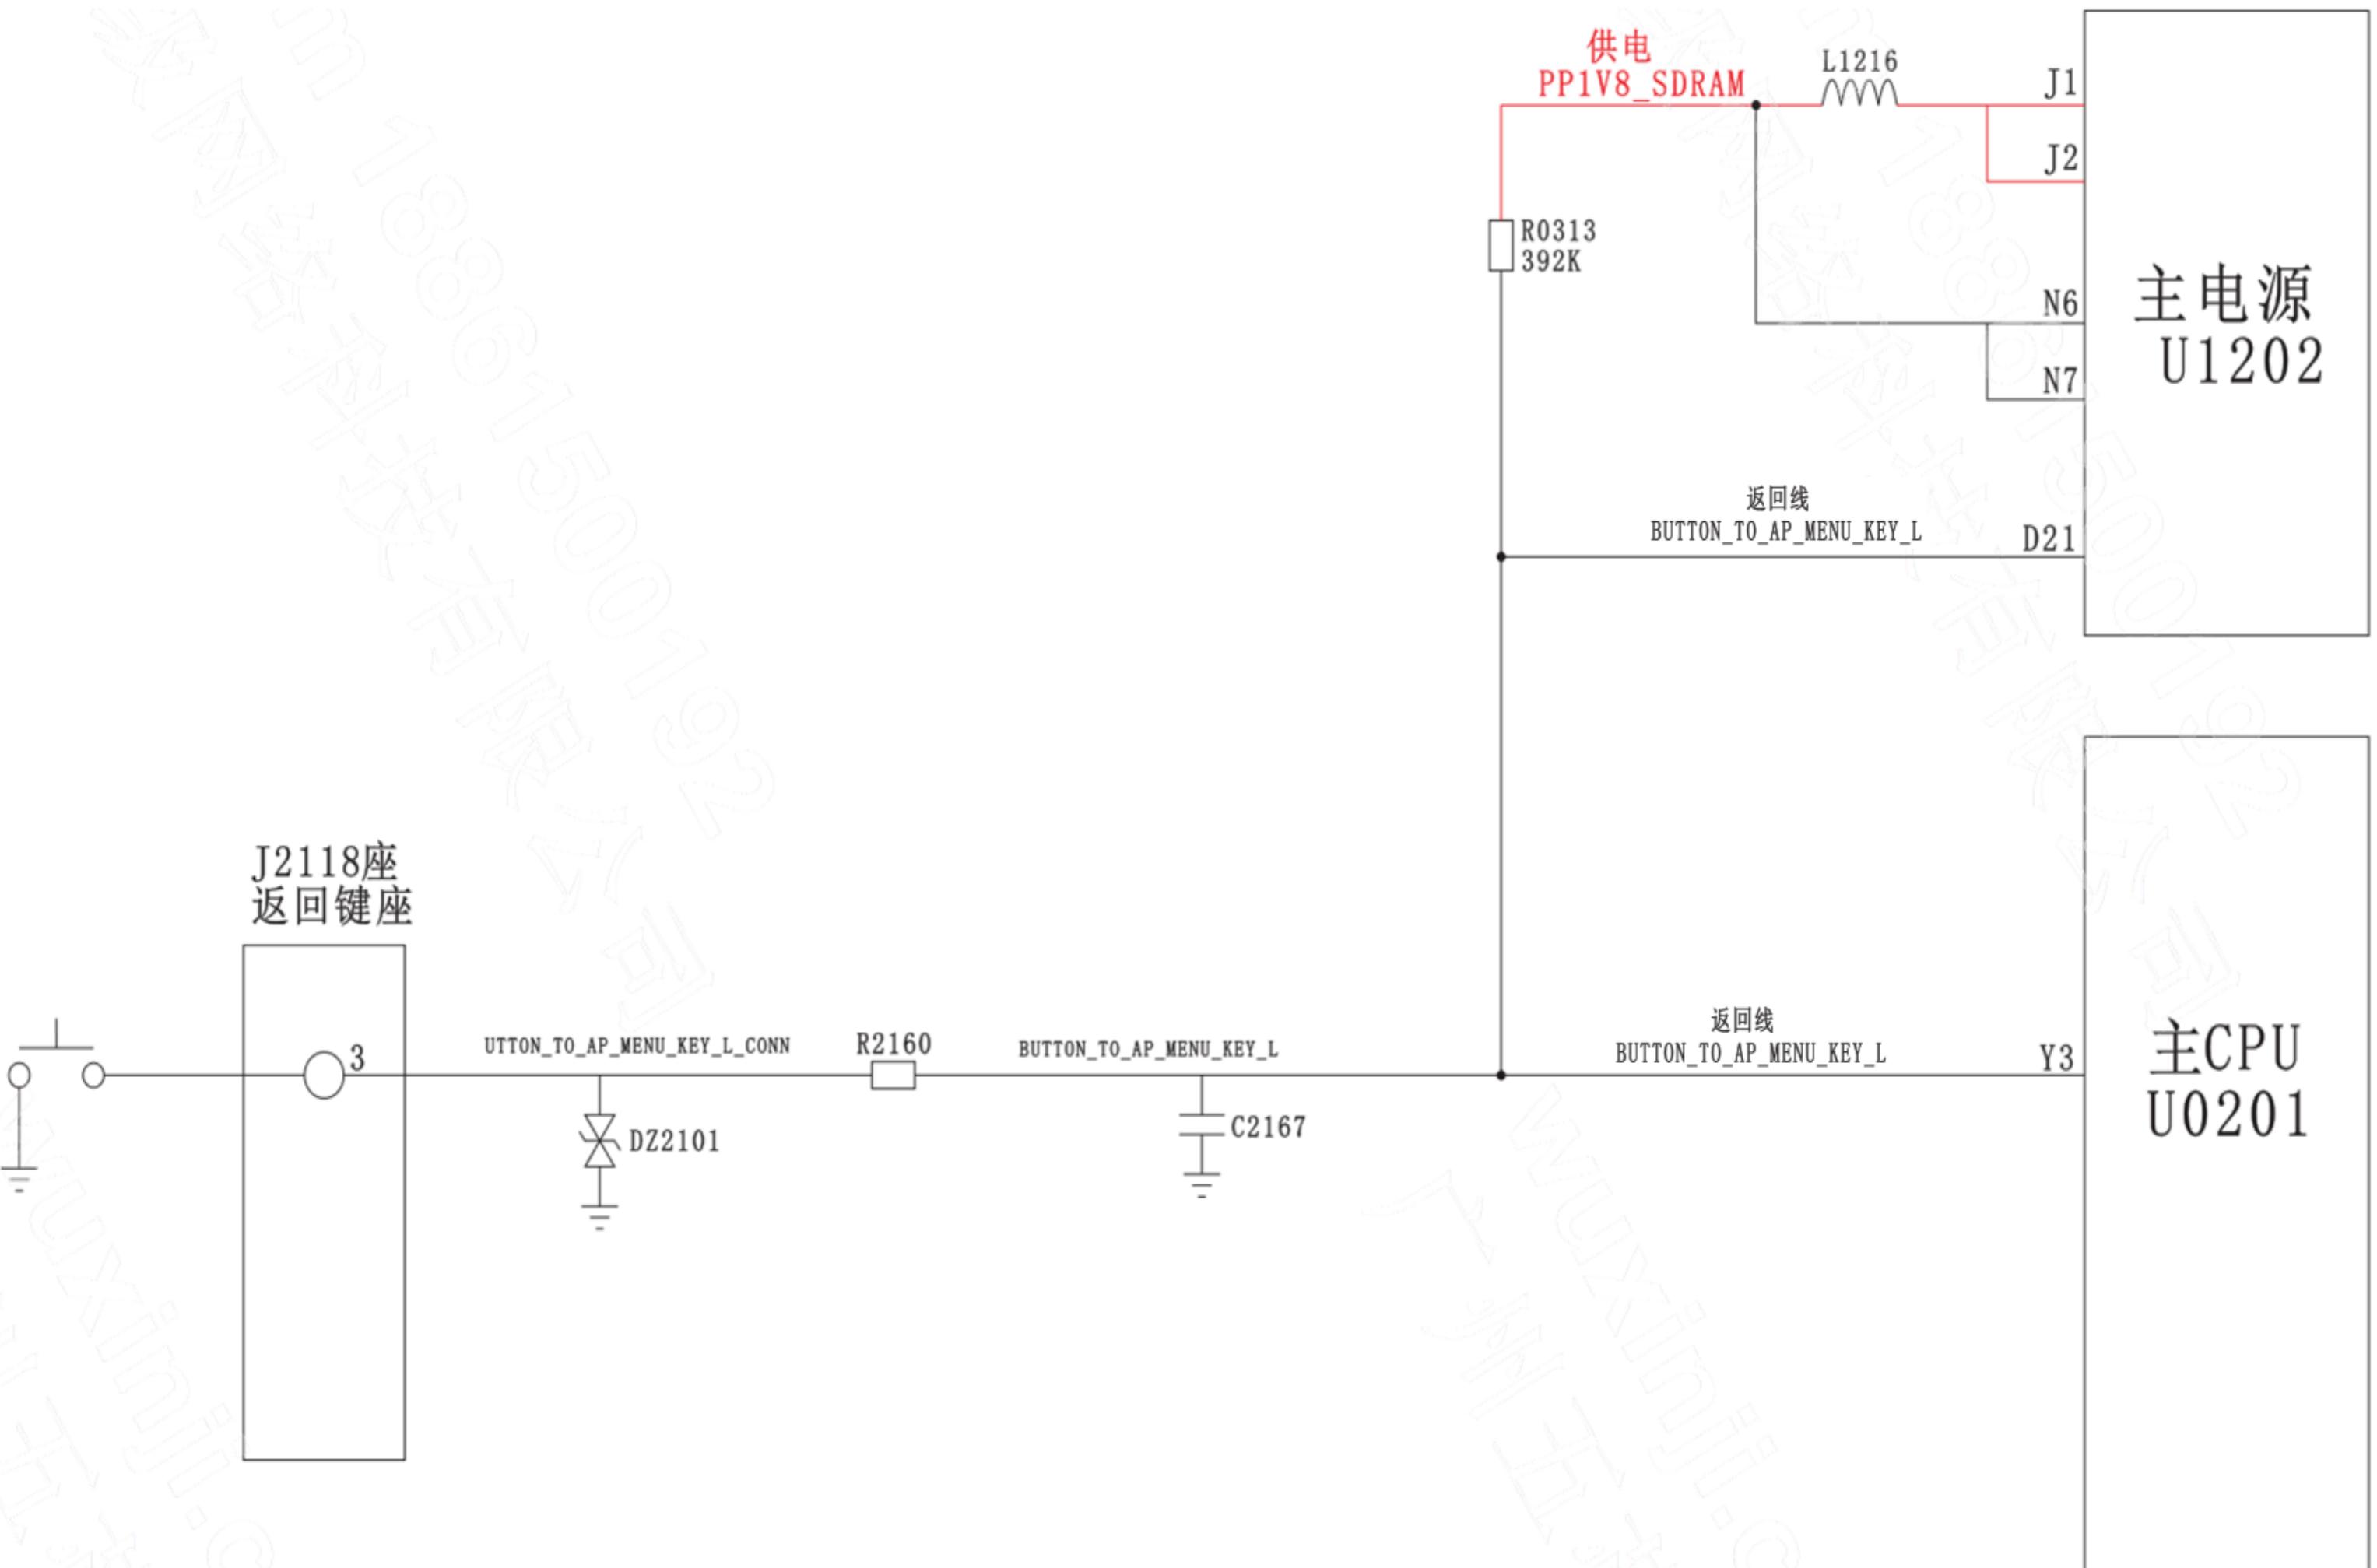


iphone 6 right screw base bs2501

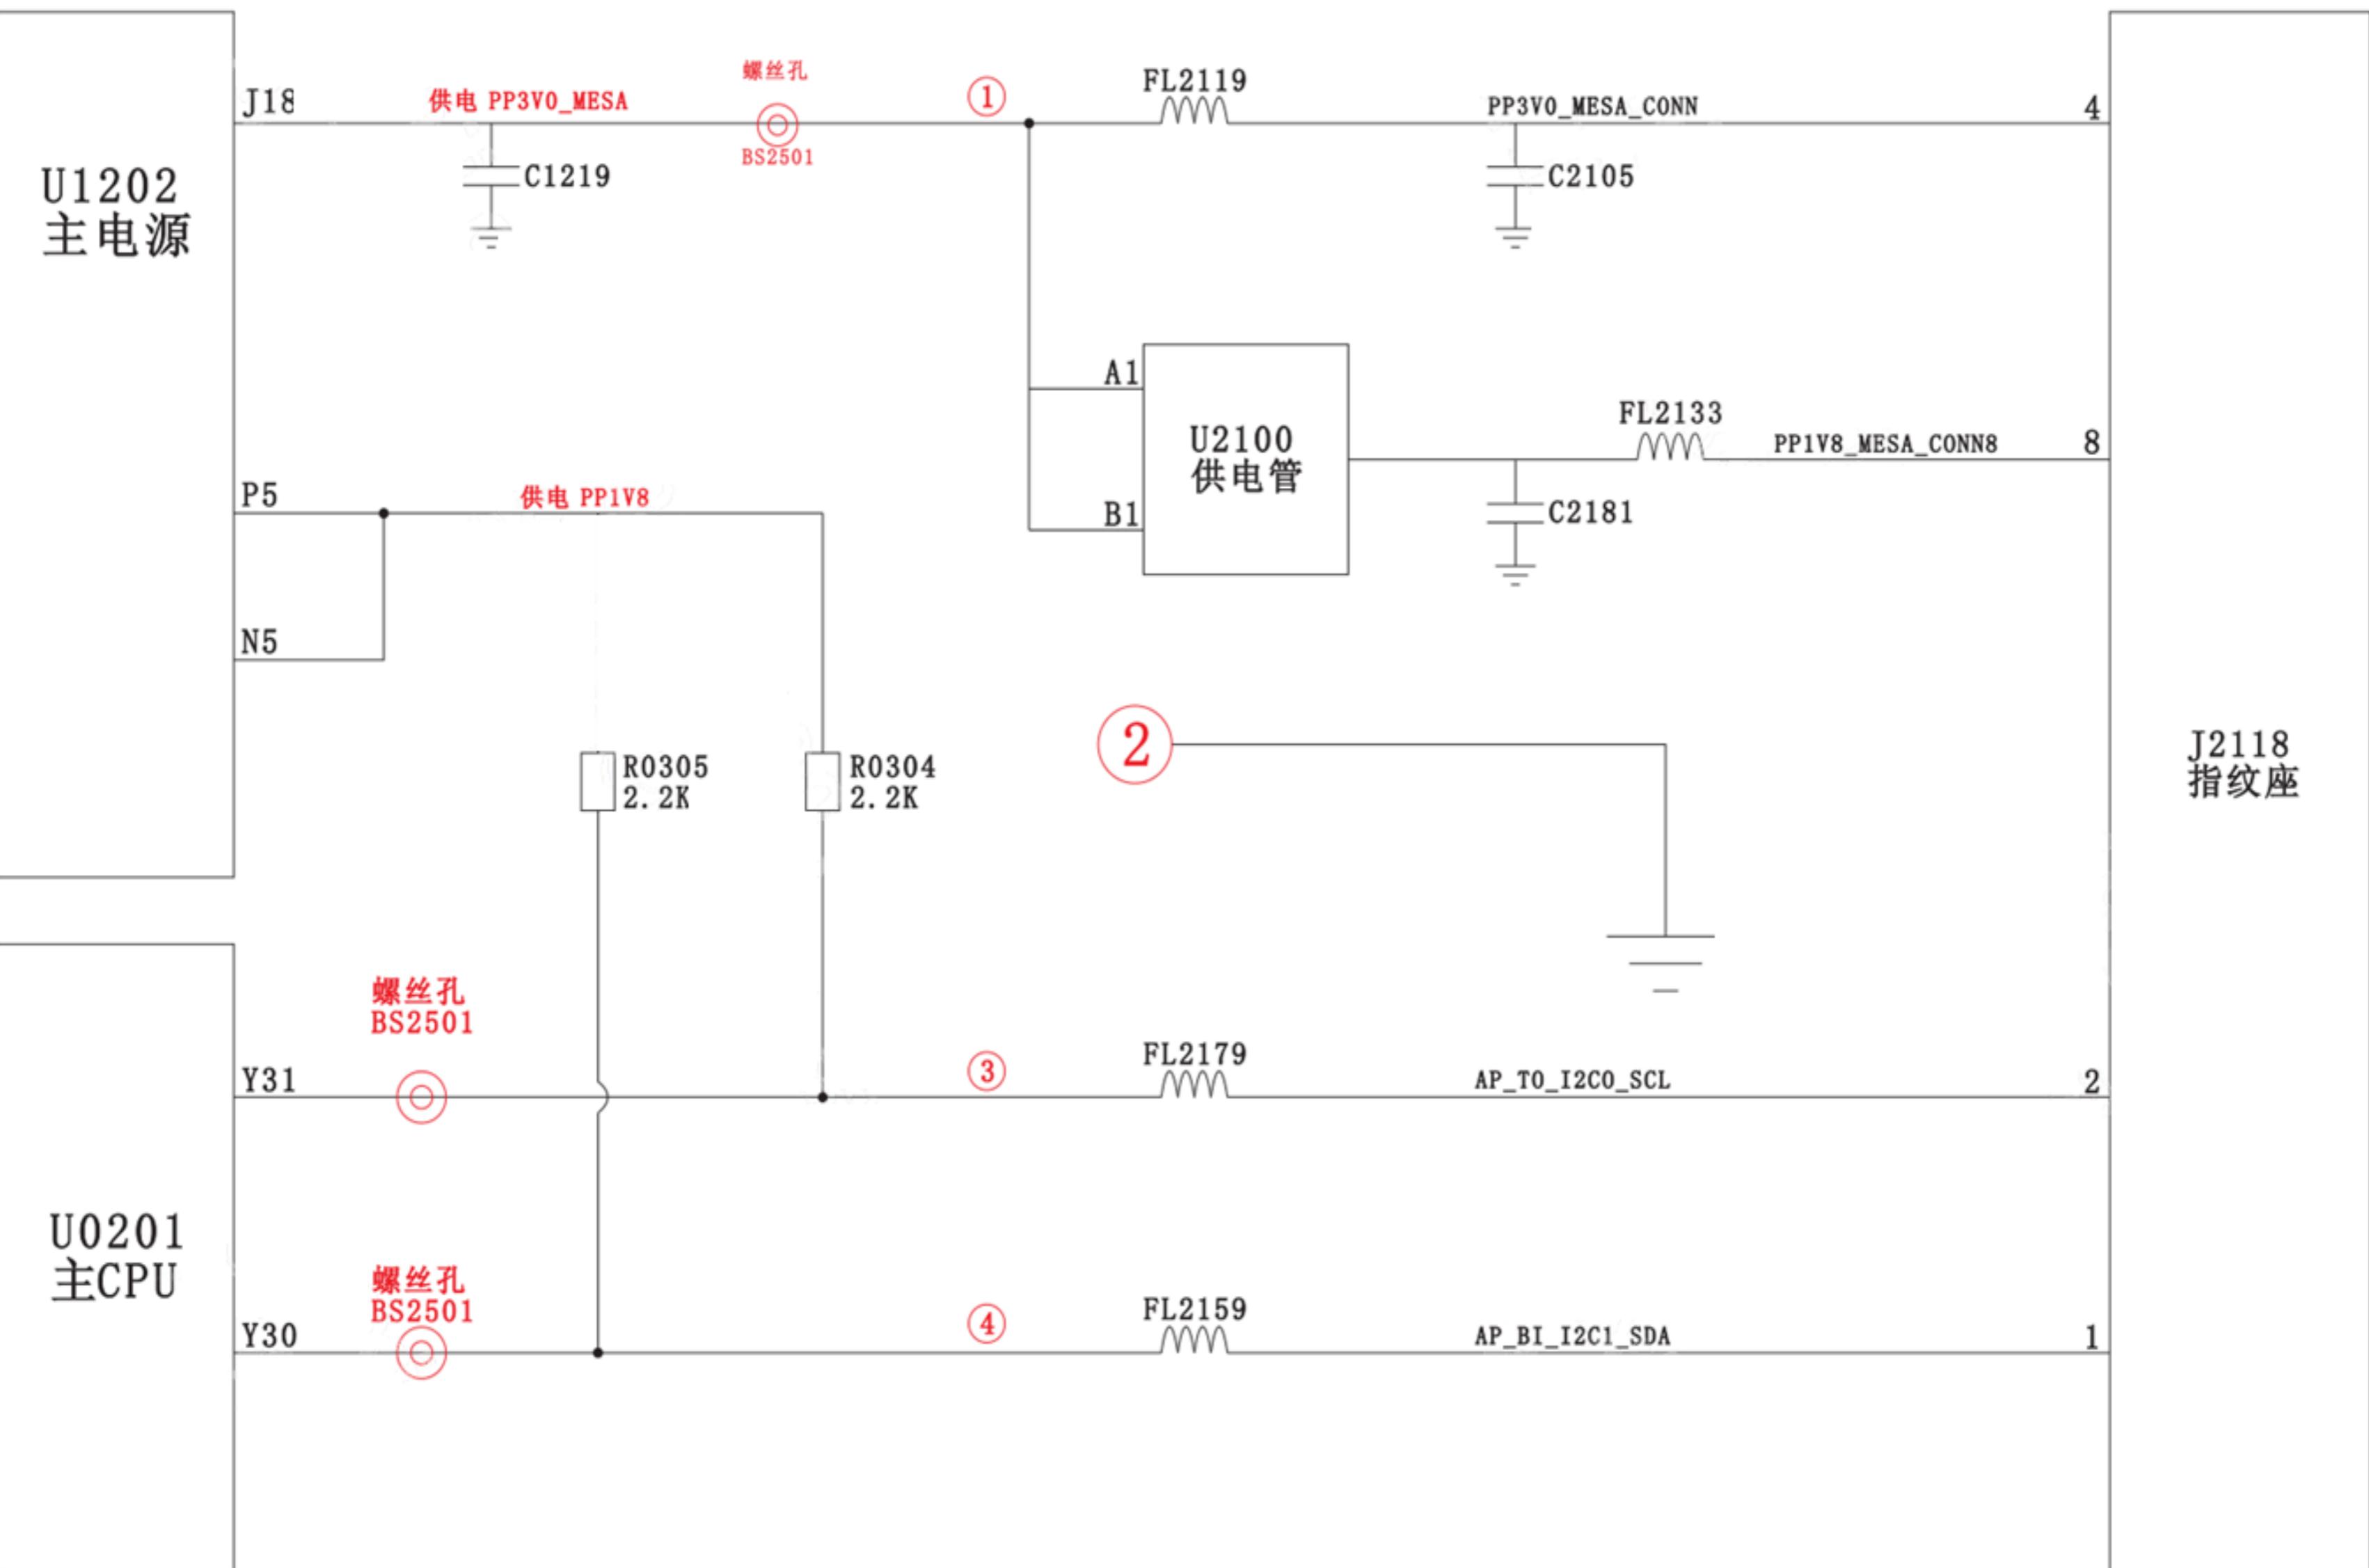


苹果6代 右螺丝孔 Bs2501 断线无指纹（报错53）元件彩图

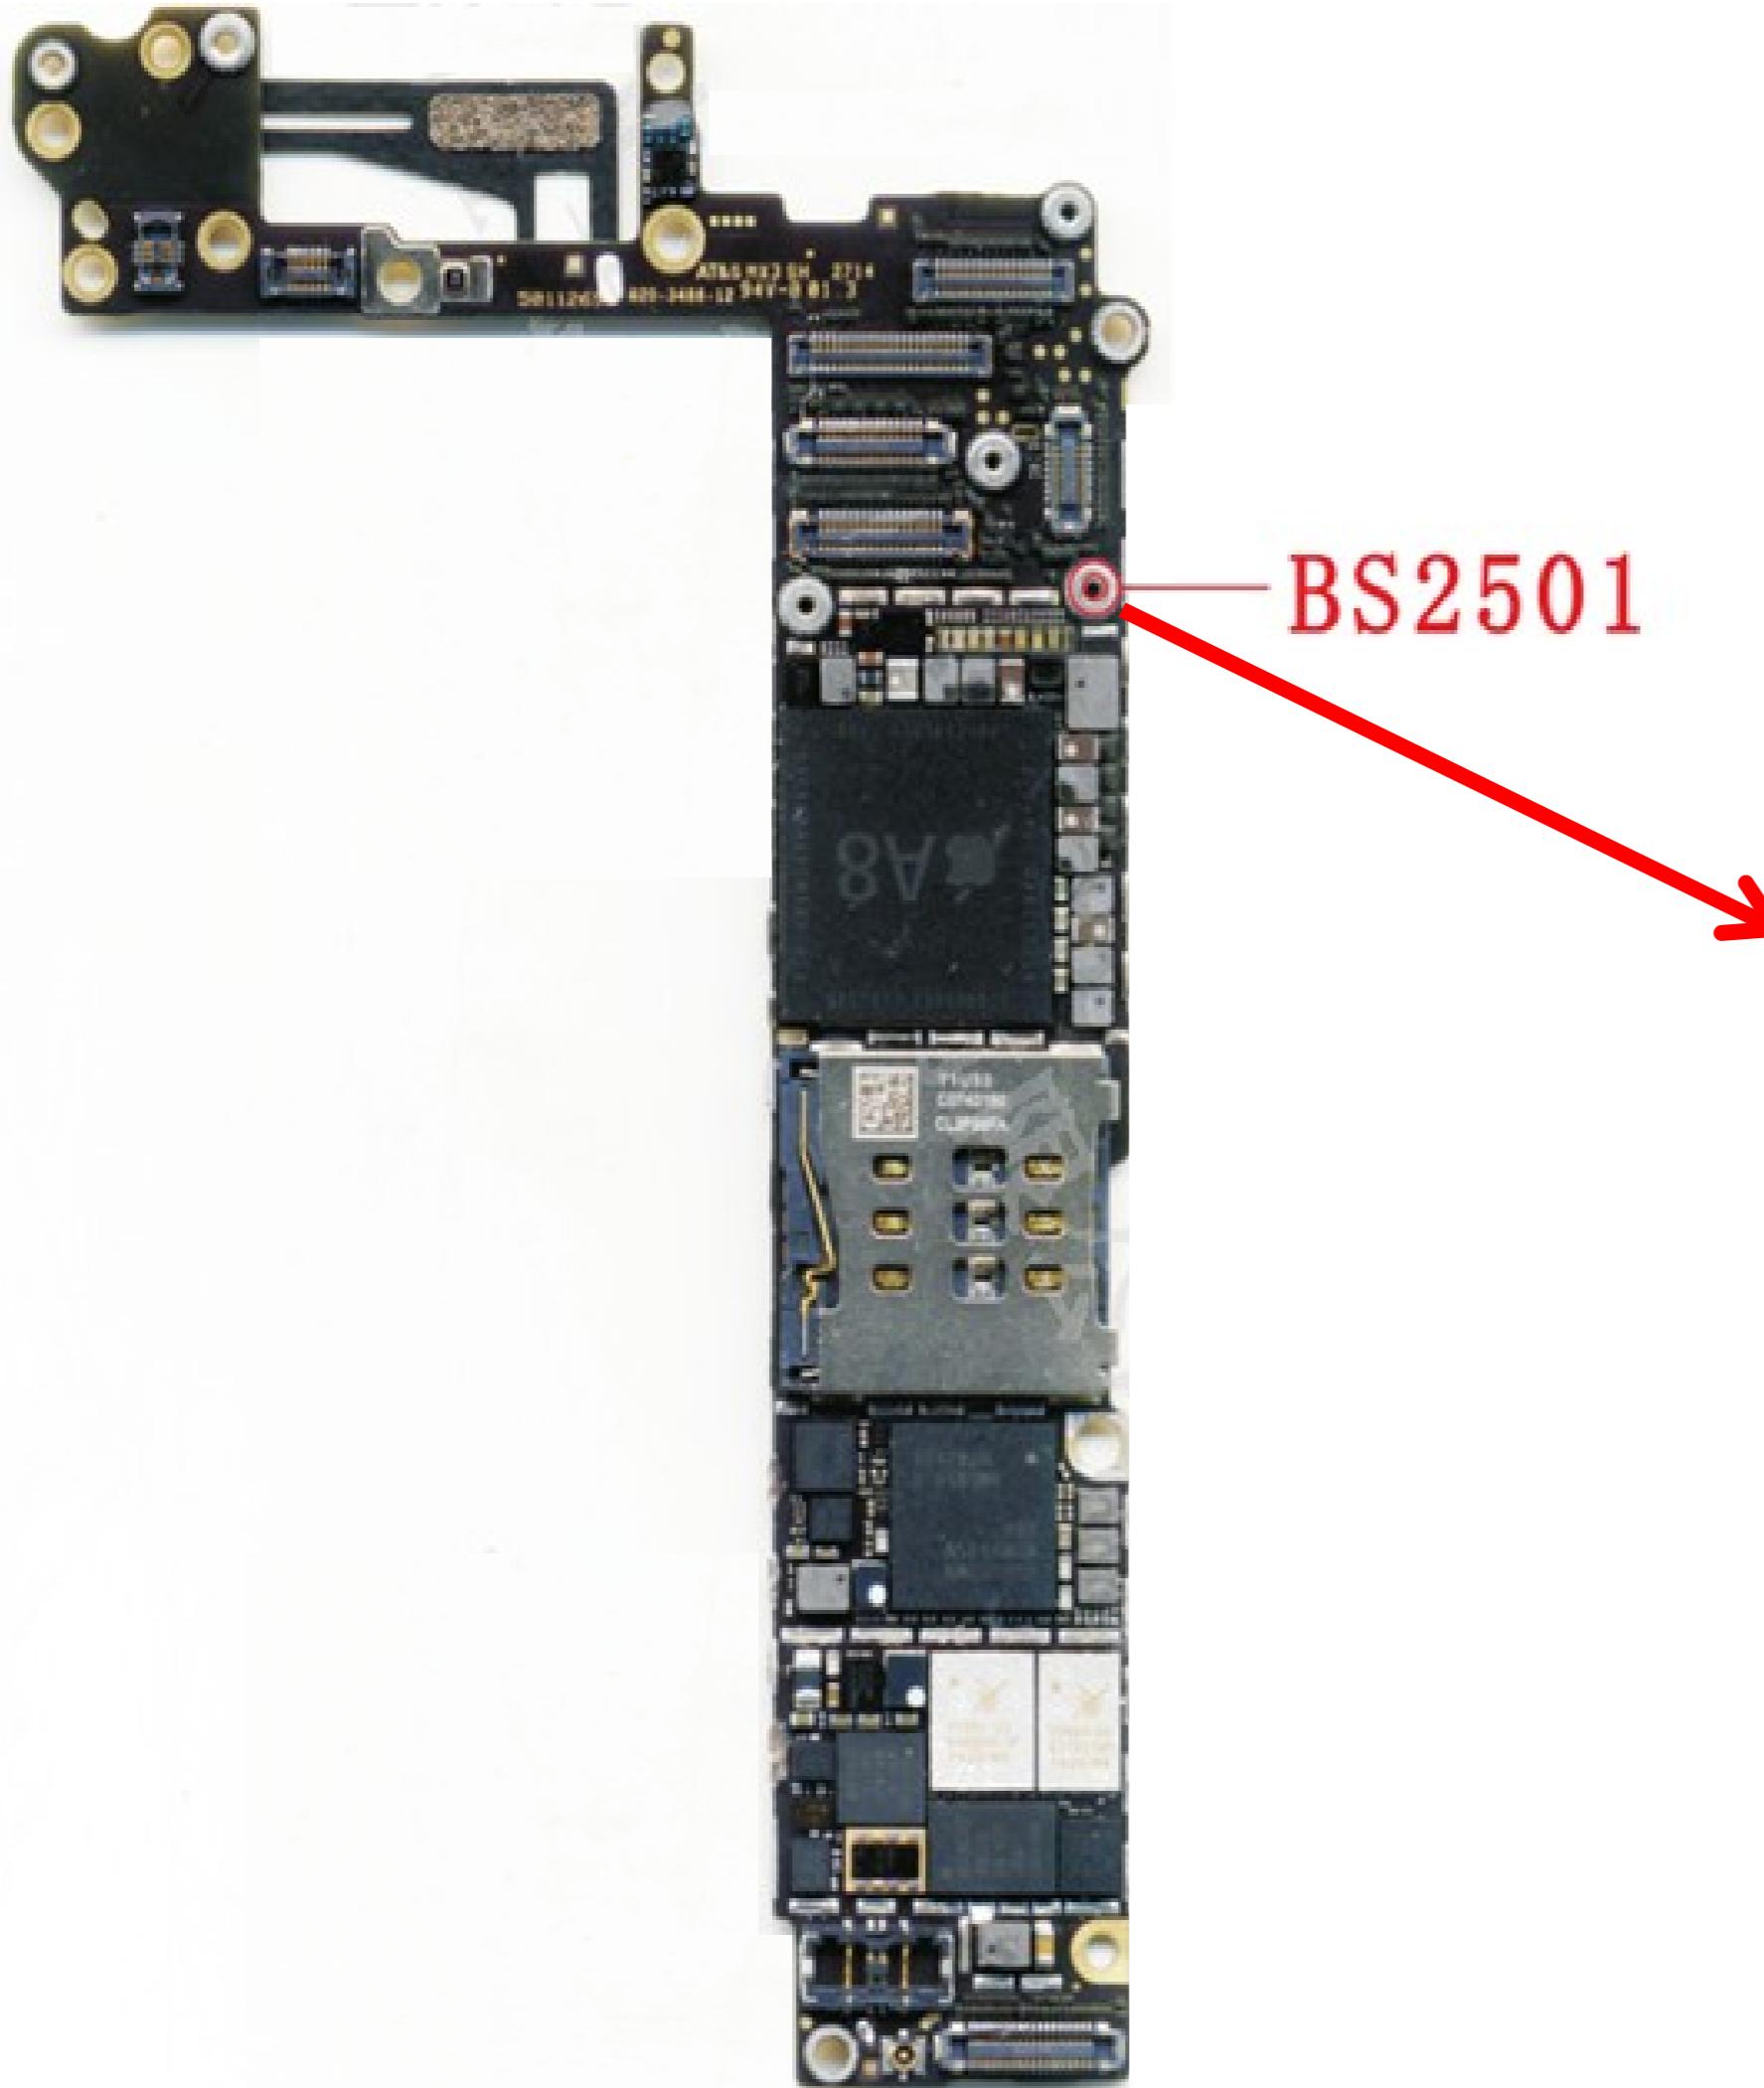


iphone 6 left screw base Bs2502 block diagram no shoot no display

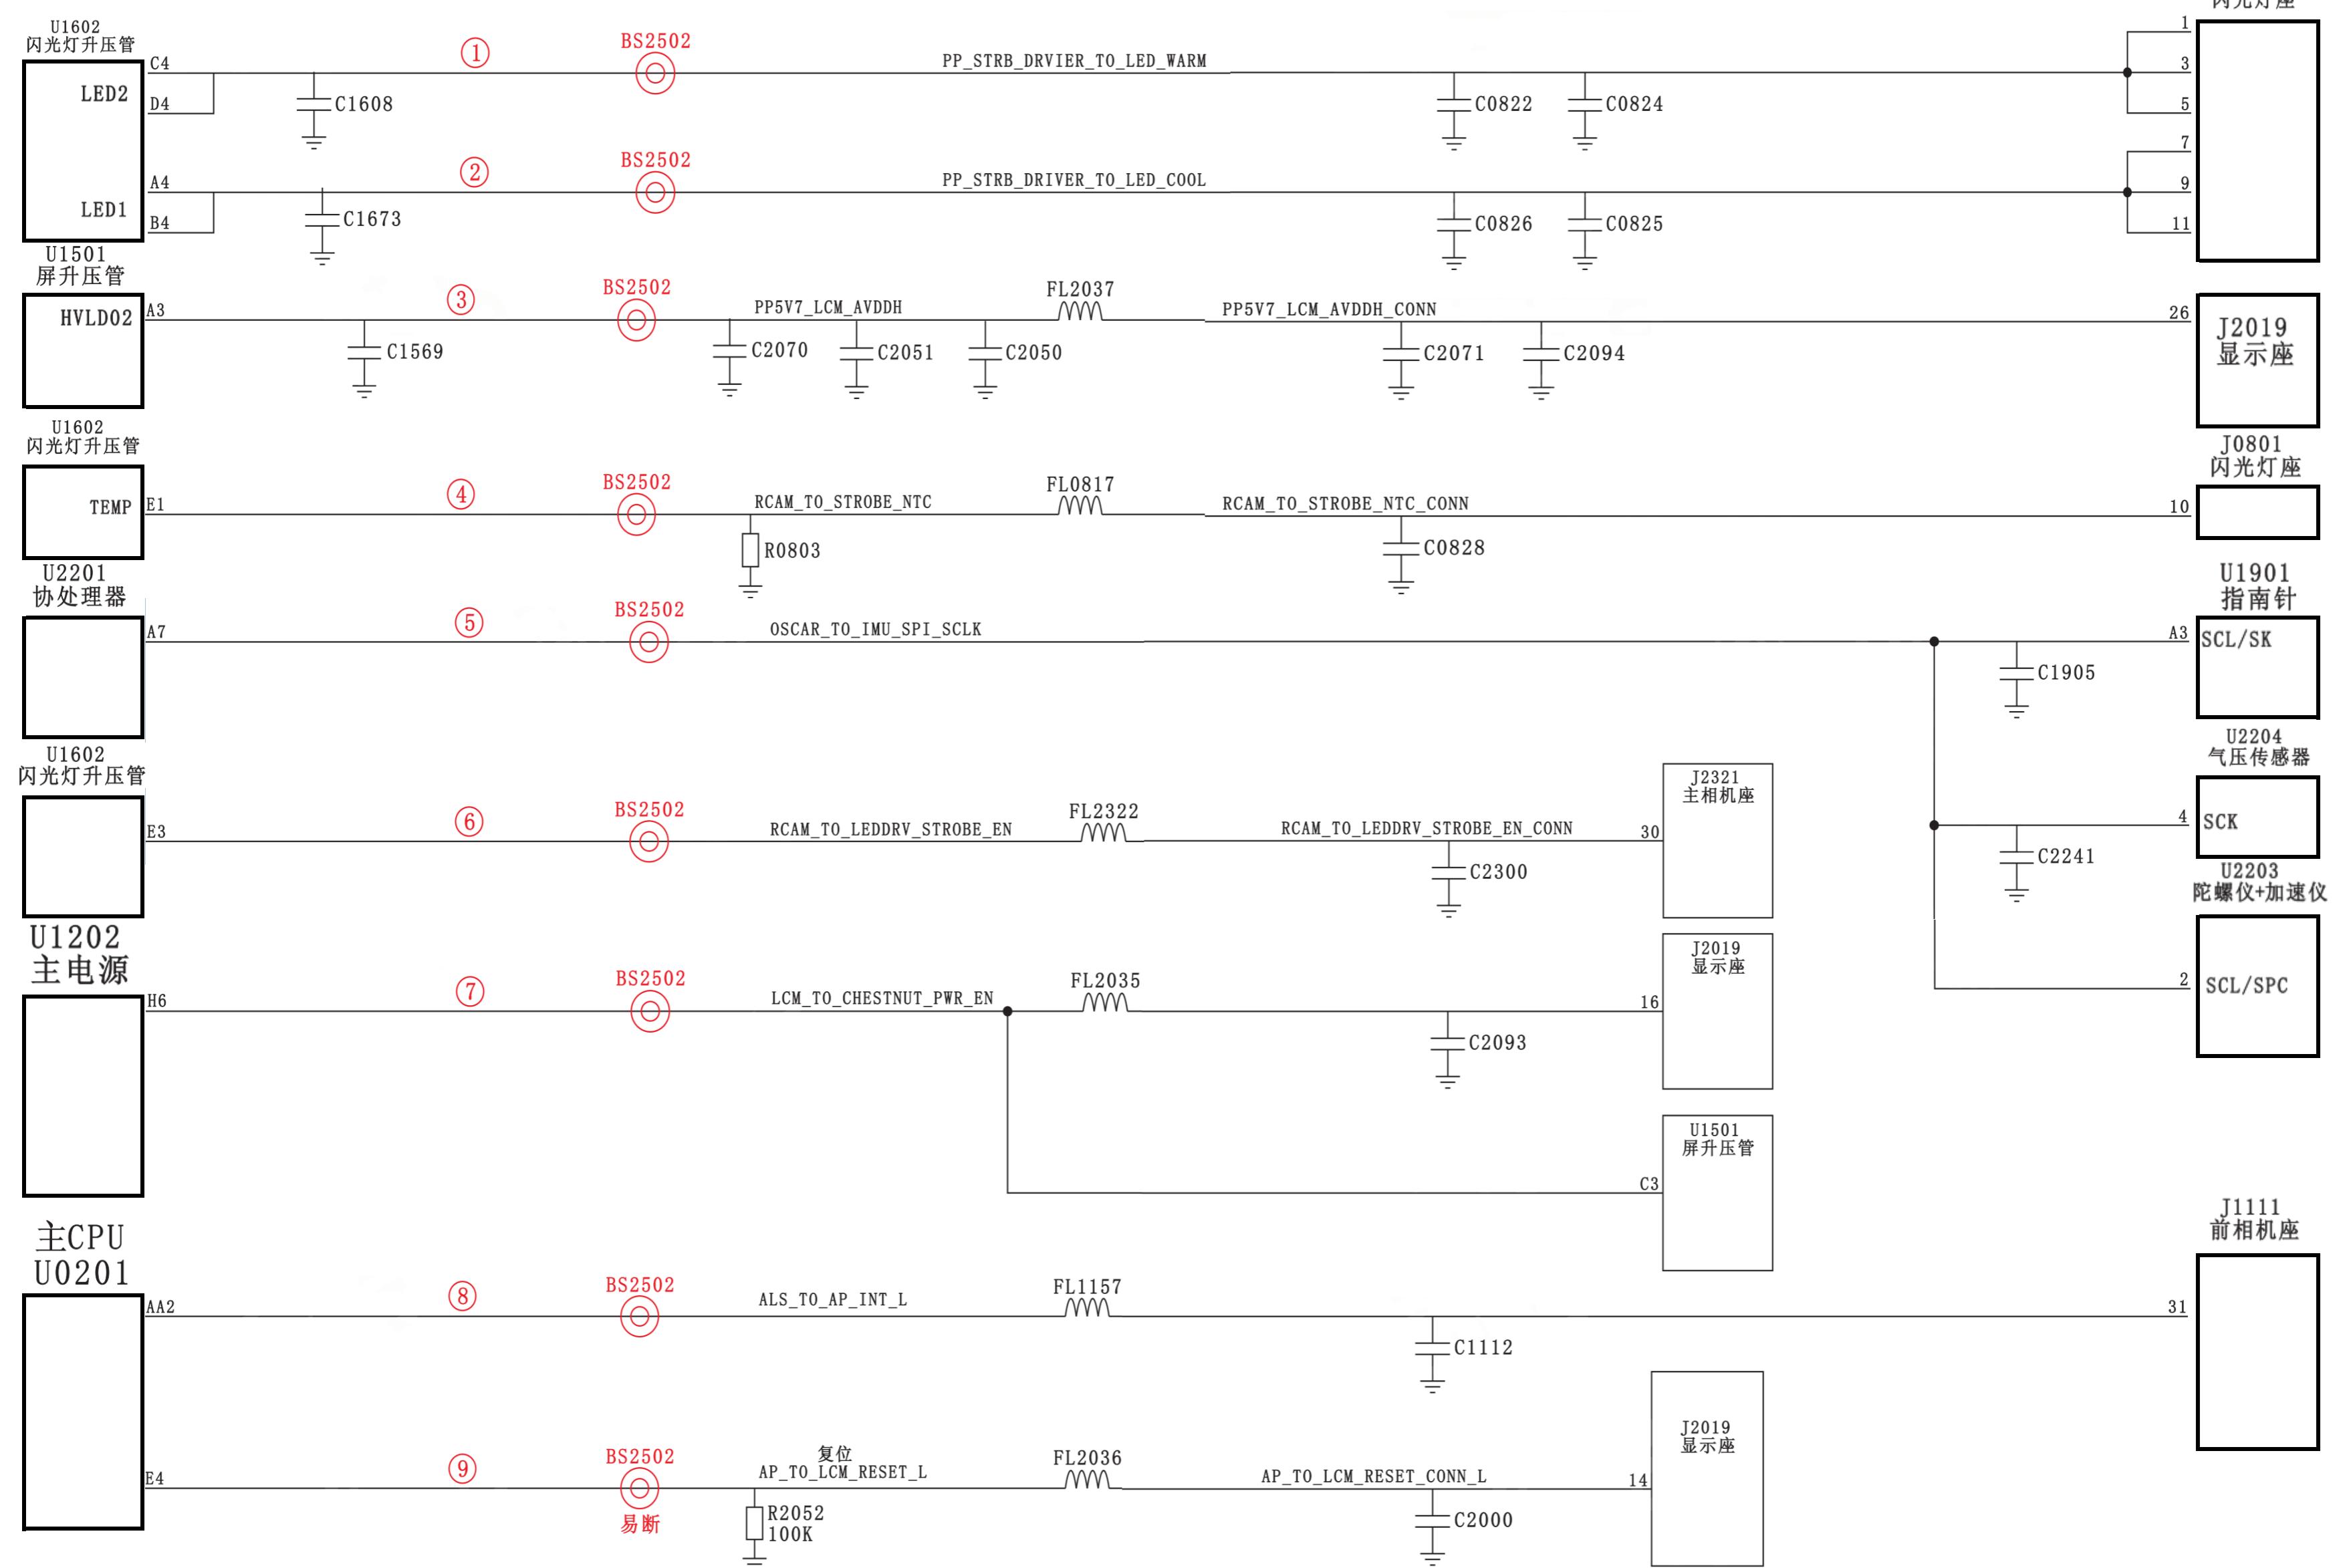


苹果6代 左螺丝孔 Bs2502 断线无显示+无照相元件彩图

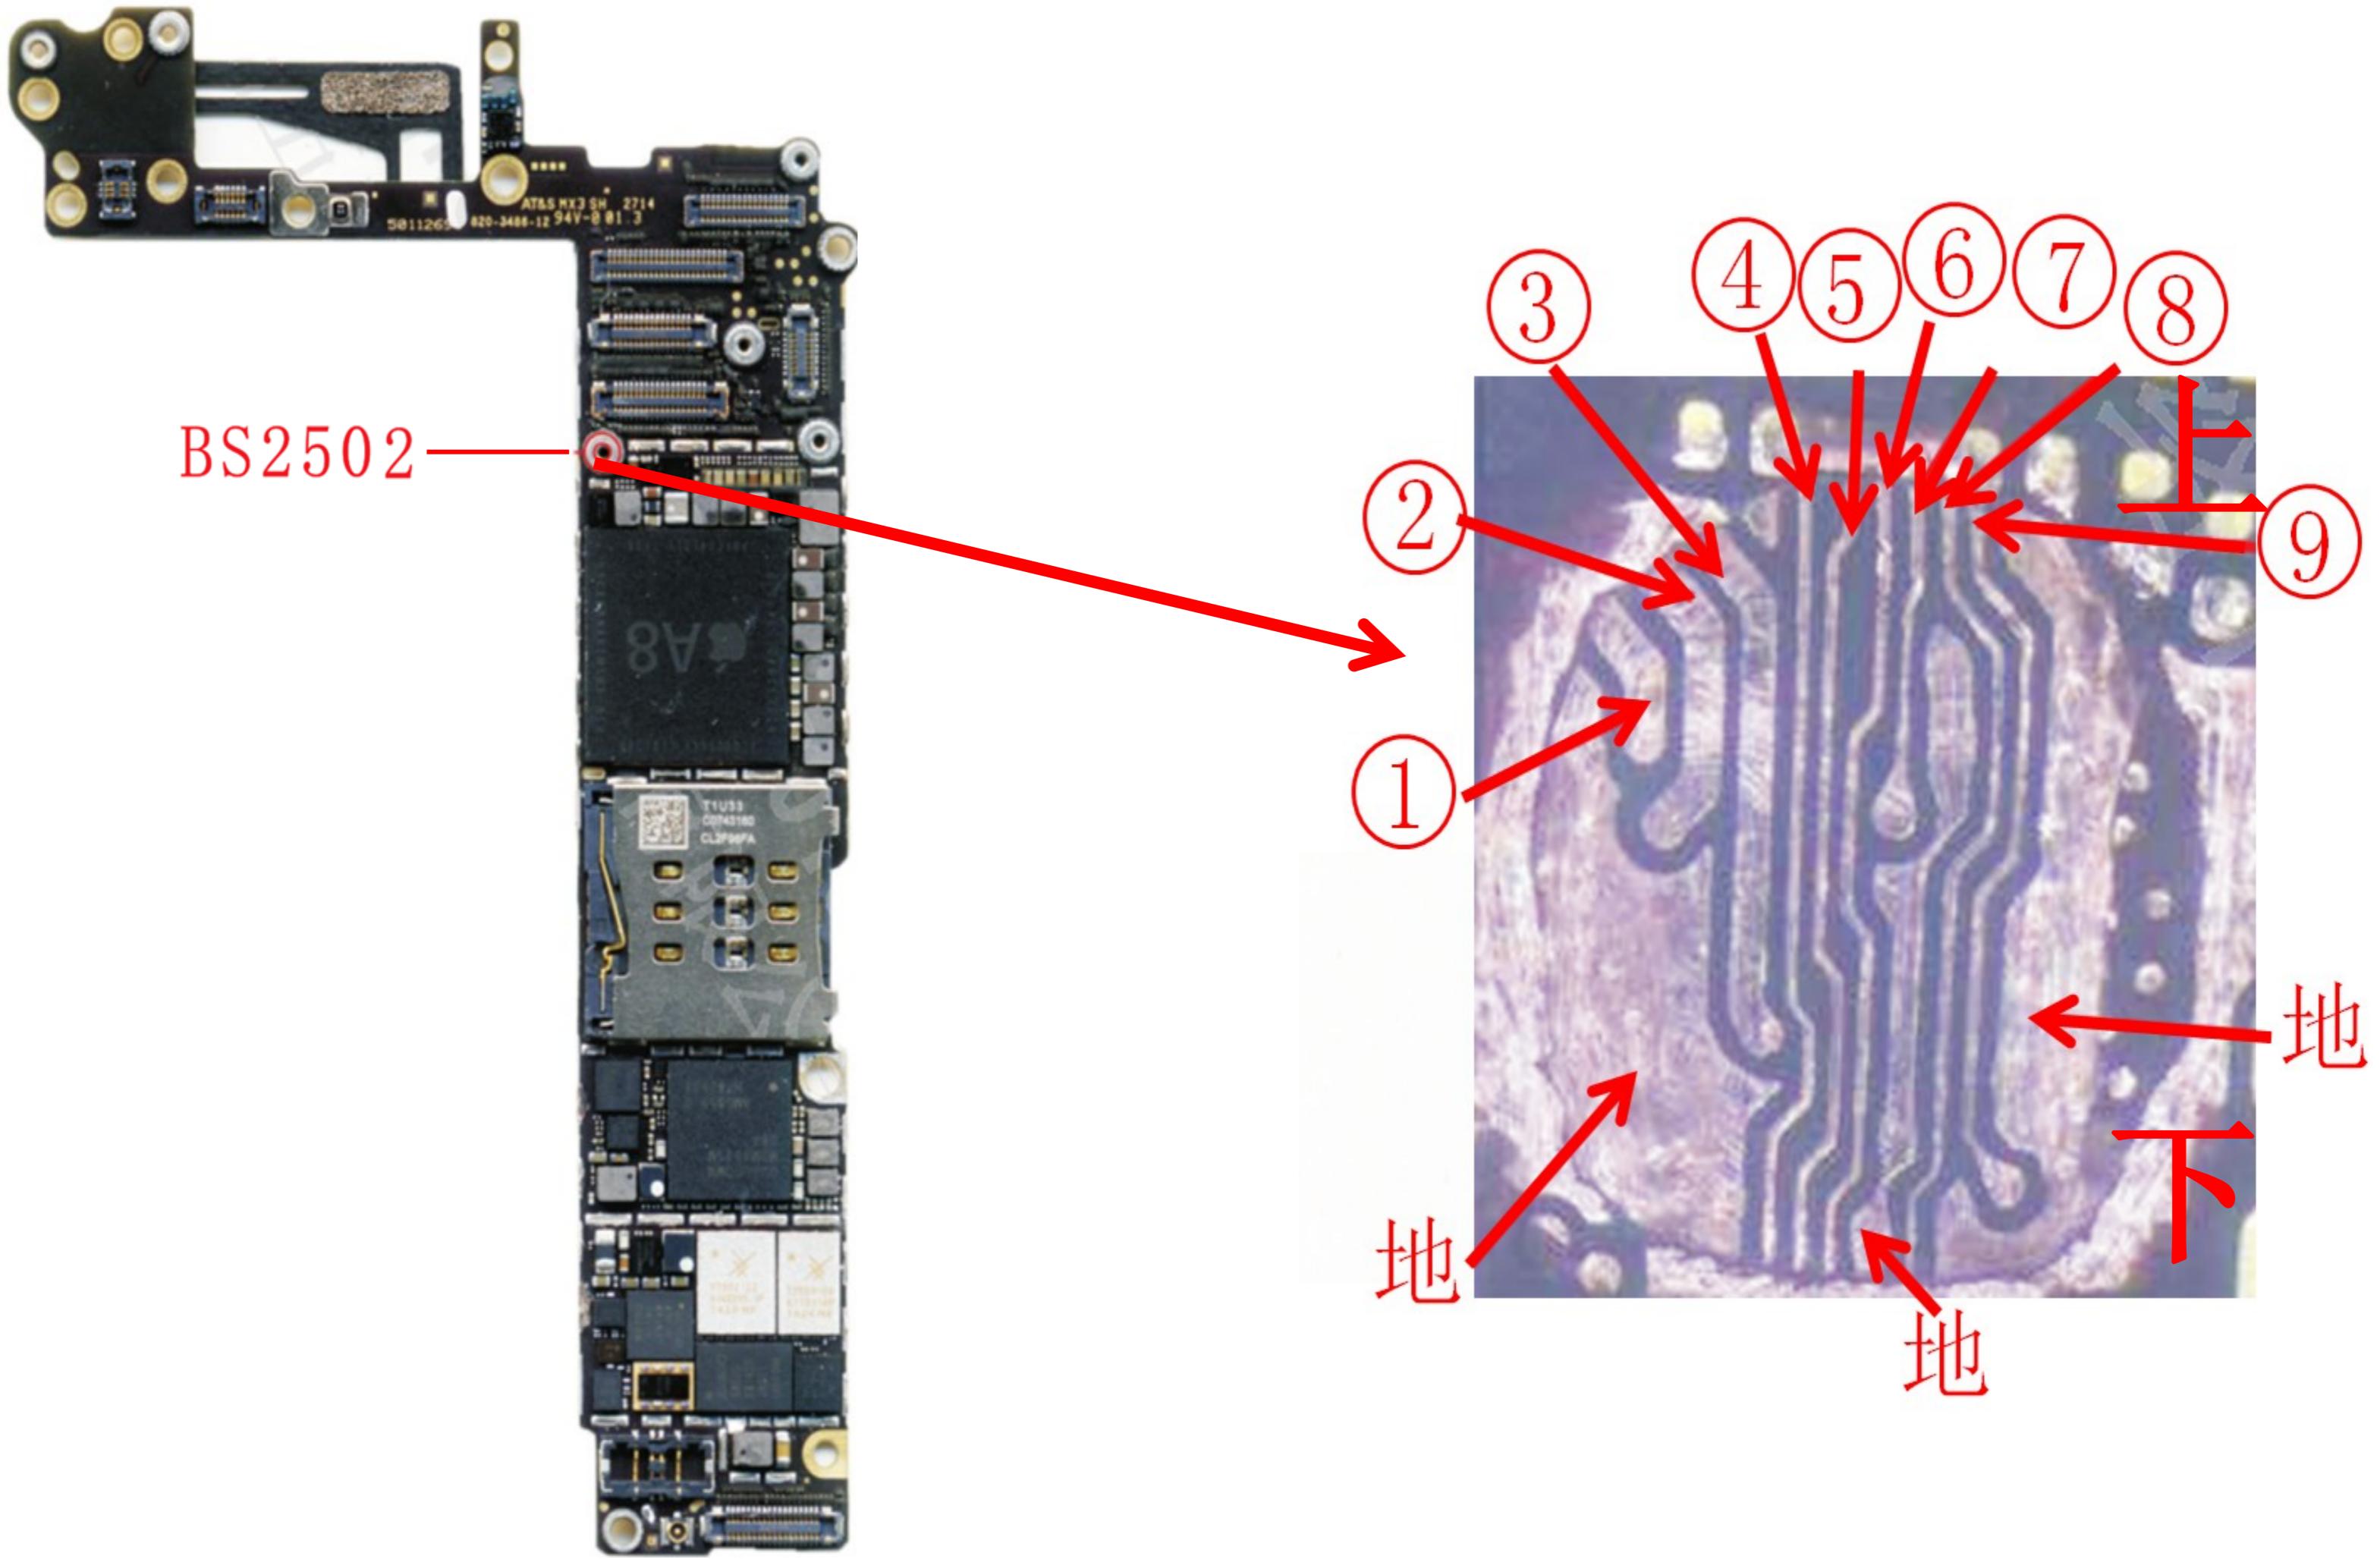

iPhone6 sim card block diagram

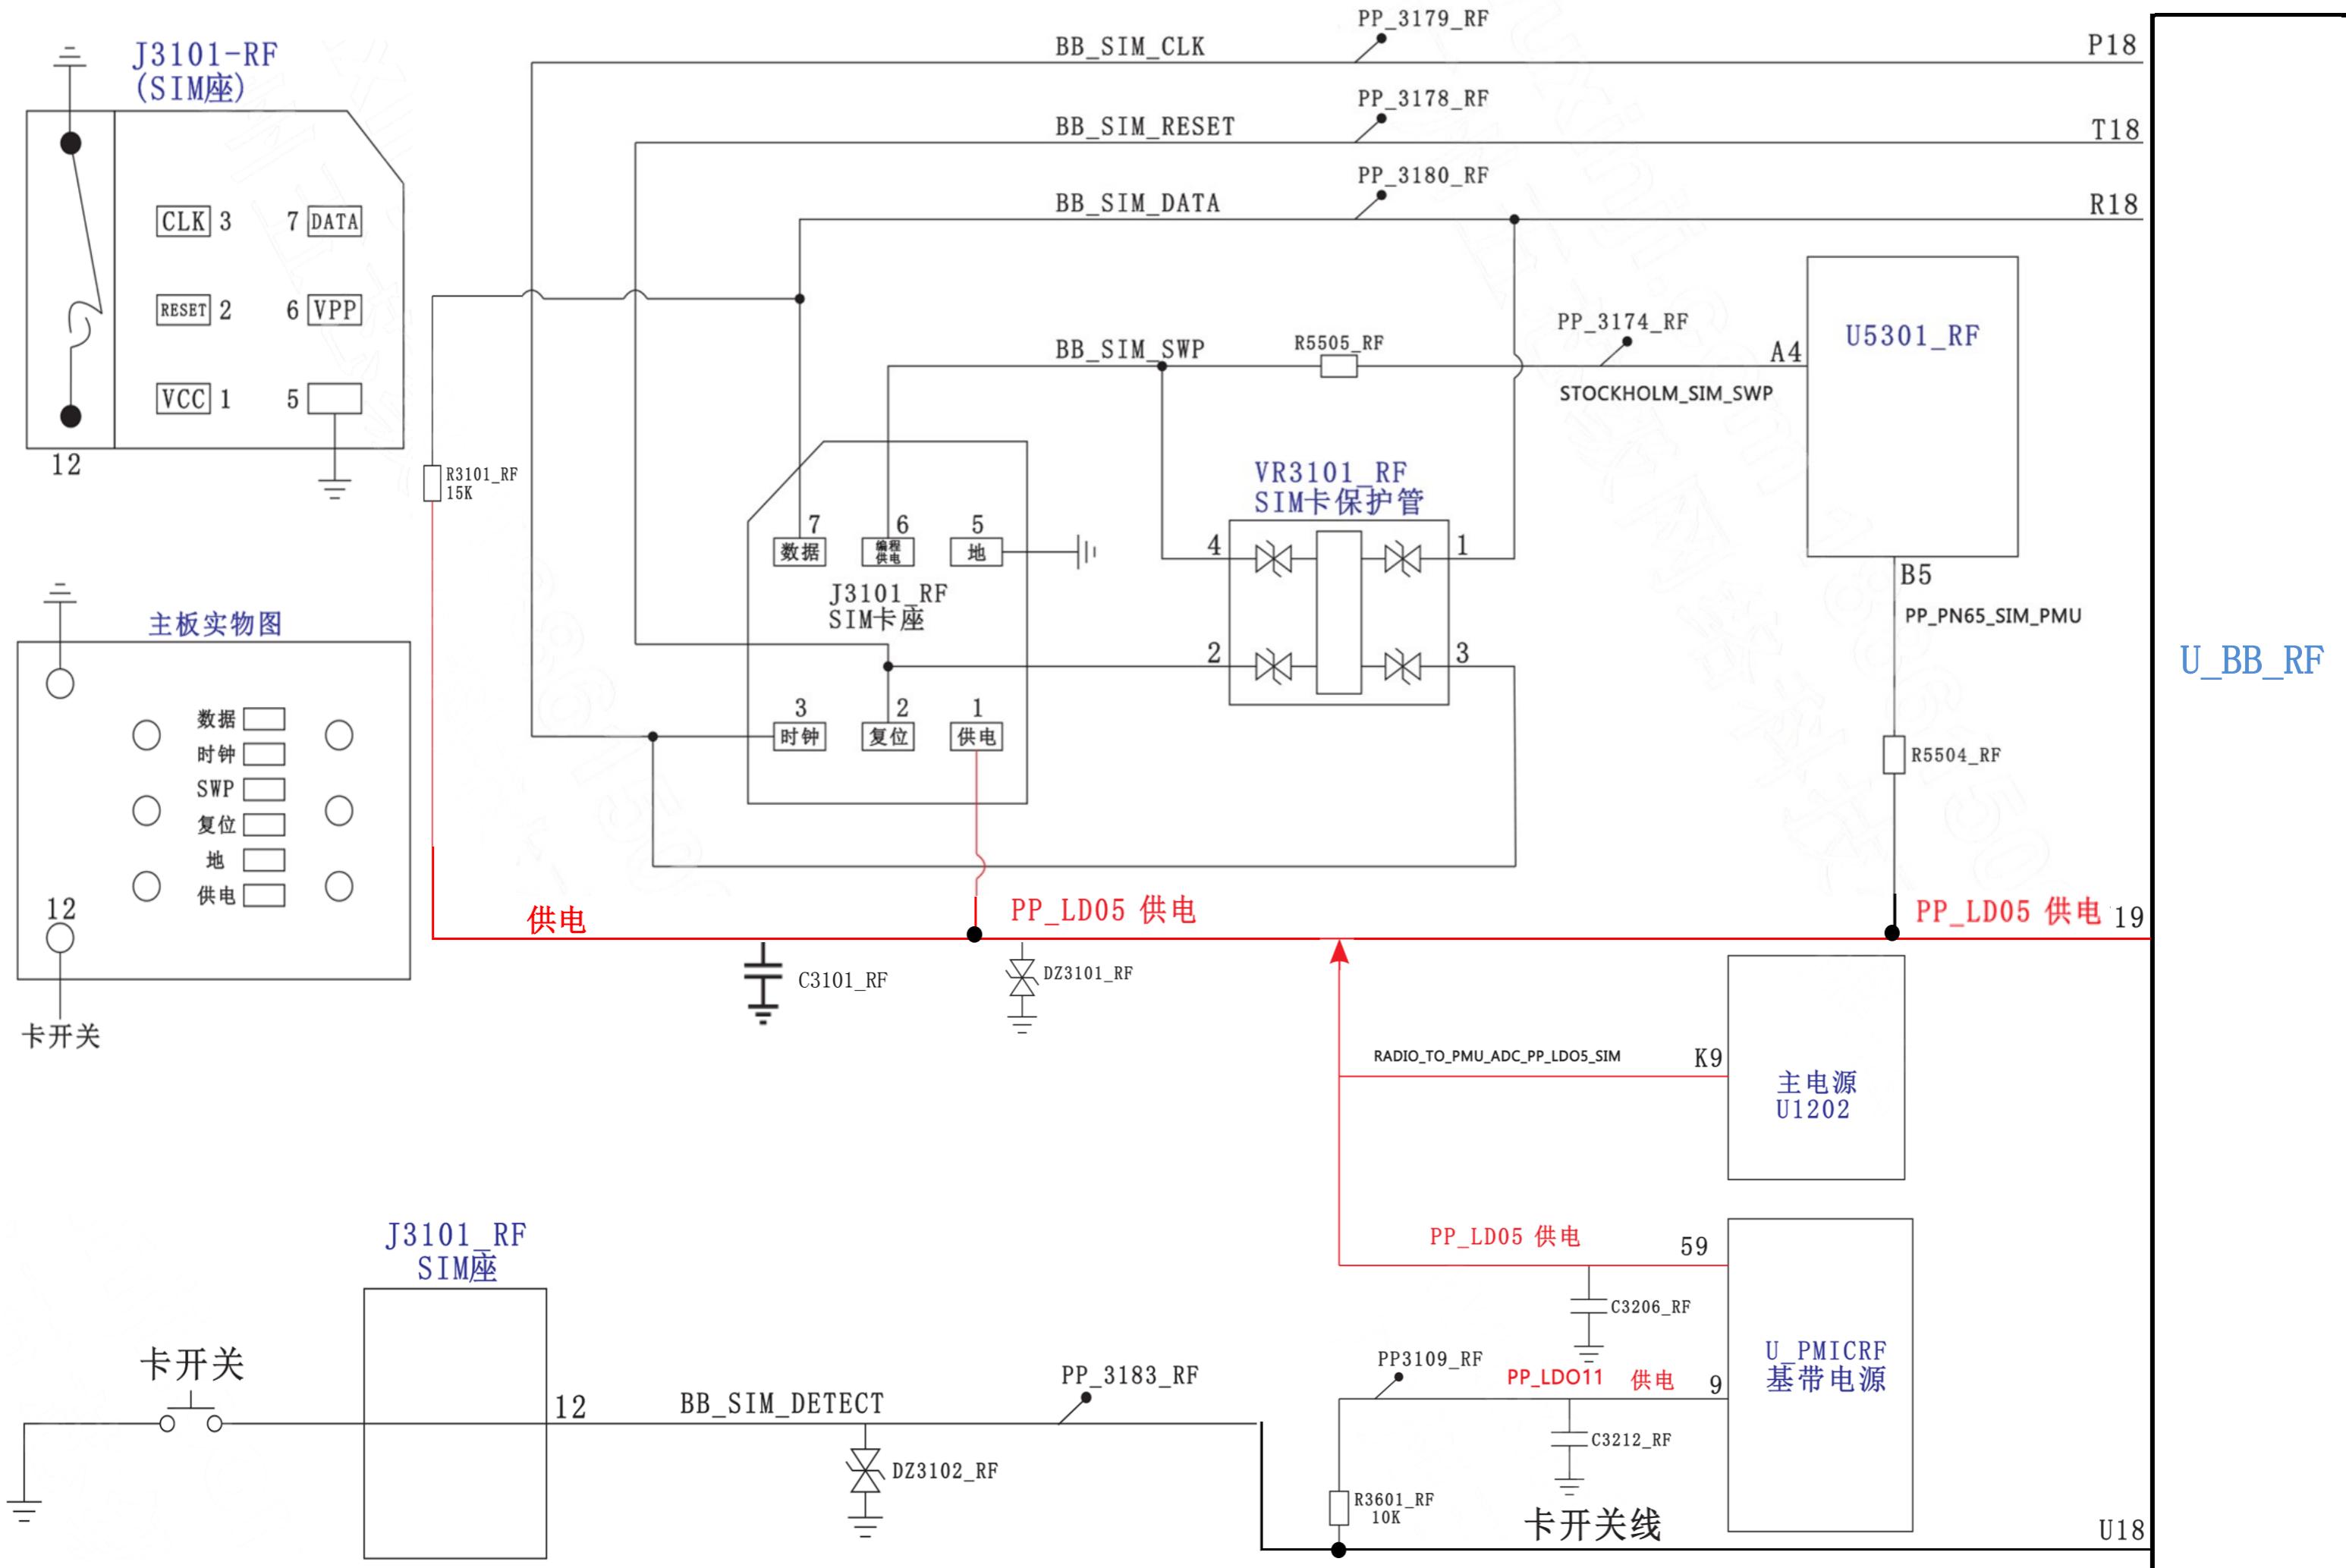

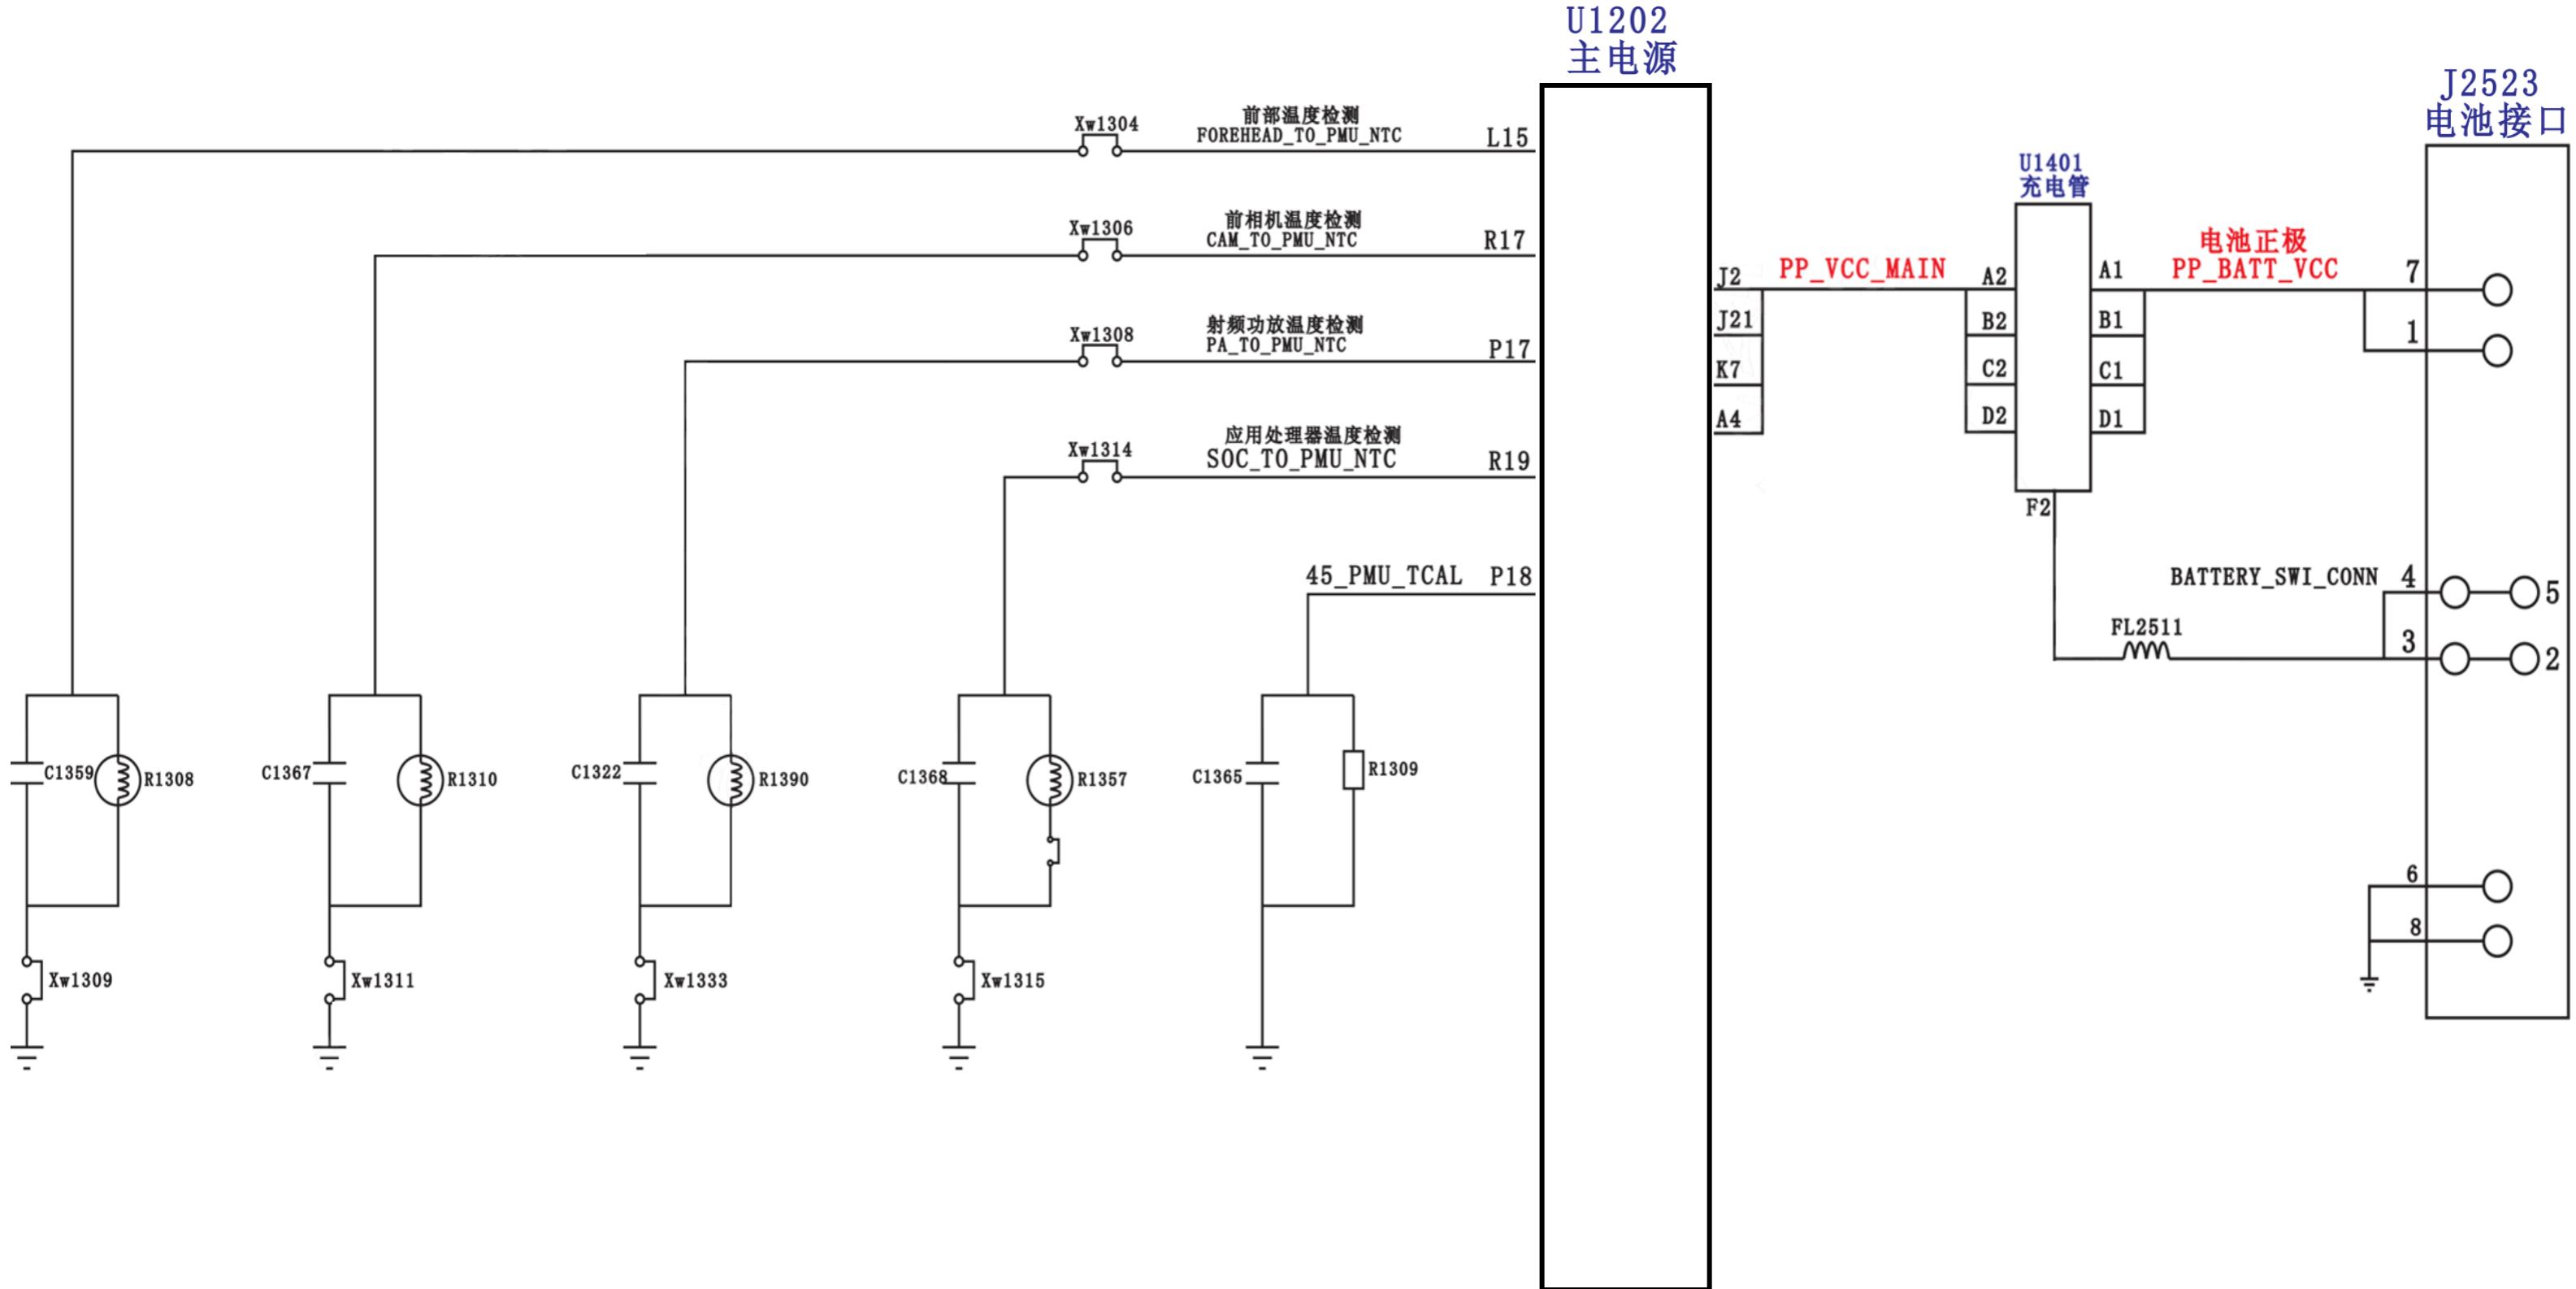

温度过高故障多为：

1. 电池接口 J2523
2. 充电管 U1401
3. 电源IC U1202
4. 电阻5个 R1308

R1390 R1357
R1309 R1310