安装说明书 INSTALLATION INSTRUCTIONS

DUAL INDUCTION THERMOSTATIC SENSOR FAUCE

双感应调温水龙头

GBL-6170

BEFORE YOU BEGIN 安装之前

- Please read the instructions carefully
- Please give the instructions to the end customer after installation.
- The shape and components of the product do not necessarily comply with the illumination which is only for your reference.
- The installation process is easy to implement, but we highly recommended that the plumbing is carried out by a qualified plumber.
- Please prepare the following tools: Monkey wrench, Glove, Batteries(4pcs of AA),etc.

- 请详细阅读本说明书
- 安装完毕后，请务必将本说明书交给最终客户。
- 产品外形及所包含配件以实物为准，示意图仅供参考。
- 建议客户请专业的安装人士安装,若您认为您有较好的动手能力和安装经验，可自行安装。
- 准备以下工具：活动扳手、手套、电池（4节5号）等。

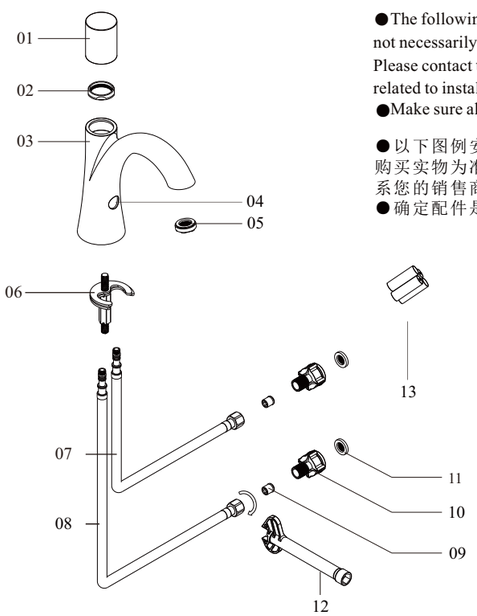

- The following pictures for your reference do not necessarily comply with the products. Please contact the seller if you have any question related to installation.
- Make sure all the parts are ready.

- 以下图例安装步骤仅供参考，一切以所购买实物为准，如遇到不清楚之处，请联系您的销售商。
- 确定配件是否齐全。

No	Part's name	Quantity
01	Thermostatic handle	1
02	Valve fixed nut	1
03	Faucet main body	1
04	Sensor module	1
05	Aerator	1
06	Screw components	1
07	Hose (Hot water)	1
08	Hose(Cold water)	1
09	Check valve	2
10	Check valve connector	2
11	Gasket with filter	2
12	Professional installation tool	1
13	AA batteries	4

编号	配件名称	数量
01	调温手柄	1
02	阀座固定螺帽	1
03	龙头主体	1
04	感应模块组件	1
05	起泡器	1
06	螺杆组件	1
07	钢丝编织软管（热水）	1
08	钢丝编织软管（冷水）	1
09	止回阀	2
10	止回阀接头	2
11	过滤垫片	2
12	专用安装工具	1
13	5号电池	4

ATTENTIONS BEFORE INSTALLATION 安装前注意事项

1. The use who chooses AC adapter for power supply,please be sure the voltage should be 220V in the area.
2. Apply tap water to the machine. Do not use untreated sewerage or the electromagnetic valve may be damaged.
3. Avoid direct sunshine or intense light for the sensing window while choosing installation position or the performance of the machine may be affected.
4. Install an additional pressure booster when the water pressure is lower than 0.05MPa or the flush performance may be affected.
5. Install an additional pressure decreasing device when the water pressure is higher than 0.7MPa or the machine may be damaged.
6. Please turn off the angle valve before installation.
7. Suit basin as following picture.

1. 选用交流电源适配器的用户，请务必确定您所在的区域电压为220V方为可用。
2. 本机器应使用自来水，不得使用未经过滤和处理的污水不然将可能对机器电磁阀造成损坏。
3. 选择安装位置时，应避开阳光或强烈灯光会直接照射到感应窗的位置以免机器性能下降。
4. 水压低于0.05MPa使用时，应加装升压装置，以免冲洗效果下降。
5. 在水压高于0.7MPa使用时，应加装减压装置，以免对机器造成破坏。
6. 安装前请务必先关闭角阀。
7. 台盆适用情况如下图。

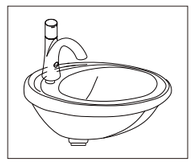

Available for under counter basin
台下盆可安装

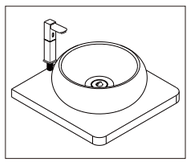

Unavailable for above counter basin
台上盆不可安装

INSTALLATION OF THE FAUCET 龙头安装步骤

First step:
Screw the check valve connector (including the check valve and filter gasket) to the hot and cold water inlet angle valve.
Second step:
Screw off the U shape gasket and hex nut at the bottom of the faucet, then screw the inlet hose tightly on the faucet.
Third step:
Insert the faucet main body into the basin, keep the faucet opposite to the basin, and lock the faucet body from the bottom by U shape gasket and hex nut.
Fourth step:
Screw the check valve connector to the angle valve tightly (by hand), then screw the hose to the check valve connector tightly by professional installation tool.

第一步：
将止回阀接头（含止回阀.过滤网垫片）旋紧至冷热进水角阀上。
第二步：
旋下龙头底部马蹄形垫片和六角螺母，并旋上进水软管，手旋紧即可。
第三步：
将龙头主体插入面盆，保持龙头正对面盆，用马蹄形垫片和六角螺母从台下将龙头体锁紧。
第四步：
将转接头旋紧至角阀上（手旋紧即可），再将软管用专用安装工具旋紧至转接头上。

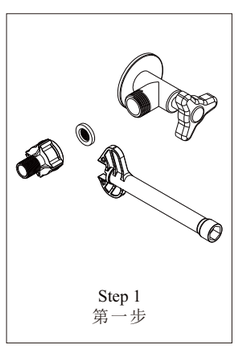

Step 1
第一步

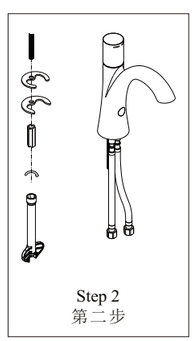

Step 2
第二步

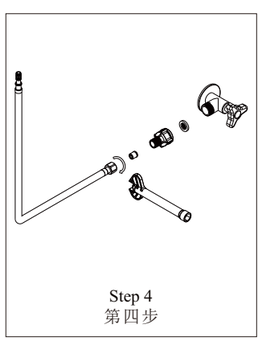

Step 4
第四步

Fifth step:
Remove the upper and lower cover of the battery box, install the battery according to the +/- indicator light, and close the upper and lower cover (see the battery installation instructions for details). Fix the battery box bracket on the wall with 3M glue or screws (it is suggested that can be fixed by screw for wooden cabinet). Connect the battery box output connector firmly to the power input wire at the bottom of the faucet, and place it on the battery box bracket.
Sixth step:
Open the cold and hot angle valve, reach for induction and wave for side induction, and turn on/off the handle to test whether the product is in normal use, then check whether the water hose and the adapter are leaking.

第五步：
拨开电池盒上下盖，将电池按正负极指示灯安装好，并盖好上下盖，（具体见电池安装说明），将电池盒托架用3M胶或螺丝（建议木质橱柜可用螺丝锁固）固定于墙上；将电池盒输出接头与龙头底部电源输入线对接牢固，置于电池盒托架上。
第六步：
打开冷热角阀，伸手感应及侧挥手感应，旋动手柄，测试产品是否正常使用并检查进水软管、转接头处是否漏水。

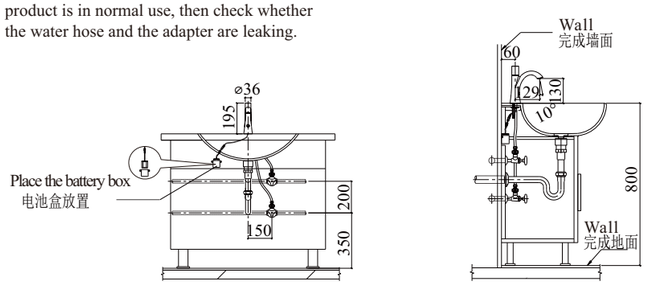

Integral installation drawing
整体安装图

FUNCTIONS AND FEATURES 功能与特点

01.Quick response. Smart Liteon induction technology, 0.6 second switch response time, open and close the water instantly.
02.Free your hands. Open and close the water automatically with manual switch, easy to use.
03.Intelligent.Automatically recognize distance and execute different water outlet modes.
04.Hygiene.The water process does not need to switch the handle, care for the health of the family.
05.Water saving. A. Water saving structure: Detailed structural design, reaching national first-level faucet water saving efficiency of 0.08L/s; B. Water saving process: Efficient and time-saving water use process.
06. Safety. PPO integrated watercourse design, The precipitation of heavy metal and other harmful substances are much lower than the national standard, real environmental protection; High pressure hose, safe and reliable.
07.Stability. Integrated, modular structure design, Greatly improve the structure accuracy, Eliminate leakage, valve core leakage and other annoying phenomenon.
08.Durability. The core components of the solenoid valve and sensor module have passed 1,000,000 times endurance test.
09.Waterproof. The waterproof design for whole product with grade IP54(splash proof type).
10.Functional protection. Weak power indicating function, Power-off automatic shutoff valve function, 1 minute timeout protection function for hand-washing, 3 minutes timeout protection function for taking water, and mandatory shutoff function.
11.Considerate.External filter net can effectively remove particulate impurities such as fine sand in water. Check valve is provided to prevent the reverse flow of hot and cold water at different pressure. Ensure safe use.

01. 极速响应。灵动Liteon感应技术，0.6秒开关响应时间，瞬间开关水。
02. 解放双手。自动开关水，无需手动，使用起来得心应手。
03. 智　　能。自动识别距离远近，执行不同出水模式。
04. 卫　　生。用水过程无需开关手柄，呵护家人健康。
05. 节　　水。A，结构节水；精细的结构设计，达到国家一级龙头节水效能0.08L/s；
B，过程节水；高效省时的用水过程。
06. 安　　全。PPO全塑集成式水道设计，重金属等有害物质析出远低于国家标准，真正环保；耐高压软管，安全可靠。
07. 稳　　定。集成式、模块化结构设计，大大提高结构精度，杜绝滴漏、阀芯渗漏等烦人现象。
08. 耐　　久。电磁阀与感应模块之核心部件通过100万次寿命试验；
09. 防　　水。整机防水设计，防水等级达到IP56(防溅型)。
10. 功能保护。弱电指示功能、无电自动关阀功能、洗手1分钟超时保护功能、接水3分钟超时保护功能、强制关水功能。
11. 周　　到。加配外置过滤网，有效滤除水中细沙等颗粒物杂质；加配止回阀，防止停水或冷热水压不同时，冷热水的倒流；保障用水安全。

Weak power indicating
弱电保护

Power-off automatic shutoff
无电保护

1 minute timeout protection
1分钟超时保护

3 minutes time out protection
3分钟超时保护

TECHNICAL STATISTICS 技术参数

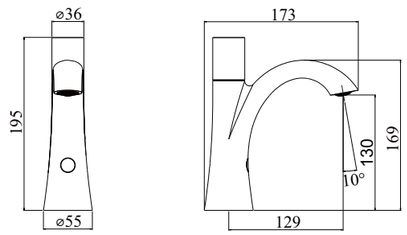

Input voltage	DC 6V (4pcs of AA alkaline batteries)
Static power consumption	≤60uA
Dynamic power consumption	≤3W
Battery life	About 18 months (Based on using 100 times/day with NANFU AA alkaline batteries)
Sensing distance	Detection from front side: 200mm±20mm (Test on standard A4 white paperboard)
	Detection from right or left side: 60mm±20mm (Test on standard A4 white paperboard)
Working water pressure	0.05-0.7MPa（0.5-7Kg/cm2）
Water usage	4.8±0.3L/s， Test under dynamic water pressure 0.2MPa
Available diameter of hole for installation	32±4mm
Diameter of cold/hot water hose inlet	DN15（G1/2）
Length of hose	600mm
Available water temperature range	4-80℃（40-176°F）
Environment temperature	1-40℃
Environment humidity	≤95%RH
Water-saving efficiency	Grade I
Waterproof grade	IP56 (splash proof type)
Weight	About 2kgs
Executive standard	GB18145-2014 CJ/T194-2014

输入电源	DC6V(4节5号AA碱性电池)
静态功耗	≤60uA
动态功耗	≤3W
电池续航能力	约18个月(按使用100次/天＜开关水一次计为一次＞，南孚AA碱性电池为参照)
感应距离	正面进入感应:200mm±20mm 白色A4纸为参照
	侧面进入感应:60mm±20mm 白色A4纸为参照
适用水压	0.05-0.7MPa（0.5-7Kg/cm2）
额定流量	4.8±0.3L/s，动态水压0.2MPa下测试
适用安装孔径	32±4mm
冷/热进水管径	DN15（G1/2）
软管长度	600mm
适用水温范围	4-80℃（40-176° F）
工作环境温度	1-40℃
工作环境湿度	≤95%RH
节水效能	I 级
防水等级	IP56 （防溅水型）
重 量	约2Kg
执行标准	GB18145-2014 CJ/T194-2014

NOTES OF USE 使用注意事项

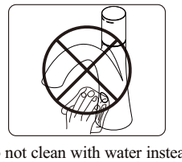

Do not clean with water instead with clean and dry soft cloth.
请不要用水擦洗，应使用洁净的干软布清洁。

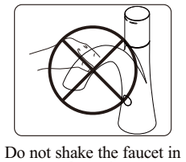

Do not shake the faucet in case of any damage.
请不要摇晃龙头，否则易引起故障。

Do not wash with alkaline or acid detergents.
不能用酸碱一类强洗涤剂擦洗。

USE EXPOSITION 使用说明

1.Instant water mode.
2.Wave on/off water mode: When wave to the sensor from right or left side,the water is turned on,and the water will be closed until waving to the sensor from right or left side again.
3.Rotate the handle to the end of anticlockwise to close the water.
4.Rotate the handle clockwise or anticlockwise to adjust the water temperature according to the indication of cold (blue) and hot (red).

1.即出水模式.
2.长出水模式：左/右方向靠近窗口挥手感应为长出水，再挥手停水.
3.将手柄旋转至最左边关水.
4.按冷（蓝色）、热（红色）指示，左右旋转调节水温.

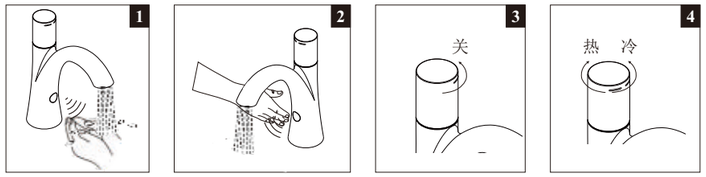

MAINTENANCE 维护保养

Cleaning the filter net:
The filter nets of newly installed products are very likely to be blocked by the sands in the pipe.
Please screw off the filter net and wash it when the water volume decreases.
Note: The filter net is at the water inlet. Please close triangle valve before take out the filter net.

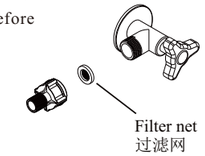

清洗过滤网：
新安装的产品，因管道中的沙石等极易在过滤网中产生淤堵，如果使用中发现出水量减少时，请及时旋下过滤网冲洗，并按原样装回。
注意：过滤网装在进水口，取下过滤网前须关闭三角阀。

BATTERY CHANGING 更换电池

When the batteries is out of power, the indicate light will flash at an intermittence of 3-4 seconds to note the maintenance department to change batteries.
When there is no power left in the battery, the sensor will shut down the battery valve to avoid wasting water.
Step 1:
Screw off the 4 screws on the cover of the battery box to remove the cover.
Step 2:
Change 4 new No.5 alkaline batteries and install the battery cover.

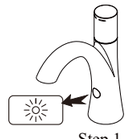

Step 1
第一步

Note: The polarity of batteries must be correct. Do not mix old and new batteries or batteries of different brands.

更换电池
电池电能耗尽时，该指示灯每隔3~4秒闪亮一次，需更换电池。
电池电能耗尽时，感应器将强制关闭电磁阀，防止水资源浪费。
第一步：
拔出电池盒上盖。
第二步：
换上四节新的5号碱性电池，安装完毕后照原样装回。
注意：电池的正负极性必须正确，不同新旧或不同品牌的电池不能混用。



Step 2
第二步

COMMON TROUBLE SHOOTING 常见故障排除

Anomalies	Possible cause	Solution
No water out	The battery is out of power	Change new batteries
	Blots on the sensing window	Clean the blots
	Water supply stops	Wait for water to come
	The filter net is blocked by debris	Clean the filter net
	The water pressure is not suitable	Reference of technical parameters
	Power off (AC. 220V)	Wait for power supply
Water can`t be turned off	The battery is out of power	Change new batteries
	The water pressure is not suitable	Reference of technical parameters
Low water volume	The water pressure is too low	Reference of technical parameters
	The filter net is blocked by debris	Clean the filter net
	Use of low quality batteries	Change for quality and standard batteries
Short battery life span	The battery is out of power	Change new batteries
No response	Power off (AC 220V)	Wait for power supply

异常现象	可能原因	排除方法
不出水	电池电能耗尽	更换新电池
	感应窗有污垢	排除污垢
	停水	等待来水
	过滤网太脏造成淤堵	清洗过滤网
	水压不在适用范围	参考技术参数表
	停电(AC 220V)	等待来电
不关水	电池电能耗尽	更换新电池
	水压不在适用的范围	参考技术参数表
关水后还有少量流水	水压太低	参考技术参数表
	过滤网太脏	清洗过滤网
水量小	水压太低	参考技术参数表
	过滤网太脏	清洗过滤网
	使用不正规的电池	更换规定电池
电池使用时间短	电池电能耗尽	更换新电池
不感应	停电(AC 220V)	等待来电

ONE-YEARWARRANTY 一年有限担保

*Our company has an extensive quality promise to the end customers. Our products proved to be correctly installed and properly used enjoy a maintenance period of 1 year during which any products with quality defects shall be repaired without any charge.
*Quality defects caused by the following factors are not included in the promise:
1) Quality defects caused by improper installation, replacing and repairing are not included in the promise.
2) Products of industrial and commercial use are not included in the promise. However the end customers are included.
3) Quality defects caused by misuse, abuse, carelessness and employment of no our components are not included in the promise.
*Please keep your invoice of our product properly to ensure better service from us.
*The company keep its right of use the latest component for repairing.

*我司对产品的最终客户有广泛的质量保证，产品在被证明正常安装和使用的前提下，保修期为1年。在保修期内对有质量问题的产品免费维修。
*对于在以下行为中产生质量问题的不包括在此保证范围内
1)因非正常安装、替换、修理及类似的行为中产生的质量问题不包括在此保证范围内。
2)对于工业和商业用途的产品不包括在此保证范围内，但此保证会自动延续到此用途的客户手中，依此类推。
3)对于误用、滥用、疏忽和使用非我司配件所产生的质量问题不包括在此保证范围内。
*请妥善保管购买我司产品时的发票，以便我们能更好地为您服务。
*公司保留维修时使用最新配件的权利。

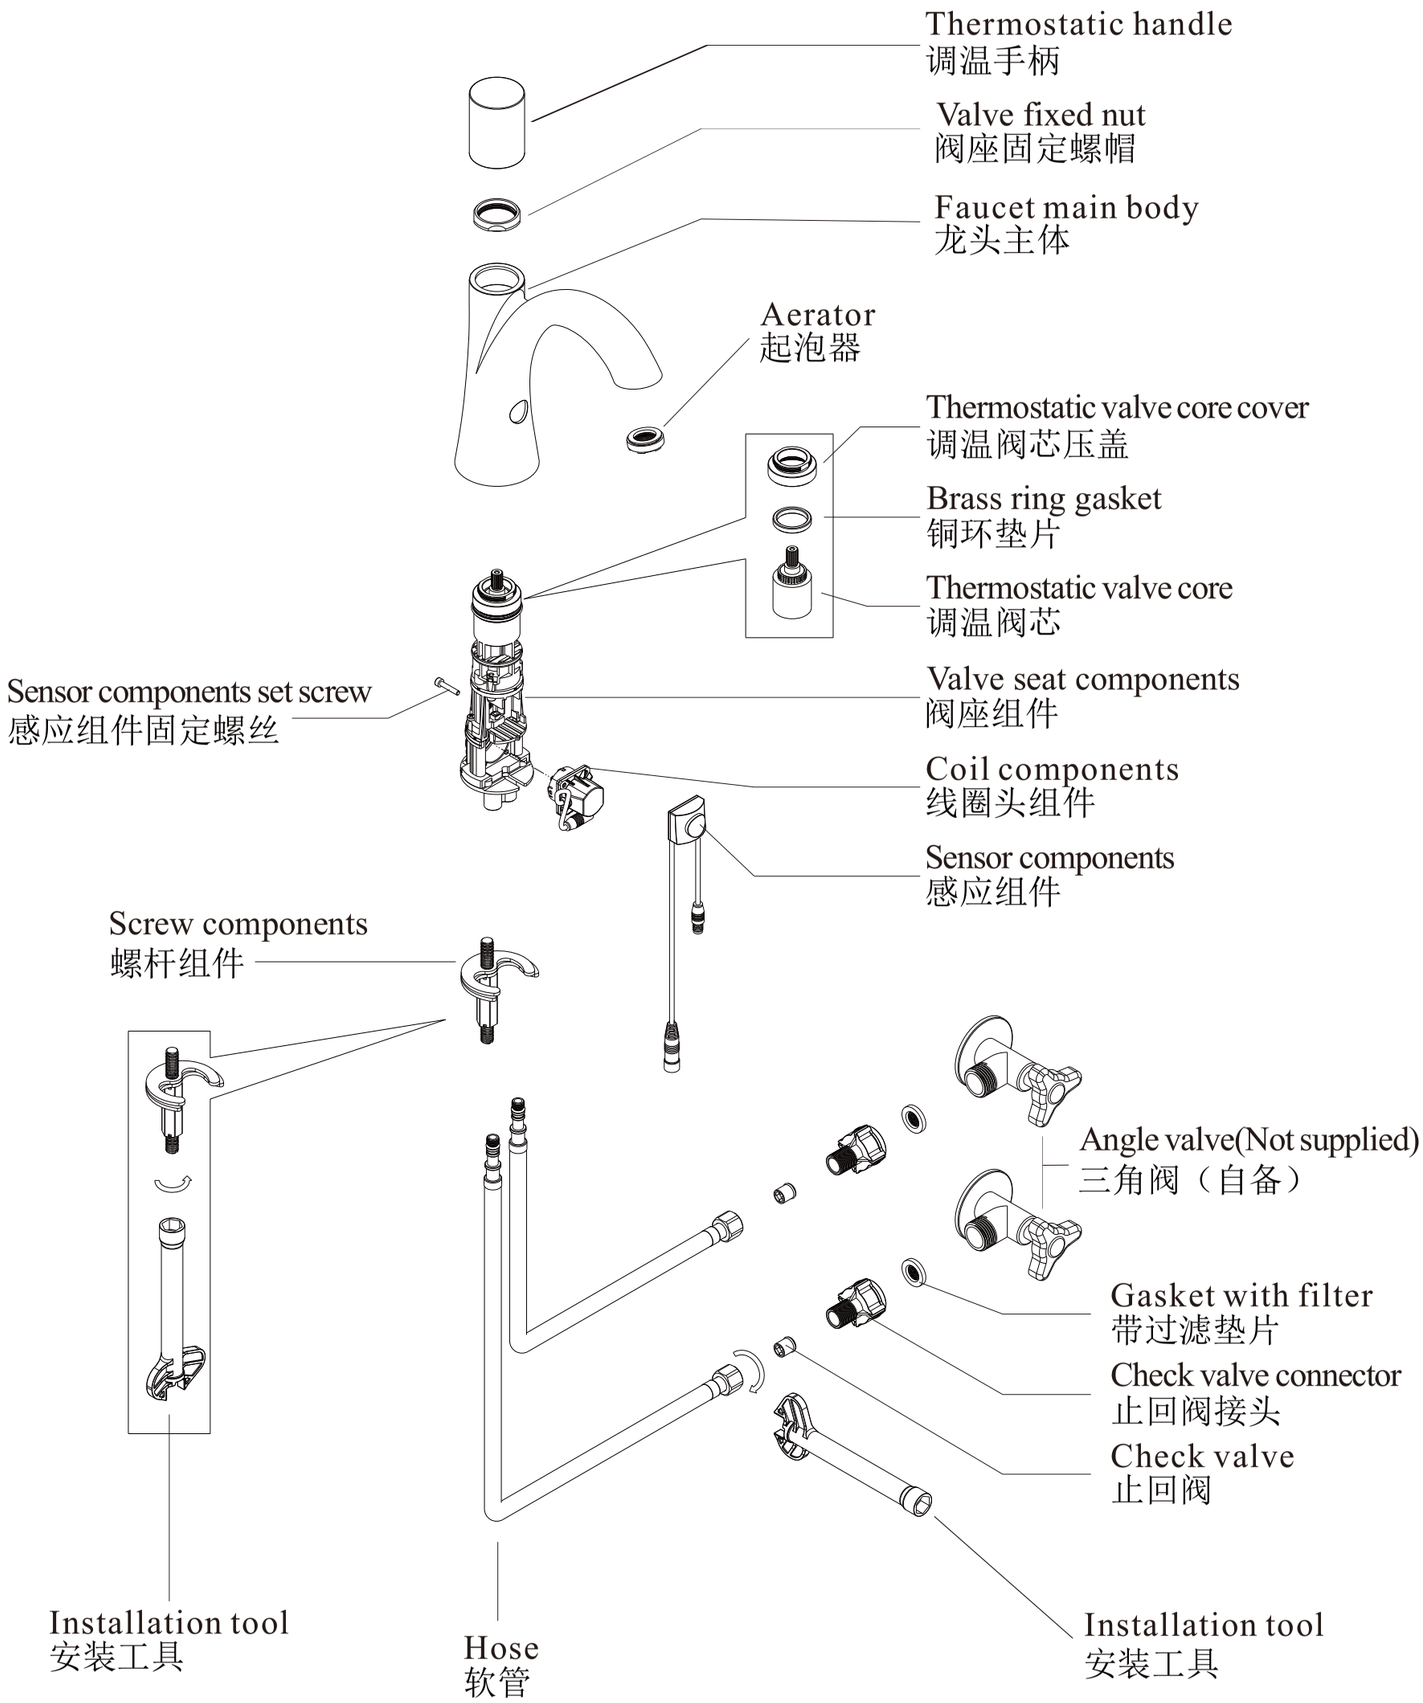
Thermostatic handle
调温手柄
Valve fixed nut
阀座固定螺帽
Faucet main body
龙头主体
Aerator
起泡器
Thermostatic valve core cover
调温阀芯压盖
Brass ring gasket
铜环垫片
Thermostatic valve core
调温阀芯
Sensor components set screw
感应组件固定螺丝
Valve seat components
阀座组件
Coil components
线圈头组件
Sensor components
感应组件
Screw components
螺杆组件
Angle valve(Not supplied)
三角阀（自备）
Gasket with filter
带过滤垫片
Check valve connector
止回阀接头
Check valve
止回阀
Installation tool
安装工具
Hose
软管
Installation tool
安装工具