


Warranty years

- 1 All free warranty for one year
(from the date of purchase, subject to the invoice date).
- 2 The following circumstances are not within the scope of free services
 - Warranty instructions and invoice cannot be presented
 - Invoice alteration
 - Damage caused by accidental factors or improper use
 - Damage caused by unpacking the module for repair without the permission of our company
 - Beyond the expiration date of the three guarantees, it can be reused after repair and disposal

Paste warranty card

Sensor Soap Basin Faucet

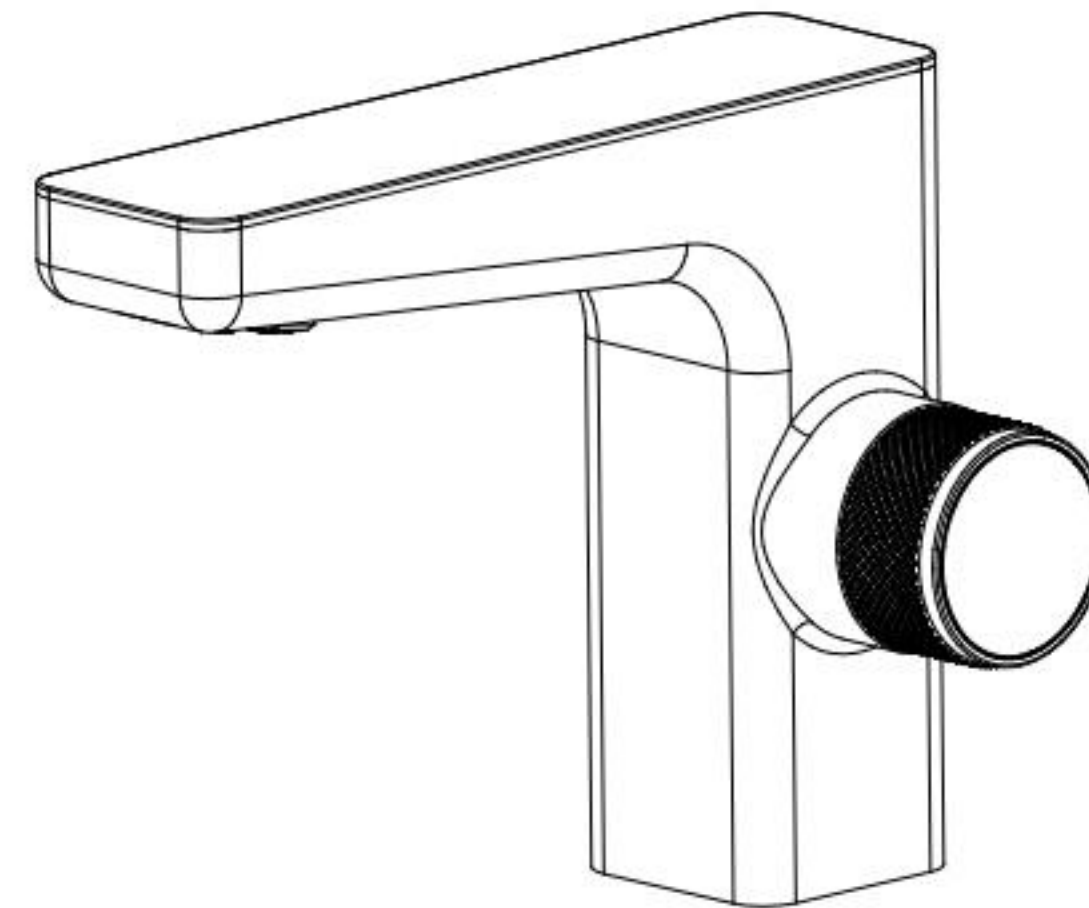

- Please read this manual carefully before use
- The Company reserves the right to interpret the specification
- The appearance of the product is subject to the actual product
- In case of product technology or software upgrades, without prior notice

Catalogue

1 Use of precautions

- ① matters need attention
- ② List of packing

2 Product introduction

- ① Product model and main parameters
- ② Product functions and features

3 Installation and maintenance

- ① Installation and use method
- ② Installation diagram
- ③ Instructions for use
- ④ Common fault analysis and elimination methods

4 Warranty card

Precautions for use

matters need attention

Note: All the contents of this project are related to safety, so please comply with it.
The considerations in this project are only for the proper use of this product.
The precautions explain the degree of hazards and possible accidents.

1. We recommend cleaning products with soft wet cloth and not with strong corrosive detergent. Be sure to regularly clean the dirt from the filter screen in the module (when the water flow is significantly reduced).
2. Avoid using batteries that do not conform to the safety specifications. Using leakage and inferior dry batteries may lead to short circuit and heating.(4 of them 5 batteries need to be purchased separately)
3. Before installing the product, it is necessary to clean the dirt in the water pipe in advance, and the impurities in the water pipe will seriously affect the service life of the control box valve body, resulting in water leakage and other situations

Packing list

Waterway control box	1
Battery cell box	1
Battery holder	1
Soap bottle	1
Faucet	1
Manual	1

Product profile

Conditions of use and test conditions

Working scene: Bathroom ambient

Temperature : 1°C~55°C;

Applicable water temperature: 4°C~60°C;

Relative humidity: 10%RH~95%RH;

Storage temperature: -20°C~75°C;

Storage humidity: 10%RH~ 95%RH;

Power supply: AC110V~220V to DC 6V 0.5A adapter,

4 AA dry batteries (standby power supply);

Working water pressure: $0.05\text{MPa} \leq P \leq 0.8\text{Mpa}$;

Test conditions:

Ambient temperature: $25 \pm 5^\circ\text{C}$;

Environmental humidity: 60%RH~80%RH;

Product profile

Function introduction and features

This product has three infrared sensor heads, a temperature sensor, a digital display module, front sensor indicator light (LED light), side sensor indicator light (LED light) and a soap liquid indicator light (backlight panel). The main functions are as follows:

1. The front sensor head has a short water outlet, and the water will automatically flow out when it senses an object, and the water will automatically stop when the object leaves;
2. The side sensor head has a long water outlet, and it will sense to open once and then close again;
3. The upper sensor will sense After the object, the front sensing action is completed within 3 seconds, the soap liquid is discharged, the duration is 2S, and then it is automatically closed;
4. The side mechanical handle adjusts the water outlet temperature;
5. The current temperature is displayed when the water is discharged, and it is not displayed when the water is turned off. Temperature accuracy is $\pm 1^{\circ}\text{C}$;
6. It has a power-off protection function, that is, the solenoid valve automatically closes the water outlet when the power is off;
7. The front induction is self-adaptive when powered on;

Installation and maintenance

function	description
Sensing water in front	1. When the front induction senses the object, the LED light flashes once and the water exits immediately. When the induction is short, the water automatically closes the water after $60\text{s} \pm 5\text{s}$; the object returns to normal state after leaving the induction distance; 2. In the case that the front induction window senses the object, and when the side induction window also senses the object, it switches to the side induction to grow water; 3. During the induction of water outlet, the upper induction function is prohibited; 4. trigger the solenoid valve open moment LED, the light flashes once, indicating the induction state.
Water is induced on the side	1. When the side induction window senses the object, the LED light flashes once and opens the water, leaving the object does not affect the current state. When the object is approaching again, the LED light flashes once and closes the water. Leaving the object does not affect the current state, which is equivalent to sensing one 'on' and another 'off'. 2. After $180 \pm 10\text{s}$, automatically close the water; return to normal state. 3. During the induction of water outlet, the front induction and upper induction functions are prohibited;
On the induction out of the soap liquid	1. After the induction window senses the object, the soap liquid indicator light (backlight plate) shines for 3s, triggering the front induction window induction and the soap liquid within 3 seconds; before the induction triggers beyond 3S, the soap liquid fails and returns to the normal state; 2. The time of soap discharge is $2 \pm 0.5\text{S}$, and the normal state is restored after the discharge is completed; 3. During the period of soap solution, other induction functions are prohibited; 4. Front induction function recovery condition: A. Remove the soap liquid B. Hand off the upper sensing range C. After releasing the soap liquid, the hand should exit the preinduction range. All the above ABC should be met, and the water can be triggered before entering the induction range again.
Debugging mode	Complete adaptive within 4s, and the front induction module will adapt to $4\text{cm} \pm 2\text{cm}$ of the obstacle in front. If there is no obstacle, it will be adjusted to the longest distance. When the object enters the front induction area, the module opens the solenoid valve, and the LED indicator light flashes once; After the continuous induction exceeds 30s, the valve will be opened again, and the induction distance is not reduced. After induction 10 times or 5 minutes without induction, enter the normal mode at the current distance; After power on 10 induction (do not distinguish the front and side induction) or on 5min, 10 induction and 5min, which first reached, to Which shall prevail is to exit debugging mode and enter normal working mode.

Mechanical temperature regulation	Mechanical handle temperature regulating function.
The temperature display	The current temperature is displayed at each water outlet, but not when turned off. The minimum accuracy of the display temperature is 1℃, and the error is ± 1℃;
self-regulation	If continuous induction exceeds 60s, the module induction distance will be automatically shortened to 4cm ± 2cm before the obstacle; when not induction, after about 60s, the module induction distance will be automatically extended to 4cm ± 2cm in front of the obstacle. If there is no obstacle ahead, it will automatically extend to the most remote.
Power-on adaptive function	1. After charging, the digital tube is lit up, showing 88, and the front induction is adaptive after the digital tube is extinguished; 2. During the power-on period, keep the solenoid valve off. If the solenoid is opened before, it closes automatically. 3. The adaptive time of power-on should not exceed 4 seconds.
power-off protection	After the module is powered off (unplug the power line, non-five-core wire), the solenoid valve is closed within 20 seconds, and the LED is always bright until the charge is completely released.
Timeout protection	Module control the longest water time: 1, front induction water: 60s ± 5s; 2. Side induced water: 180 ± 10s;


Product parameters and specifications

Front-end induction distance	Nearest induction distance: 8 ± 3cm The thest induction distance: 23 ± 3cm Default distance: None (power adaptive)
Profile-sensing distance	Fixed distance: 10 ± 2cm (for the standard 29.7cm 29.7cm whiteboard);
Ininduced distance above	Fixed distance: 16 ± 2cm (for standard 29.7cm 29.7cm), about 10 ± 2cm after glass (for standard 29.7cm 29.7cm);
service voltage	AC 110V ~220V to DC 6V 1A adapter, 4 no. 5 dry batteries (backup power supply);


Installation and maintenance

Schematic diagram of installation

1. Remove the fixing nut and gasket


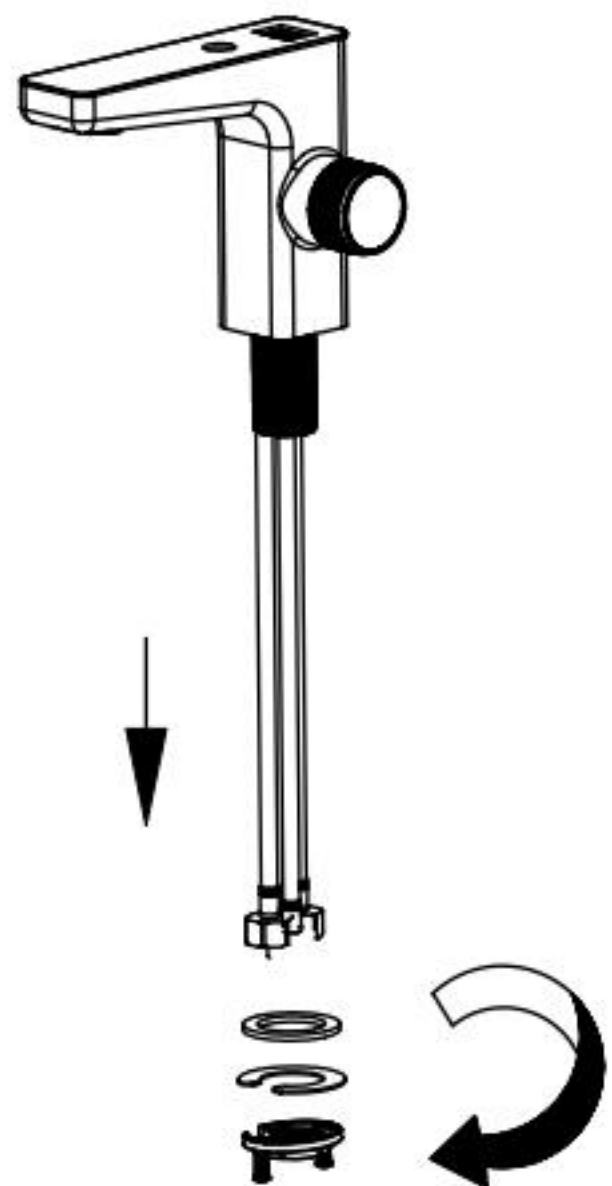


2. The faucet inlet pipe, quick pipe, and pull-out pipe pass through the sink hole and are locked at the bottom

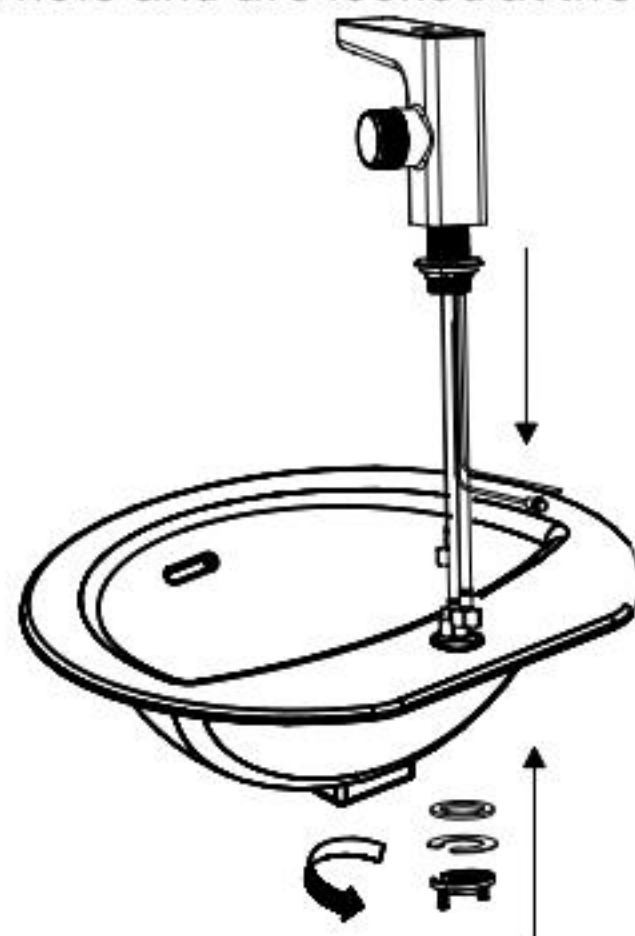

3. Close the hot and cold water angle valves and connect the inlet hoses of the faucet's hot and cold water to the angle valves separately


- ✘ The red marked hose is connected to the hot water angle valve.
- ✘ Before connecting the hose, it is necessary to drain any impurities inside the pipeline.

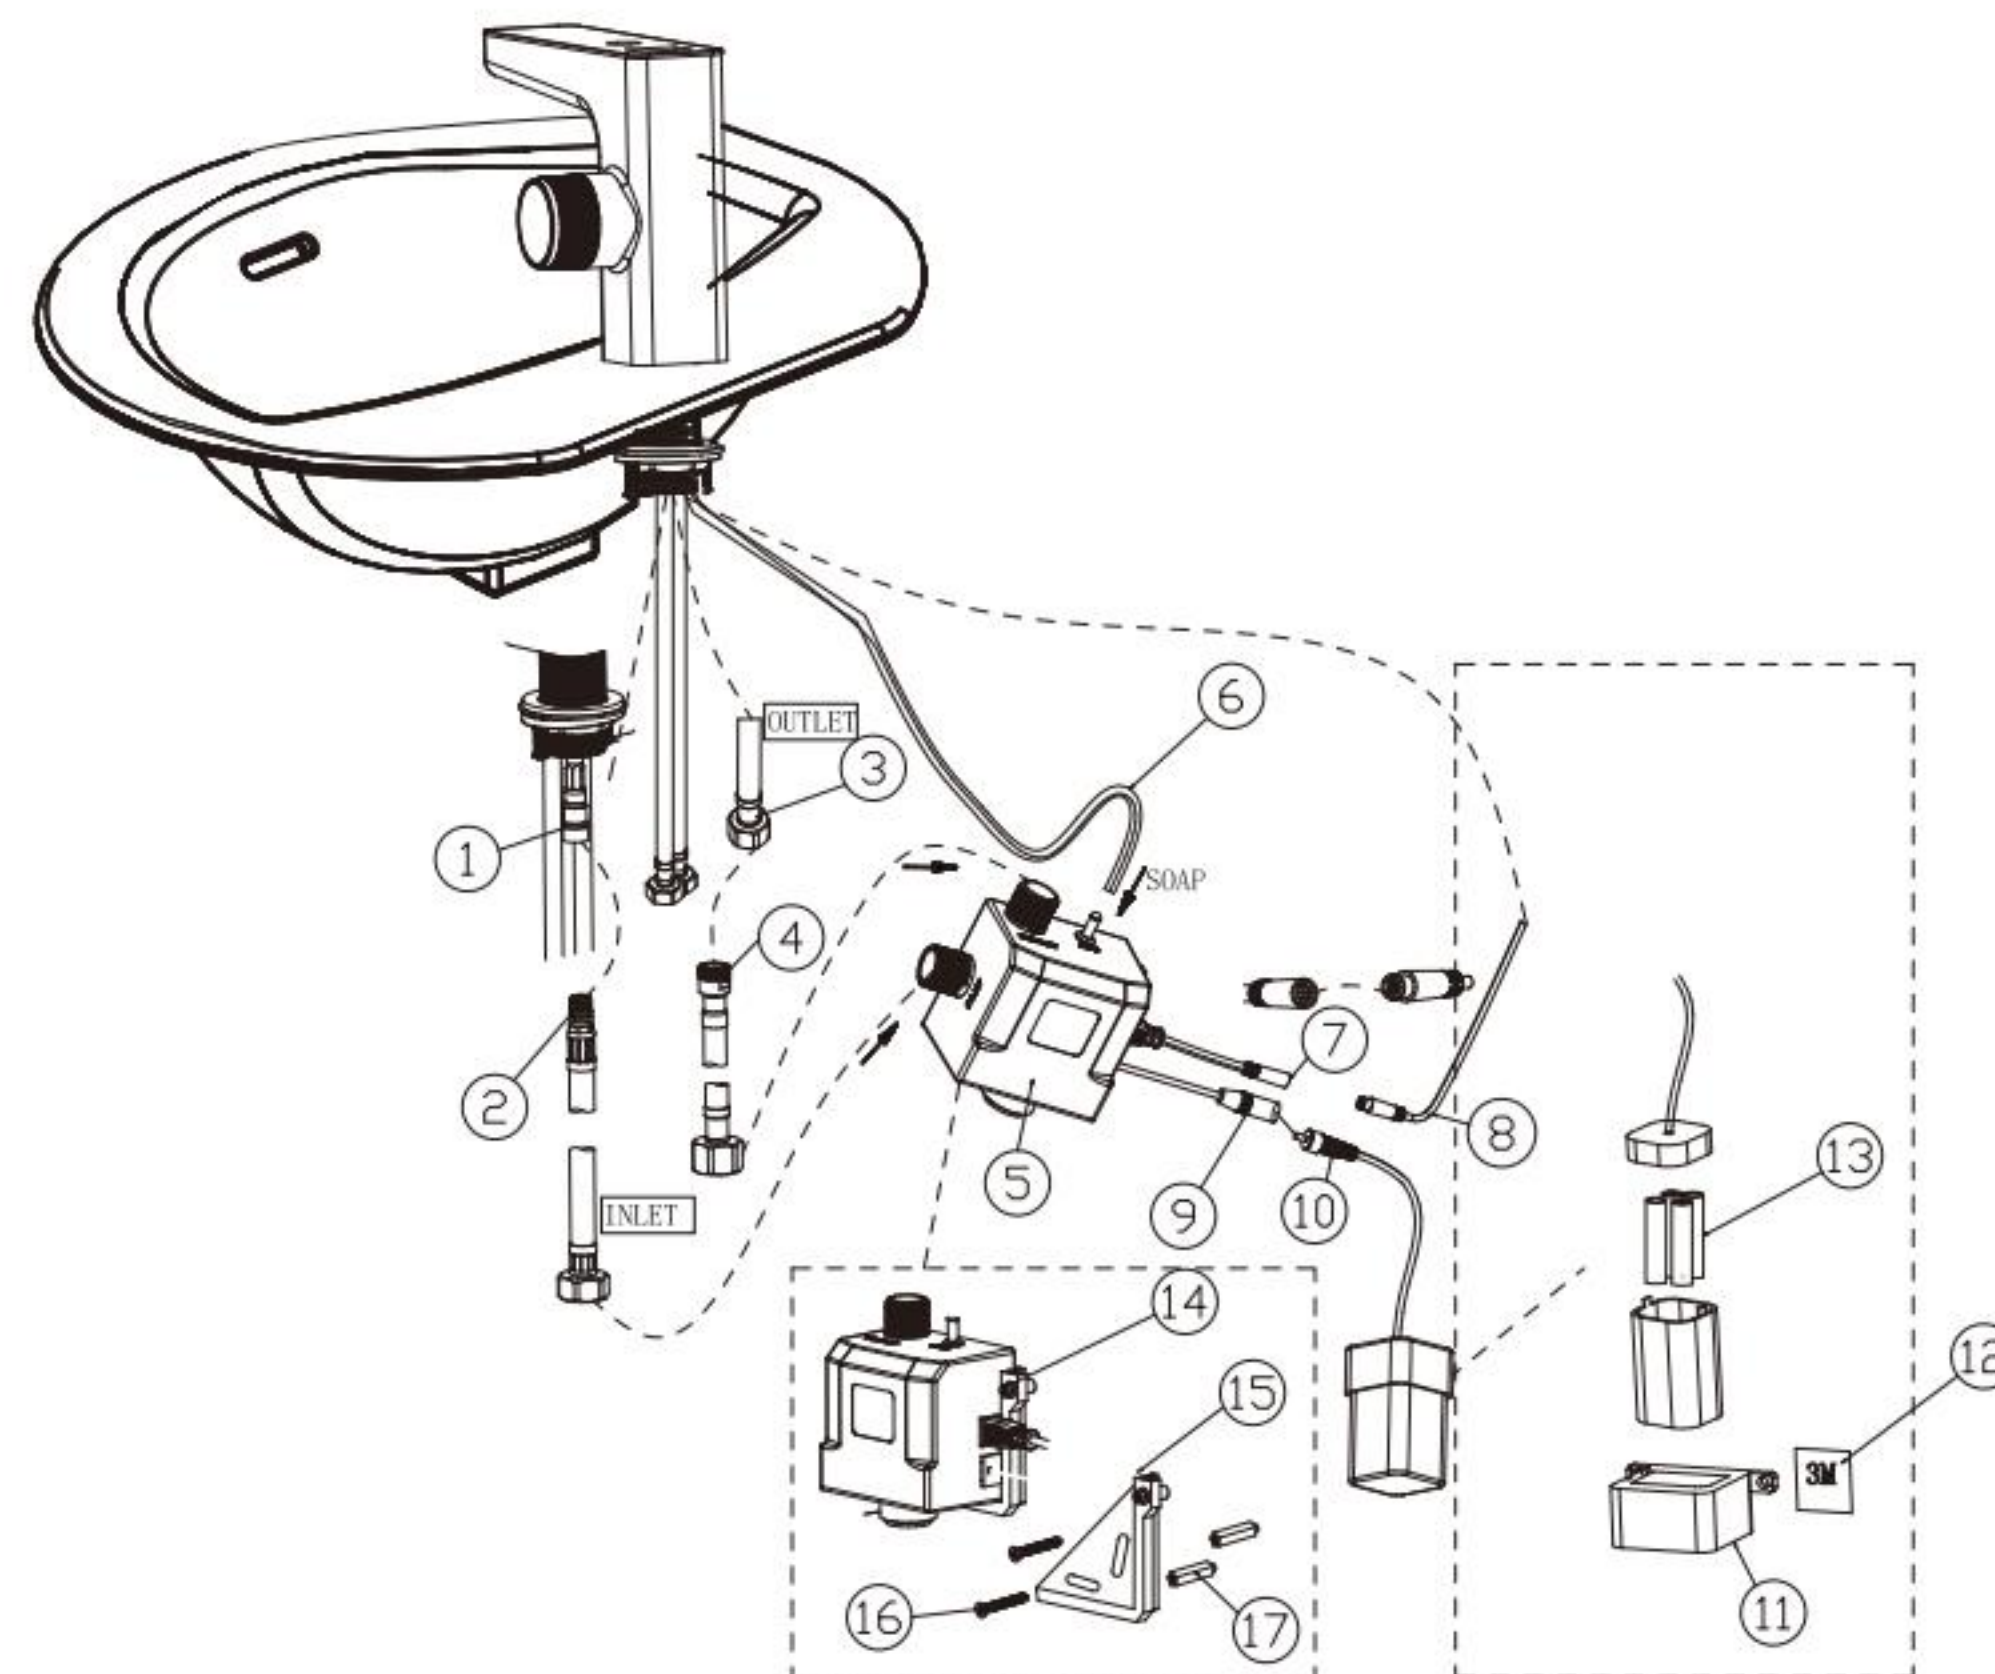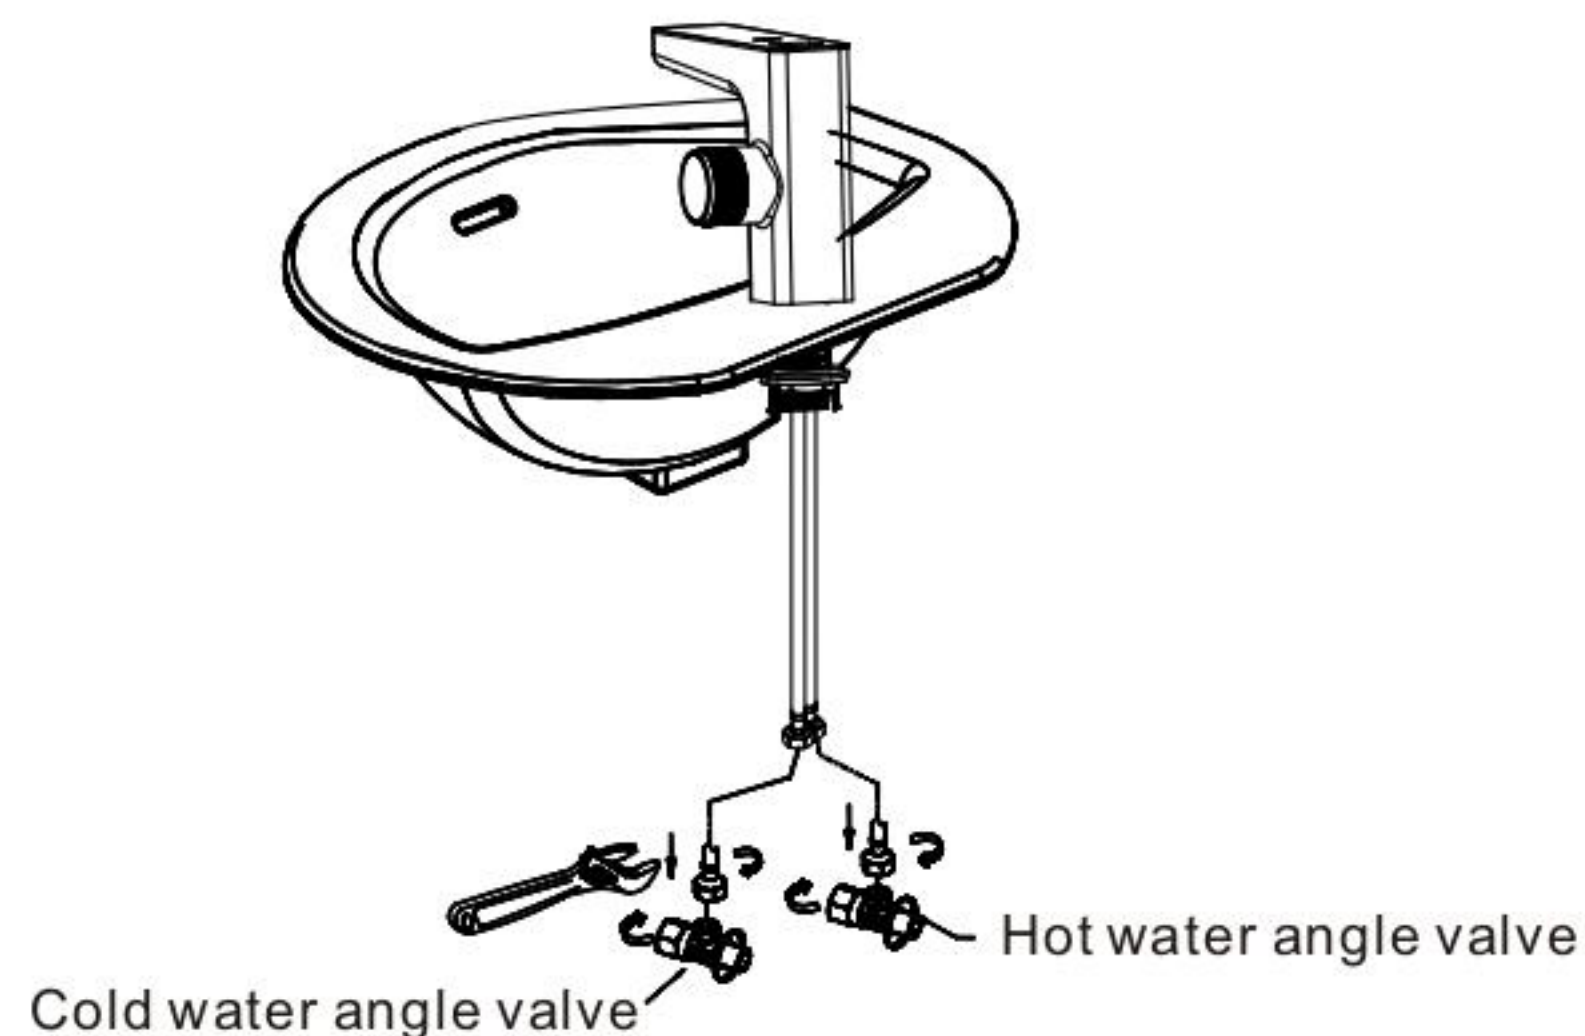


4. Connect the hard pipe ① on the faucet to the hose M10 thread ②, connect the other end of the hose G1/2 thread to the controller "INLET" ⑤ connector, and connect the hose "OUTLET" ③ to the hose M15 thread ④, The other end of the hose ④ is connected to the controller "OUTLET" ⑤ connector with G1/2 thread, the transparent hose ⑥ is inserted into the controller "SOAP" ⑤ connector, and the controller ⑤ and control line ⑦ are connected to the faucet ⑧ control line (note that the plug interface should correspond to the direction), Connect the power cord of the controller ⑨ to the power cord of the battery box ⑩ (4 No. 5 dry batteries ⑬ need to be purchased before installation, and the battery box ⑫ can be fixed to the wall with 3M adhesive tape ⑪). After connecting the controller ⑤, use a screwdriver to remove the screws ⑭ on the control box ⑤, Fix the bottom plate ⑮ in the appropriate position on the wall with screws ⑯, drill holes with an electric drill, and insert plastic expansion screws ⑰ to fix it

Soap pairing method

- Use non specialized soap without mixing water will cause the foam soap could not be produced and dispensed.
- When use non specialized soap, the recommended mixing ratio of soap and water is 1:5 or 1:8.
- The improperly mixing ratio of soap and water will cause the uneven soap dispensed.
- To avoid the soap liquid coagulation, shake the liquid to activate the soap when long time no use the tap.
- If the soap could not be dispensed smoothly when initial usage, continuously induct to activate the soap about 3 times could make it work well.

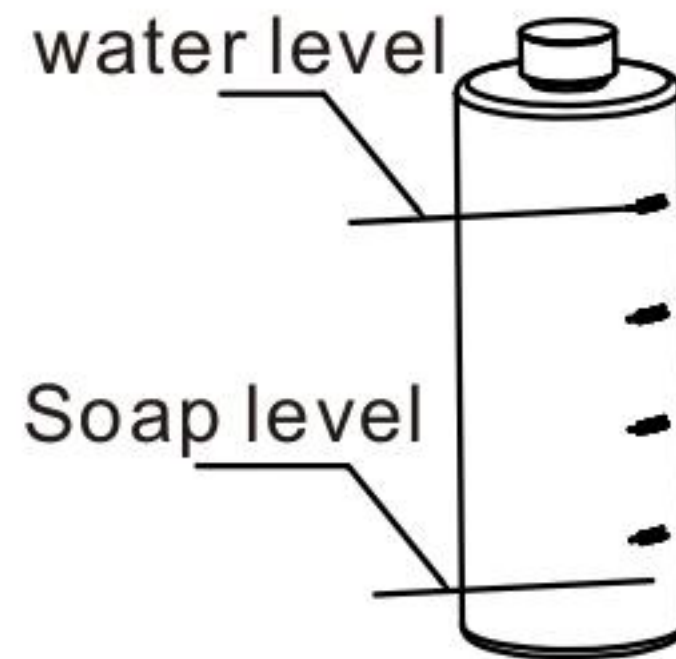


- After preparing the soap solution, simply screw the soap bottle onto the controller

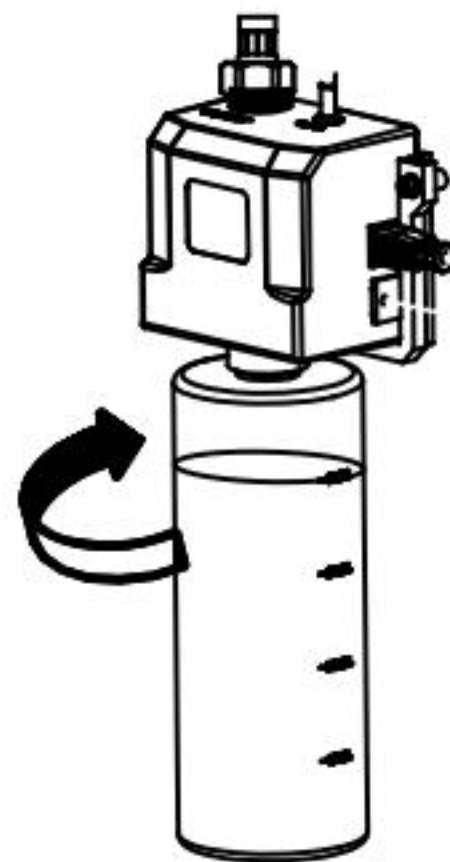


instructions for use

1. Handwheel ① is a switch for adjusting the temperature of the switch box. After adjusting the temperature, there is no need to adjust it. (When stopping use for a long time or going out, the valve core should be set to the OFF position to avoid faults. When the faucet flows out of water, the display window ② will light up, which is usually closed. When the hand is in the soap sensing area ③ on the glass, shake it, and the display light ④ will light up, indicating that the soap dispenser is ready. As long as the hand reaches the soap dispensing position ⑤, soap will be dispensed. During the soap dispensing period, other sensing functions are prohibited. For detailed instructions, please refer to the previous function description. When washing hands, it is necessary to clean the water outlet sensor ⑥ to avoid affecting the water outlet and soap dispensing functions

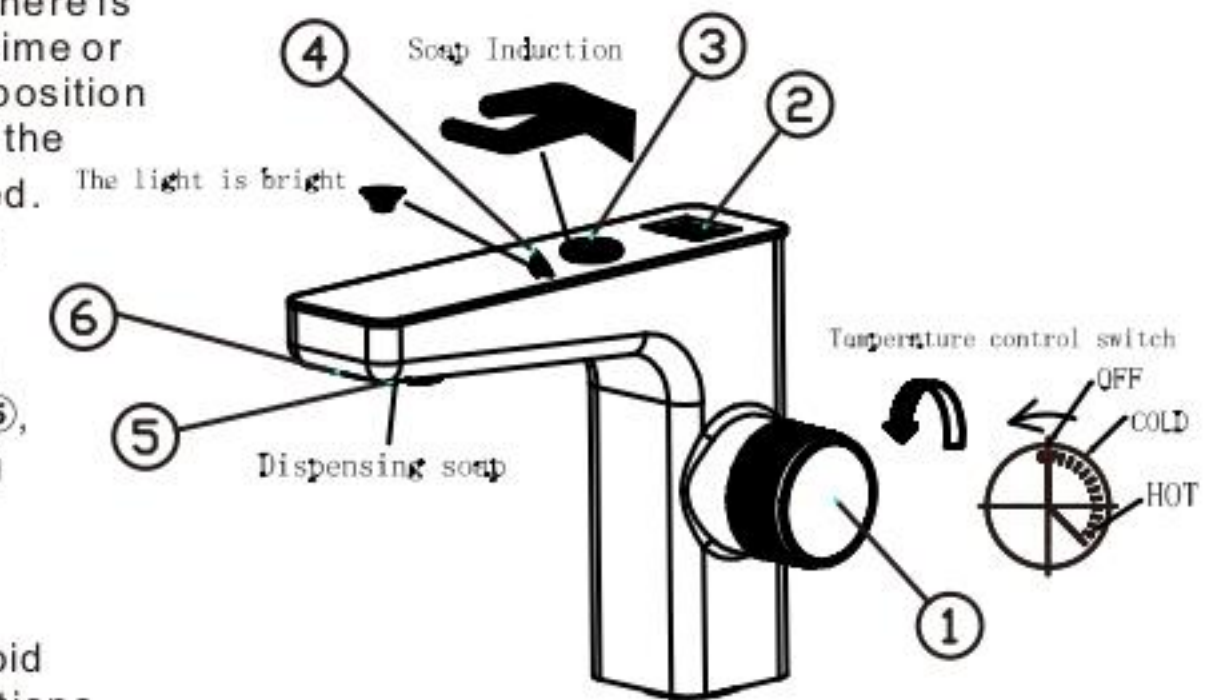

- When the hand wheel ① is open, reach to the front end sensor ⑥, and water will flow out for a short time. If foam needs to flow out, repeat step ①

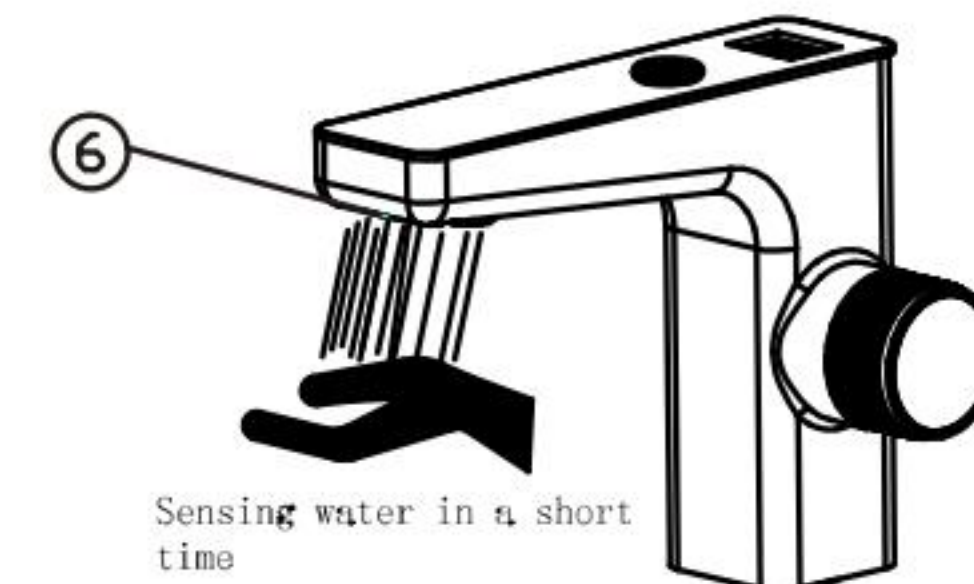

- If it takes a long time to release water, you can shake in front of the side sensor ⑦, and the faucet will release water for a long time (lasting about 180 seconds)



Installation and maintenance

Common fault analysis and troubleshooting methods

	analysis of causes	The exclusion method
insensitive	There is dirt on the sensing surface	Clean the induction window black section
	The protective film is not removed	Tear off the HD protective film
Can only be turned on, not off	Check the control box for a flashing red light	Replace the battery, see the specific above
Insufficient water output	Filter blocking	Clean or replace the filter screen
	Water pressure is too low	Improve the water pressure
Excessive water output	Water pressure is too high	Reduce water pressure
Short battery life	The inferior batteries were used	Replacing alkaline batteries
leak water	Rubber ring, quick take over rubber aging	Replace the rubber ring

Warranty certificate

Instructions for using the warranty certificate

Dear users:

Thank you for using the product, and we will provide the following services with this warranty certificate and valid purchase invoice in accordance with relevant regulations:

- This product is a product through strict quality management and inspection process.
- Keep the warranty certificate properly as the proof for your warranty service.
- During the warranty period, the entire machine is guaranteed for free for one year (from the purchase date, subject to the invoice date).
- If the tap fault cannot be removed during use, contact the service as follows:

During the warranty period: please contact with our company after-sales service center or special maintenance point, bring the warranty card certificate and purchase invoice together to the water repair faucet.

After the warranty period: Please contact the company's after-sales service center or authorized repair point for repair and charge according to regulations.

Note: Do not dismantle the maintenance, should be repaired by professionals or maintenance center, otherwise prone to danger.