

Touchless Faucet Adapter Installation Manual



Double Sensors Rapid Response Air Injection

Basic Parameters

Product Name	Touchless Faucet Adapter
Charging Specification	Micro USB charging
Standby Power Consumption	≤0.2mW
Battery Capacity	3.7V lithium battery(400mAh)
Working Water Pressure	0.05-0.8MPa
Sensor Distance	side sensor 0-5cm/bottom sensor 0-10cm
Waterproof Level	IPX6
Water Efficiency	Level 1
Product Size	60x33x50mm

Product Hazardous Substances Declaration

Part Name	Harmful Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Suitable Connector	○	○	○	○	○	○
Outer Shell	○	○	○	○	○	○
Circuit Board	×	○	○	○	○	○
Solenoid Valve	○	○	○	○	○	○
Aerator	○	○	○	○	○	○

This form is compiled according to the rules of SJ/T11364.

○: Shows that the content of the hazardous substance in all homogeneous materials of the part is below limit of Rohs and GB/T26572.

×: Shows that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds limit of Rohs and GB/T26572.

Usual Problems

1、Water Leakage After Installation

1-1. Please check connector is properly installed with sealing ring

1-2. Whether faucet adapter is pushed to the top to fully contact with the connector

2、No Water When Hand Sensor

2-1. Please check whether the faucet mechanical valve is open.

2-2. Please check whether the sensing object is too far away, it can't be sensed if it exceeds sensing distance.

2-3. Please check whether there are large water droplets remaining on bottom or side sensor window, wipe it before use.

2-4. Battery without power, charging it in time.

3、Intermittent or Continuous Water Discharge at Bottom

3-1. Bottom sensing distance is 0-10cm, please check whether bottom sensing window of faucet adapter is too close to the water basin.

3-2. Please check whether side sensing model is opened by mistake when using bottom sensing model, resulting in continuous water flow. Turn off the side sensor.

3-3. Please check whether there are any water droplets on bottom or side sensor window, please wipe it before use.

4、Why are the distances different when sensing different objects ?

The characteristic of infrared is that the sensing distance will be different when different materials are used. Current marked sensing distance is measured using white cardboard according to industry standard.

Attention

Please carefully read and follow below before installing and using the product.

1. Do not use the product with instant heating equipment, solar water heaters, etc. to avoid abnormalities.

2. Do not wipe the sensor window with rough objects.

3. Do not use strong acid and alkali detergent to clean the body.

4. If you don't use it for a long time, please turn off the faucet switch handle.

5. If you find that the water volume becomes smaller, it may be blocked by the filter, please remove the connector and clean the inner filter gasket.


6. It is forbidden to install this product next to high temperature objects.

7. It is forbidden to install this product in areas where there is a risk of freezing.

8. It is forbidden to install this product in direct sunlight.

9. The working water pressure is 0.05-0.8Mpa, please do not use this product under the water inlet pressure exceeding 0.8Mpa.

10. Before using this product, make sure that the USB charging protection plug is fastened to prevent water from entering.

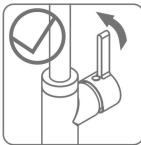

Product Warranty

The after-sales service of sensor faucet adapter is strictly based on the (Consumer Rights Protection Law of the People's Republic of China), and the (Quality Law of the People's Republic of China) implements after-sales three packs of services. The service content is as follows:

Within 1 year from the day after you sign for the product, if the product has a product performance failure, it will be determined by the after-sales service center, and you can enjoy free maintenance services.

Non-warranty Regulations

The three guarantees will not be implemented in one of the following situations, and only chargeable maintenance will be provided:

1. Consumers suffer losses due to improper use, maintenance, and storage, such as missing the product's standard seals, causing water leakage and product damage; such as acid-base corrosion, dampness, and use of high-concentration chlorine or chlorides. Failure and loss caused by use in environments other than normal use; such as freezing in an environment below 0°C; such as siltation, rust and unusable caused by water pressure and water quality in the water supply system.

2. Damage caused by repairs by non-authorized service providers designated by the company.
3. There is no valid three guarantee certificate and valid invoice or valid purchase certificate.
4. Damage caused by force majeure.

Qualification Certificate




Product Name	Touchless Faucet Adapter
Product Item Nr	
Production Date	
Inspectors	
Executive Standard	CJ/T194-2014 (Touchless water supply appliance)

Warranty Card




Purchase Date	
Phone of User	
The Warranty	See Detailed Warranty
Service Hotline	



Product Introduction



⚠ Before installing connector, please make sure that sealing ring is installed on connector correctly to the model, wrong installation will cause water leakage.

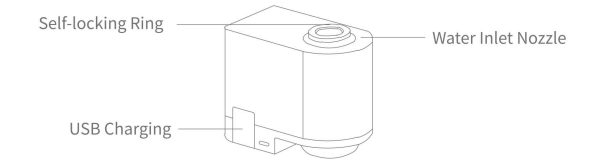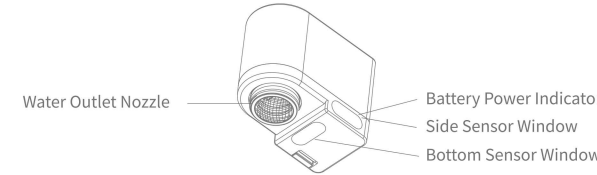


⚠ Please charging full power before use the product (Time of full power charging about 3 hours)

Installation


1 Remove Faucet Aerator

Remove original aerator of main faucet, clean the impurity in faucet spout.

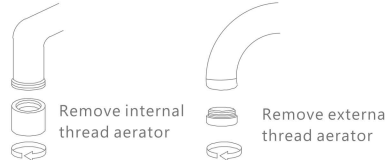


2 Install Connector of Faucet Adapter

Select connector that matches size of original tap thread, select sealed ring of the corresponding model and install connector, tighten it counterclockwise with a wrench.

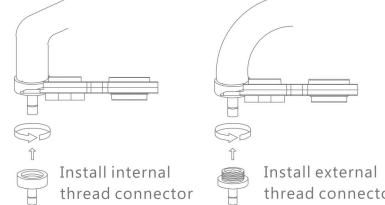


3 Install Sensor Faucet Adapter

Push sensor faucet adapter upwards and fasten the self-locking ring with the connector to complete the installation. (The position of sensor faucet adapter can be adjusted by rotating the sensor horizontally)

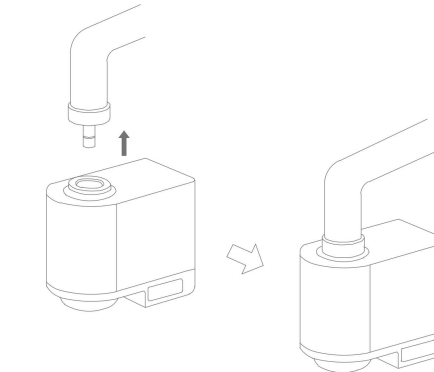


Disassembly

Put the spanner between the connector and the lock ring, press the center position of the self-lock ring, and pull the spanner upward to remove it.

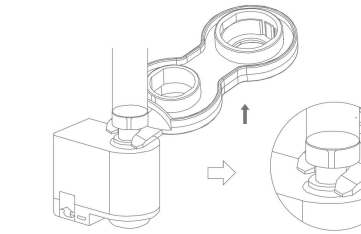


Power Charging

When electric power display light is normally on, it should be charged in time. Turn off the faucet handle, remove the adapter from the faucet and use a Micro USB data cable (Android data cable) to charge the faucet adapter.

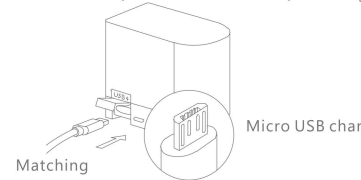

Usage

Side sensor: When hand is placed 0-5cm from the side sensor window, the water is discharged continuously for 3 minutes. If want to close water, put the hand in the sensing position again, the water will be stopped.

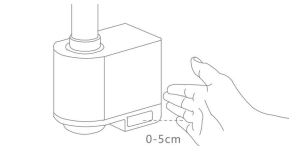

Bottom sensor: When hand is placed at the bottom and the sensing distance is 0-10cm from sensor window, water will out. When the hand is removed, water stops.

