


Installation Manual

Touchless Faucet Adapter

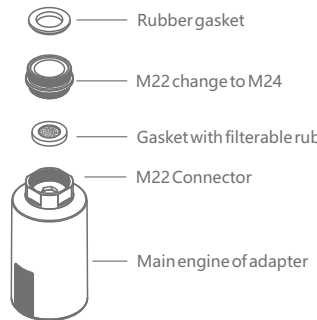

Rubber gasket

M22 change to M24

Gasket with filterable rubber


M22 Connector

Main engine of adapter

*Before installation, please fully charge the product firstly.

*This product is match to male M22 and female M24 of faucet nozzle

Product Configuration

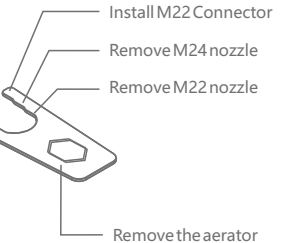


Install M22 Connector

Remove M24 nozzle

Remove M22 nozzle

Remove the aerator

Function Inducation

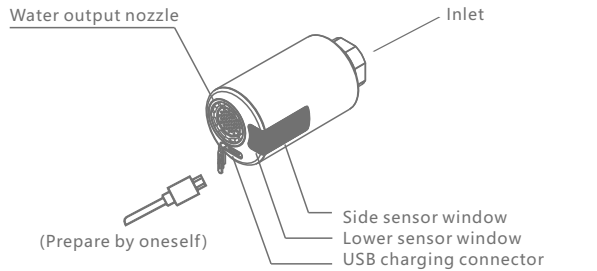

Water output nozzle

Inlet

Side sensor window

Lower sensor window


USB charging connector

(Prepare by oneself)

Long time water output(side sensor window): water output when wave hand, water stop when wave again.

Short time water output (lower sensor window): water output when wave hand, water stop when hand leave.

Installation Drawing

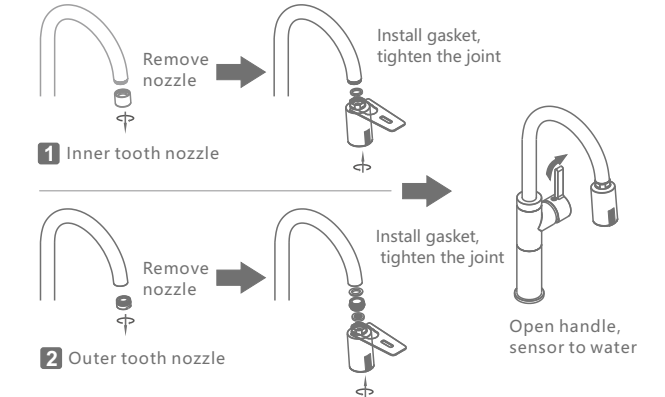

1 Inner tooth nozzle

2 Outer tooth nozzle

Remove nozzle

Install gasket, tighten the joint

Remove nozzle

Install gasket, tighten the joint


Open handle, sensor to water

Product Usage

- 1 Long time water output: waving side sensor window, the faucet out of the water, wave again to stop; 3 minutes overtime water output protection.
- 2 Short time water output: put hand to the bottom of the sensor window, the faucet is out of water, water will stop when hand leave; 3 minutes overtime water output protection.




1 Long time water output

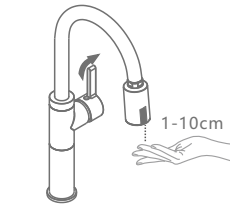

2 Short time water output

Applicable Faucet

- 1 This product is suitable for installation on the high-foot/high-bend faucet. The original faucet nozzle should be $\geq 25\text{cm}$ away from the table top.
- 2 This product is not suitable for installation on pull-out faucet, low-bend faucet, basin faucet and other shaped faucet.

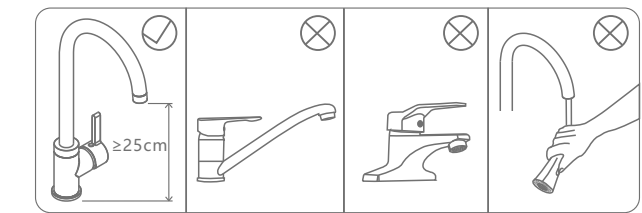


Usage Maintenance

- 1 If the volume of water is found to be small or no water, it may be blocked by the filter. Please unscrew the inlet fitting, remove the filter gasket and wash it with water, then put it back.
- 2 When battery is with low power, the indicator light will flash slowly for 5 times when put hand, indicating that it needs to be charged, can continue to use; When battery is with very low power, the indicator light will flash 10 times when put hand, indicating that the battery needs to be charged urgently, the water should be forcibly turned off.


REMINDER

1. In normal use, the battery life is about 9 months; if it is not used for a long time, please charge it within 3 months in case the battery uses up. Product can not work normally when charge it, and should turn off the handle of the faucet in advance.
2. USB cable and power adapter are not included with product itself.

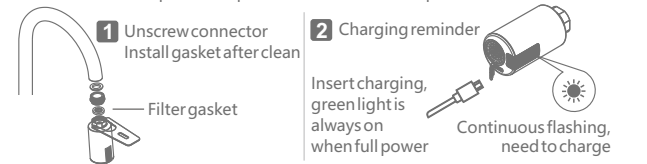

Precautions for Usage

- 1 Do not use rough objects to scrub the parts of the sensing window, such as rough linen, brushes, steel balls, etc. Do not wipe the product with a damp cloth that is drenched with water or dripping to avoid sensor failure or product damage.
- 2 Do not use strong acid or alkali for detergent cleaning.
- 3 When the faucet is not used for a long time, please close the handle.
- 4 Please ensure that the water supply pressure is within the range of 0.05-0.8 MPa, otherwise there may be dripping or water leakage.
- 5 When using the product, please make sure that the USB charging protection plug is tightly fitted, in case gas enters and rusts the charging port.

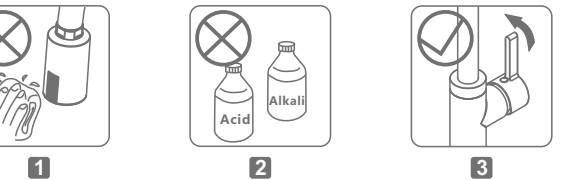

Technical Parameters

Battery Capacity	3.7V lithium battery (400mAh)
Charging Specifications	Micro USB Charging (5V / 500-1000mA)
Product Size	41mmx41mmx79mm
Standby Power Consumption	≤0.2mW
Sensing Range	Side to 1-6cm; Lower to 1-10cm (hand sensing)
Applicable Water Pressure	0.05-0.8MPa
Fitting Faucet Nozzle	Male M24*1/ female M22*1
Environmental Temperature of Using	1-40°C
Environmental Humidity of Using	≤95%RH
Water Efficiency Level	Level 1
Waterproof Level	IP65

FAQ Handling

- 1 Water leakage after installation
 - 1.1 Please confirm whether there is a gasket at the inlet joint and whether the gasket thickness is suitable.
 - 1.2 Please confirm whether the water pressure is within the range of 0.05-0.8 MPa.
- 2 No water when sensing
 - 2.1 Please confirm whether the faucet handle and the inlet angle valve are open and whether the water is stopped.
 - 2.2 Please confirm whether the surface of the upper and lower sensing windows are covered with water or covered with mist, cleaning it is ok.
 - 2.3 Please confirm that there should be no obstacles within 30cm of the upper and lower sensing windows.
 - 2.4 Please confirm that the sensor window indicator flashes once when the sensor is reached. If it flashes continuously or does not flash, please use it after charging.
- 3 Intermittent water or water can not stop
 - 3.1 Please confirm whether there are large drops of water on the surface of the upper and lower sensing windows or covered with mist, and wipe them clean
 - 3.2 Please confirm that there should be no obstacles within 30cm of the upper and lower sensing windows.

Warranty

- 1 This product implements the national three-package policy. Under the premise of being installed and used, the warranty period is 12 months. For the quality problems or failures, after the after-sales service center appraisal, enjoy the return within 7 days and change within 15 days.
- 2 Any quality issues arising from the following actions are not covered by this warranty.
 - 2.1 Quality problems due to improper installation, replacement, repair, and like these are not covered by this warranty.
 - 2.2 Products for industrial and commercial usage.
 - 2.3 The quality problems caused by misuse, abuse, neglect and the use of non-original accessories. Such as using a hard rag such as a steel ball or a strong acid-base cleaner to clean the product, resulting in a sensing window and The outer casing is scratched and corroded; the water pressure is not used in the limited range of the product; the water quality is blocked or rusted due to poor water quality etc.
 - 2.4 Damage caused by other irresistible factors.

Qualification Certificate

Product Name	Touchless faucet adapter
Product Number	
Date of Manufacture	
Inspectors	QC 08 PASS
Executive Standard	CJ/T194-2014 《Non-contact water supply appliance》

Purchase Date	
User Phone	
Warranty Clause	See warranty instructions for details
Service Hotline	