

安装说明书

INSTALLATION INSTRUCTIONS

INSTANT HEATING DIGITAL SENSOR FAUCET

即热式数显感应龙头

BEFORE YOU BEGIN 安装之前

- Please read the instructions carefully.
- Please give the instructions to the end customer after installation.
- The shape and components of the product do not necessarily comply with the illumination which is only for your reference.
- Please purchase a suitable and usable connector.
- It is recommended that the customer invite professionals for the installation.
- Get these tools at hand: Shock-proof gloves, Wrench, Screwdriver, Pliers, Sealing tape and etc.
- The following pictures for your reference do not necessarily comply with the products. Please contact the seller if you have any question related to installation.



防电手套
Shock-proof gloves



活动扳手
Wrench



螺丝刀
Screwdriver



钳子
Pliers



密封胶带
Sealing tape

- 请仔细阅读本说明书。
- 安装完毕后，请务必将本说明书交给最终客户。
- 产品外形及所包含配件以实物为准，示意图仅供参考。
- 请购买一个正确且有效的连接装置。
- 建议客户请专业的安装人士安装。
- 准备以下工具：防电手套，活动扳手，螺丝刀，钳子，密封胶带等。
- 以下图例安装步骤仅供参考，一切以所购买实物为准，如遇到不清楚之处，请联系您的销售商。

PREPARATION BEFORE INSTALLATION 安装使用准备工作


1. Make sure the adapter voltage matches the product voltage. The power outlet and wires should withstand 3000W, and the copper wires larger than 2.5mm².
2. Apply tap water to the machine. Do not use untreated sewerage or the electromagnetic valve may be damaged.
3. Avoid direct sunshine or intense light for the sensing window while choosing installation position or the performance of the machine may be affected.
4. Install an additional pressure booster when the water pressure is lower than 0.07MPa to prevent damages to the heating block. (Low water pressure will automatically stop the heating block)
5. Install an additional pressure decreasing device when the water pressure is higher than 0.7MPa or the machine may be damaged.
6. Please install a separate water valve for the faucet.

*a waterproof power socket is recommended, make sure it is grounded.

INSTALLATION OF THE FAUCET 龙头安装

- Step 1:**
Aim G1/2 hose against the water inlet at the bottom of the faucet and screw it in tight.
- Step 2:**
Install the shaped gasket, spring gasket, nut and slotted flat point stud according to the sequence of the illustration and fix the assembled faucet on the basin.
- Step 3:**
Insert the other end of the control wire into the filter end and screw it tight, then screw the other end of the G 1/2 hose on the water outlet of the valve.
- Step 4:**
Connect and tighten the faucets power socket and wires, and plug in the socket, thus the product installation is finished.


- 第一步:**
如图所示，将橡胶垫片套入龙头体底部的进水孔。然后将装好的龙头体装入面盆孔。
- 第二步:**
按顺序将异形垫片、固定螺母套入螺杆，并锁固在面盆上。（异形垫片缺口对准电线）
- 第三步:**
将G1/2进水管对准龙头体底部的进水孔旋入并拧紧，再把G1/2进水管的另一端（带滤网）旋紧到墙上三角阀处。
- 第四步:**
将龙头体电线和漏保插头连接上并拧紧，再将漏保插头接入插座，这样自动水龙头就全部安装好了。

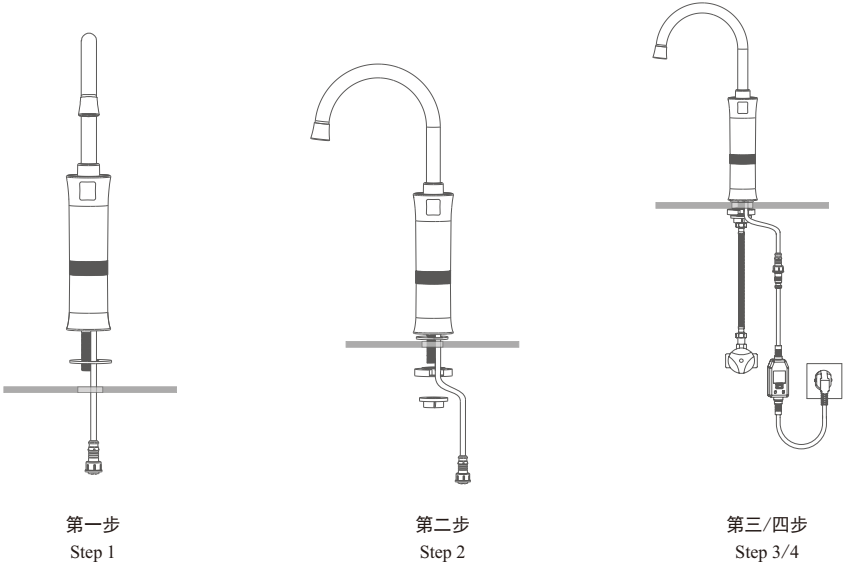

第一步
Step 1

第二步
Step 2

第三/四步
Step 3/4

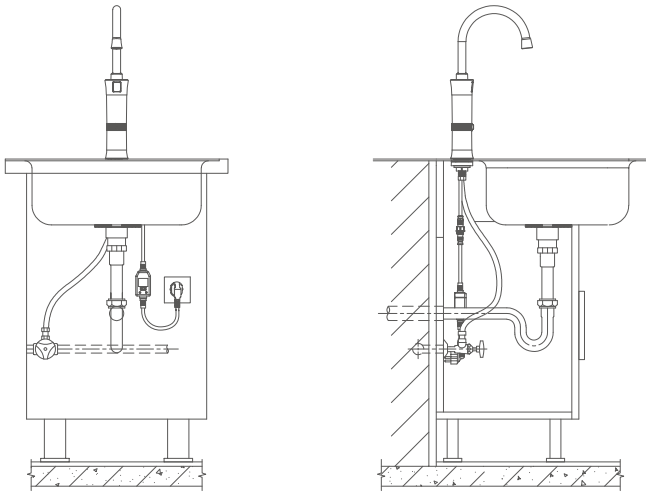

安装完成图
Installed Sketch

- ⚠ 注意:
1. 本产品内部有电源自动开关，故在日常使用中无需拔下电源插头。
 2. 本产品为下进式，必须竖直安装，不可倒装，斜装和横装，否则容易引起故障。
 3. 龙头装好后，务必先打开水路，再通电，然后感应出水，以防加热干烧，损伤产品。

- ⚠ Caution:
1. This product uses an built-in power switch, it's unnecessary to unplug the device when not in use.
 2. This product vents in water underneath the faucet, it MUST be installed vertically, or else it will malfunction.
 3. After installing the faucet, always turn on the water supply first, then power it on, and finally using the sensors to prevent overheating and other damages.

USE EXPOSITION 使用说明

This product uses a dual sensor installation.

1. Instantaneous mode:

When the sensor detects motion from the front, the faucet releases water. To deactivate the faucet, leave the sensor area and water will stop coming out of the faucet. (Instantaneous mode will stop even if frontal sensors is tripped for over 60 seconds)

2. Continuous mode:

Trip the side sensors (about 2-5cm from the screen) for 1 second, the faucet starts releasing water.

After the side sensor's on, activate the side sensor again to turn off the faucet. (Continuous mode will stop even if side sensors is tripped for over 180 seconds)

本产品采用单窗双感应技术

1. 即时开关水模式:


从龙头正面由远到近进入感应范围时，电磁阀开启龙头开始出水。

离开感应范围时，电磁阀关闭龙头关水。（即时出水超过60秒时，自动关闭水龙头）

2. 长时开关水模式:

从侧面近距离（距离感应窗口约2-5cm）进入感应范围时，停留1秒，电磁阀开启龙头开水。

离开感应后，再次从侧面近距离（距离感应窗口约2-5cm）进入感应范围时，电磁阀关闭龙头止水。（长时出水超过180秒时，自动关水）

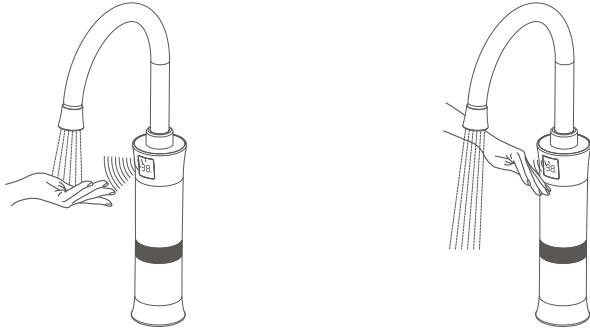

即时开关水模式
Turns on Instantaneously


长时开关水模式
Turns on Constantly

3. 本产品内含高效电热元件，过水即热，冷热可调节。
(1) 加热模式：顺时针转动圆环，离开冷水档，打开水龙头即启动加热。转动幅度越大，加热速度越快。
(2) 冷水模式：逆时针转动圆环直至无法转动，即为冷水档，打开水龙头时则不启动加热。

3. This product uses a high efficiency electronic heat block, heats up water as it passed through the faucet, the temperature is adjustable.

(1) Hot water: turn the ring clockwise to raise the temperature. Turn the ring more for hotter water.

(2) Cold water: turn the ring counter-clockwise to the limit to shut off the heating unit.

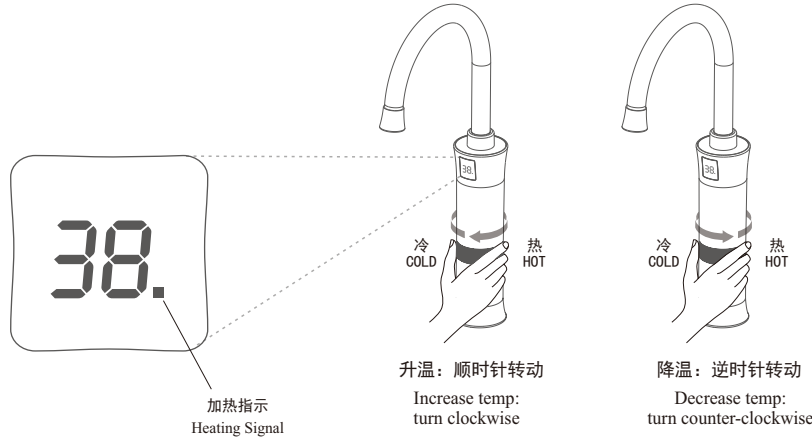

升温：顺时针转动
Increase temp: turn clockwise

降温：逆时针转动
Decrease temp: turn counter-clockwise

- ⚠ 注意:
1. 启动加热时数显右下角小点亮起，关闭加热时显右下角小点熄灭。
 2. 逆时针旋转到底时，会强制关闭加热功能。

- ⚠ Notice:
1. The period displayed after the temperature means the heat block is active, the period will disappear after the unit is done heating.
 2. Turning the ring counter-clockwise to the limit will turn the heat-block off. Forcing the heating process to stop.

FEATURES OF THE PRODUCT 产品特点

1. Convenience: Automatically open and close water supply needless of manual operation.
2. Safe: Circuit breaker, Heat resistant, pressure safe, shockproof, auto-shut features etc, the product insures all safety features upon use.
3. Excellent insulating heater that provide shock protection up to 1500V. The heating tube is 0.8mm thick with a durability beyond to 3000 hours.
4. Sensors and magnetic valves test for over 500,000 uses
5. The pressure control valve is completely water proof and shock proof.
6. High efficiency electric heating block allows water to heat up instantly

1. 省时省电省水，方便快捷，经济实用。
2. 断电保护、超温保护、低水压保护、漏电保护、超时关闭功能等，全方位确保产品使用安全。
3. 耐高压1500V以上电热管，加热管壁厚达0.8mm，寿命3000小时以上。
4. 感应与电磁阀寿命超过50万次。
5. 水压开关电控阀，完全水电隔离，安全可靠。
6. 高效节能电热元件，过水即热，省电省水。

TECHNICAL PARAMETERS

技术参数


Active power usage	AC 220V
Standby power usage	AC≤2W
Power rating	3000W
Working water pressure	0.1 ~ 0.7MPa
Sensing distance	Instantaneous mode: 30±3cm Continuous mode: 2-5cm
Response time	<0.6 second
Highest temperature	49±2℃
Working temperature	1 ~ 40℃
Storage temperature	5℃~45℃
Waterproof	IPX4
Pipe circumference	G 1/2
Product size	230X430mm

工作电源	AC 220V
平均静态功耗	AC≤2W
额定功率	3000W
工作水压	0.1 ~ 0.7MPa
感应距离	即时感应：30±3cm 长时感应：2-5cm
辩误时间	<0.6 秒
最高水温	49±2℃
环境温度	1 ~ 40℃
存储温度	5℃~45℃
防水等级	IPX4
进、出水管径	G 1/2
产品尺寸	230X430mm

NOTES OF USE

使用注意事项

- 1.The heating faucet CANNOT be installed in sub-zero areas, if the water inside the unit might be frozen, DO NOT plug in the unit.
- 2.The heating faucet MUST be grounded firmly.
- 3.Be sure the water pressure is around 0.1-0.7MPa, or else there is a chance of leaking or dripping.
- 4.DO NOT clog the faucet outlet, or install other faucet adapters.
- 5.If the water becomes small, please clean the filter and the faucet outlet.
- 6.Turn the heating unit off if hot water is not needed for a period of time.
- 7.DO NOT scrub the sensor window with rough items e.g. steel scrubbers.
- 8.This product is IPX4 waterproof, it resists splashes of water but please don't soak the product or use a dripping towel to clean it.
- 9.DO NOT use strong acid or base detergents to clean the product.
- 10.This product only heats the water, drinking safety is NOT insured.

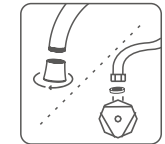

1. 当水量变小时，旋下水嘴，清洗起泡器。或清洗进水口过滤网。

1. When the water flow decreases, unscrew the aerator and filter accordingly.



2. 请勿用粗糙物品擦洗，请勿用水直接冲淋或滴水的湿布擦拭产品。

2. DO NOT use rough items to scrub or clean the product, or directly soak theproduct with water or a wet towel.



3. 本产品出水，不可直接饮用。

3. This product is not a filtration unit, drinking is not recommended.



4. 不能用酸碱一类强洗涤剂擦洗。

4. DO NOT use strong acid or base detergent to clean this product

COMMON TROUBLE SHOOTING

常见故障排除

Malfunction	Common issues	Troubleshooting
Sensor doesn't fuction, water won't flow or stop	Sensor window might be wet	Wipe the water off
	Sensor window might be block	Remove the blocking item
	Sensor window might be dirty	Clean the stain
	Sensor window might be severely damaged	Contact customer service
	The power might be out or the circuit is tripped	Turn the circuit back on or wait for the power to come back on
	The water pressure isn't right	Check the product specification
Malfunction	No Water	Check if the water is closed or out
	Common issues	Troubleshooting
Dripping	Water pressure is low	Check the product specification
	Filter is clogged	Clean the filter
Low Water flow	Water pressure is low	Check the product specification
	Filter is clogged	Clean the filter
	The unit is tuned hot	turn the ring counter-clockwise
Not heating	The unit is tuned cold	turn the ring clockwise
	The water pressure is too low	Low water pressure can't activatethe heating block, a pump will be required

异常现象	可能原因	排除方法
不出水或不关水、不感应	感应窗上有水珠	将水珠擦拭干净
	感应窗前有抹布等遮挡物	将遮挡物移开
	感应窗上污垢	排除污垢
	感应窗严重刮花	联系正规进行售后
	停电或漏保开关跳开	等待来电或按下漏保开关按钮
	水压不在适用范围	参考产品规格表
	不出水，检查是否停水	等待来水
关水后还有少量流水	水压太低	参考产品规格表
	过滤网太脏	清洗过滤网
水量小	水压太低	参考产品规格表
	过滤网太脏	清洗过滤网
	调温旋钮调至最热处	将调温旋钮向逆时针（冷水）方向旋转
不加热	调温旋钮调到最冷处	将调温旋钮顺时针旋转离开最冷档位
	水压太低	当水压太低时无法启动加热功能，此时需增加增压泵

ONE-YEAR WARRANTY

一年有限担保

*Our company has an extensive quality promise to the end customers. The products proved to be correctly installed and properly used enjoy a maintenance period of 1 year during which any products with quality defects shall be repaired without any charge.

*Quality defects caused by the following factors are not included in the promise:

- 1) Quality defects caused by improper installation, replacing and repairing are not included in the promise.
- 2) Products of industrial and commercial use are not included in the promise. However the end customers are included.
- 3) Quality defects caused by misuse, abuse, carelessness and employment of non-Originalcomponents are not included in the promise.

*Please keep your invoice of the product properly to ensure better service from us.

*The company keep its right of use the latest component for repairing.

*我司对产品的最终客户有广泛的质量保证，产品在被证明正常安装和使用的前提下，保修期为1年。在保修期内对有质量问题的产品免费维修。

*对于在以下行为中产生质量问题的不包括在此保证范围内

- 1) 因非正常安装、替换、修理及类似的行为中产生的质量问题不包括在此保证范围内。
- 2) 对于工业和商业用途的产品不包括在此保证范围内，但此保证会自动延续到此用途的客户手中，依此类推。
- 3) 对于误用、滥用、疏忽和使用非我司配件所产生的质量问题不包括在此保证范围内。

*请妥善保管购买原厂产品时的发票，以便我们能更好地为您服务。

*公司保留维修时使用最新配件的权利。

SPARE PARTS DRAWING

产品零件图

