

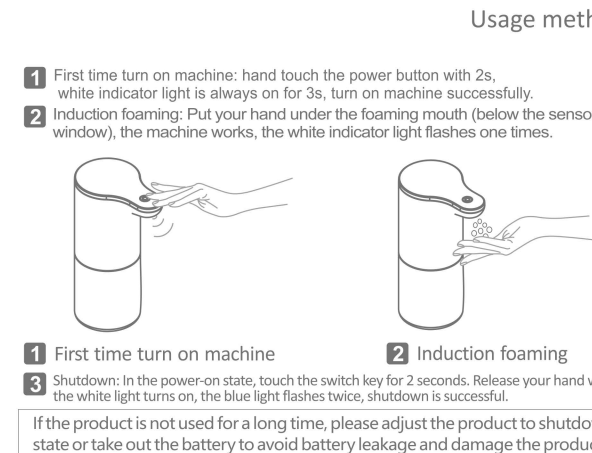
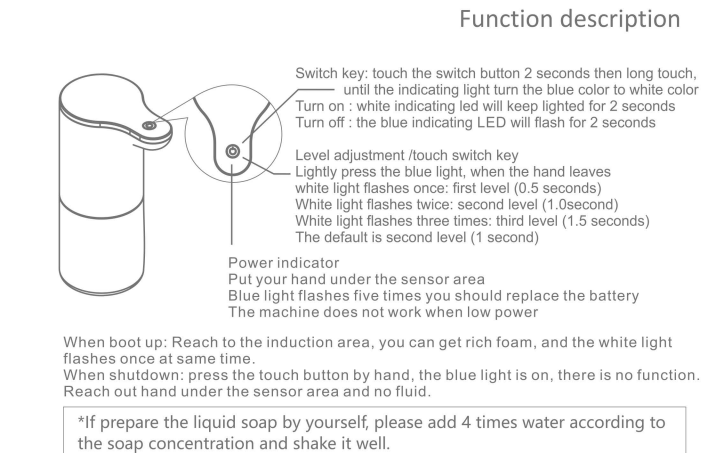
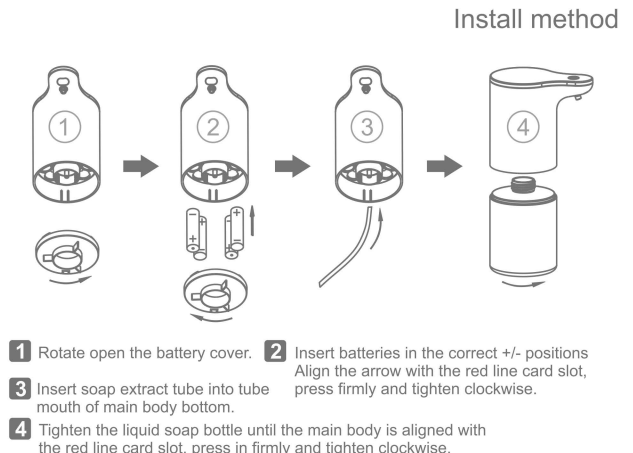


Touchless Foaming Soap Dispenser

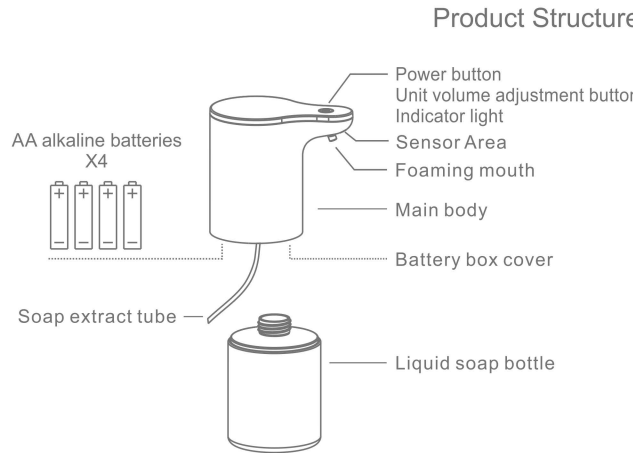

Matters needing attention

- 1 Do not scrub with rough objects, such as: rough linen, brushes, steel balls, etc., do not immerse the product in water or rinse it directly with water in order to avoid short circuit, sensor failure or product damage.
- 2 Do not use strong acid or alkali detergent to clean the product.
- 3 Do not lay the product horizontally or upside down, otherwise the liquid may overflow and affect the use of the product.
- 4 Please keep power button around dry and clean, otherwise touch function will be influenced.
- 5 If find bubbles or foreign objects stuck on the sensor window, please clean them immediately to avoid affecting the normal operation of the product.
- 6 Do not exposures the unit under direct the sun or strong light, which may interfere IR sensor system.
- 7 Due to individual differences, very few people experience allergies, please stop using them immediately and seek medical help if necessary.
- 8 Please don't use the soap with particles for mixing or use thick soap directly to avoid damage to dispenser.

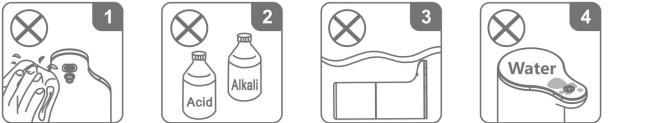

Product Parameter

Input Voltage	6V $\equiv$ (4*AA)
Unit Size	76mm*118mm*193mm
Rated power	1.8W
Sensing Distance	1-10cm
Low power	when blue LED flash 5 times, not work
Liquid adjustment	three levels adj(0.8ml/1.6ml/2.4ml)
Main material	main body ABS+liquid tank HDPE
Liquid capacity	330ml
Working Temperature	1-40℃
Working Humidity	≤85%RH
Waterproof Level	IPX6

Common problem handling

- 1 Unable to switch on/off
 - 1.1 Please re-check whether the battery is installed and whether the battery is correctly installed according to the positive and negative signs.
 - 1.2 Please confirm whether the battery compartment cover is aligned the red line card slot and screwed tightly.*When installing or replacing batteries, please select high-quality "AA" alkaline batteries, do not mix new and old batteries in order to not affect battery life or even damage the product.
- 2 The indicator is not on
 - 2.1 Please confirm whether the products turned on (long press for 2 seconds to turn on).
 - 2.2 Please refer to point 1.1/1.2 to confirm whether the battery and battery compartment cover are installed correctly.
 - 2.3 If the light does not turn on and there is no foam when reaching to the sensor window, please check if there is any foreign object or bubble at the sensor window or Foam, water droplets, and fog are blocked and cleaned up.
- 3 No foaming/poor foaming effect
 - 3.1 Please confirm whether the battery/hand sanitizer is exhausted is exhausted. Refer to point 1.1/1.2 to confirm the battery and battery compartment cover is installed correctly.
 - 3.2 Blending soap liquid by yourself, the foaming effect may be worse, please refer to the liquid water ratio 1: 4 to adjust.
- 4 The blue indicator light flashes continuously: Please refer to point 1.1/1.2 to confirm whether the battery and battery compartment cover are installed correctly or the battery is exhausted and replace new battery.

Maintenance and service

- 1 This product implements the national three guarantees policy, under the premise of proven standard installation and use, the warranty period is 12Month,For quality problems or failures, after the appraisal of the manufacturer's after-sales service center, you can enjoy returns within 7 days. Exchange service within 15 days.
- 2 The quality problems caused by the following actions are not covered by this warranty.
 - 2.1 Quality problems caused by abnormal installation, replacement, repair and similar activities are not within the scope of this guarantee.
 - 2.2 Products for industrial and commercial use are not covered by this warranty.
 - 2.3 The quality problems caused by misuse, abuse, negligence and use of non-original accessories are not within the guarantee range, such as use of steel balls and other hard dishcloth or strong acid-base cleaners to clean the product, causing a sense window and casing scratched or corroded; placing the product horizontally or upside down, flooding it into the water can cause damage to the product, etc.
 - 2.4 Damage caused by other force majeure factors.

*Advise to use original binding liquid soap with this dispenser, the antibacterial rate is over 99.9%, the effect of foaming is better.

Qualification Certificate

Product Name	Touchless Foaming Soap Dispenser
Product Number	
Date of Manufacture	
Inspectors	QC 06 PASS
Executive Standard	GB4706.1 (General safety standards for household appliances)

Purchase Date	
User Phone	
Warranty Clause	See warranty instructions for details
Service Hotline	

Name and content of hazardous substances

Part Name	Hazardous Substance					
	Pb	Hg	Cd	Cr(VI)	(PBB)	(PBDE)
Housing	○	○	○	○	○	○
Circuit parts	×	○	○	○	○	○
Foam pump	○	○	○	○	○	○
Soap bottle	○	○	○	○	○	○
Rubber tube	○	○	○	○	○	○
This sheet is compiled in accordance with SJ/T11364. ○ : Indicates that the content of the hazardous substance in all homogeneous materials of the part is within the restriction requirements of the RoHS Directive 2011/65EU Amendment Directive (EU) 2015/863. × : Indicates that the content of the hazardous substance exceeds the limit requirements of the RoHS Directive 2011/65EU Amendment Directive (EU) 2015/863 which at least at the one of the homogeneous materials of the part. 5						

