Руководство PRS+ v.1.0 RC от 01.01.2010

About 🗐



PRS+ by Mikheil Sukhiashvili aka kartu (kartu3@gmail.com) using work of: igorsk, boroda, obelix, llasram and others. © GNU Lesser General Public License.



Version: 1.1.00.18040
Device: 08004610006FC6A6
Not authorized for the eBook Store.
Copyright ©2006-2008 Sony Corporation



Adobe, the Adobe logo, Reader and PDF are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

This device is not authorized for Adobe DRM protected content.



unhofer institut

MPEG Layer-3 audio coding technology and patents licensed by Fraunhofer IIS and Thomson. MPEG-4 AAC audio coding technology licensed by Fraunhofer IIS (www.iis.fraunhofer.de/amm/).



Application software designed and implemented by Kinoma (www.kinoma.com). Portions Copyright ©2006,2007 Kinoma, Inc.

Bitstream is a registered trademark, and Dutch, Font Fusion, and Swiss are trademarks, of Bitstream, Inc.

1 of 1

1. О проекте

Сайт проекта: http://code.google.com/p/prs-plus/

Текущая версия: http://code.google.com/p/prs-plus/downloads

1.1. Системные требования

Sony PRS 505

– версия прошивки (firmware version) 1.1.00.18040

1.2. Состав проекта

PRS+ script (скрипты, которые копируются во внутреннюю память)

- PRS+ firmware (прошивка)

1.3. Инсталляция


Подключить PRS 505 к компьютеру

1.3.1. Установка скриптов

- Скопировать содержимое архива со скриптами (папка «database») в корневой каталог внутренней памяти на устройстве.
- Пример пути для копирования: j:\database\system\PRSPlus\

1.3.2. Прошивка:

- Скачать "прошивку с прошивальщиком" и распаковать её в корневой каталог SD карты: Карта должна быть пустая.
- Отключить ридер от компьютера и подождать пока запустится интерфейс прошивальщика.
- Нажать кнопку «4» для копирования прошивки с SD карты. (Рис.1)
- После того, как прошивка будет удачно скопирована нажать кнопку «6» для запуска процесса прошивки.
 (Рис. 2)

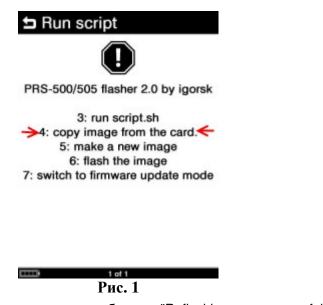



 Когда появится сообщение "Reflashing was successful. Rebooting.", вытаскивайте SD карту из устройства и ждите перезагрузки.