


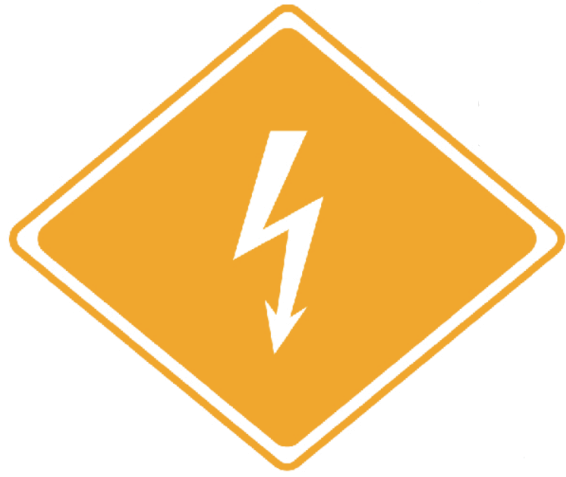

Emergency Response Guide

Information for First and Second Responders

**Peterbilt Models 536EV, 537EV, 548EV
&
Kenworth Models T280E, T380E, T480E
Battery Electric Vehicles**

Contents

0. Rescue Sheet	Page 1
1. Identification / Recognition	Page 2
2. Immobilization / Stabilization / Lifting	Page 5
3. Disable Direct Hazards / Safety Regulations	Page 5
4. Access to the Occupants	Page 7
5. Stored Energy / Liquids / Gases / Solids	Page 9
6. In Case of Fire	Page 10
7. In Case of Submersion	Page 10
8. Towing / Transportation / Storage	Page 10
9. Important Additional Information	Page 11
10. Explanation of Pictograms Used	Page 12




Peterbilt 536EV, 537EV, 548EV
Kenworth T280E, T380E, T480E



Model Year: 2025 – Current
Release Date: 12/08/2025
Part Number: Y53-6286-1A1



0. Rescue Sheet

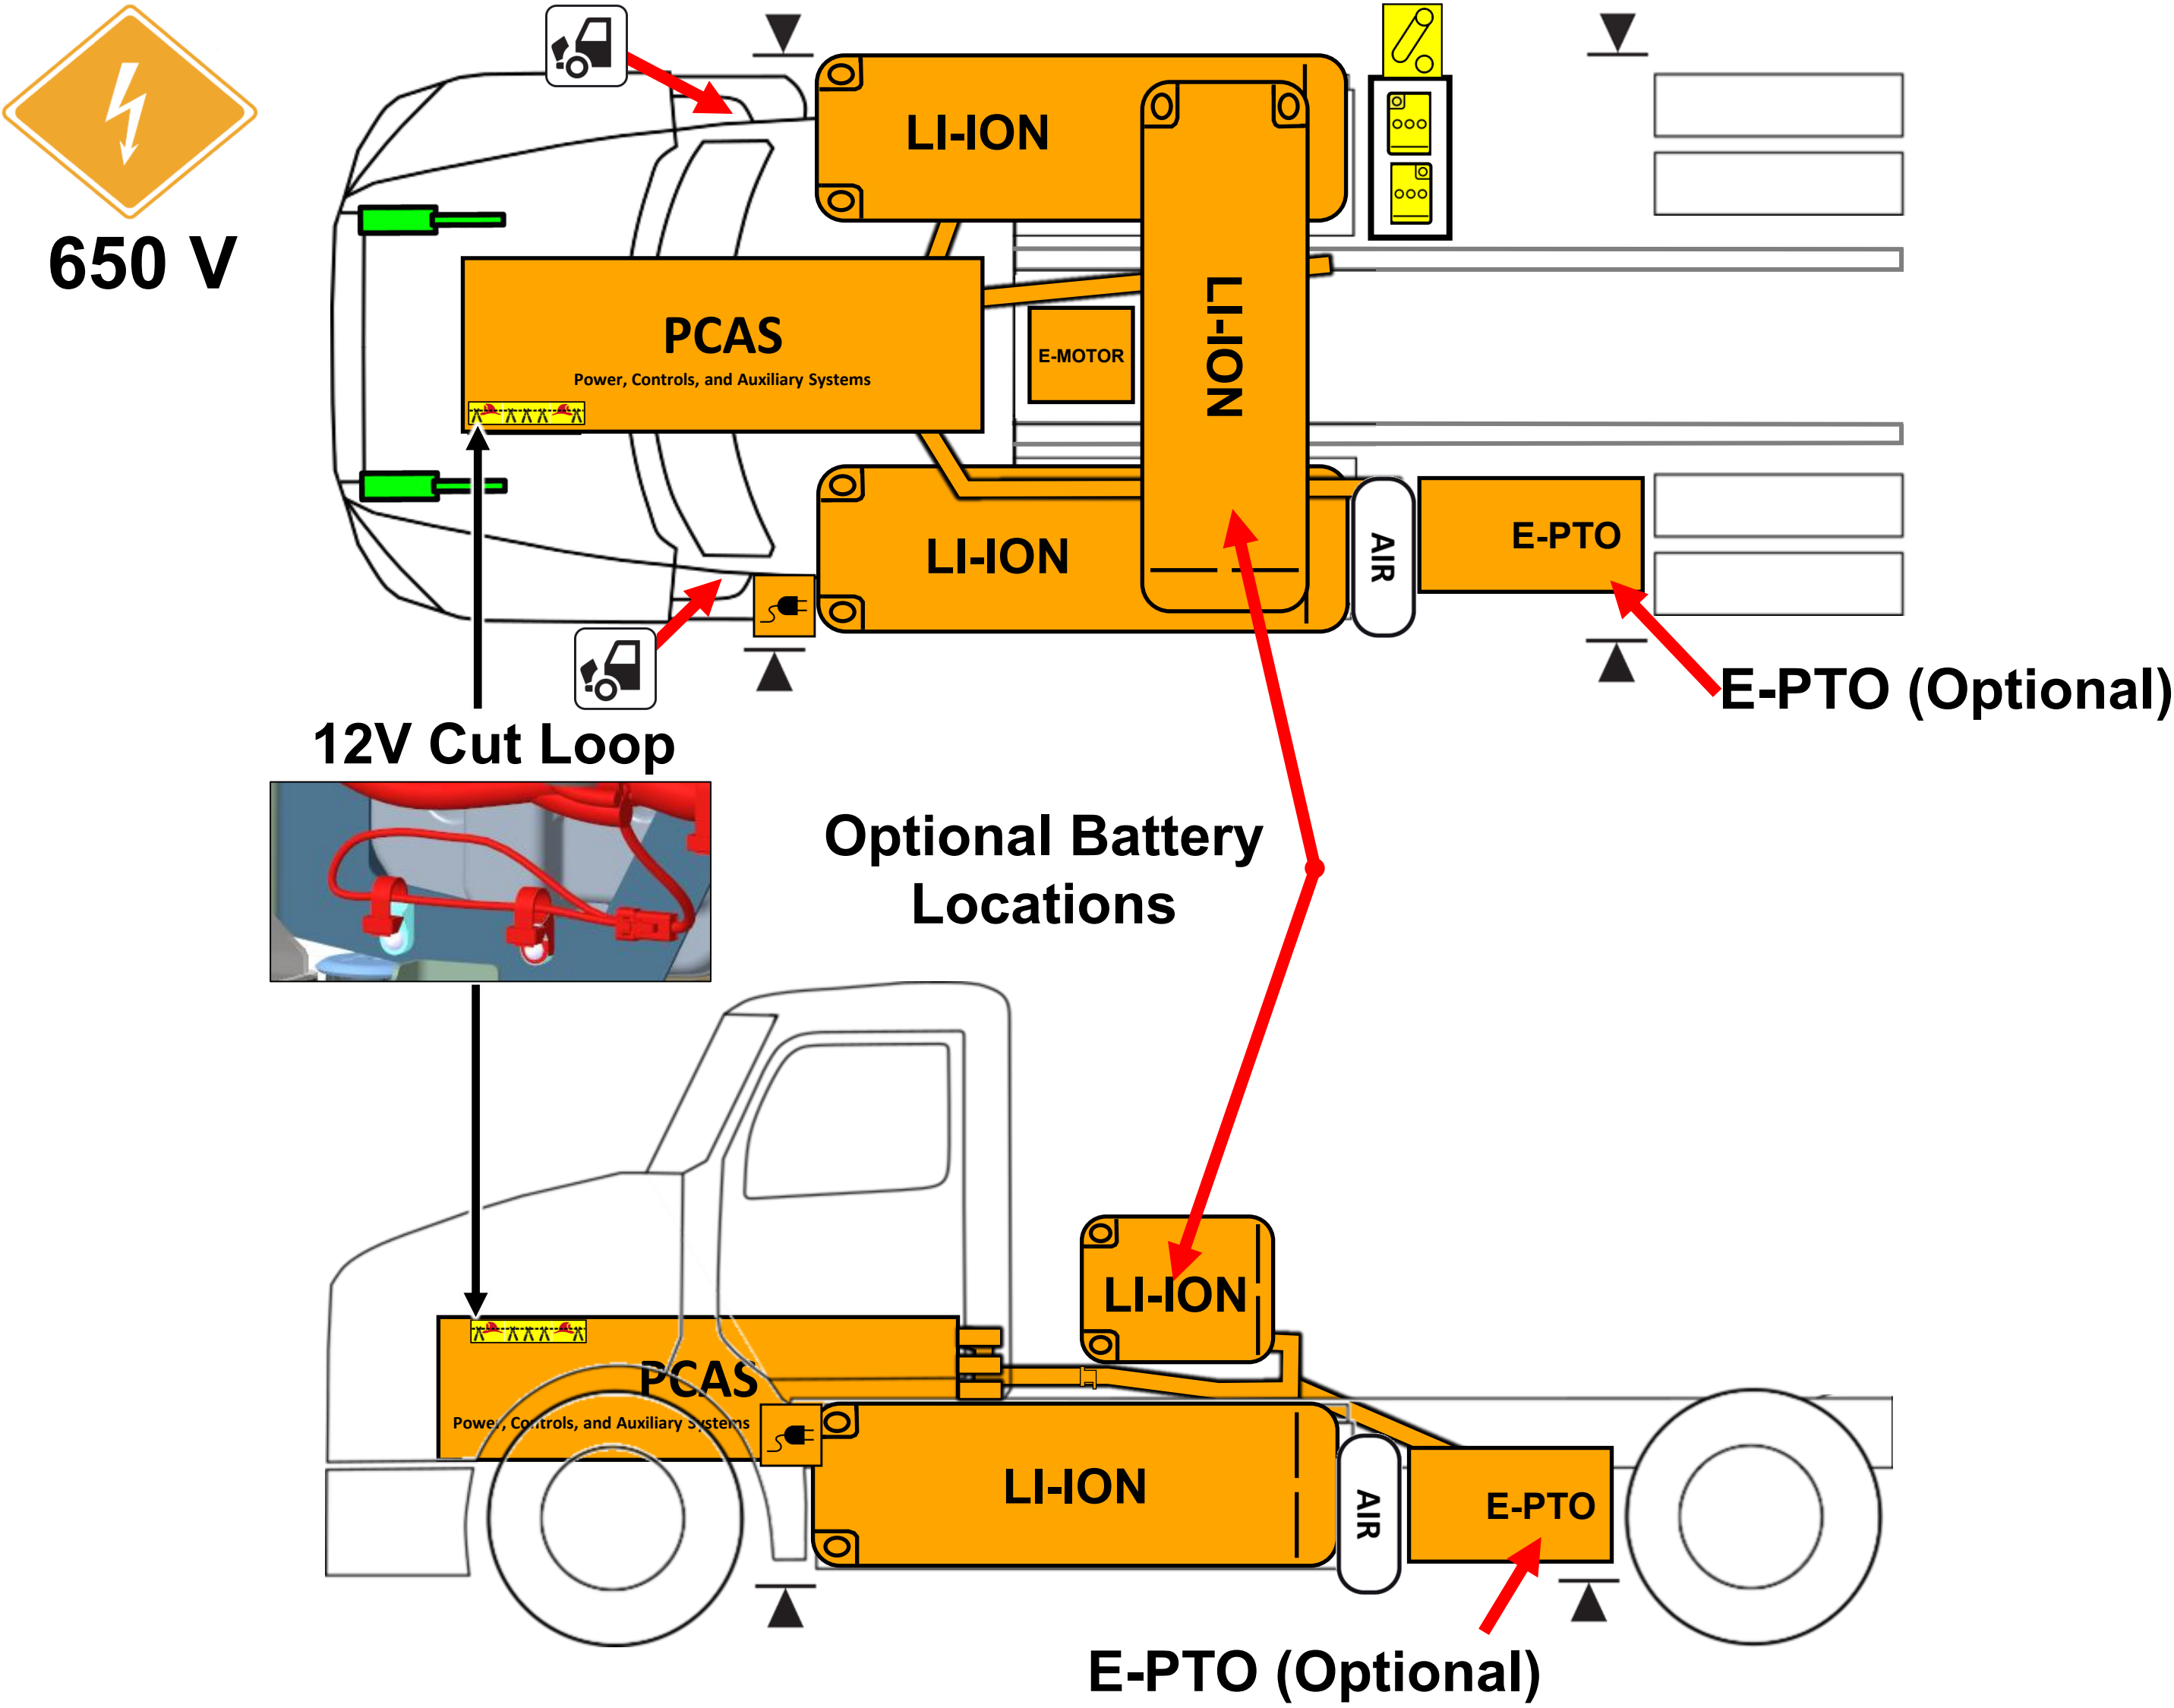

Warning: Check for labels identifying any additional High Voltage components added by body builders.

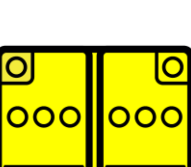 High Voltage Li-Ion Battery Pack	 High Voltage Cables	 High Voltage Region	 Relay Box Includes MSD (Manual Service Disconnect)	 Emergency Cable Cut Loop	 Charger Inlet	
 Frame Lift Point	 Hood Release	 Gas Strut	 Low Voltage Batteries	 12V Disconnect	 Compressed Air Tank	 Height Control


1. Identification / Recognition




Warning: Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus, when approaching this vehicle.

Peterbilt Exterior Identification


536EV, 537EV, and 548EV

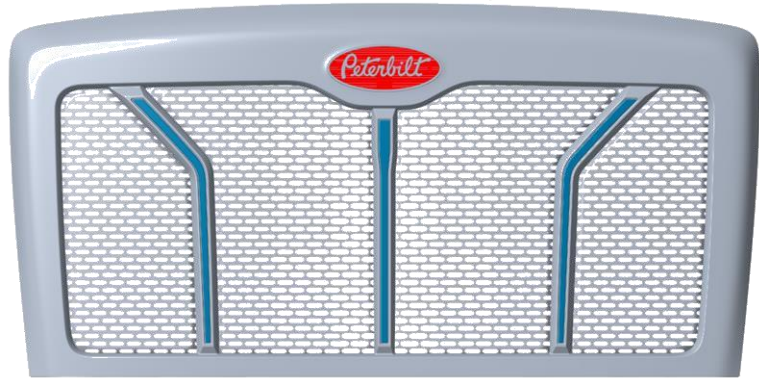

Grille with Blue accents

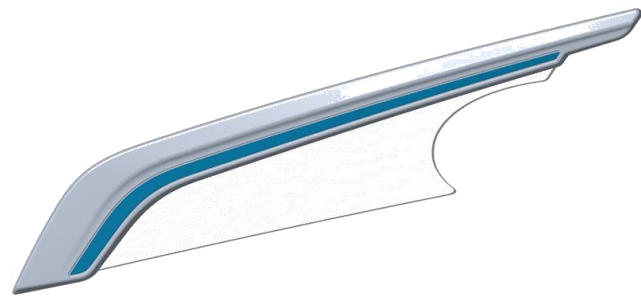

Intake Shield with Chrome Bezel and Blue accent

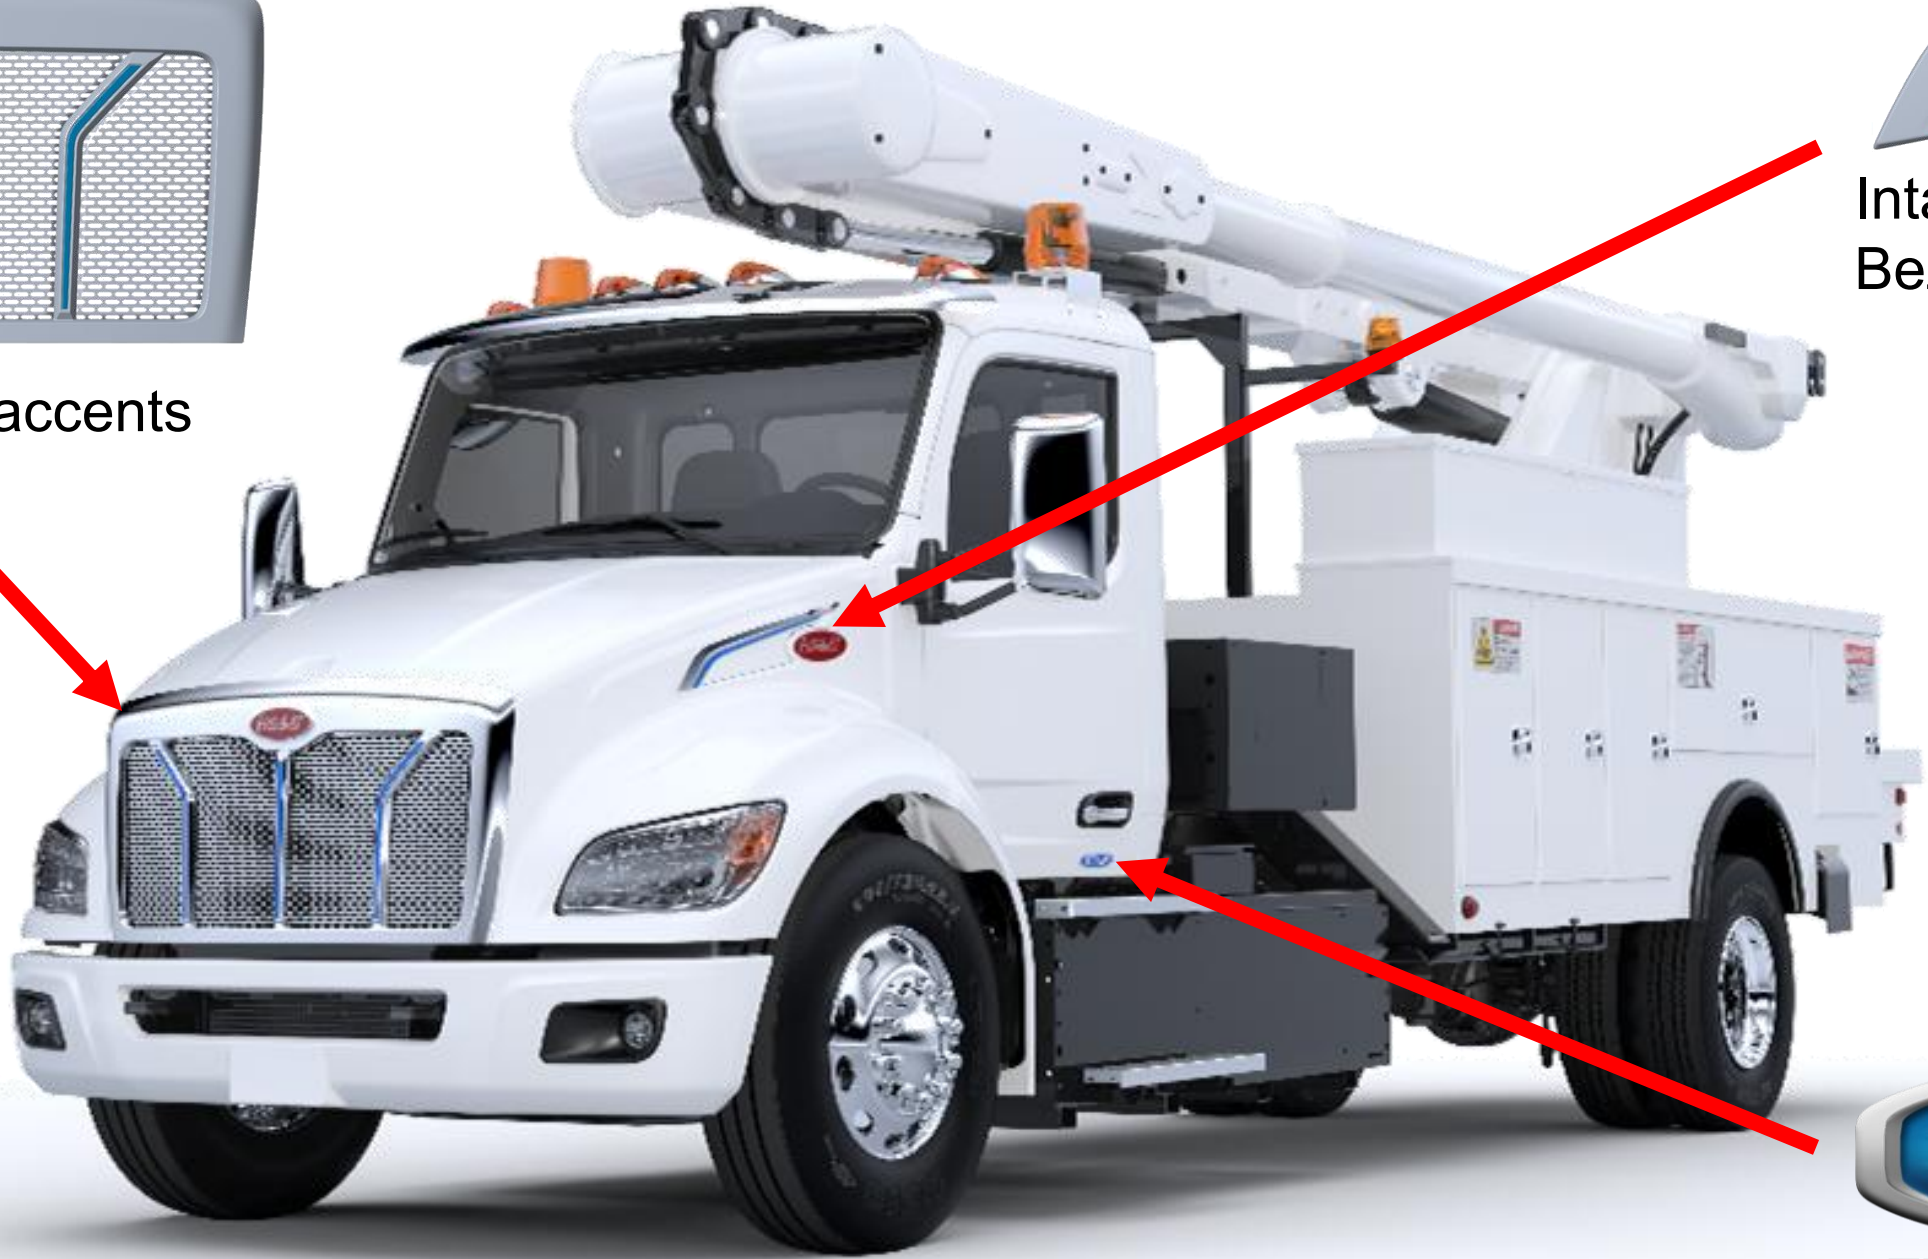

EV badge on both doors

Kenworth Exterior Identification

T280E, T380E, T480E



Intake Shield




Grille with Blue Kenworth badge




EV badge under both exterior mirrors

1. Identification / Recognition (continued)

Peterbilt Interior Identification

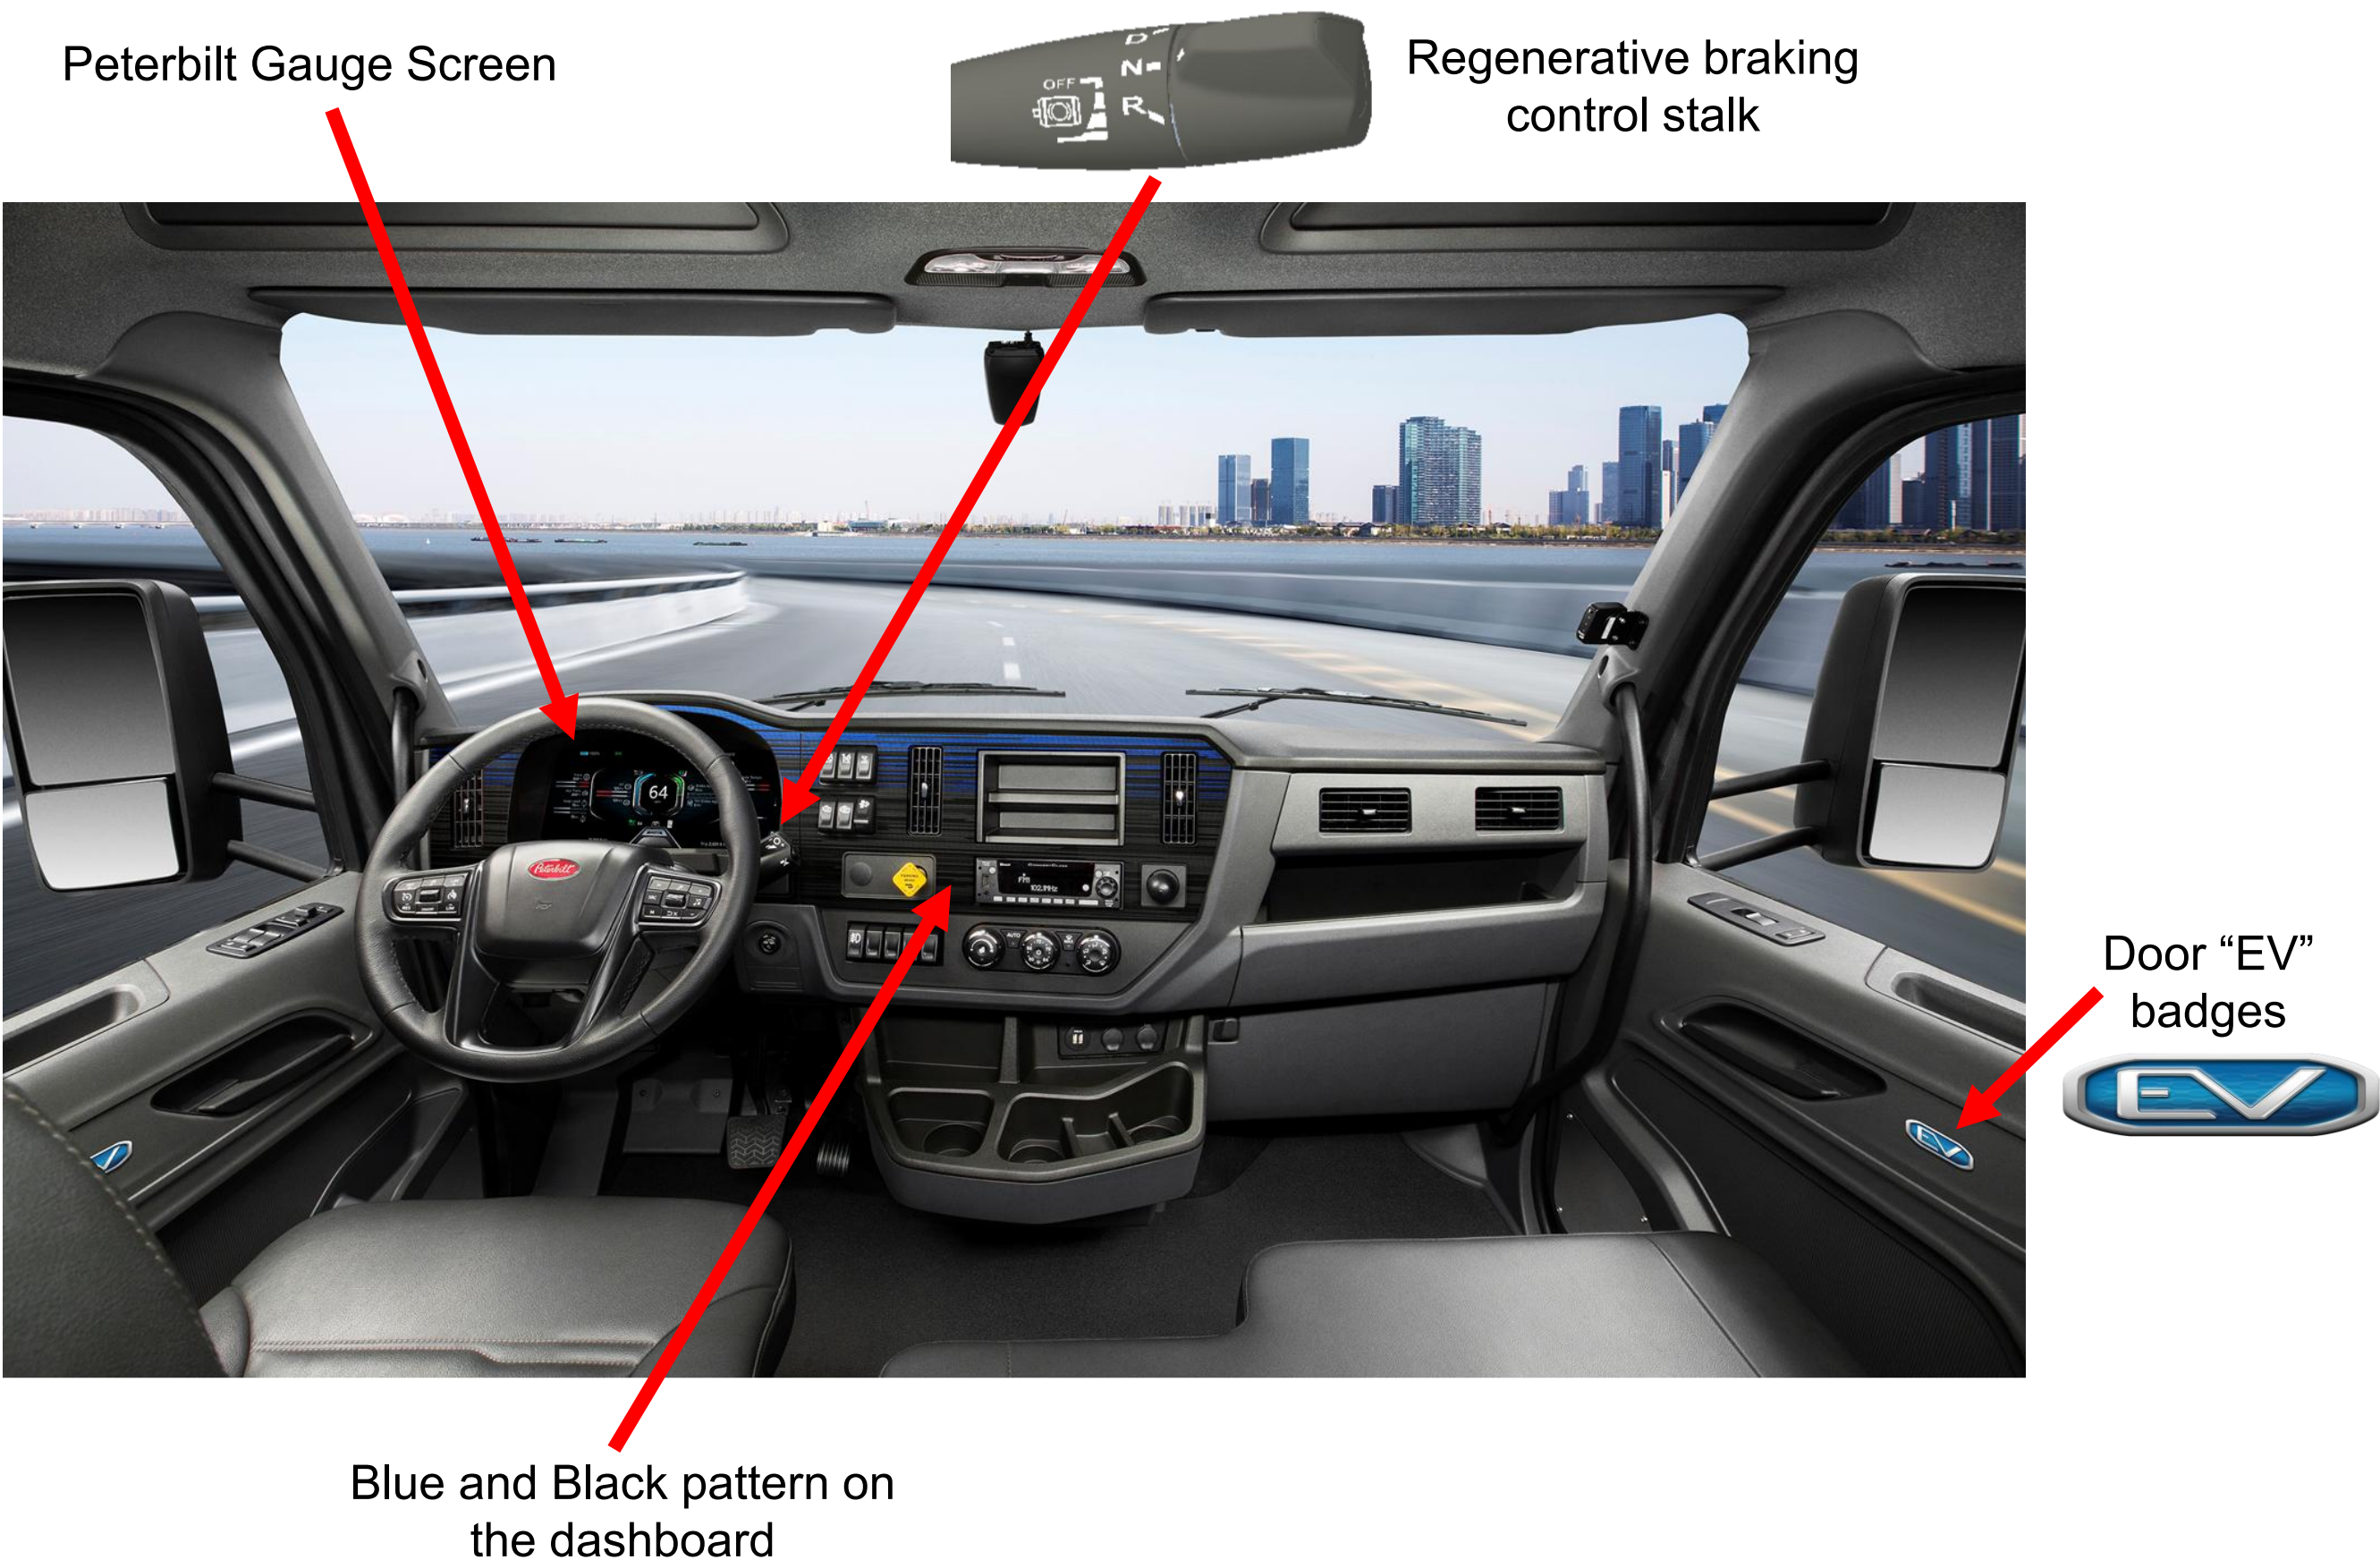


Kenworth Interior Identification

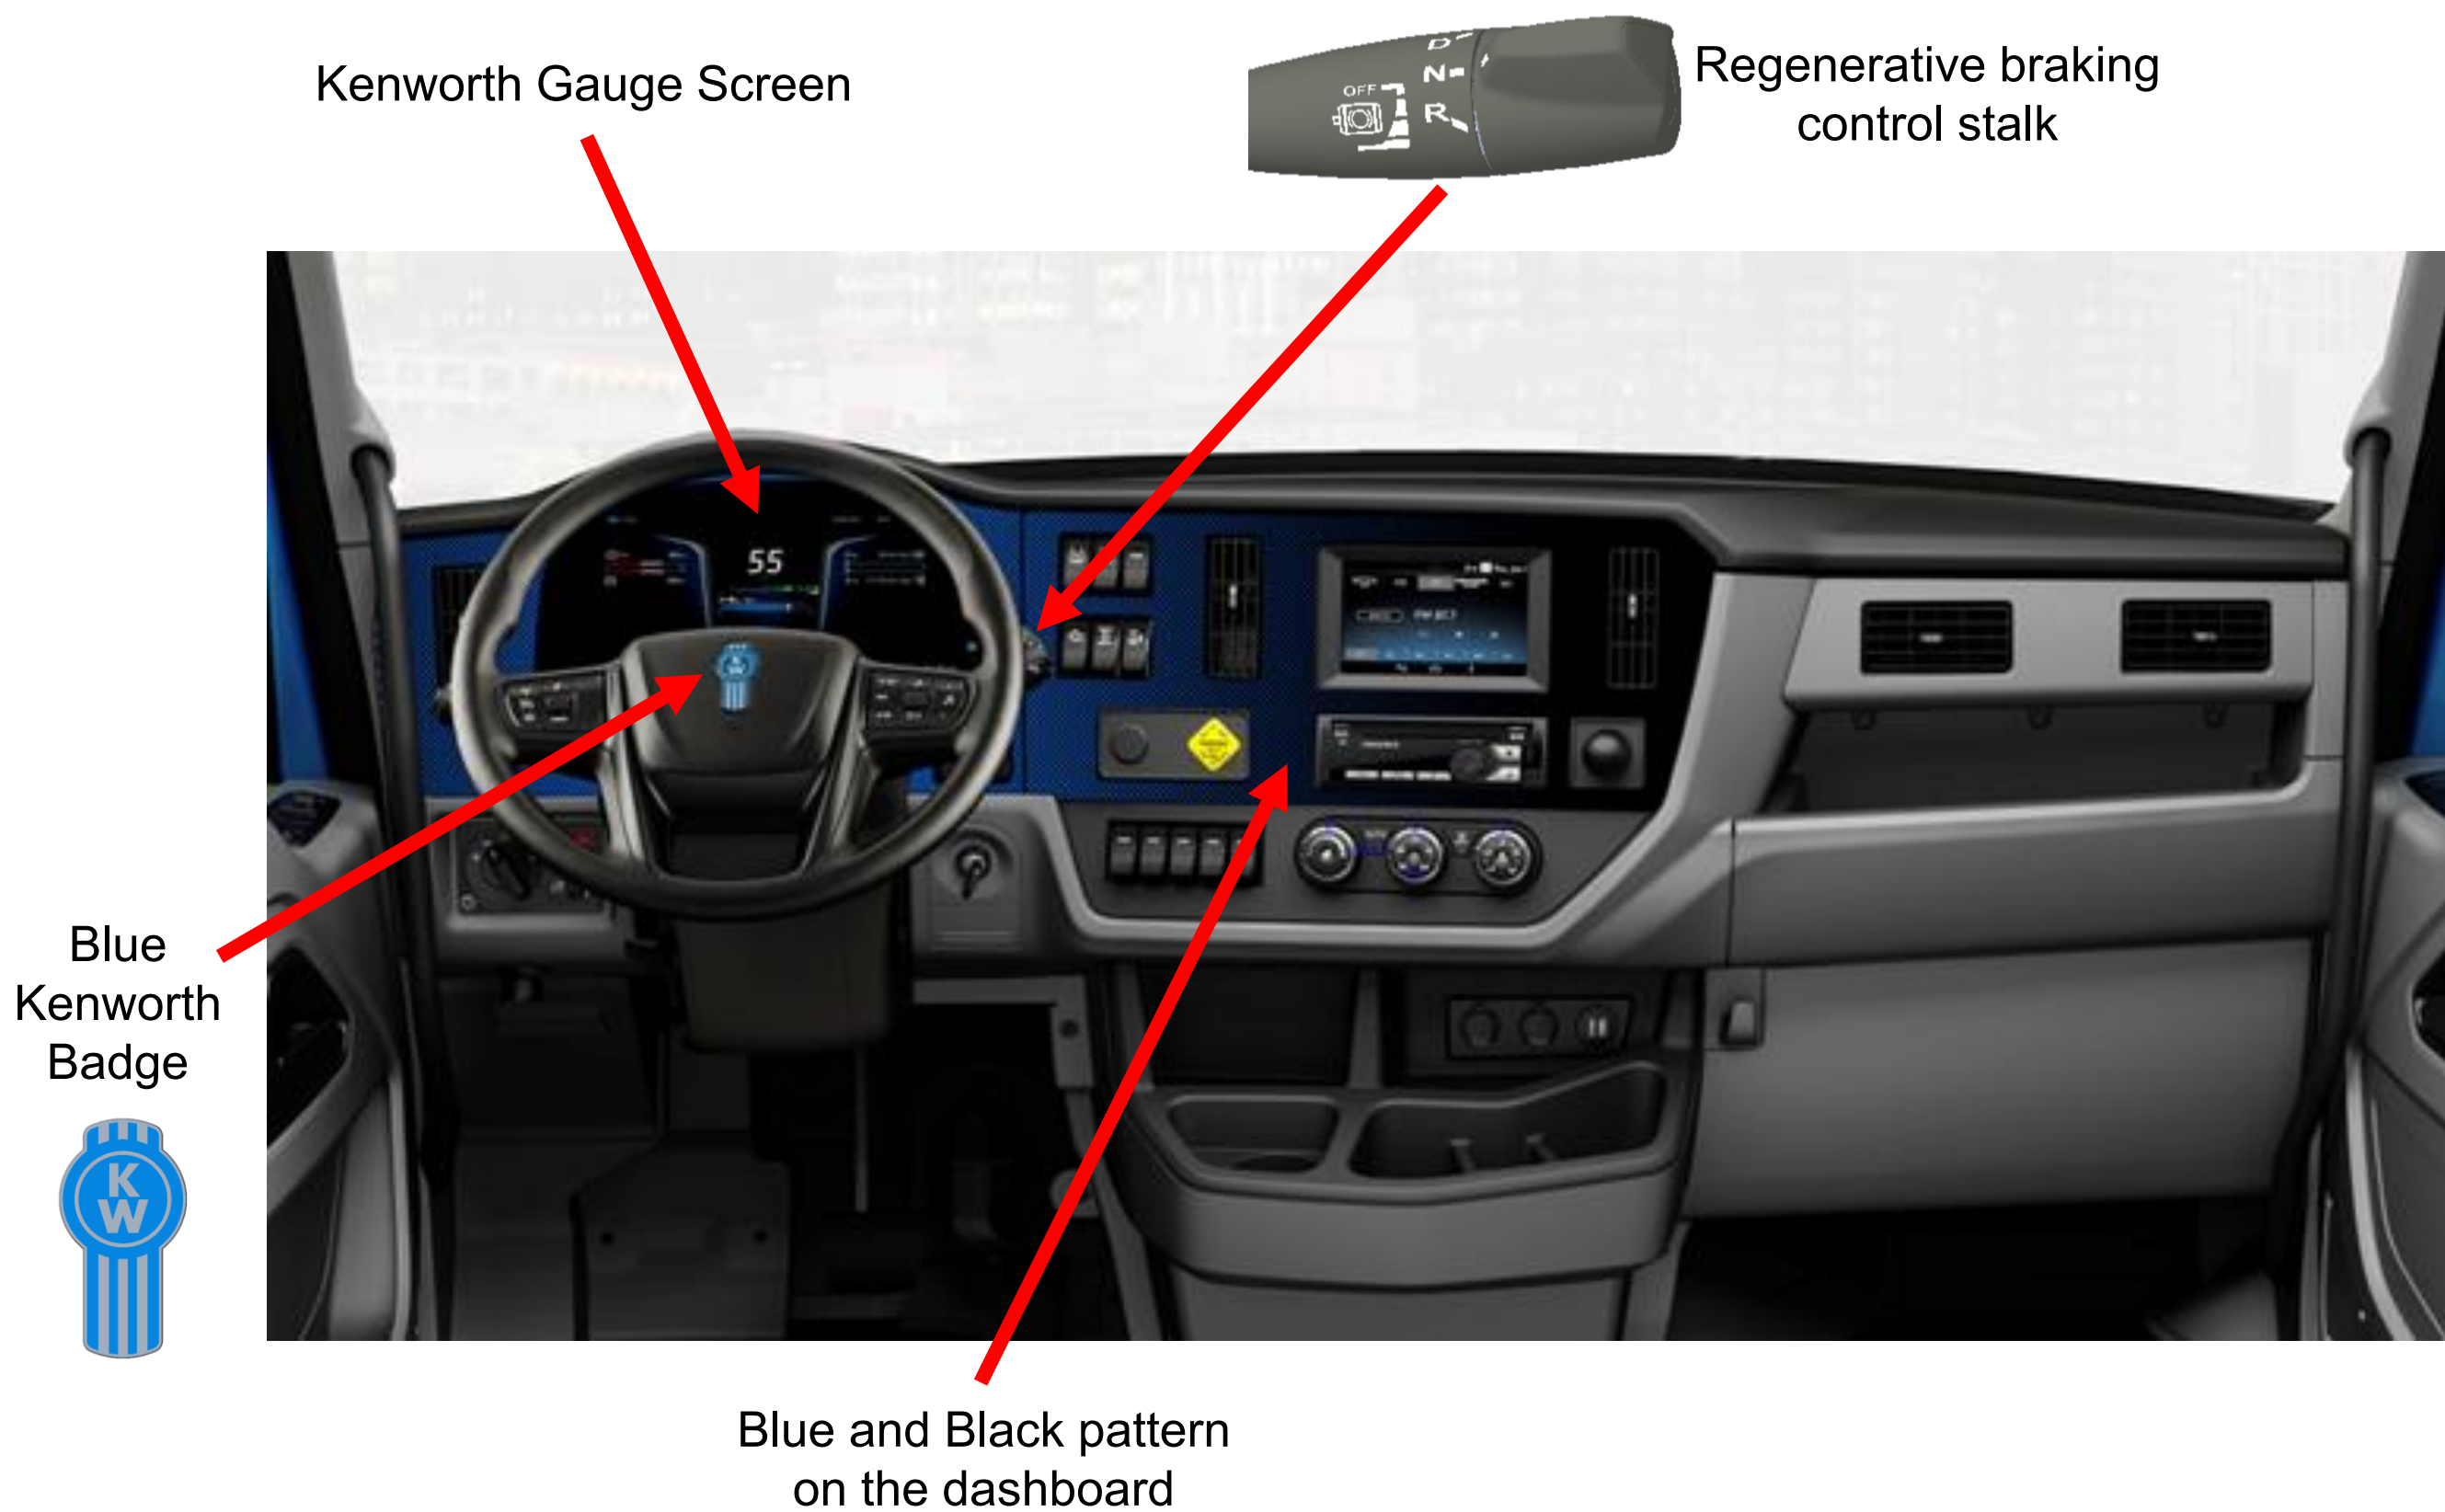


1. Identification / Recognition (continued)

Peterbilt Gauge Cluster Identification

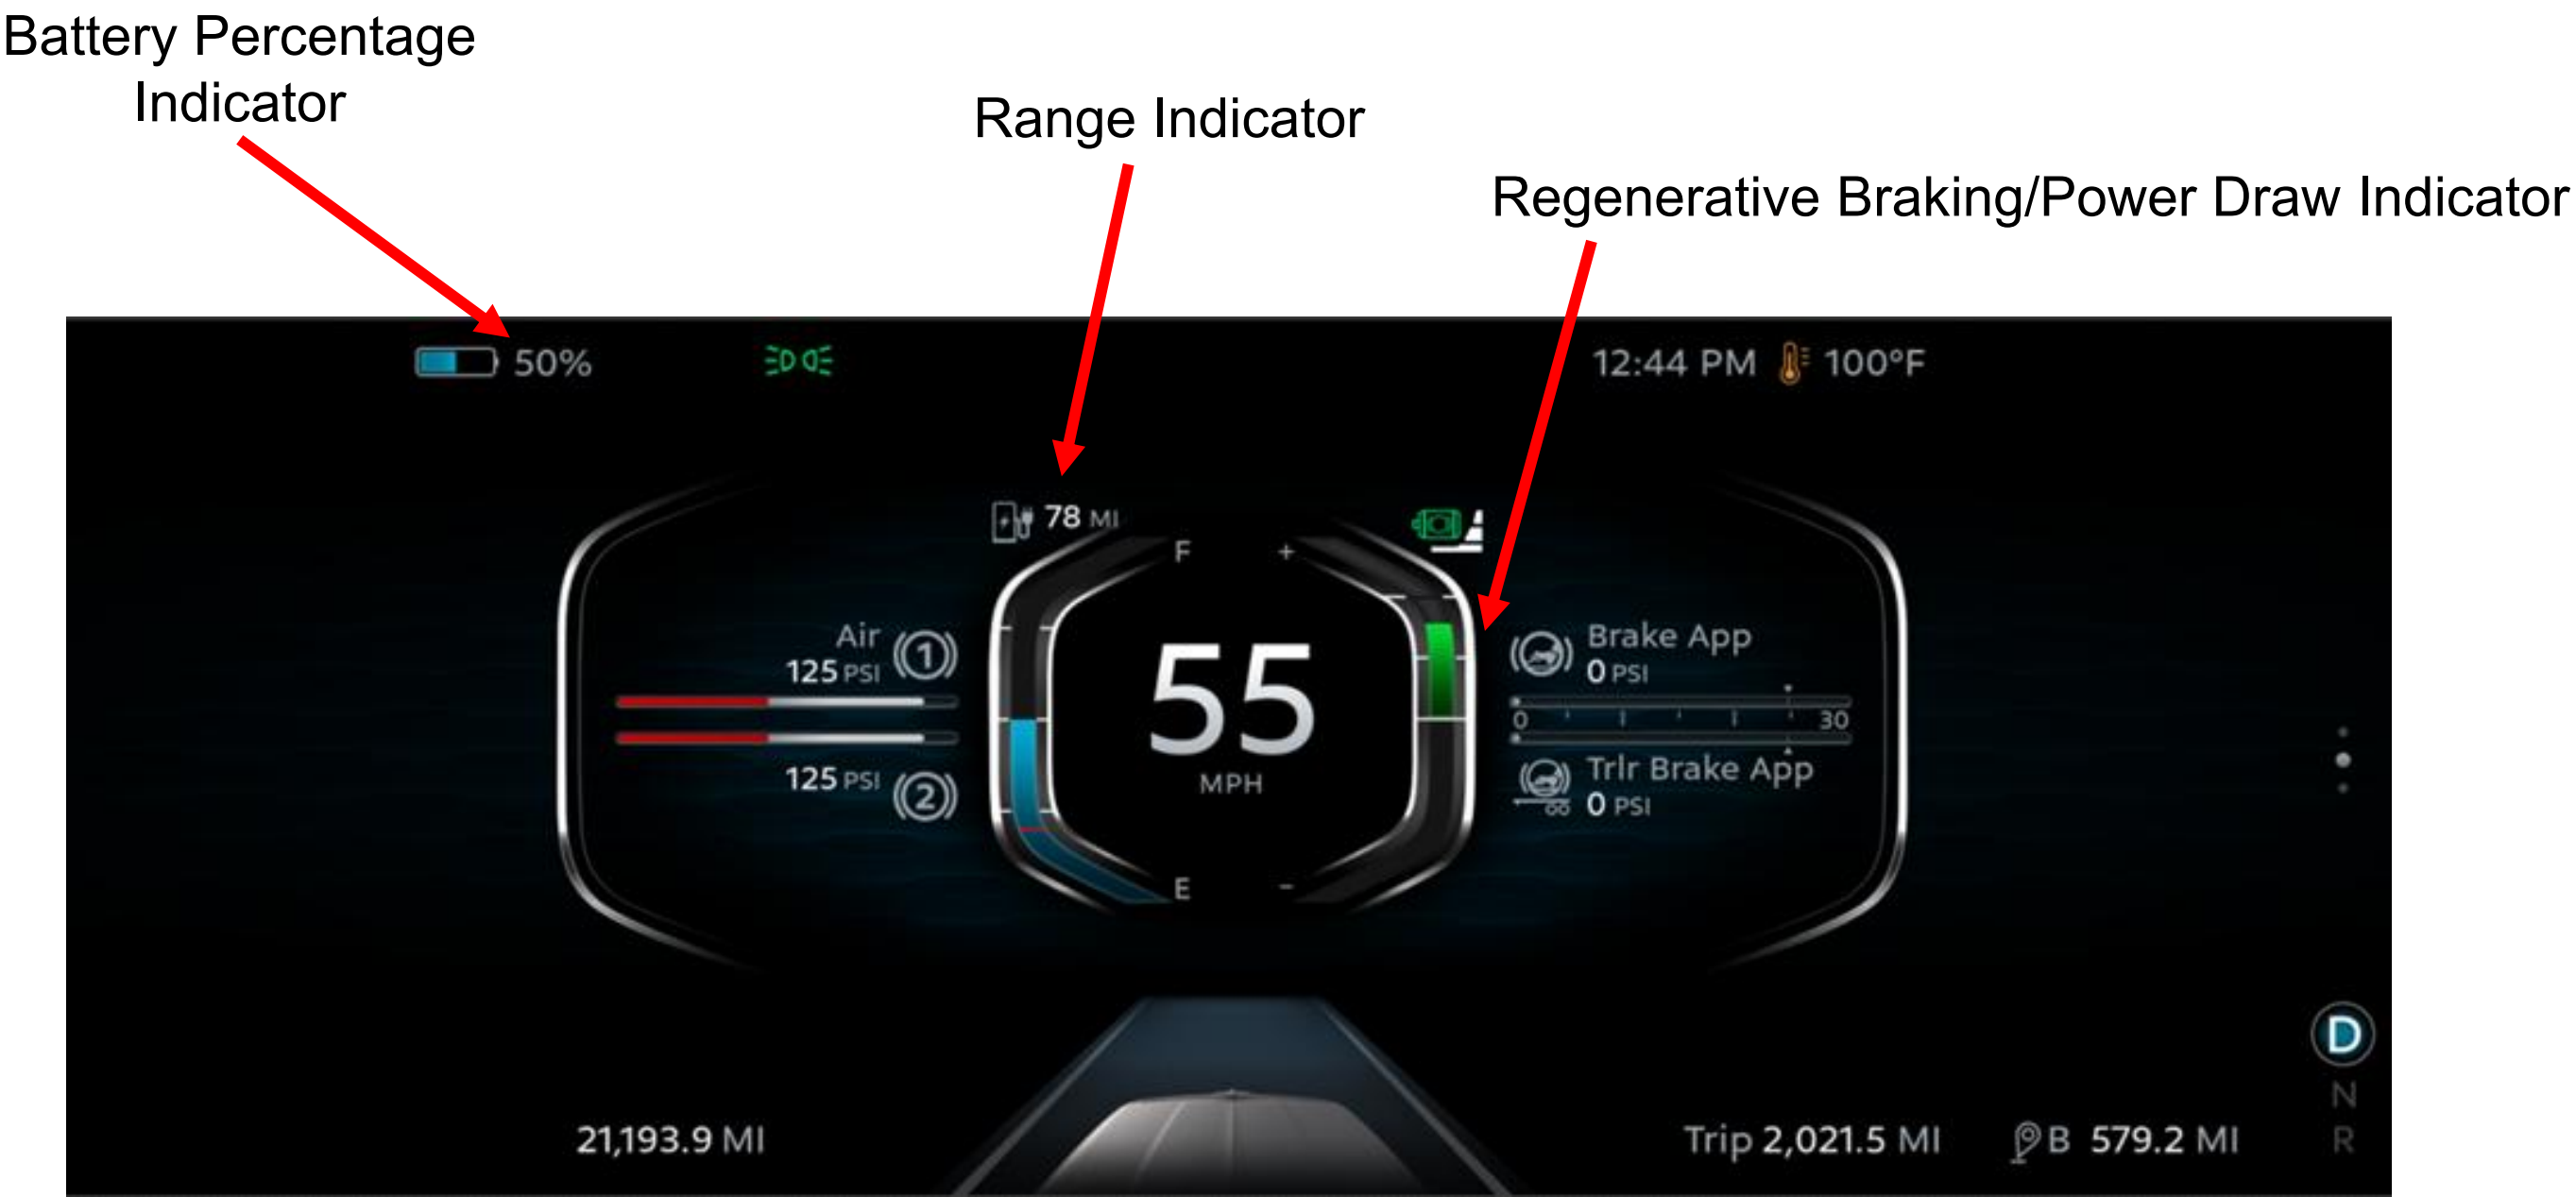

Kenworth Gauge Cluster Identification

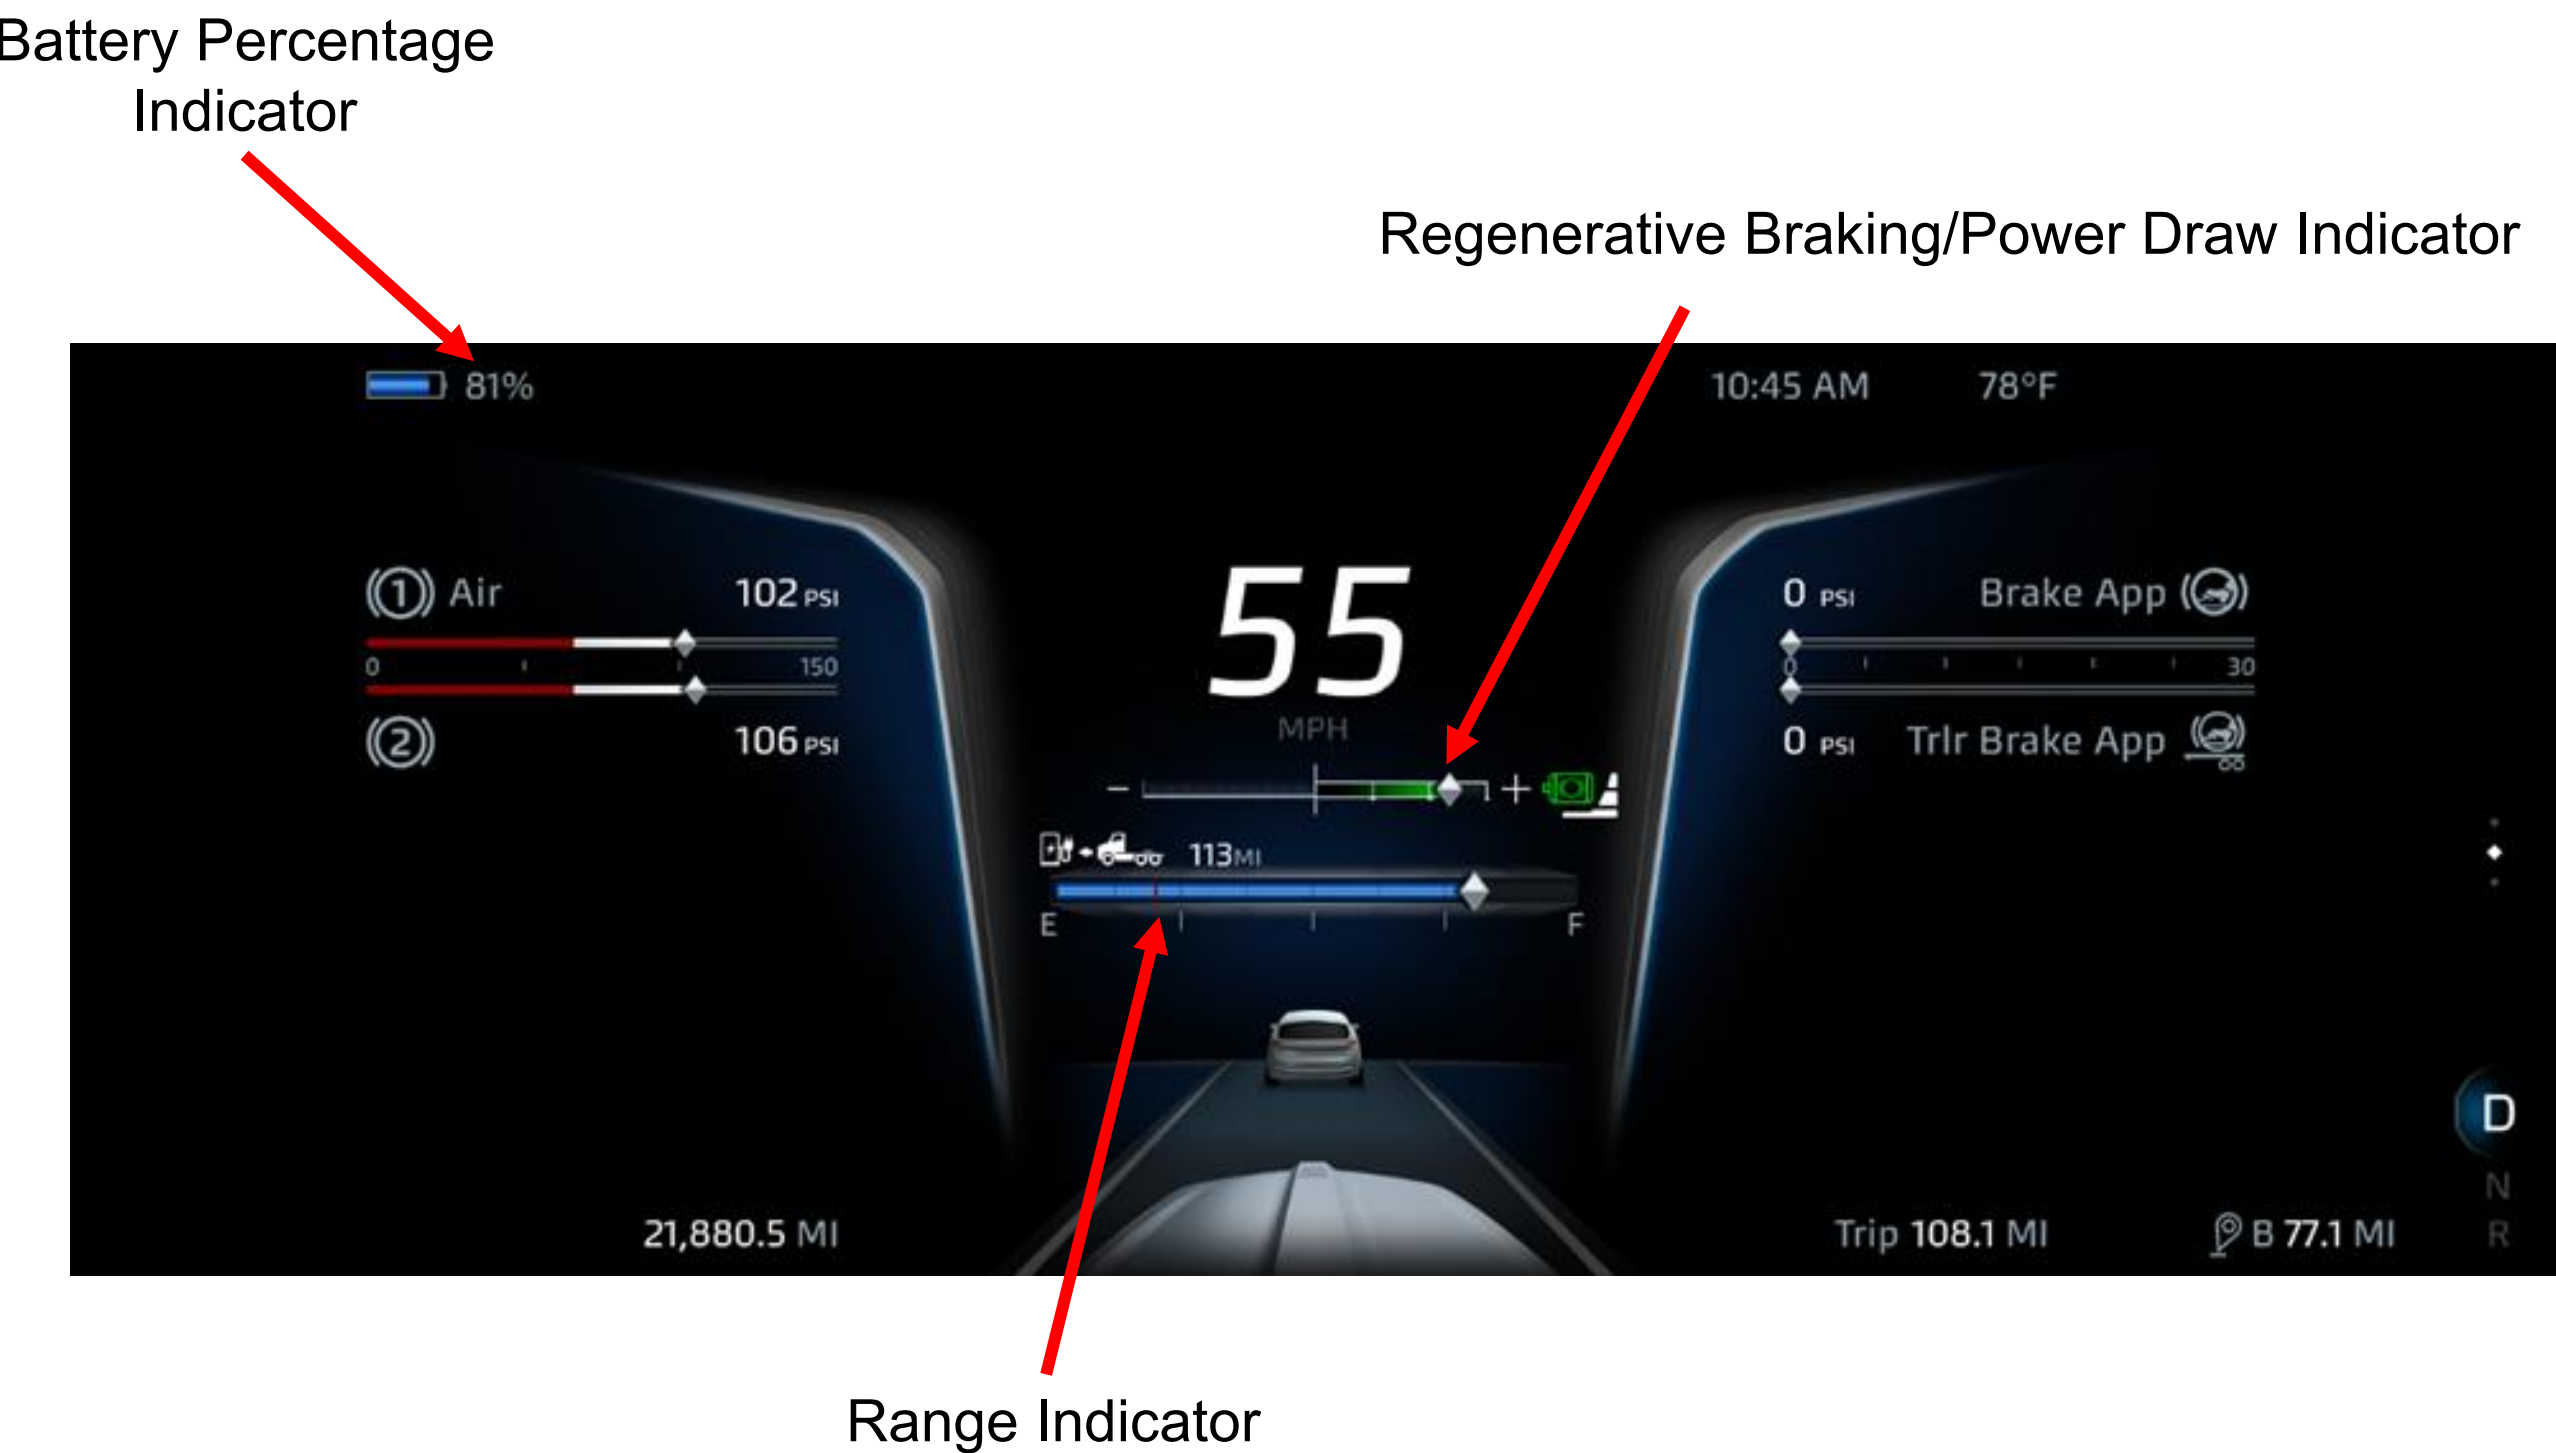

2. Immobilization / Stabilization / Lifting

- 

Warning: Keep all rescue equipment clear of high voltage components with a recommended clearance of 12 inches (30 cm).
- 

Warning: Vehicle noise may be reduced in some operation modes. Failure to shutdown the truck before immobilization could result in death, severe injury, or property damage.
- 


Warning: Assume all high voltage components are always energized. Do not cut any High Voltage components, including orange high voltage cables.

Immobilization




- Step 1:** Unplug the charger or remove power from the charger.
- Step 2:** Ensure the vehicle is in Neutral by turning the gear selector on the right stalk to N.
- Step 3:** Remove the key from the ignition.
- Step 4:** Engage tractor/truck park brake by pulling out switch.
- Step 4b (if applicable):** Engage trailer air brake by pulling out switch.

Stabilization

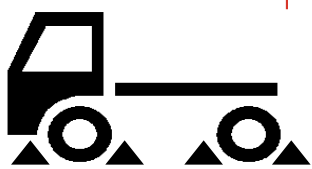

Block all the wheels using wheel chocks


Lifting

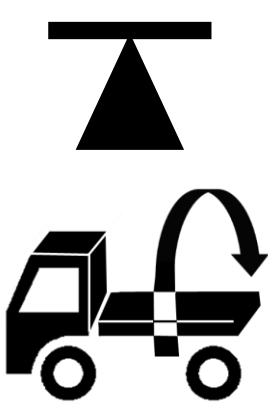

- It is highly recommended to use wheel lifts or platform lifts, but axle lifts may be used as well. Do NOT lift from any HV components.
- To rotate the truck, wrap chains around both axles to rotate the truck to an upright stable position.

3. Disable Direct Hazards / Safety Regulations

Disabling High Voltage

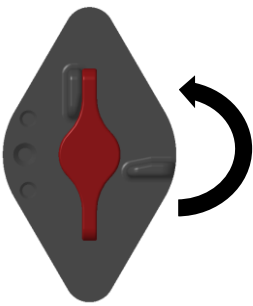

- Step 1:** Find the low voltage battery box on the side of the truck.
- Step 2:**
(Primary Step): Turn 12V Disconnect Counterclockwise to OFF Position.



(Alternate Step): Cut a 5-inch (13 cm) segment (2 cuts) from the red cut loop (identified in Section 0).




Step 3: Wait 2 Minutes for High Voltage Capacitors to Discharge.


3. Disable Direct Hazards / Safety Regulations (continued)

If Truck is Charging


Step 1: Locate Stop Charging Switch (1) on the dashboard and toggle switch to begin the stop charging function.

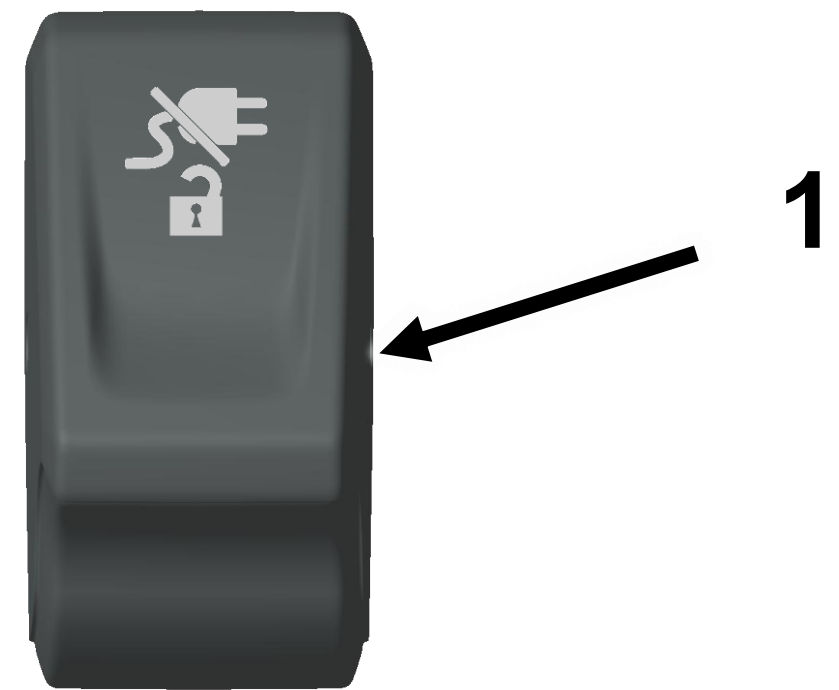


Step 2: Wait for charge indication light (2) on the charge inlet to show a solid green light indicating that the charge plug is unlocked.

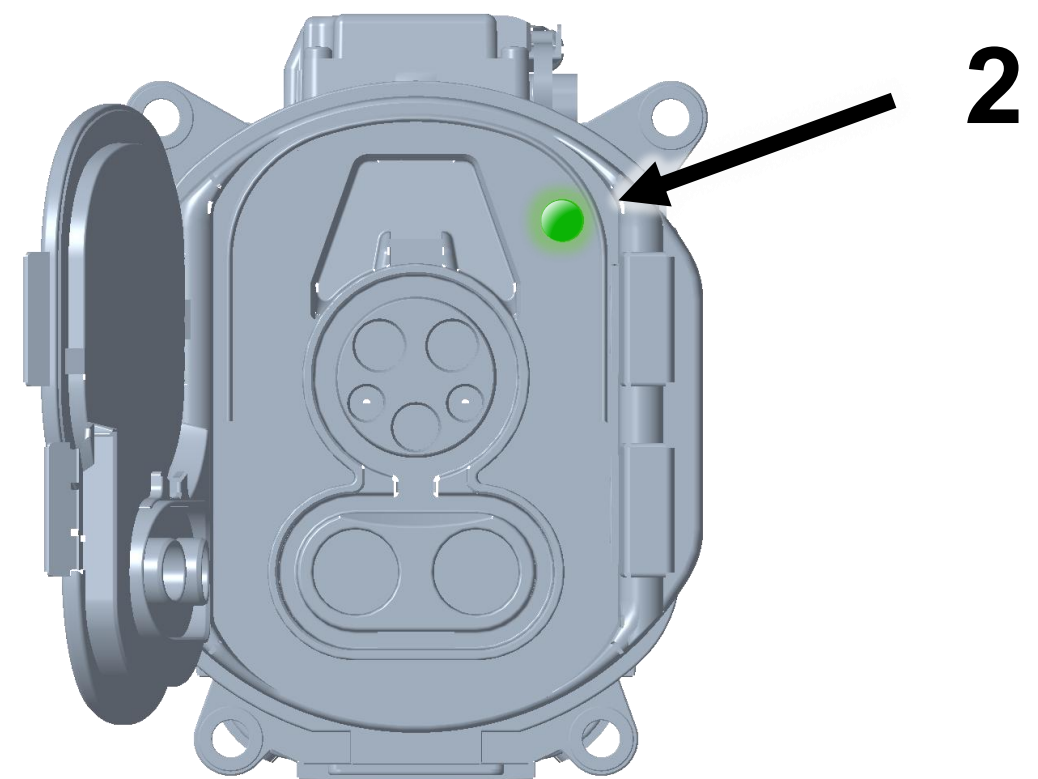

Alternate Step: If charge stop function fails or charge inlet does not unlock. Locate emergency unlock lever (3) on charge inlet and pull up.

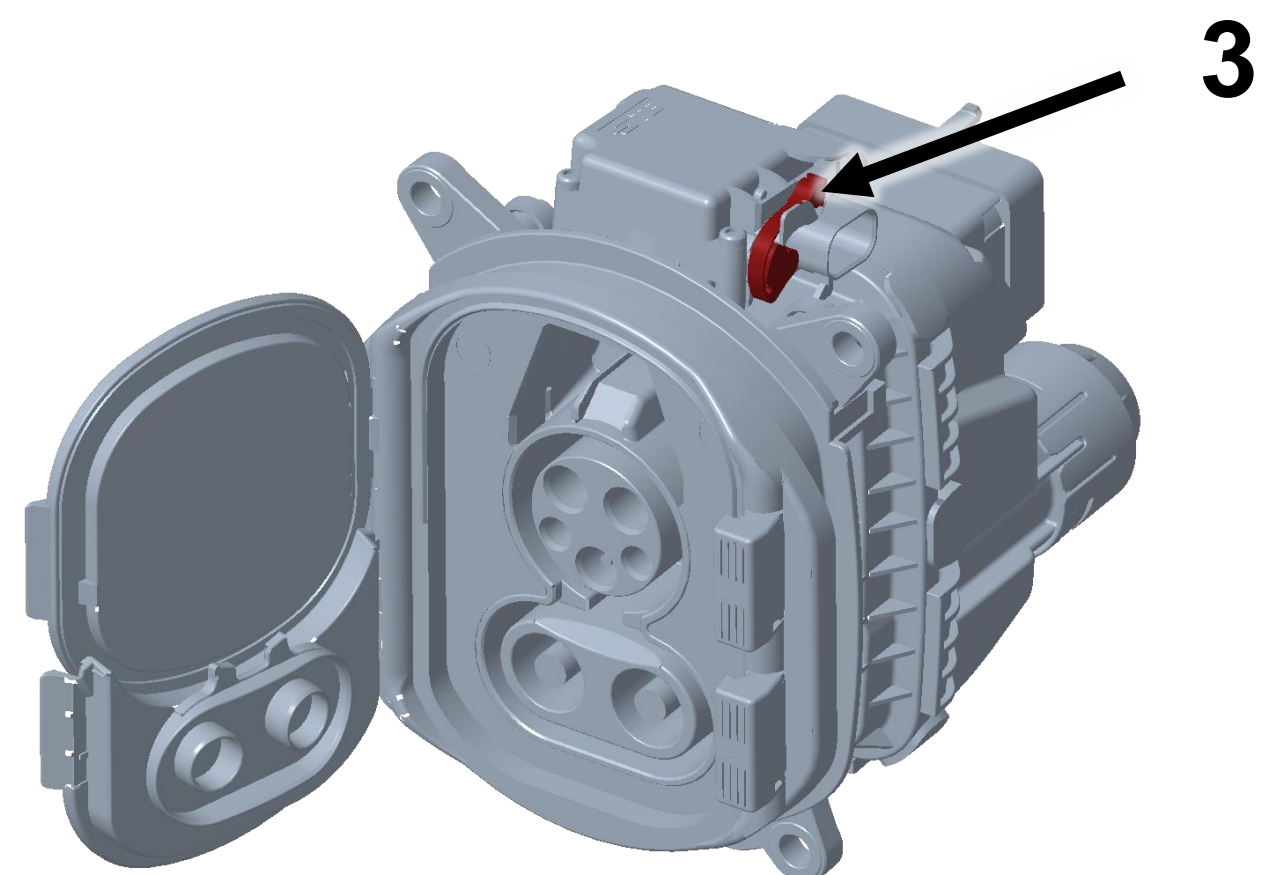

Step 3: Remove charge plug from charge inlet port with a pulling force.

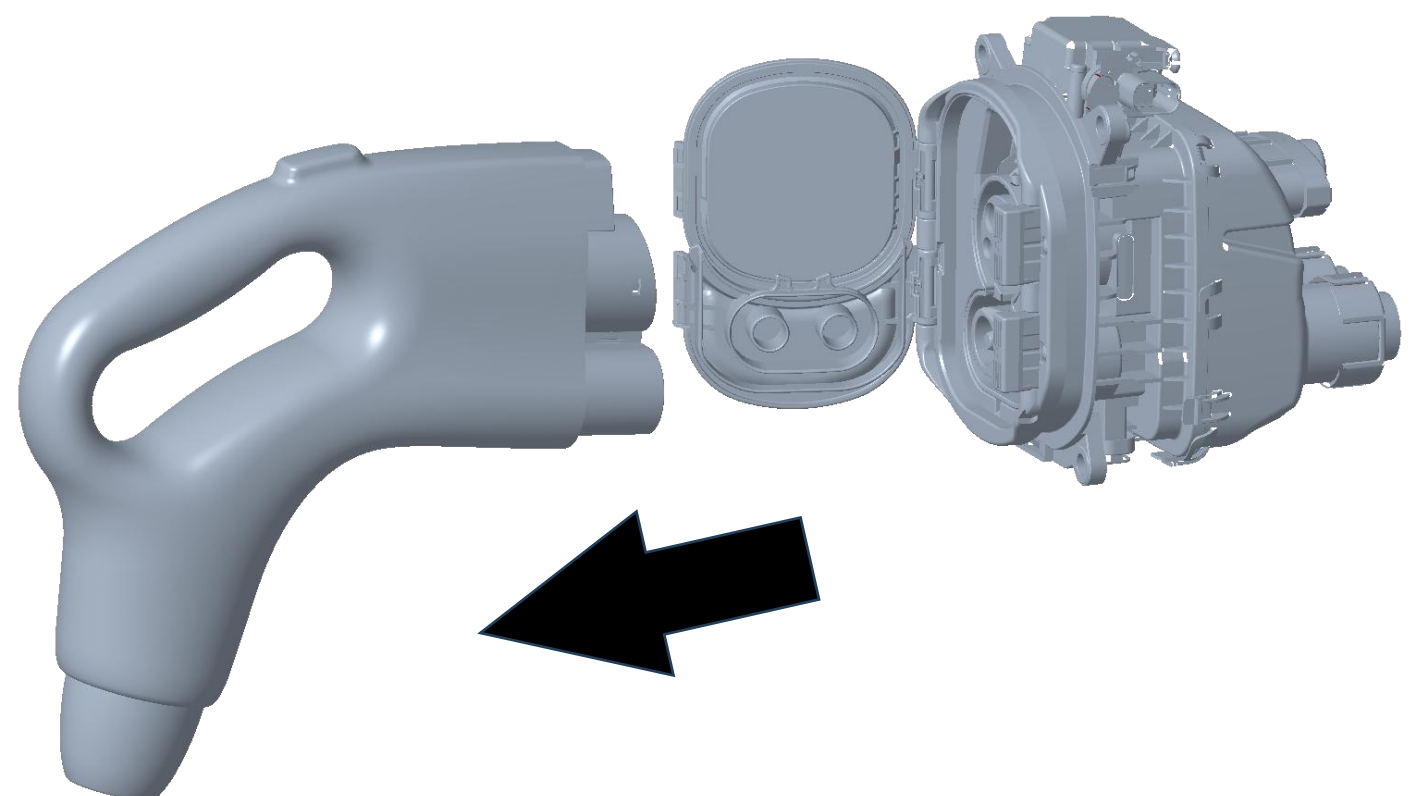


4. Access to the Occupants

Opening Doors from the Outside

Step 1: Insert key (1) into door lock turning key anticlockwise for left-hand door or clockwise for right-hand door to unlock


Step 2: Grasp door handle (2) and pull out while exerting some force on the door in the outward direction

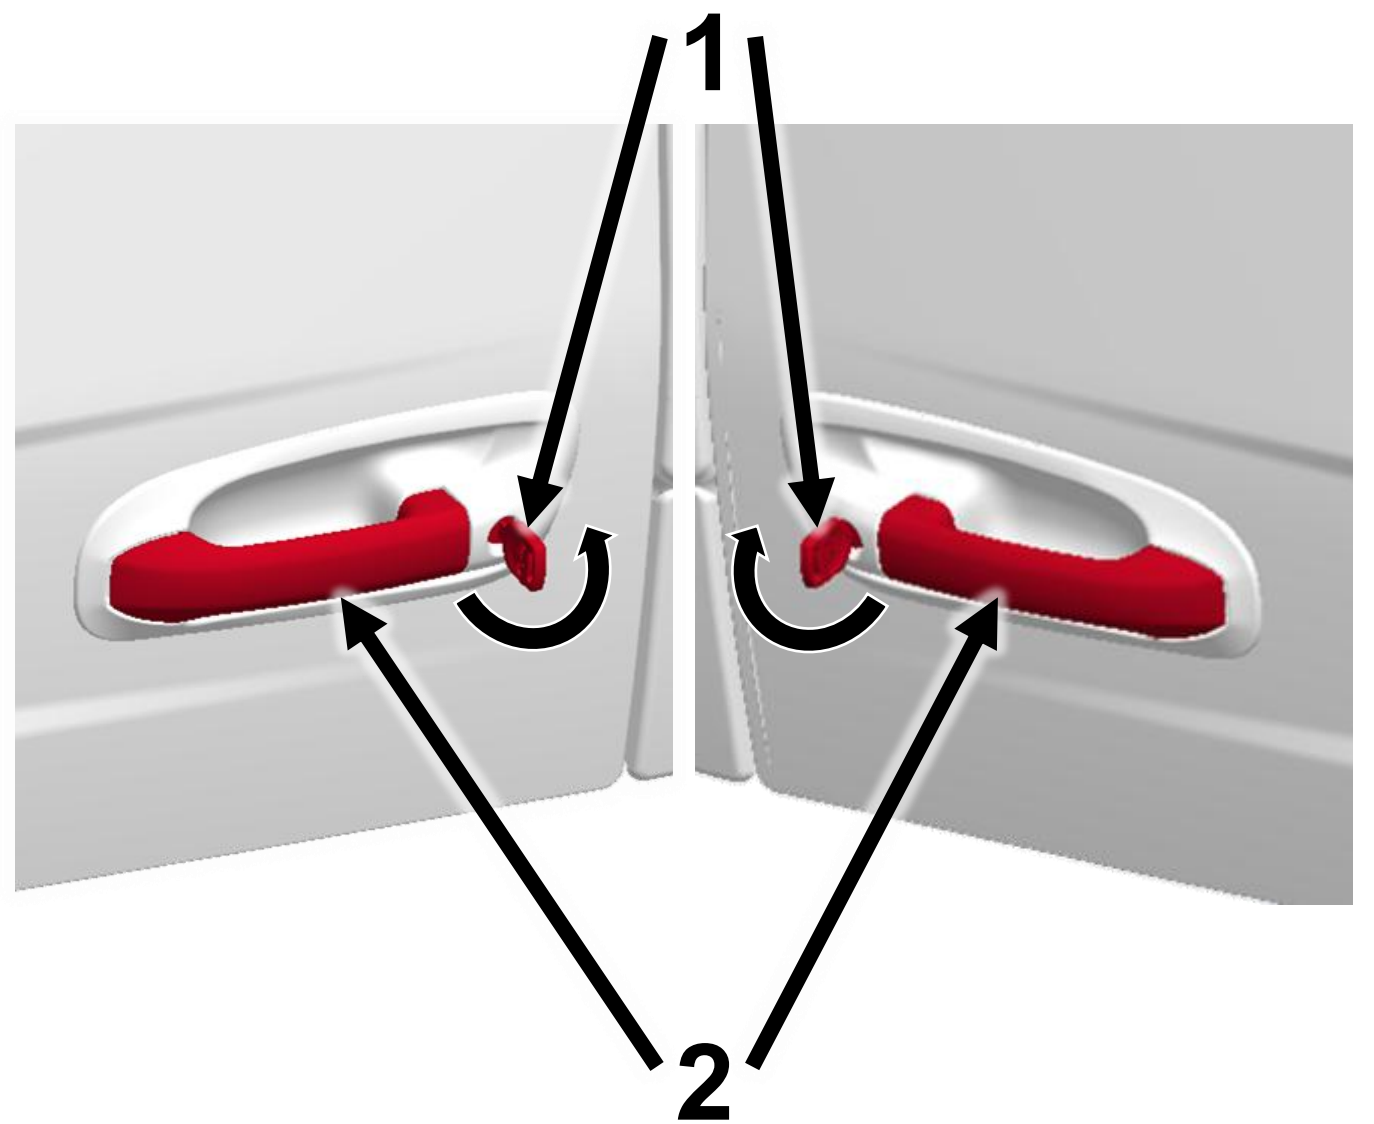

Opening Doors from the Inside

Step 1: Pull on door handle (1) to release door latch

Step 2: Firmly push door outward

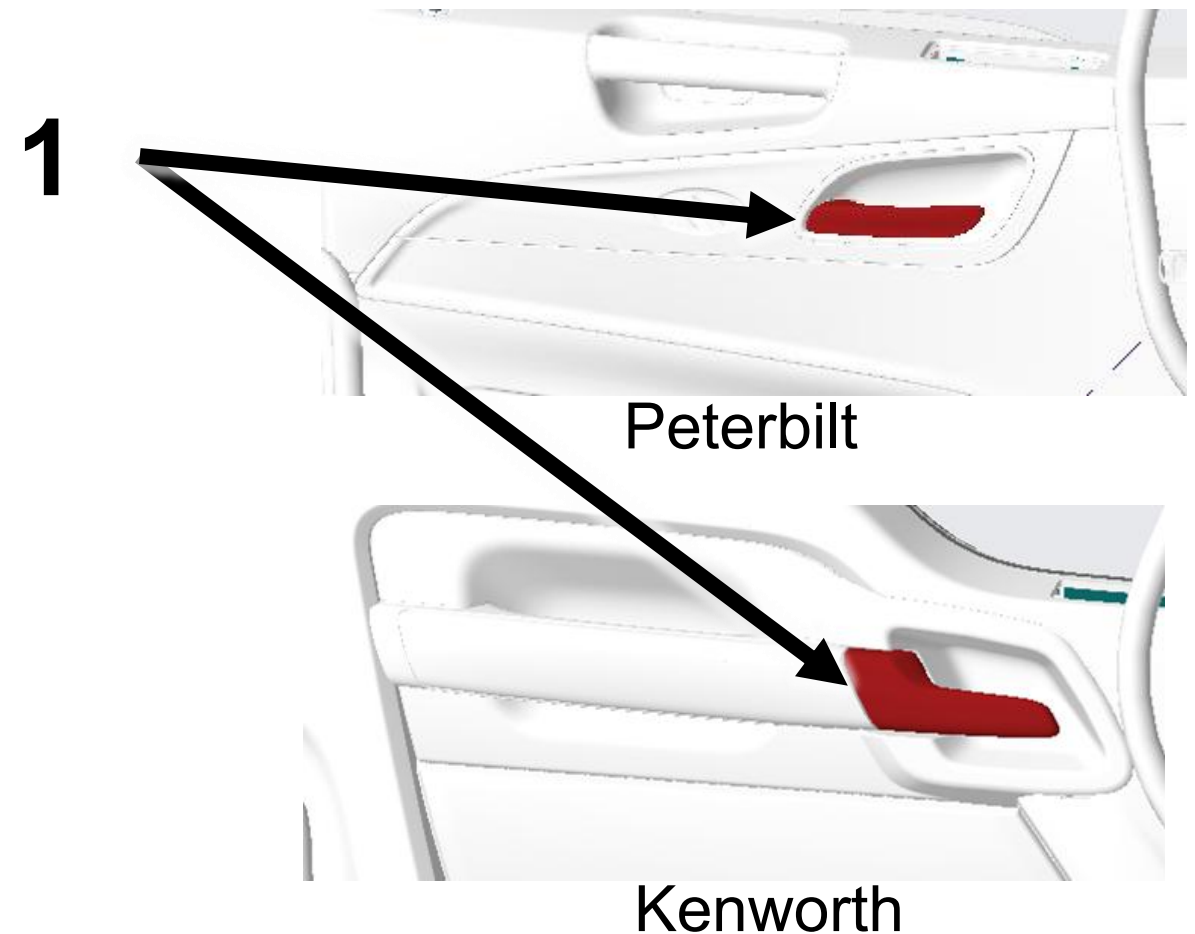

Seat Adjustment

Up/Down Adjustment: Pull switch (1) up or down to adjust seat up or down

Forward/Backward Adjustment: Pull handle 2 upward and push seat to slide forward or backward




4. Access to the Occupants (continued)

Steering Column Adjustment (if applicable)

Step 1: Pull lever (1) downward to unlock steering adjustment.

Step 2: To adjust steering column up/down, pull steering wheel up or down, to move steering wheel forward or backward, push or pull steering wheel.

Step 3: Push lever (1) upward to lock steering wheel in new location.

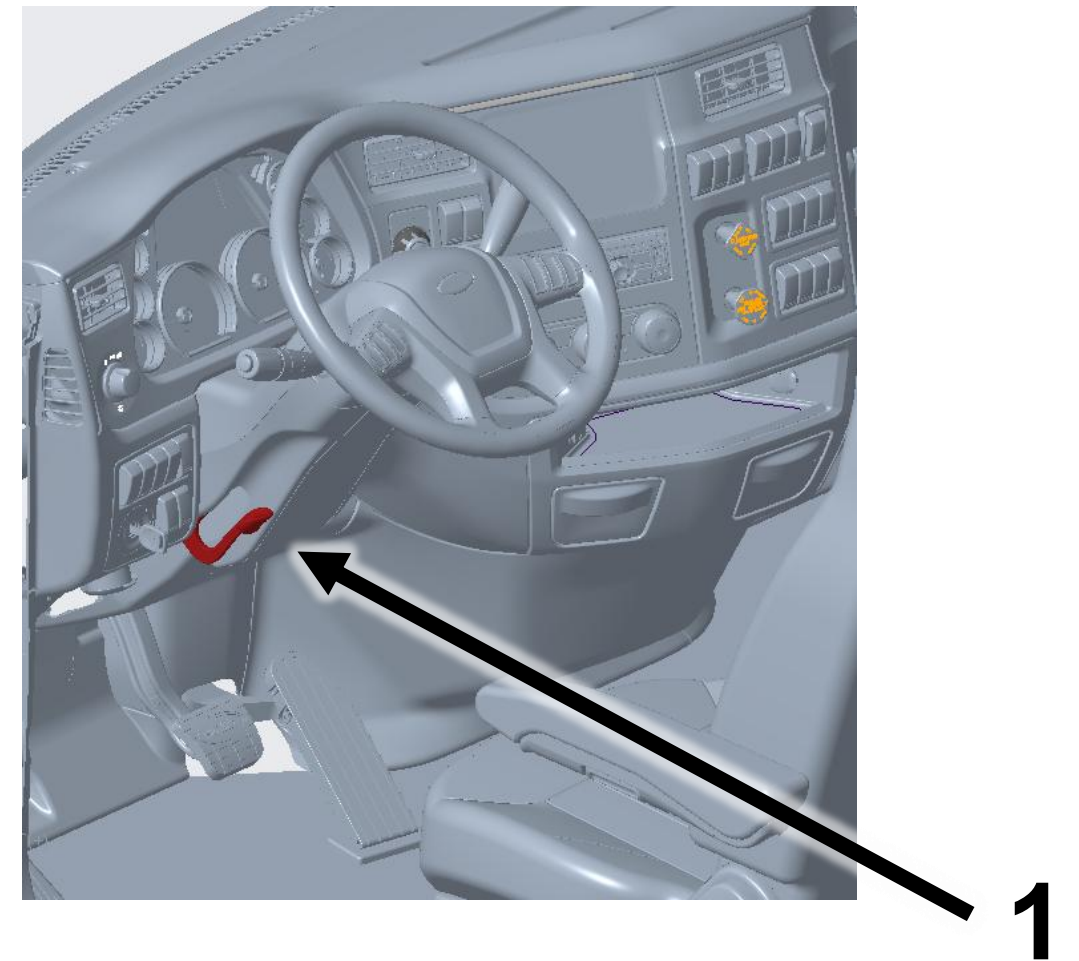


Window and Windshield Material

All glass materials listed below by location:

Side Windows: Tempered glass (1)

Rear Windows: Tempered glass (1)

Windshield: Laminated glass (2)

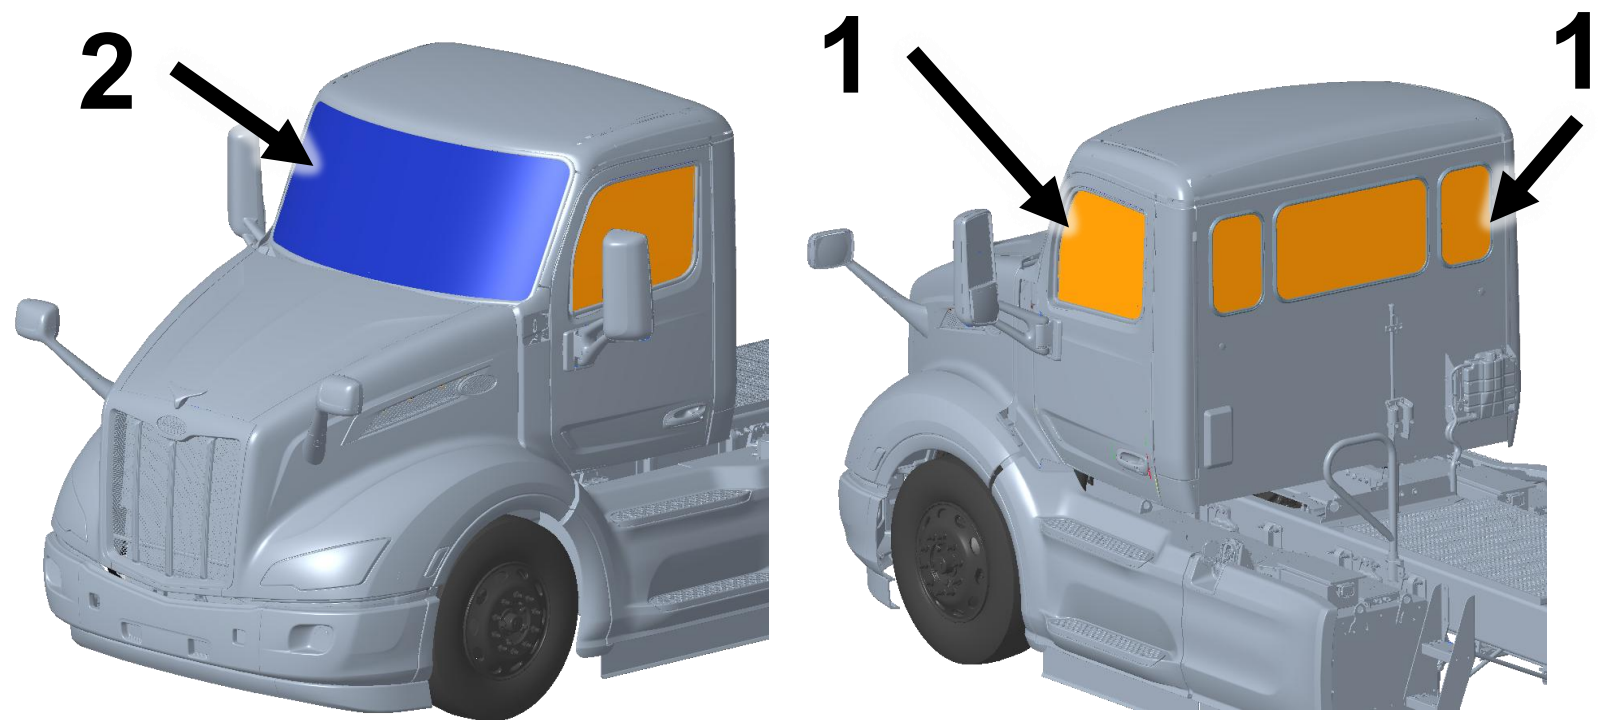

Cab Material

Note: There is no high strength or ultra-high strength steel present in the cab. The cab is predominantly made of aluminum material.




5. Stored Energy / Liquids / Gases / Solids

	 High Voltage (650 V)	 Corrosives	 Flammable	 Health Hazards
---	---	---	--	---

High-Voltage Battery Locations: The high-voltage system consists of a standard 2 Energy Storage Systems mounted on the outside of the frame rails with an optional Energy Storage System mounted behind the cab on top of the frame rails. Each Energy Storage System contains 2 batteries.

Some high-voltage components are cooled using a glycol-based automotive coolant, which is Red and may leak if the cooling system is damaged. The cooling system is also intertwined with the HVAC system and uses R134a refrigerant.

These trucks are equipped with full air systems that include tanks and hoses that spread the length of the chassis which are maintained in the range of 100-130psi (689-897 kPa).

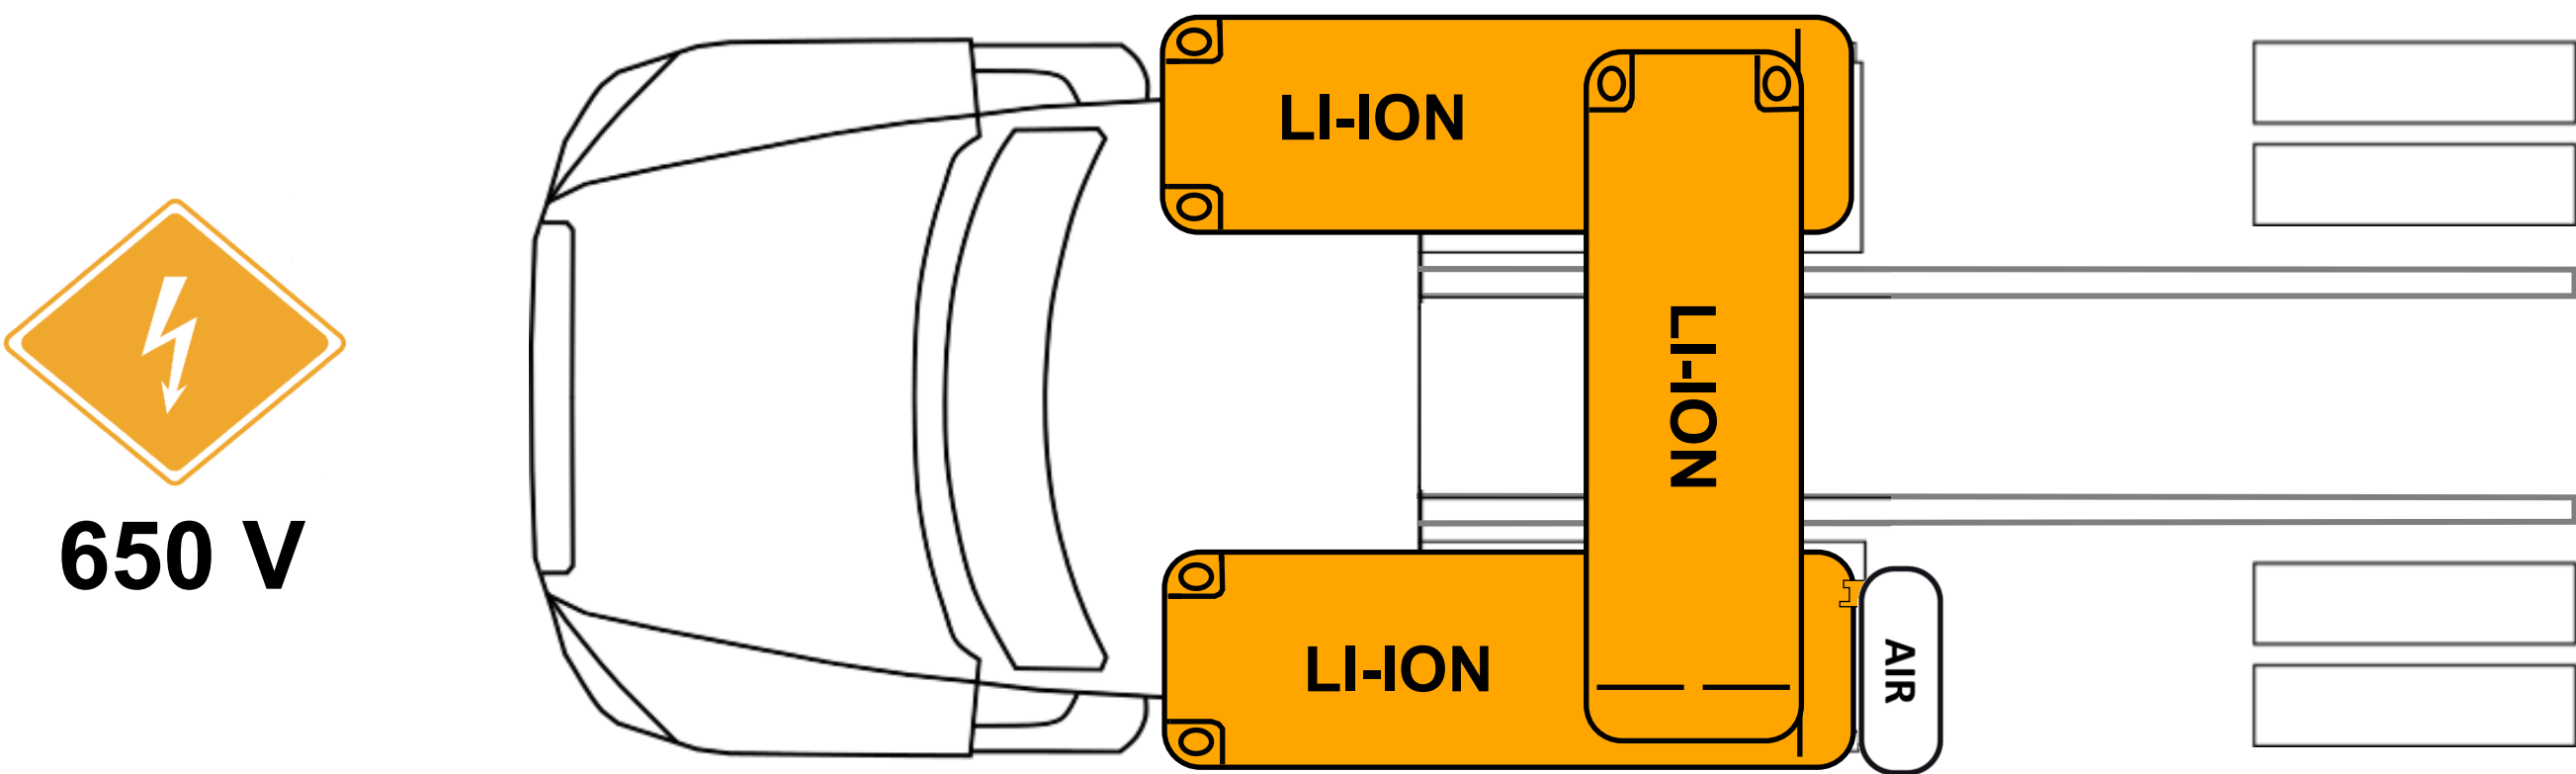

Please contact local and state authorities for more information regarding proper response and clean up of hazardous materials

6. In Case of Fire

- **Warning:** Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus.
- **Warning:** Treat fires involving charging stations as energized fires until power to the charger can be shut down.
- **Warning:** Hydrogen Fluoride and/or Hydrofluoric Acid may be present.
- **Warning:** There is always risk of reignition.



Use of Water to Extinguish Li-ion Fires



Do Not Use Wet Foam



Hazardous to Human Health:

- May cause an allergic skin reaction.
- Do not breathe dust, fumes, gas, mist, vapors, or spray.



Flammable Components




Explosion Hazard:

- Explosive gas could accumulate.
- Move truck outside building after extinguishing fire.



Corrosives:

- Causes skin burns and eye damage.

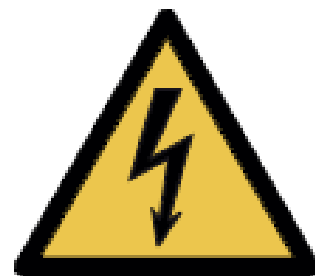

High Voltage (650 V):


- CAT III (1000 V) rated gloves required for exposed HV parts.



Check Li-ion Battery Pack for Unexpected Rising Temps with Thermal Imaging Camera (TIC or IR Gun)

7. In Case of Submersion

- **Warning:** Do **NOT** attempt to drive the vehicle

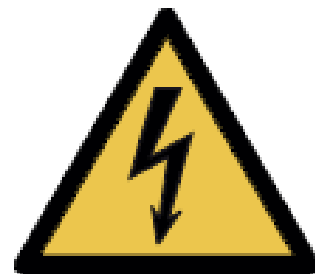

High Voltage (650 V):

- CAT III (1000 V) rated gloves required for exposed HV parts

If the vehicle has been submerged there is a chance of secondary impact damage to high voltage components around the vehicle. These components present a hazard and should only be handled while wearing the correct PPE.

If the vehicle does NOT have impact damage, there is a low electrical shock risk. Remove the vehicle from the water. Let the water drain and follow the immobilization steps in Section 3. Do NOT attempt to drive.

In case of submersion:

- Step 1:** Turn the vehicle OFF but do NOT engage the parking brake
- Step 2:** Remove the vehicle from submersion (follow the instructions in section 8)
- Step 3:** Open the doors and drain as much water away from the vehicle as possible
- Step 4:** Turn OFF the 12V Disconnect Switch


Please follow state, municipal, and department guidelines for properly handling electric vehicle submersion events

8. Towing / Transportation / Storage



High Voltage (650 V):

- CAT III (1000 V) rated gloves required for exposed HV parts

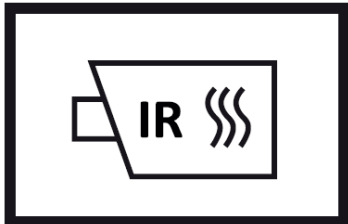

Check Li-ion Battery Pack for Unexpected Rising Temps with Thermal Imaging Camera (TIC or IR Gun)

Towing:

Towing must be done with the rear wheels off the ground. In a scenario where this is not possible, the driveshaft between the drive motor and rear axle must be removed and the motor must be in neutral. If the driveshaft is not removed the motor can generate electricity. This presents a potential hazard.

Release the parking brake before towing the vehicle. Without any air pressure in the system, the parking brake is default on. Please refill the air system with air and release the parking brake to begin towing or manually release the spring brakes if the air system is damaged.

If any of the high voltage components were damaged, transport the truck with all the wheels off the ground. Do **NOT** attempt to drive.

Transportation:

If transporting the vehicle with a damaged high voltage system, periodically check the batteries and other high voltage components to make sure the vehicle stays cold throughout the duration of the trip.

Storage:

Damaged vehicles must be inspected to ensure there is no chance of reignition.

Emergency:

If first responders are unable to safely remove the driveshaft for towing, the truck can be moved at a max speed of 1.5 mph (2.4 kph) for a max distance of 0.5 mi (0.8 km).

9. Important Additional Information



Warning: Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus.



Warning: Vehicle noise may be reduced in some operation modes. Failure to shutdown the truck before immobilization could result in death, severe injury, or property damage.



Warning: Assume all high voltage components are always energized. Do not cut any High Voltage components, including orange high voltage cables.









Warning: Keep all rescue equipment clear of high voltage components with a recommended clearance of 12 inches (30 cm) if possible.



Warning: There is always risk of reignition.

10. Explanation of Pictograms Used

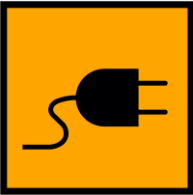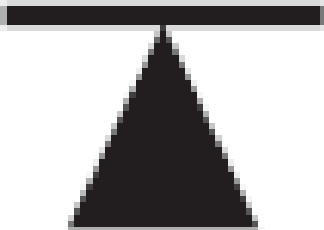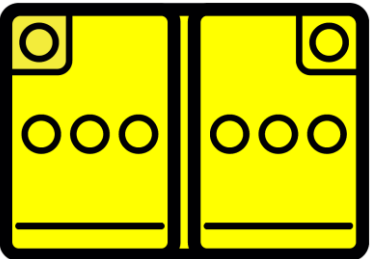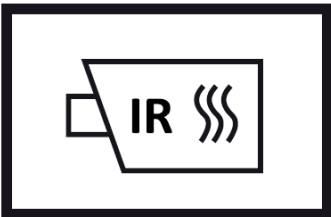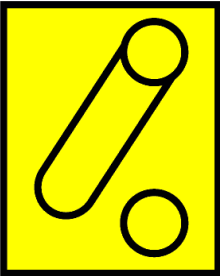	High Voltage Battery Pack		Hazardous to Human Health
	High Voltage Component		Explosive
	Vehicle Cut Loop		Flammable
	High Voltage Charge Inlet		Corrosives
	High Voltage Disconnect		Use Water to Extinguish Fire
	High Voltage Power Cable		Do Not Use Wet Foam
	Warning Electricity		Air Tank
	Block Vehicle Wheels		Parking Brake
	Gas Strut		Trailer Air Brake
	Lifting Point		Height Control
	Low Voltage Battery		Use Thermal Infrared Camera
	Low Voltage Disconnect		Rotate Vehicle
	Ignition Key		
	Hood Release		