

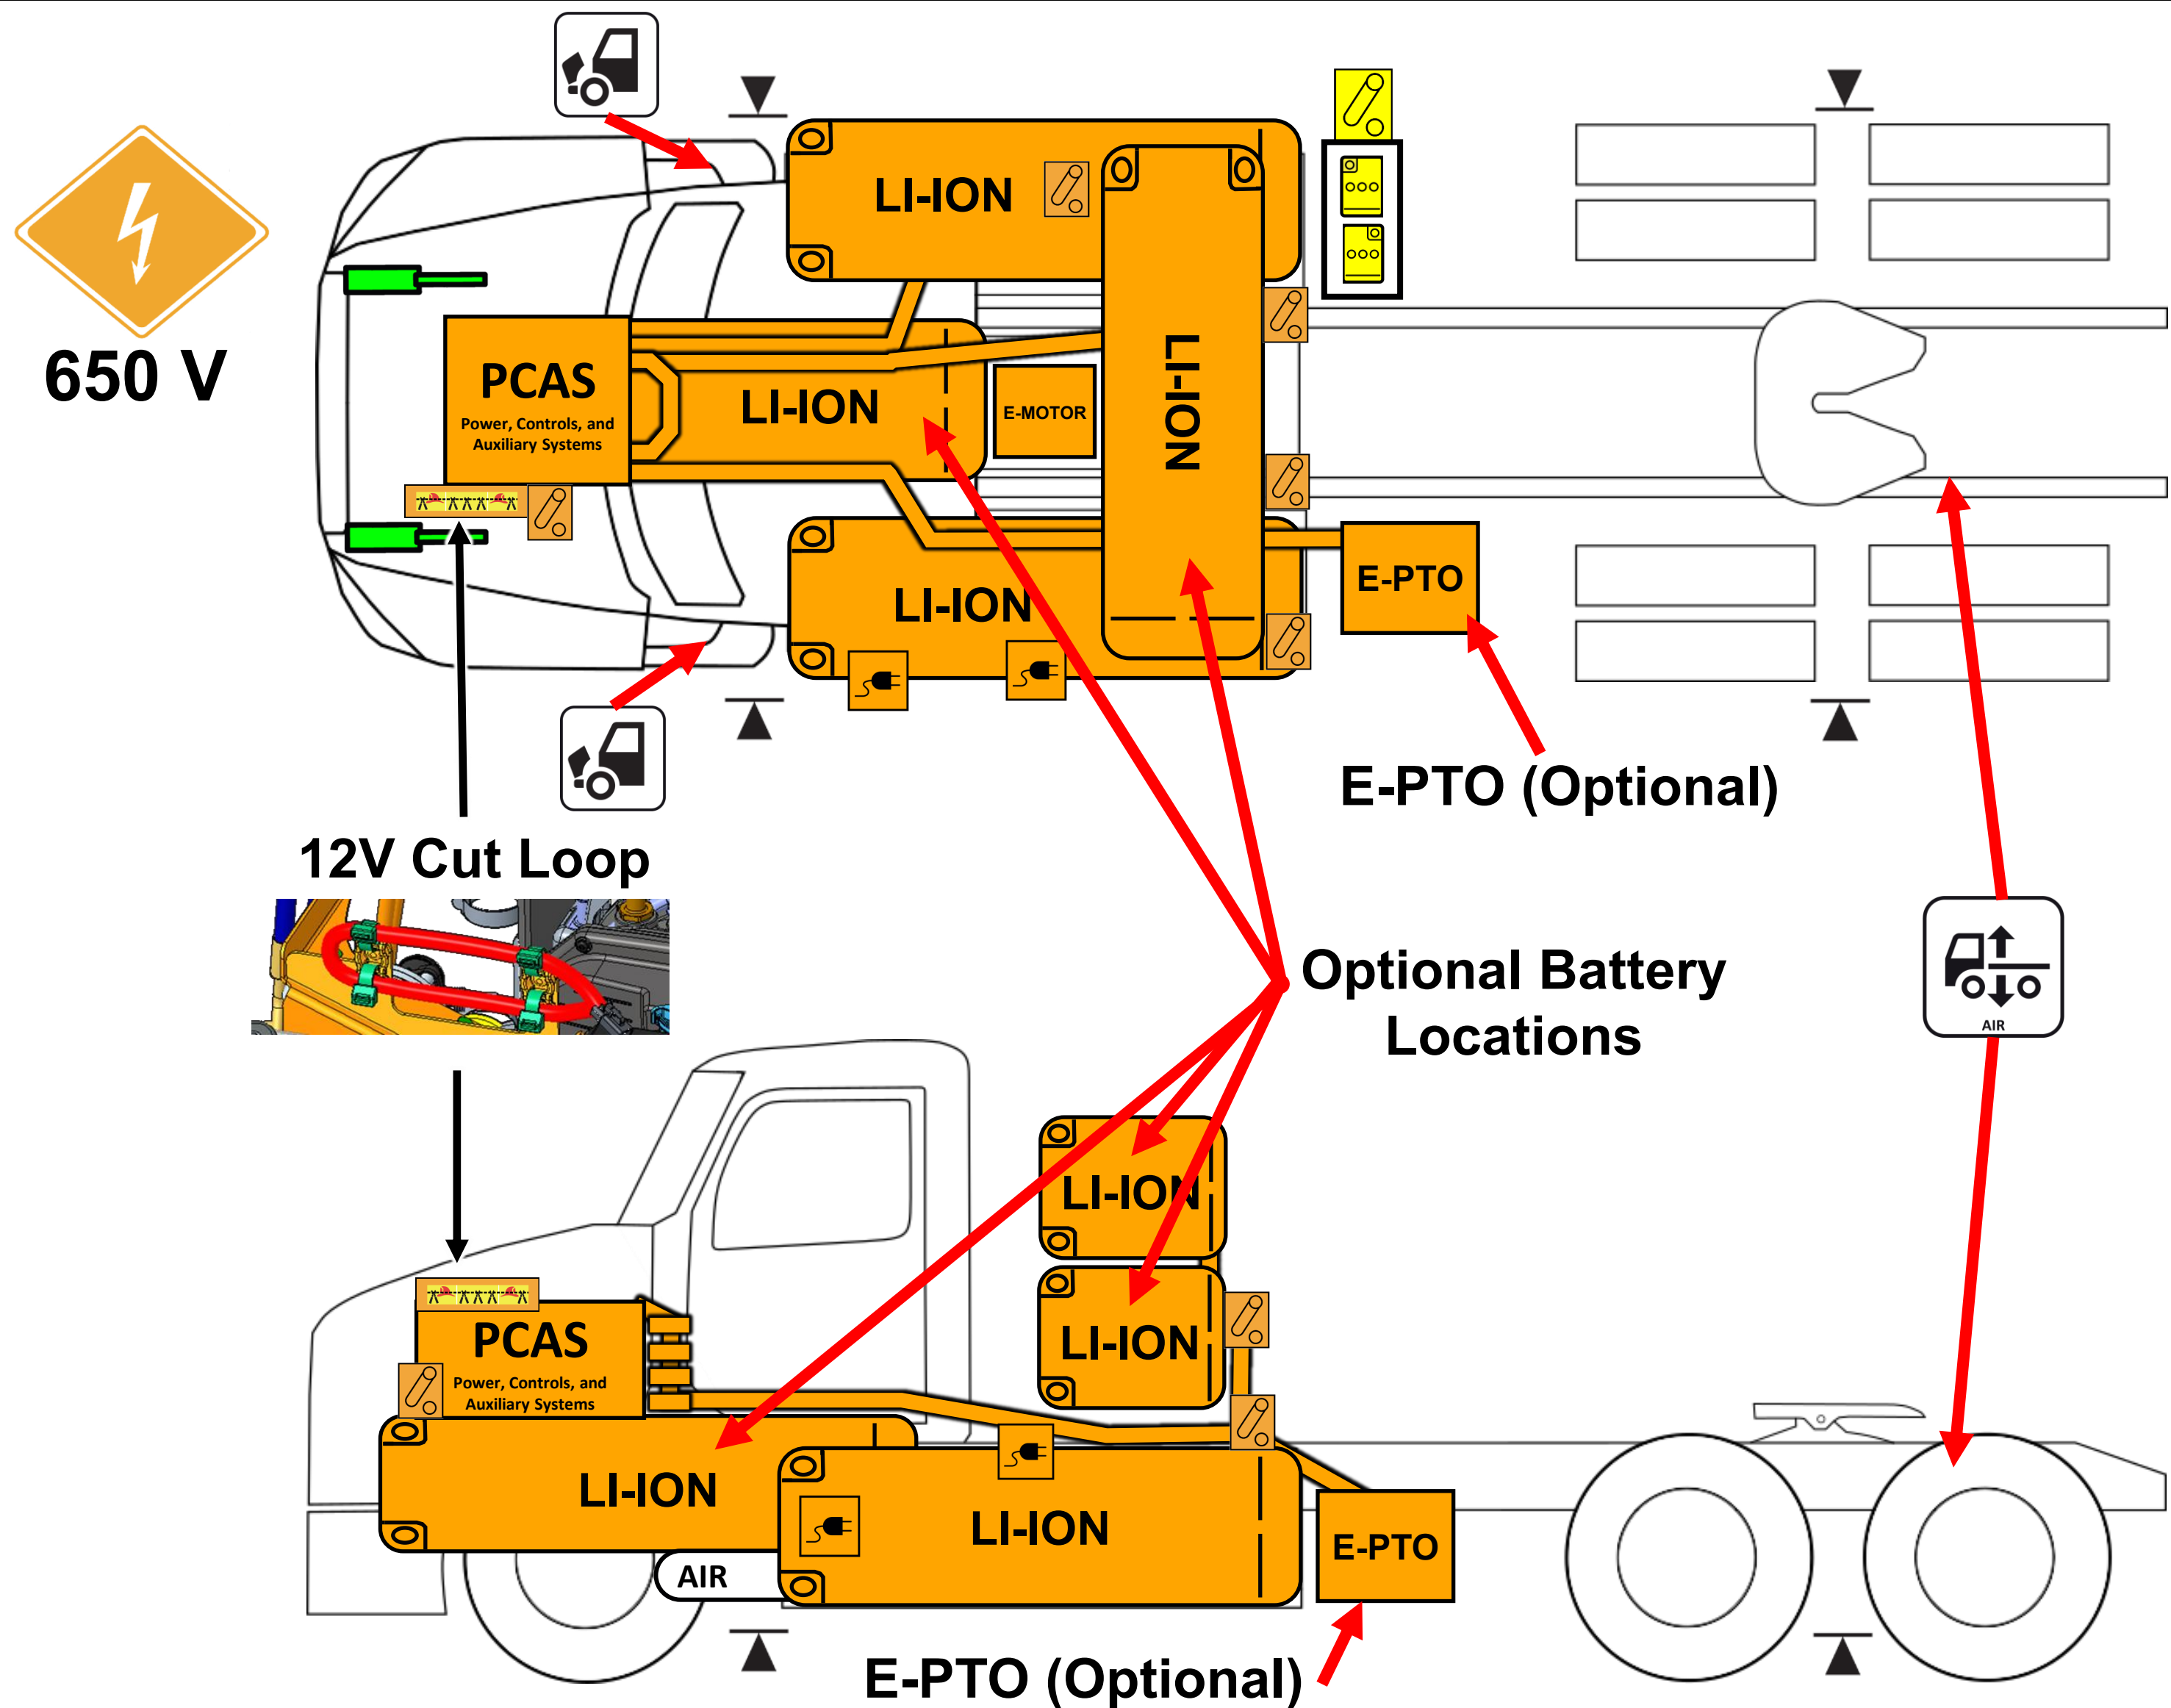



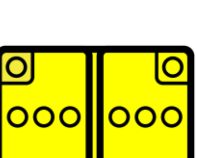

Peterbilt 579EV and 567EV
Kenworth T680E and T880E
Model Year: 2024 – Current



Warning: Check for labels identifying any additional High Voltage components added by body builders.

 High Voltage Li-Ion Battery Pack	 High Voltage Cables	 High Voltage Region	 Relay Box Includes MSD (Manual Service Disconnect)	 Emergency Cable Cut Loop	 Charger Inlet	
 Lift Point	 Hood Release	 Gas Strut	 Low Voltage Batteries	 12V Disconnect	 Compressed Air Tank	 Height Control


1. Identification / Recognition




Warning: Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus, when approaching this vehicle.

Peterbilt Exterior Identification

579EV

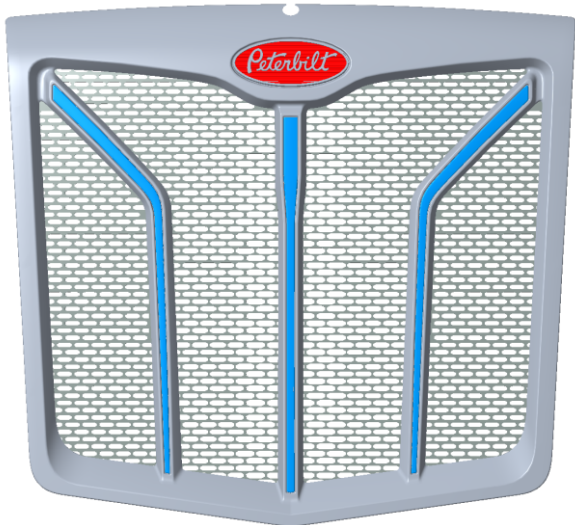

Grill with blue spears

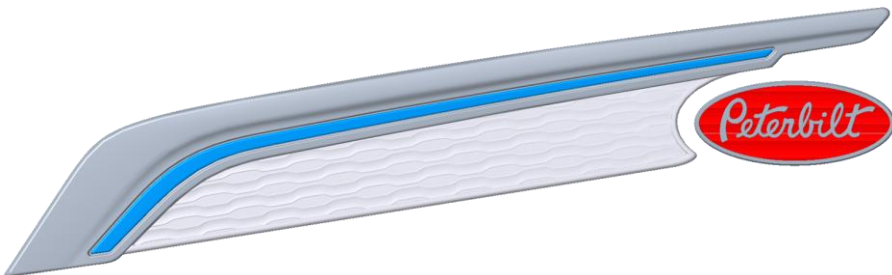


Closeout panel with blue spear



EV badge on both doors

567EV

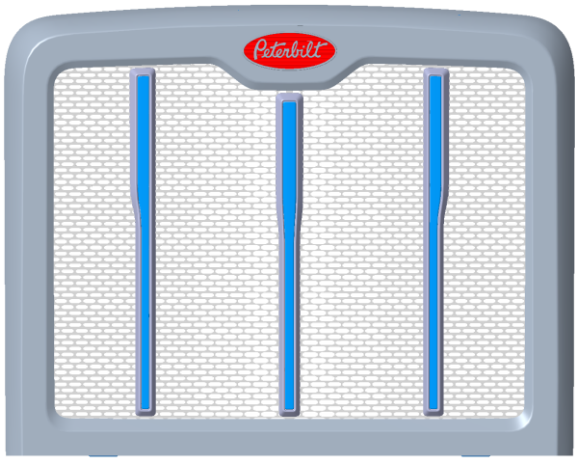

Grill with blue spears



Closeout panel with blue spear



EV badge on both doors

1. Identification / Recognition (continued)

Kenworth Exterior Identification

T680E



T880E



2. Immobilization / Stabilization / Lifting


- 

Warning: Keep all rescue equipment clear of high voltage components with a recommended clearance of 12 inches (30 cm).
- 

Warning: Vehicle noise may be reduced in some operation modes. Failure to shutdown the truck before immobilization could result in death, severe injury, or property damage.
- 

Warning: Assume all high voltage components are always energized. Do not cut any High Voltage components, including orange high voltage cables.

Immobilization

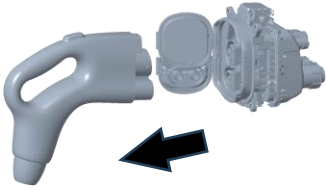- 


Step 1: Unplug the charger or remove power from the charger.
- 

Step 2: Ensure the vehicle is in Neutral by turning the gear selector on the right stalk to N.
- 

Step 3: Remove the key from the ignition.
- 


Step 4: Engage tractor/truck park brake by pulling out switch.
- 

Step 4b (if applicable): Engage trailer air brake by pulling out switch.

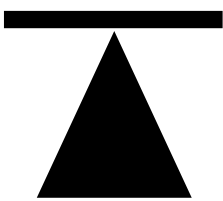	Blocking Wheels	Block all wheels using wheel chocks.
	Lifting Truck (with Jack)	Only use the lift points identified in the rescue sheet (section 0) with this icon for jacks.
	Rotating Truck	Wrap chains around both axles to rotate the truck to an upright stable position.

3. Disable Direct Hazards / Safety Regulations

Disabling High Voltage

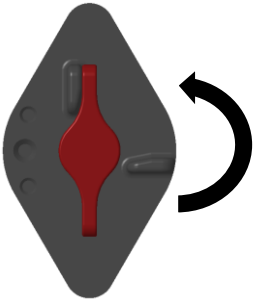- Step 1:** Go to low voltage battery box on the side of the truck.
- 

Step 2:
(Primary Step): Turn 12V Disconnect Counterclockwise to OFF Position.
- 


(Alternate Step): Cut a 5-inch (13 cm) segment (2 cuts) from the red cut loop (identified in the Rescue Sheet Diagram).
- 

Step 3: Wait 2 Minutes for High Voltage Capacitors to Discharge.


3. Disable Direct Hazards / Safety Regulations (continued)

If Truck is Charging


Step 1: Locate Stop Charging Switch (1) on the dashboard and toggle switch to begin the stop charging function.

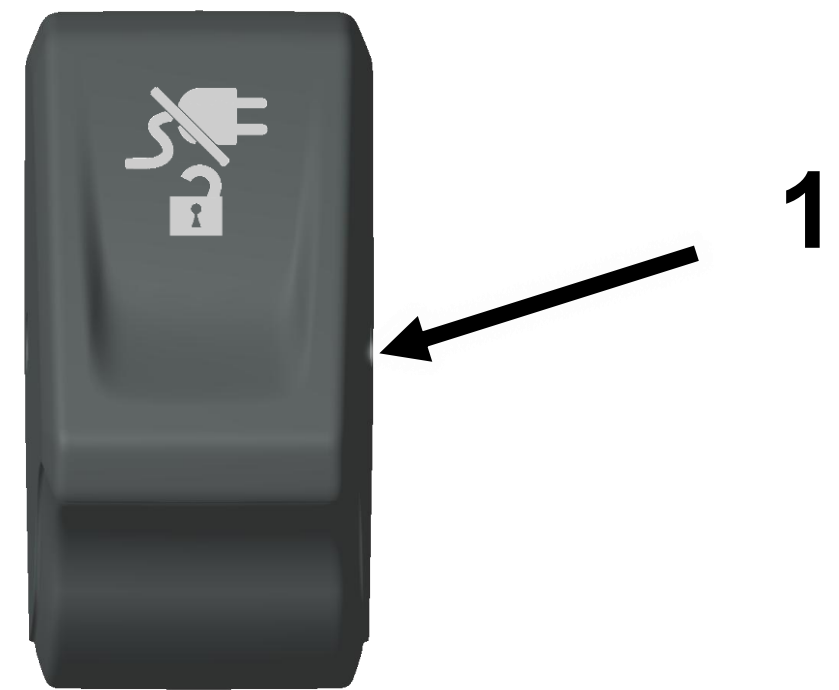


Step 2: Wait for charge indication light (2) on the charge inlet to show a solid green light indicating that the charge plug is unlocked.

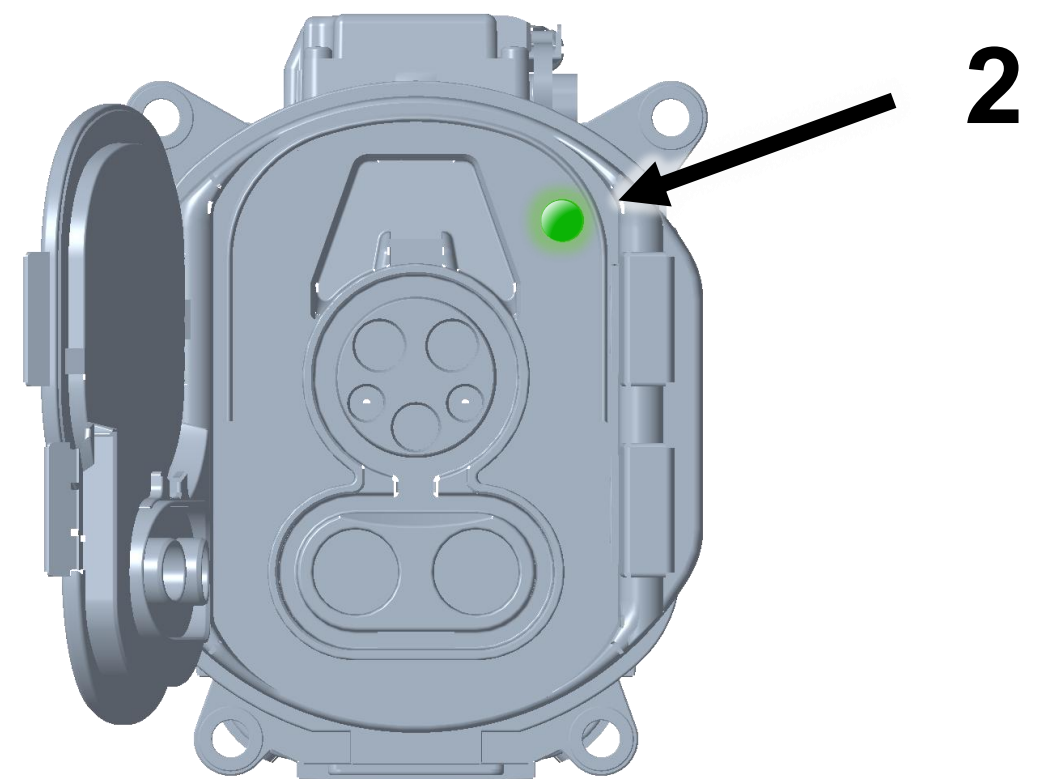

Alternate Step: If charge stop function fails or charge inlet does not unlock. Locate emergency unlock lever (3) on charge inlet and pull up.

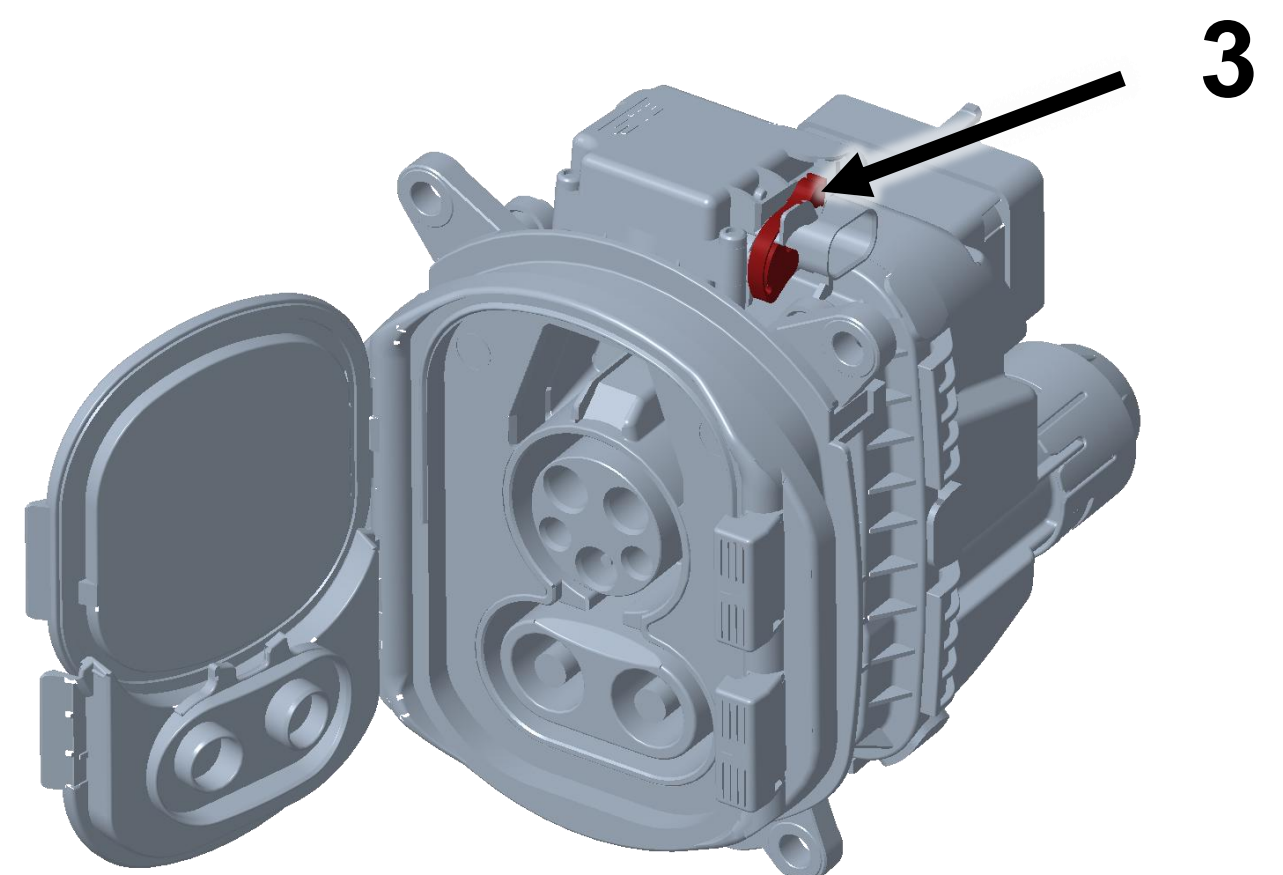

Step 4: Remove charge plug from charge inlet port with a pulling force.

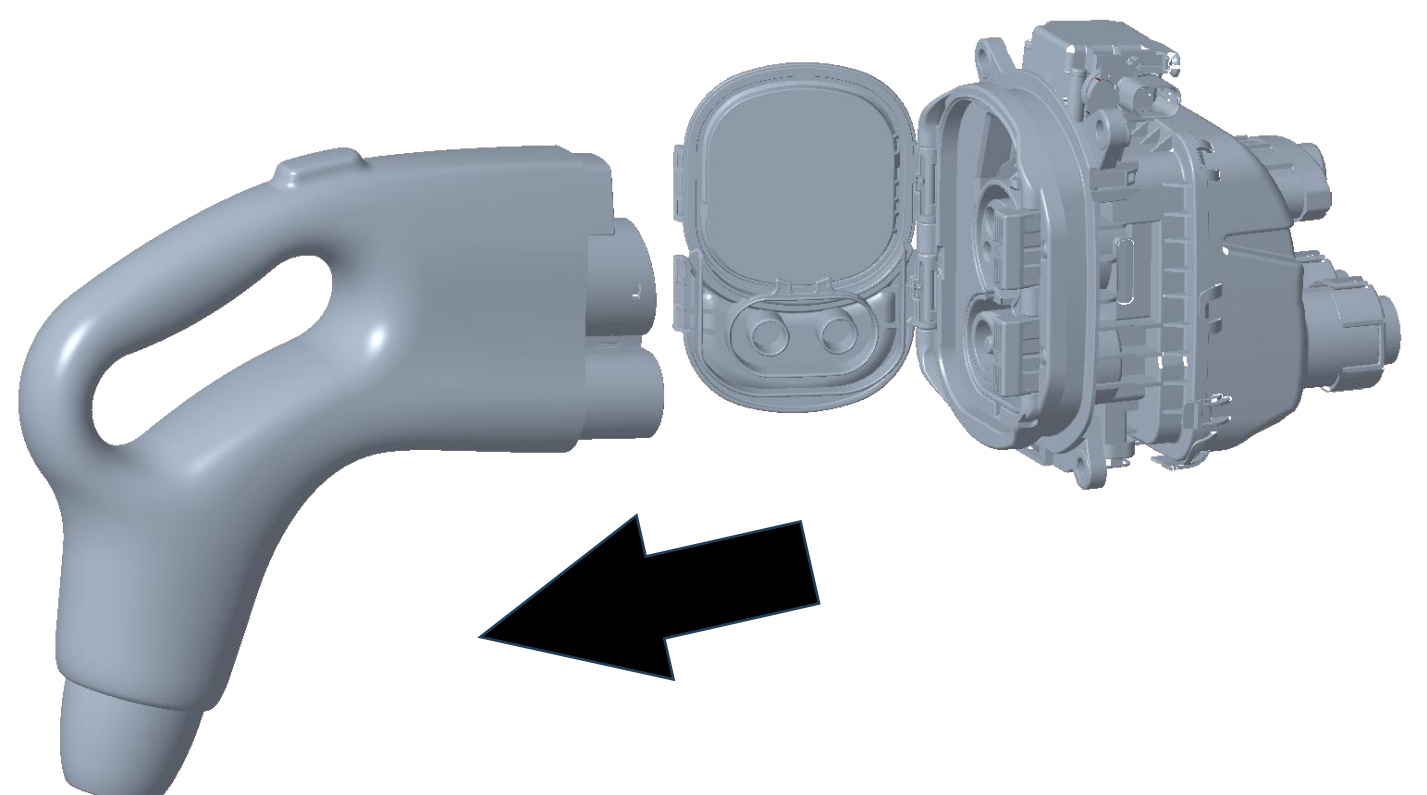


4. Access to the Occupants

Opening Doors from the Outside

Step 1: Insert key (1) into door lock turning key anticlockwise for left-hand door or clockwise for right-hand door to unlock


Step 2: Grasp door handle (2) and pull out while exerting some force on the door in the outward direction

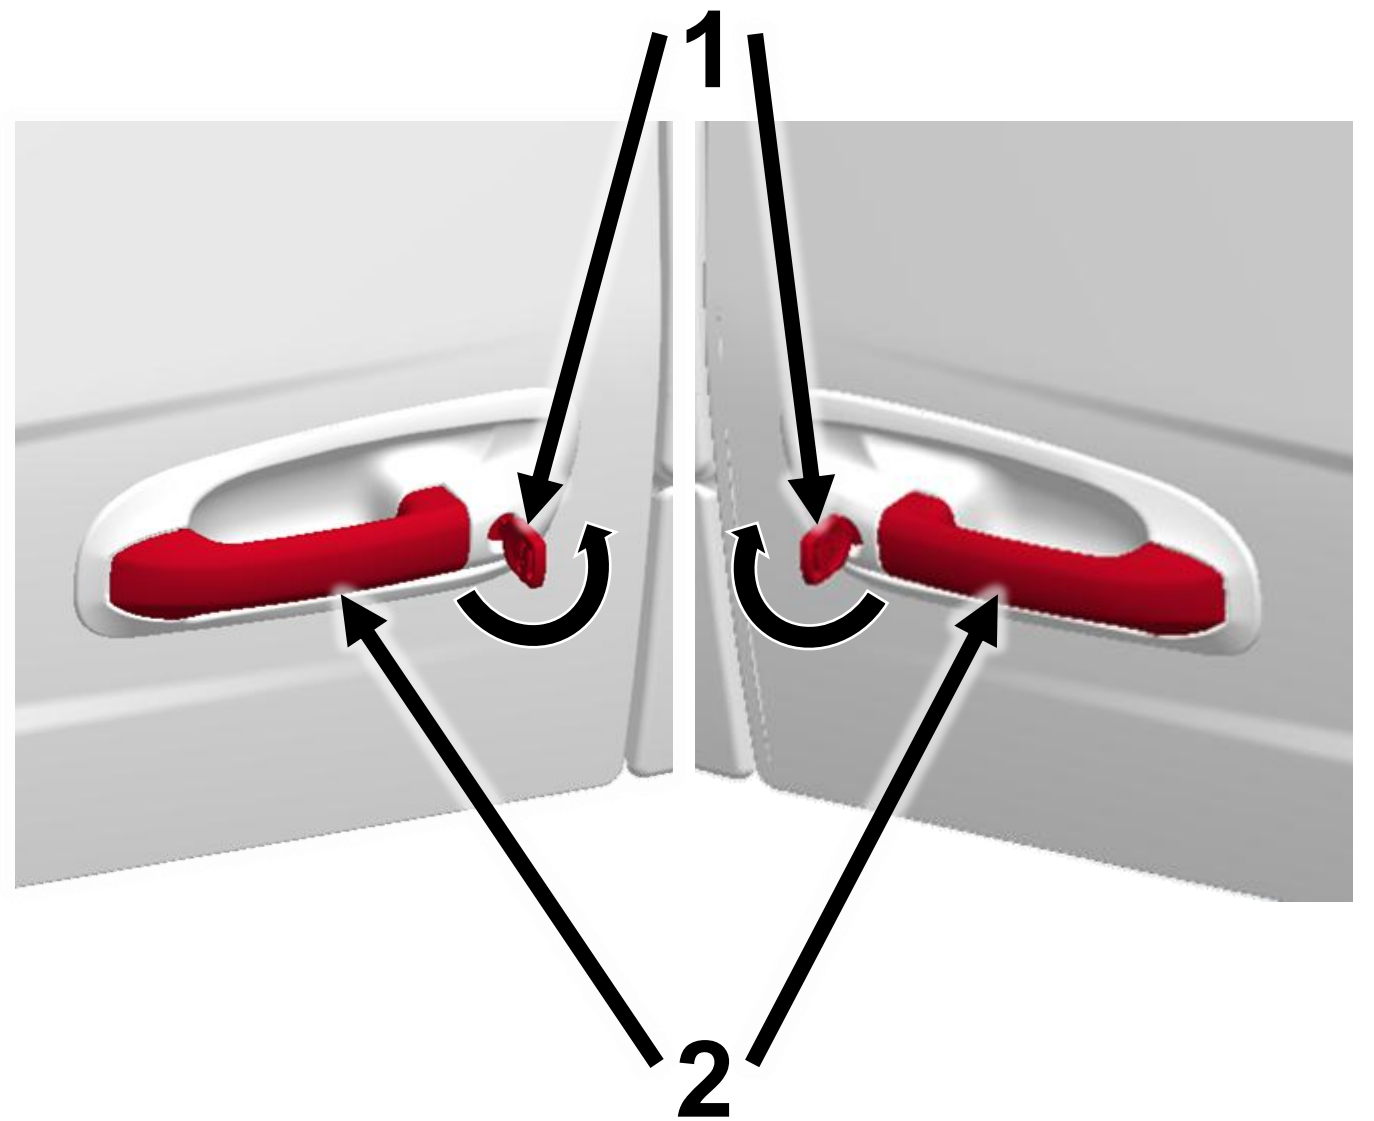

Opening Doors from the Inside

Step 1: Pull on door handle (1) to release door latch

Step 2: Firmly push door outward

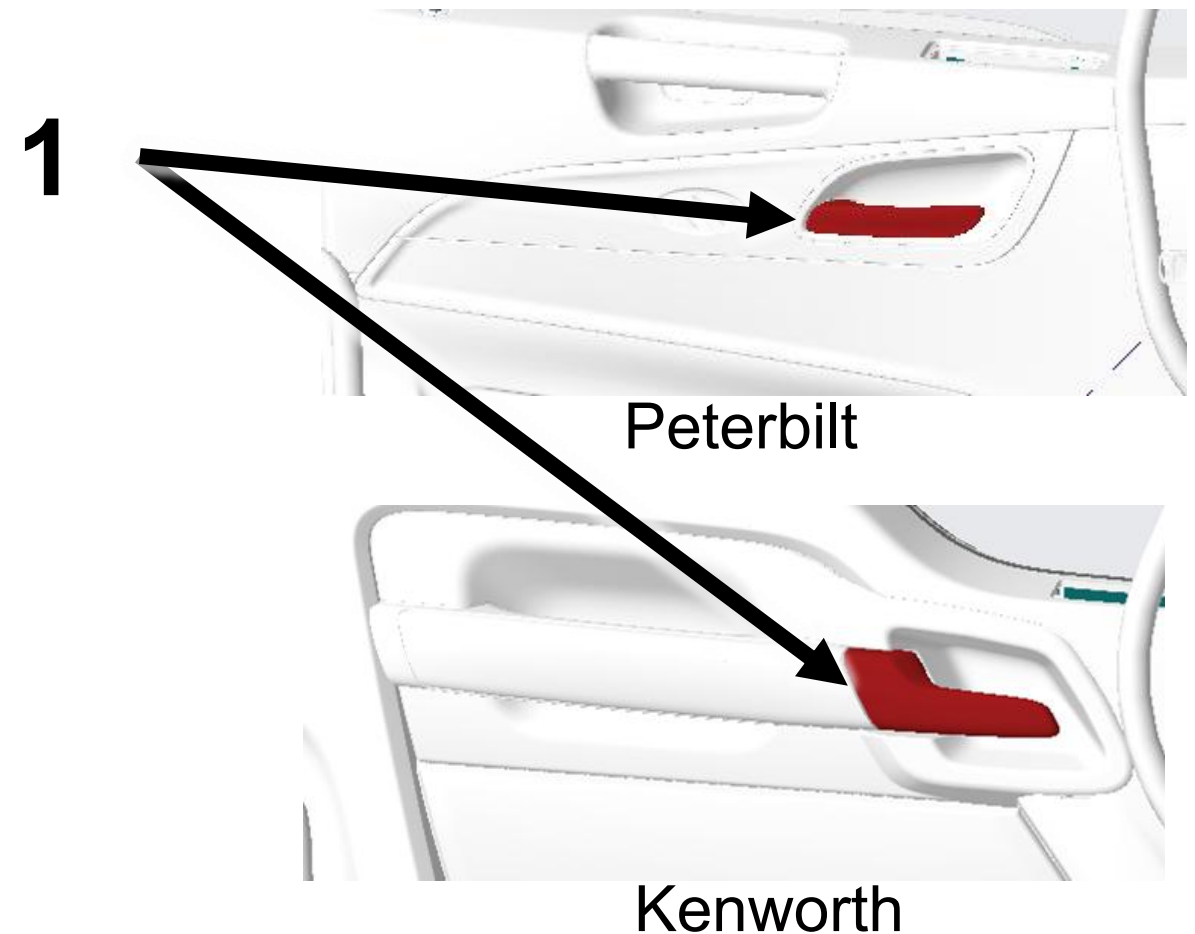

Seat Adjustment

Up/Down Adjustment: Pull switch (1) up or down to adjust seat up or down


Forward/Backward Adjustment: Pull handle 2 upward and push seat to slide forward or backward



4. Access to the Occupants (continued)

Steering Column Adjustment (if applicable)


- Step 1:** Pull lever (1) downward to unlock steering adjustment
- Step 2:** To adjust steering column up/down, pull steering wheel up or down, to move steering wheel forward or backward, push or pull steering wheel
- Step 3:** Push lever (1) upward to lock steering wheel in new location

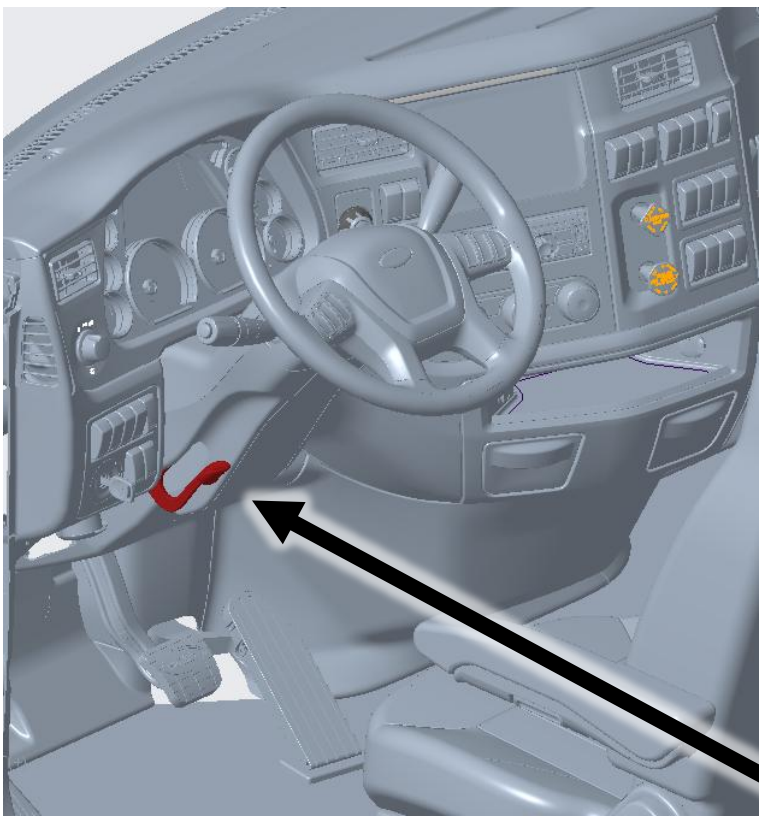

Window and Windshield Material

All glass materials listed below by location:

- Side Windows:** Tempered glass (1)
- Rear Windows:** Tempered glass (1)
- Windshield:** Laminated glass (2)

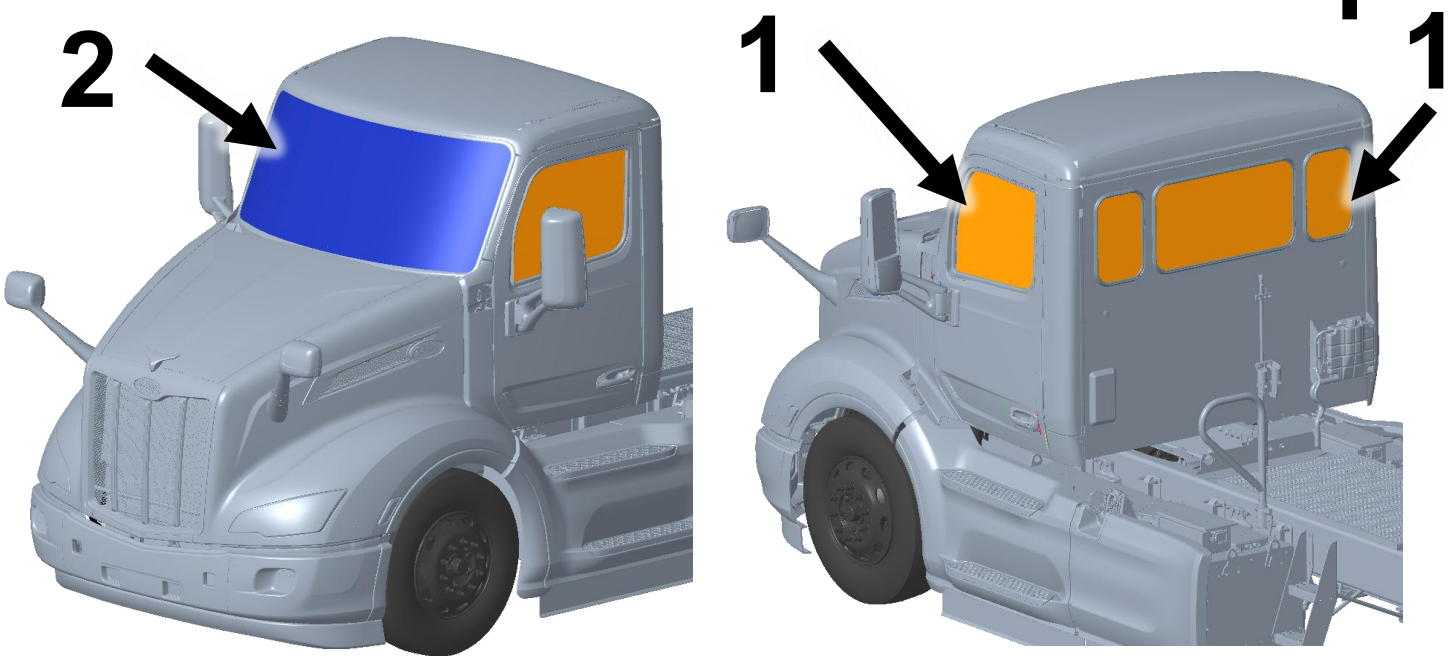

Cab Material

Note: There is no high strength or ultra-high strength steel present in the cab. The cab is predominantly made of aluminum material.



5. Stored Energy / Liquids / Gases / Solids



High Voltage (650 V)




Corrosives




Flammable



Health Hazards

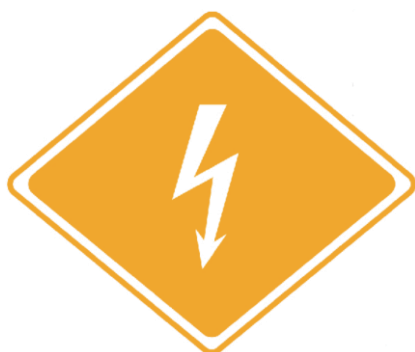


650 V

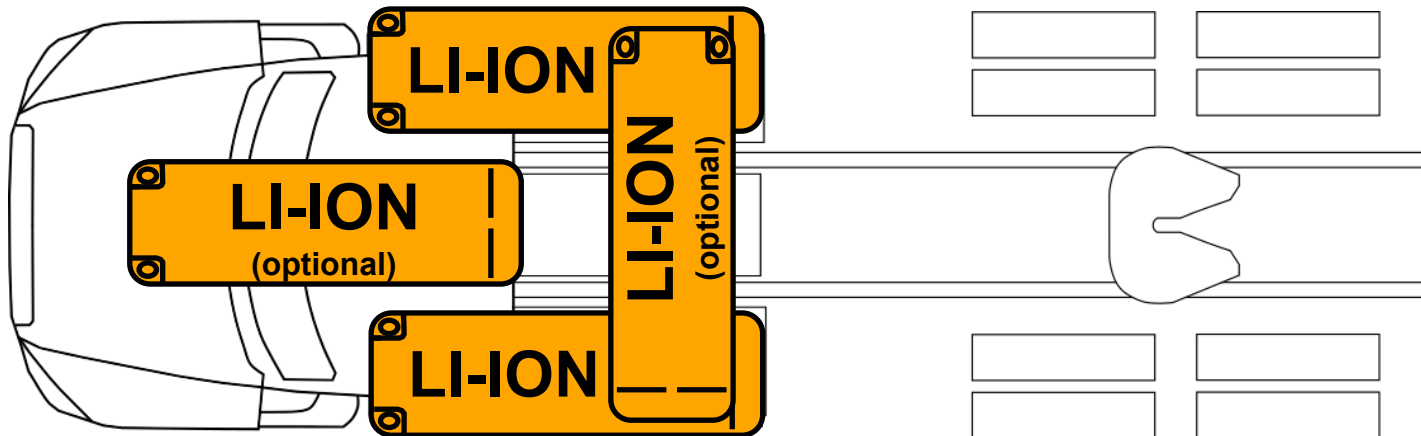


High Voltage Battery Locations

- !** Air tanks and system hoses may have an air pressure of 100-130 psi (689-897 kPa).
 - !** High voltage components are cooled with a glycol-based automotive coolant. This liquid is red in color and may leak if components are damaged.
- Please contact local and state authorities for more information regarding proper response and clean up of hazardous materials.

6. In Case of Fire

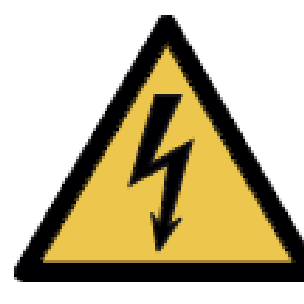Warning: Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus. Warning: Treat fires involving charging stations as energized fires until power to the charger can be shut down. Warning: There is always risk of reignition	
Use Large Amounts of Water to Extinguish Li-ion Fires	Do Not Use Wet Foam
Hazardous to Human Health: • May cause an allergic skin reaction. • Do not breathe dust, fumes, gas, mist, vapors, or spray.	Flammable Components
Explosion Hazard: • Explosive gas could accumulate. • Move truck outside building after extinguishing fire.	Corrosives: • Causes skin burns and eye damage.
High Voltage (650 V): • CAT III (1000 V) rated gloves required for exposed HV parts.	Check Li-ion Battery Pack for Unexpected Rising Temps with Thermal Imaging Camera (TIC or IR Gun)

7. Water Submersion

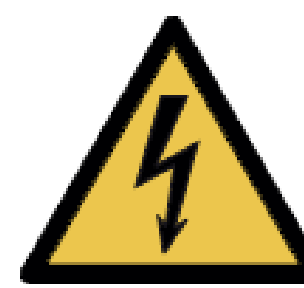	• If no High Voltage part damage exists; remove the truck from the water; let the water drain; follow Section 3 (Disable Direct Hazards); and do not attempt to drive. • Refer to section 8 for transportation or towing of the vehicle.
---	--

8. Towing / Transportation / Storage

Towing/Transport

Towing Method	• Follow Section 3 (Disable Direct Hazards). • Use Lift Points in Section 2: Immobilization and the rescue sheet. • Put the transmission in neutral to avoid damaging the eMotor. • If high voltage components were damaged or submerged, transport the truck with all wheels on a trailer. Do not attempt to drive. • If high voltage components were NOT damaged or submerged, remove drive axle shafts, and tow as defined in operator's manual (propulsion motor not spinning). • Emergency: If responders are unable to safely reach the drive axle shafts for safe towing, in an emergency, the truck can be moved at max 1.5 mph (2.4 kph) for max ½ mile (0.8 km). Once in a safe location, use Thermal Imaging Camera to check battery temps, remove drive axle shafts, and tow as defined in operator's manual.
---	---

Storage

	• After towing, store outdoors 50 feet (15 m) away from other equipment/structures and routinely check the battery pack for rising temperatures with a Thermal Imaging Camera.
---	--