
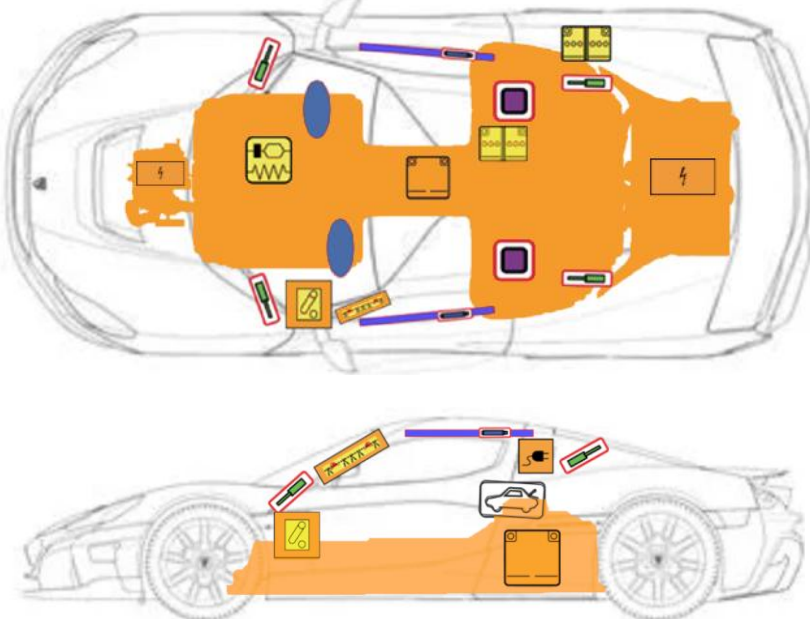


	Bugatti Rimac Nevera R 2-doors Coupe (2025-)								
									
									
Legend									
	Airbag		SRS control unit		Stored gas inflator		Seat belt pre-tensioner		Gas strut/preloaded spring
	Battery low voltage 12V and 48V		Battery pack, high voltage		High-voltage power cable		Cable cut		Disconnect high voltage via low voltage
	Trunk open		High-voltage component		Charging port				

	ID N° V39-BR-ELEC-P-0018	Version N° 1.0	Version Date 29.09.2025	Page 1/4
--	-----------------------------	-------------------	----------------------------	-------------

1. Identification / recognition

Unique Nevera R emblem on the passenger and driver side:

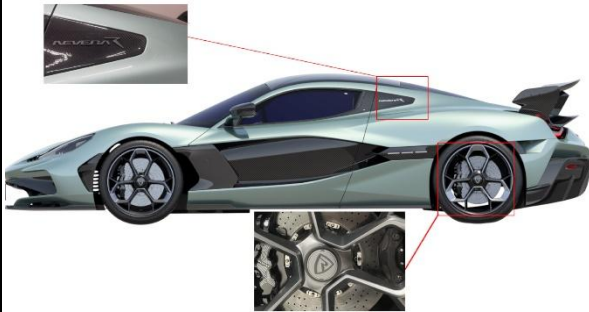

Brand emblem on all wheels



Brand emblem on the front of the car Brand name on the back of the car

2. Immobilisation / stabilisation / lifting


Immobilisation:

1. Locate the gear selector knob (1)
2. Press the gear selector to turn OFF the powertrain system (2) and the parking brake is automatically applied.



Lifting:

1. Disconnect charging cable, even if charging is not in progress.
2. Use suitable lowered hydraulics jacks to raise the car. The position of the lift points is marked with the green rectangle and blue circles.

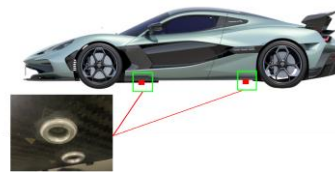

3. Disable direct hazards / safety regulations



Nevera R is equipped with a special pyro fuse that disables HV when an airbag or seatbelt pretensioner is deployed. Triggered pyro-fuse allows safer conditions for the occupants' egress as well as the first responders intervention.

MAIN METHOD:

1. Unplug from any charging equipment.
2. Open the driver's door.
3. In the driver's cockpit, on the left side, find the HV safety switch. PULL UP the HV safety switch. After PULLING UP the switch, active and passive discharge of the HV systems is started.



Switch pushed DOWN
HV connected




Switch pulled UP
HV disconnected

ALTERNATIVE METHOD:

This method shall be applied in case of a severe accident when the driver's cockpit is damaged.

1. Unplug from any charging equipment.
2. Cut the A-pillar on the driver side as it is marked on the picture.
3. Cutting the A-pillar cut the low-voltage wire causing an automatic disconnect of the high-voltage system. After cutting off, active and passive HV discharge is started.

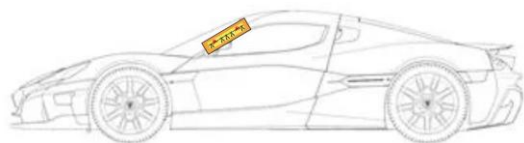

The minimum time to wait until the HV system is passively discharged is **10 minutes**. DO NOT start performing any work or be in the vicinity of the vehicle until the high voltage is completely discharged.



ID N°	Version N°	Version Date	Page
V39-BR-ELEC-P-0018	1.0	29.09.2025	2/4

4. Access to the occupants


The vehicle monocoque and exterior panels are made from carbon fiber. Carbon fiber is more difficult to cut than steel or aluminum. Special equipment may be necessary to cut into the vehicle.

The doors can be opened from the exterior by using the electric door button release pad (01). In a case of an accident when vehicle power is disabled, break the side window to gain access to the interior mechanical door release handle (02). Door can be also opened by using key blade from the outside (1).

All windows are made of laminated safety glass.

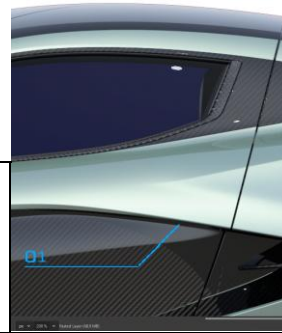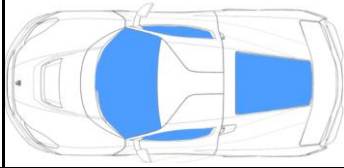

02

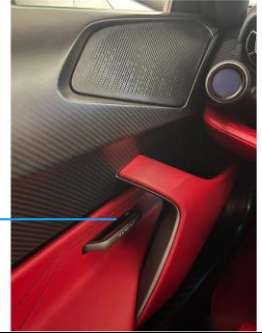

5. Stored energy / liquids / gases / solids



Steering wheel is magnesium alloy.



High-voltage energy should be contained within the Li-ion battery pack when possible. Do not discharge.



6. In case of fire

DO NOT cut any hazard areas shown on page 1. Also avoid cutting brake lines, coolant lines, or coolant tanks.



At the first sign of thermal activity, apply a large volume of water. Misting is recommended for effective cooling.



WARNING: Gaseous emissions from a thermally active, damaged lithium-ion battery may include hydrogen, which can form explosive mixtures when combined with oxygen in the air.



WARNING: Gaseous emissions from a thermally active lithium-ion battery may include hydrogen fluoride. When combined with moisture in the human body, it forms an acid that can cause chemical burns, respiratory distress, severe injury, blindness, or death.

Open all doors and remove all the glass at once to ensure maximum ventilation.



WARNING: Delayed ignition or re-ignition may occur. Continuously monitor for thermal activity during response operations using an infrared thermometer or equivalent device.



7. In case of submersion

After removing the vehicle from the water, disable the HV system (see Section 3) and drain the water. Wear proper PPE.



A vehicle with impact damage poses an increased risk of electric shock. If high-voltage components are exposed to the environment, keep a safe distance from the damaged areas.



In salt water, chlorine may form at concentrations that can be corrosive and potentially harmful to human health.

ID N°	Version N°	Version Date	Page
V39-BR-ELEC-P-0018	1.0	29.09.2025	3/4

8. Towing

POST-ACCIDENT: Vehicle cannot be driven if airbags are activated.

Towing instructions:

1. Start the vehicle.
2. Enter towing mode by pressing brake pedal and hold, push the gear selector button for 10 seconds and release the button and brake pedal. This will disengage the parking brake. Be aware that the vehicle can roll away causing potential injuries or possible death.
3. Unhook the cap on the front or rear bumper (where provided) pressing on the upper part.
4. Take the tow hook from its housing in the boot tighten the vehicle's tow hook in its place.
5. Transport on flatbed or trailer ONLY.
6. Leave vehicle with parking brake activated or chock wheels if not secured otherwise.



WARNING: Rotating the wheels may generate high voltage or cause unexpected movement.



Monitor for thermal activity or fire during transport and storage. Store outdoors, away from other vehicles and air inlets to occupied structures.

If the vehicle has been involved in an accident or suspects in HV battery damage, deactivate the high-voltage system as it is described in Section 3.

Collect spilled fluids and prepare them for disposal according to the following guidelines:

Collect any spilled battery coolant or electronic system coolant using standard procedures for handling glycol/water mixtures.

Absorb spilled hydraulic oil, transmission lubricant using proper absorbent materials. Use detergents to clean affected masonry surfaces. Collect any contaminated soil for disposal following applicable local regulations.

Use a neutralizing absorbent to collect spilled electrolyte, which has highly acidic sulfuric acid. Do not manage the electrolyte or any contaminated materials without wearing proper chemical-resistant protective equipment.

All debris must be collected and disposed of in an environmentally responsible manner. Avoid skin contact with the internal components of the battery pack. Electrolyte leakage from the lithium-ion battery is unlikely; any observed fluid is most likely glycol-water coolant.

9. Important additional information

STOP HV charging:

1. Press the stop charge button on the central display charging screen or use the long key press on fob button (6) or the mobile app.
2. Ensure that the charge connector lock is not engaged and remove the charging connector.



ID N°	Version N°	Version Date	Page
V39-BR-ELEC-P-0018	1.0	29.09.2025	4/4