

# **TICO**

## **ELECTRIC**




**Pro-eSPOTTER**

**Model Year 2026**



## **Emergency Response Guide**

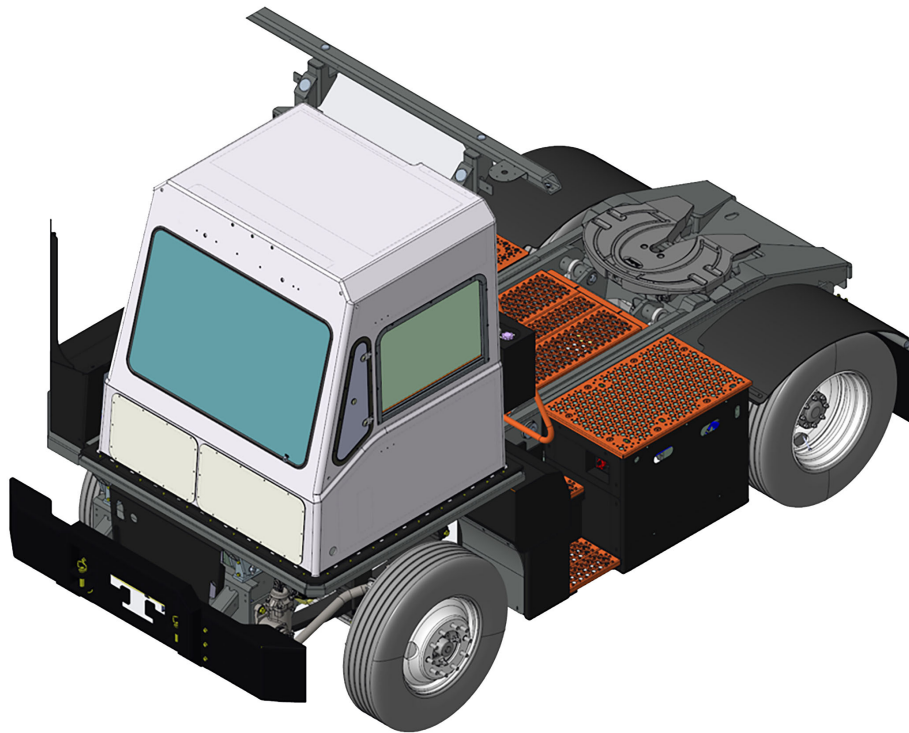

Intentionally Left Blank Page

---

|                                                     |                |
|-----------------------------------------------------|----------------|
| <b>0. Rescue Sheet</b>                              | <b>Page 2</b>  |
| <b>1. Identification / Recognition</b>              | <b>Page 6</b>  |
| <b>2. Immobilization/Stabilization/Lifting</b>      | <b>Page 7</b>  |
| <b>3. Disable Direct Hazards/Safety Regulations</b> | <b>Page 9</b>  |
| <b>4. Access to the Occupants</b>                   | <b>Page 12</b> |
| <b>5. Stored Energy/Liquids/Gases/Solids</b>        | <b>Page 17</b> |
| <b>6. In Case of Fire</b>                           | <b>Page 20</b> |
| <b>7. In Case of Water Submersion</b>               | <b>Page 21</b> |
| <b>8. Towing/Transportation/Storage</b>             | <b>Page 22</b> |
| <b>9. Important Additional Information</b>          | <b>Page 25</b> |
| <b>10. Explanation of Pictograms Used</b>           | <b>Page 26</b> |

## 0. Rescue Sheet

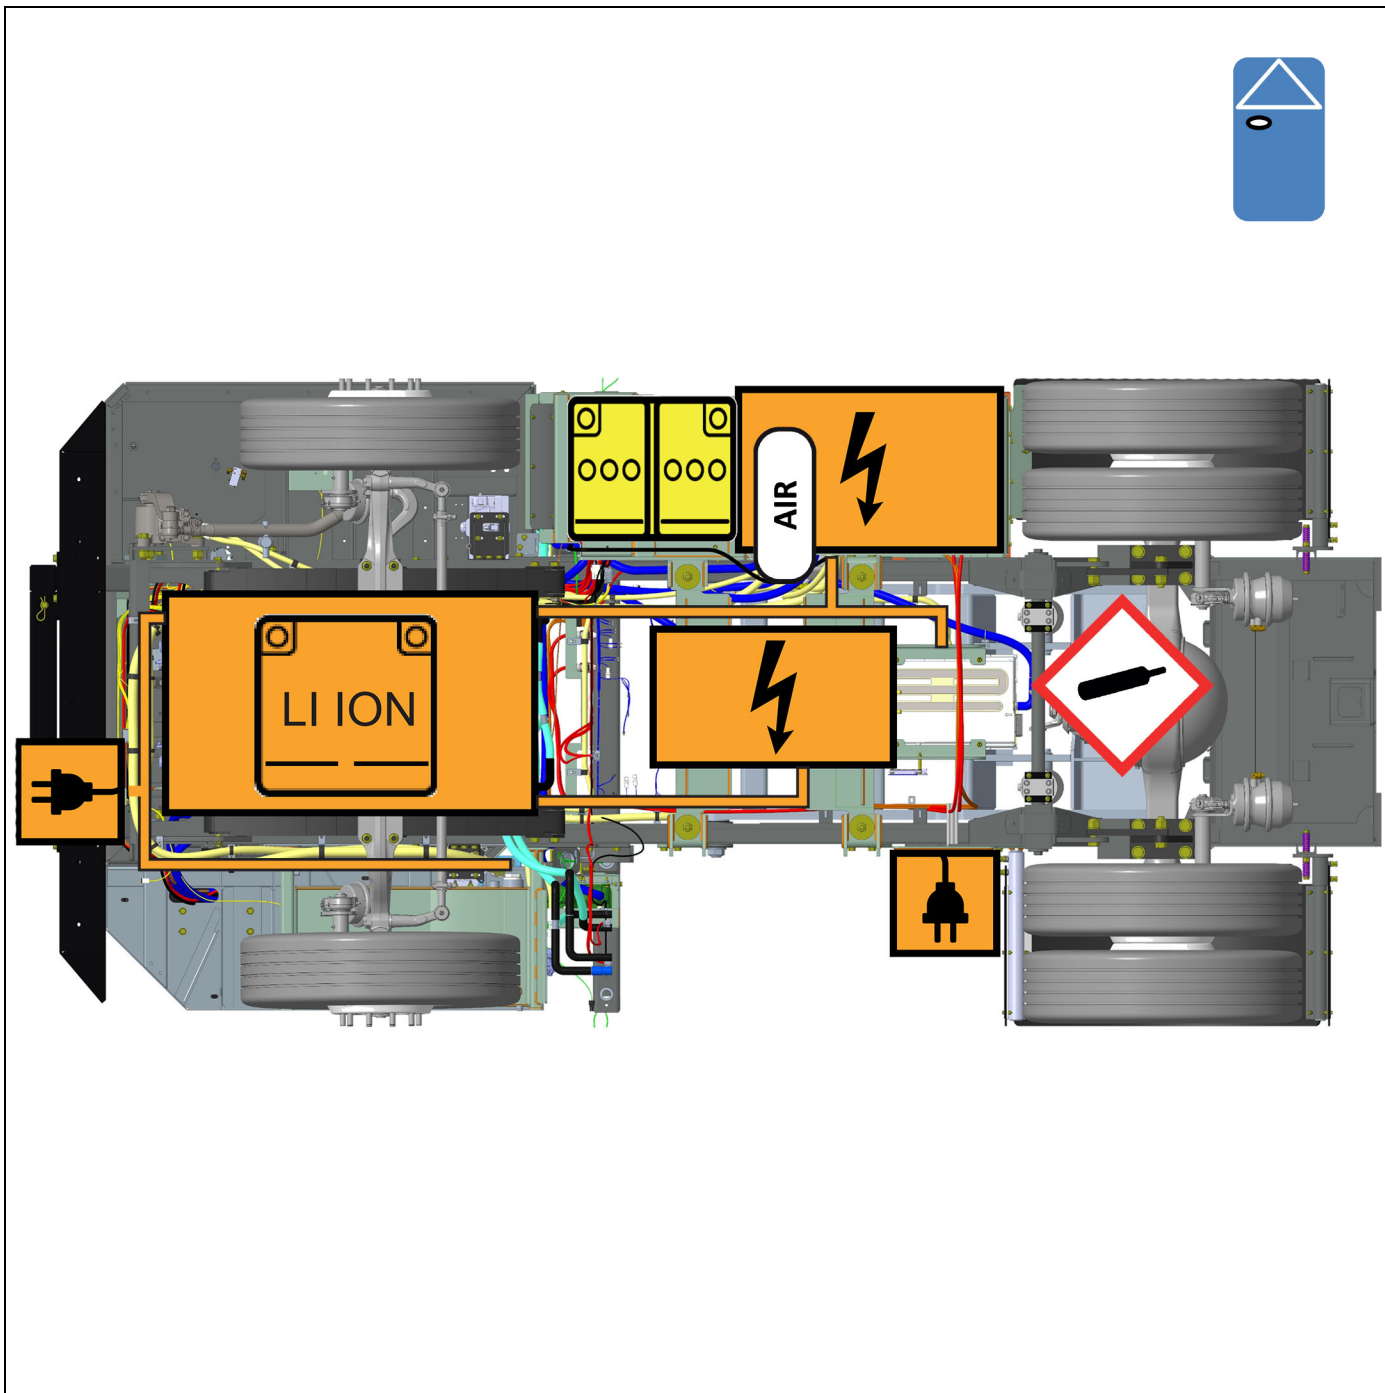


Figure 1-1: Bottom View

T0035

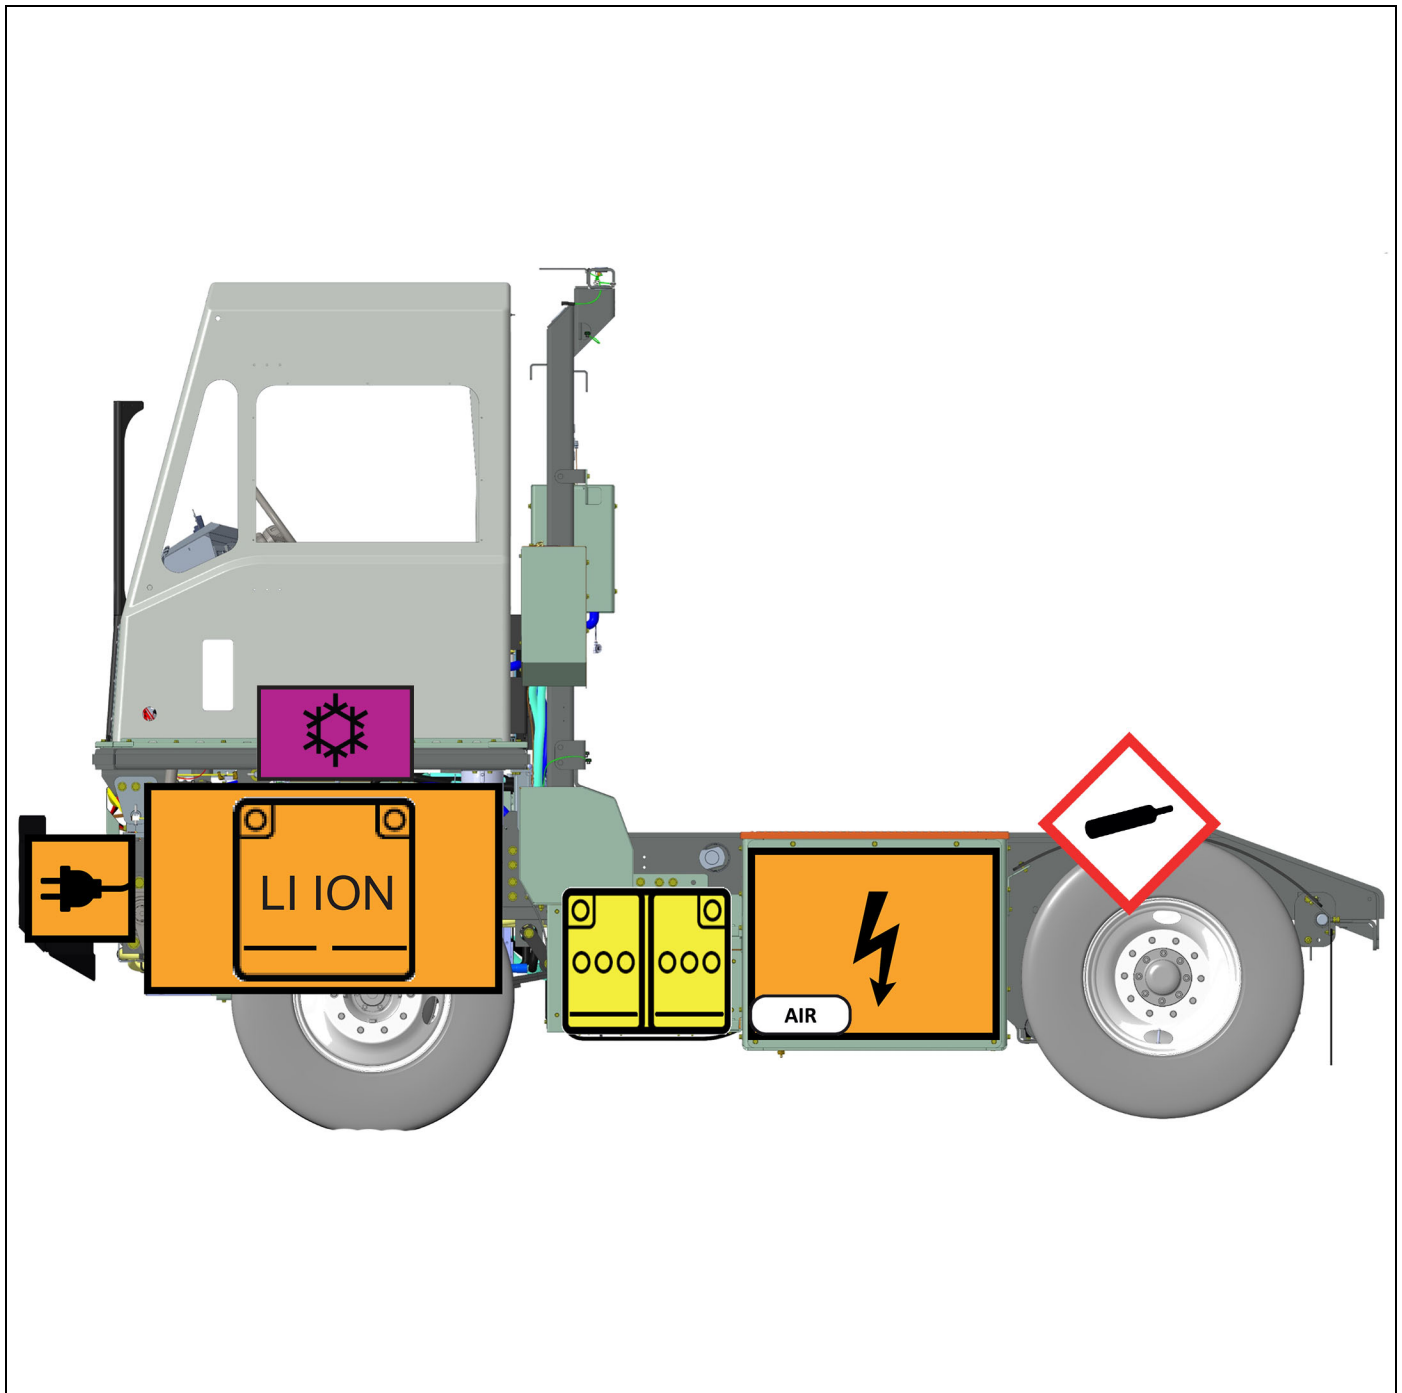


Figure 1-2: Left View

T0036




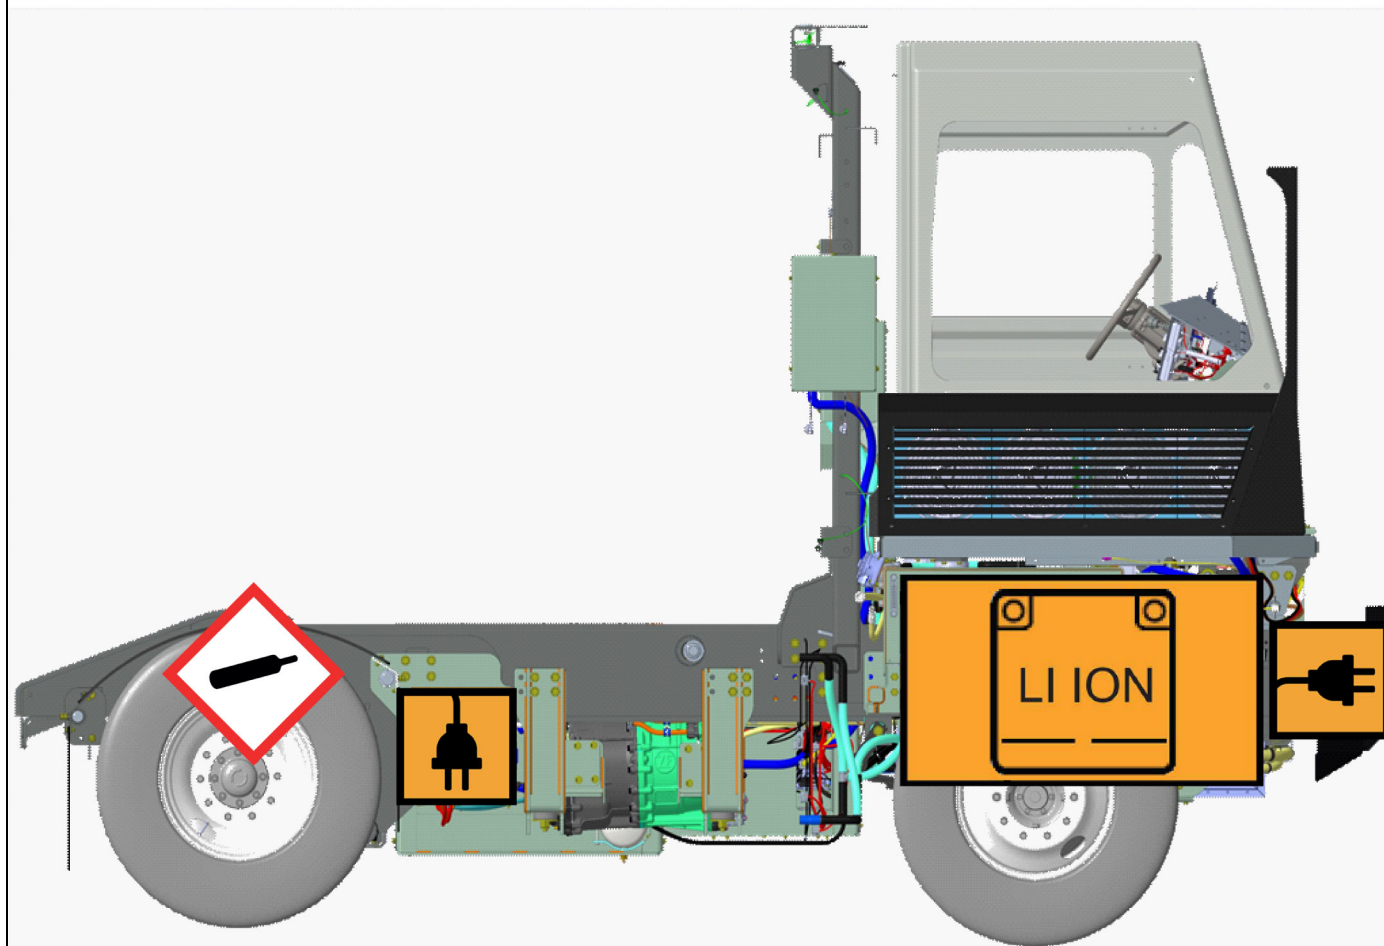


Figure 1-3: Right View

T0037

|                                                                                    |                                                                                    |                                                                                      |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|   |   |   |
| <b>High Voltage Component</b>                                                      | <b>Battery Pack, High-Voltage</b>                                                  | <b>Battery, Low-Voltage</b>                                                          |
|   |   |   |
| <b>High-Voltage Battery Cable</b>                                                  | <b>Charge Port</b>                                                                 | <b>Air Tank</b>                                                                      |
|  |  |  |
| <b>Air-Conditioning Component</b>                                                  | <b>Left Hand Drive</b>                                                             | <b>Gases Under Pressure (Hydraulics)</b>                                             |

## 1. Identification / Recognition

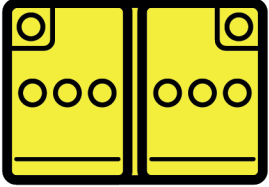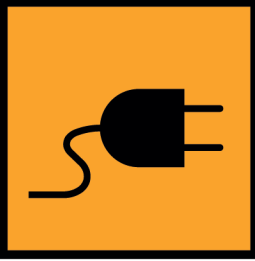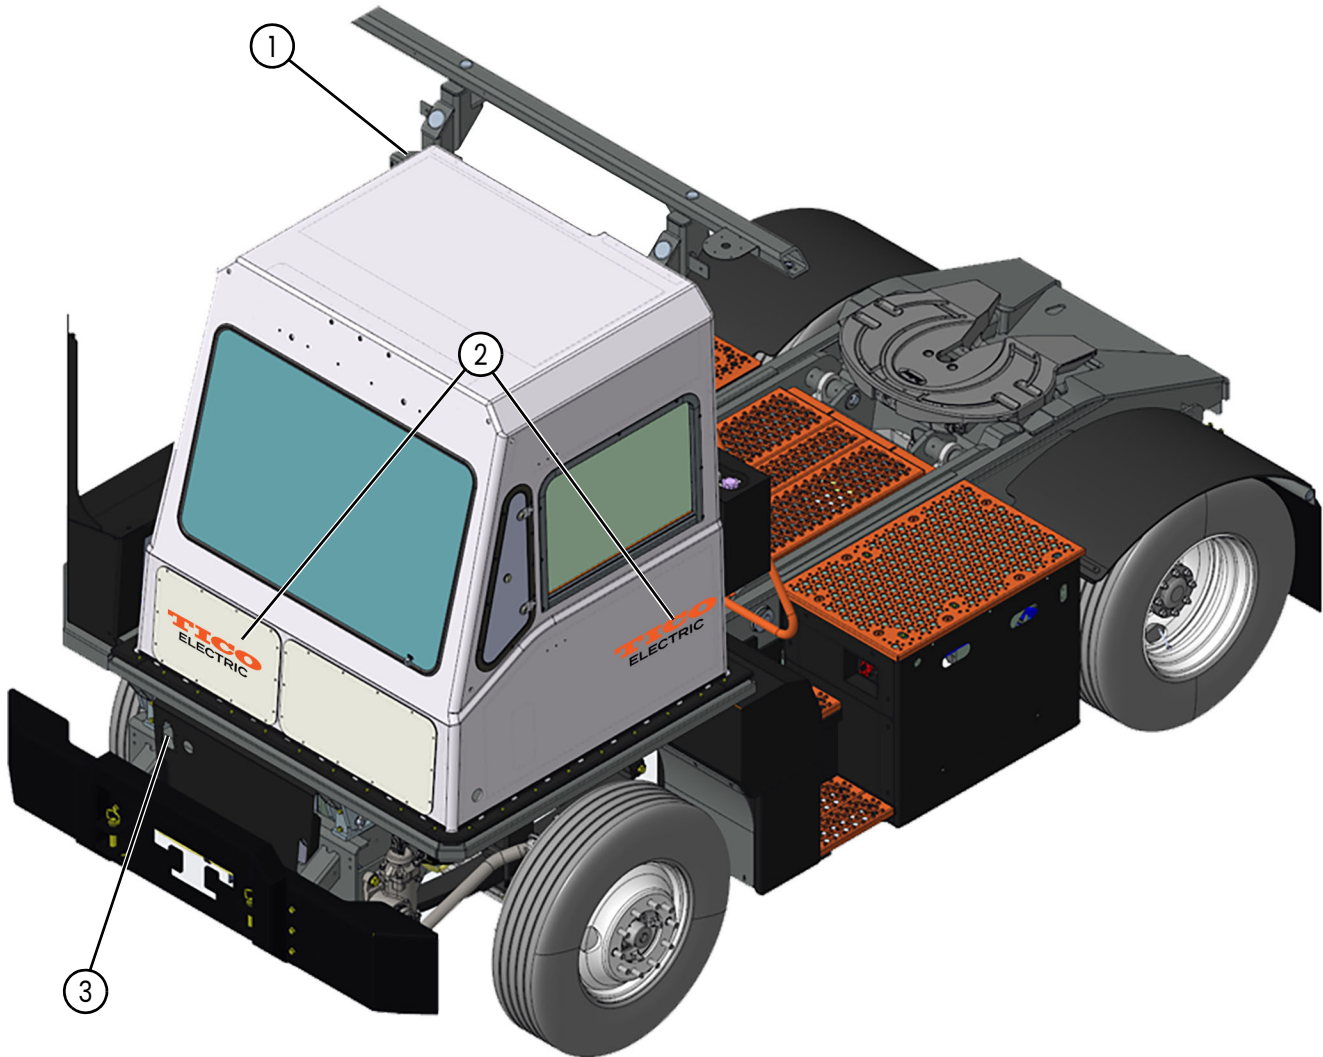

**Figure 1-4:**

T0047

- 1) No Exhaust Pipe
- 2) "TICO Electric" Badging

- 3) Charge Port

## 2. Immobilization/Stabilization/Lifting




**Always approach the tractor from the side to avoid the travel path. Movement is still possible despite the lack of engine noise.**



**Figure 1-5:**

T0035

1. Chock the wheels.
2. Apply the parking brake. (1)
3. Apply the trailer brake (if applicable). (2)
4. Shift the tractor into Neutral. (3)

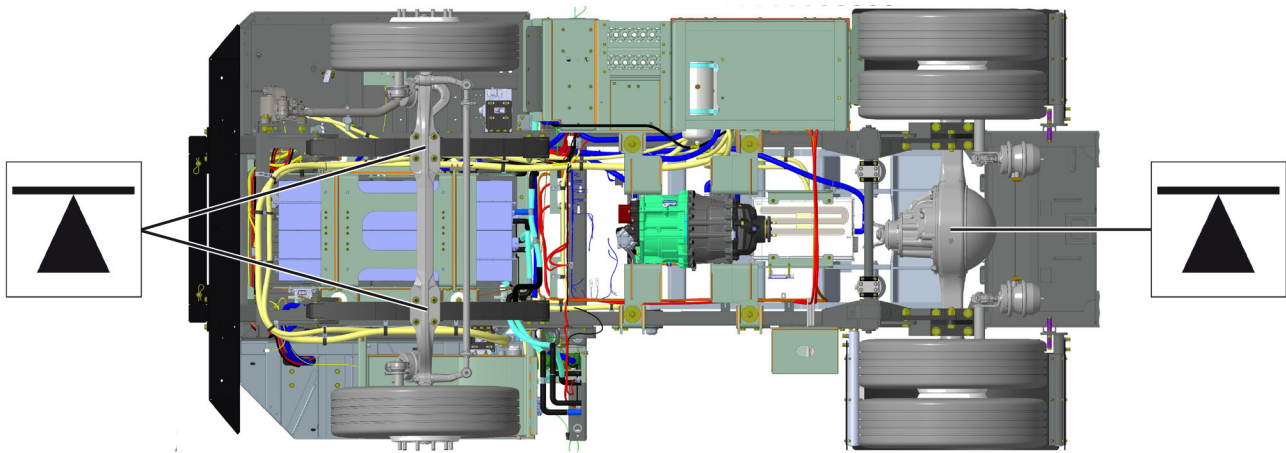

**Figure 1-6: Lifting Points**

T0029

### 3. Disable Direct Hazards/Safety Regulations

1. Turn the ignition switch to the off position and remove the key from the tractor.
2. Turn the low voltage master disconnect switch to the off position.
3. Turn the high voltage master disconnect switch to the off position.



T0046

Figure 1-7: Ignition Switch

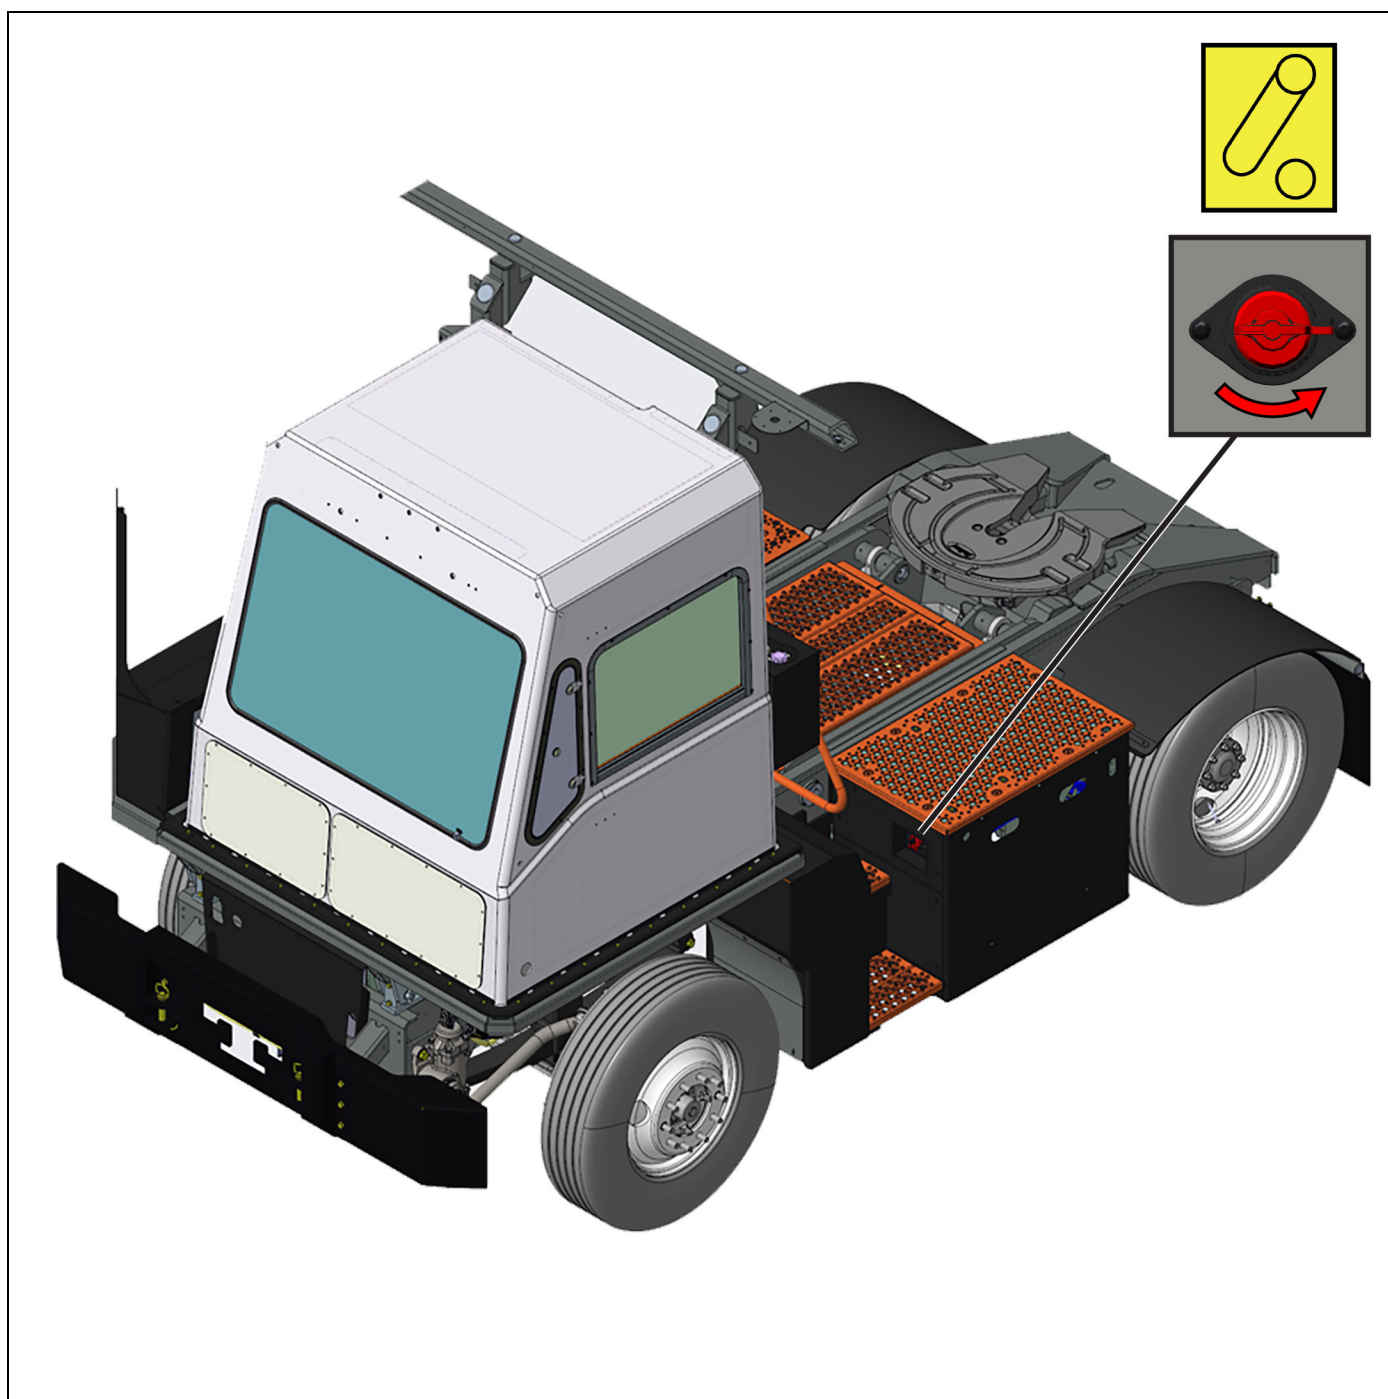


Figure 1-8: Low Voltage Master Disconnect Switch

T0032

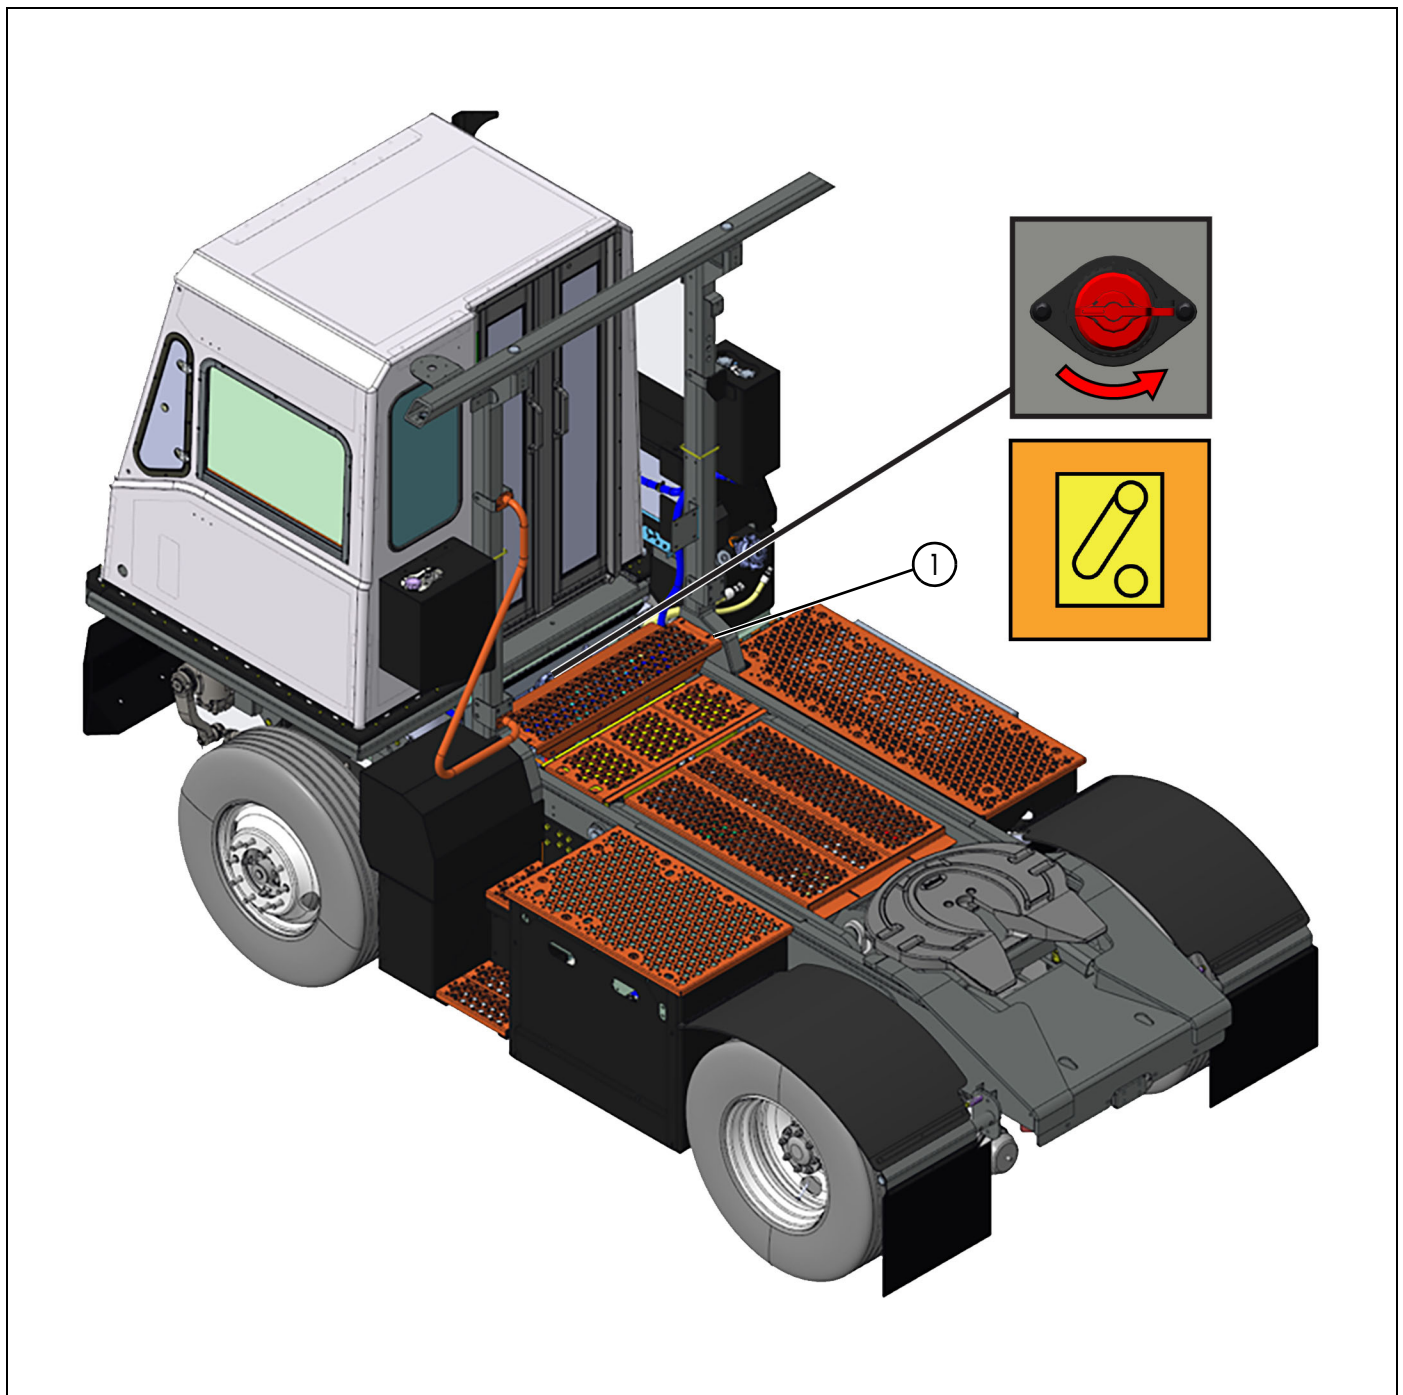


Figure 1-9: High Voltage Master Disconnect Switch

T0027



- The rear step plate behind the cab (1) must be removed to access the high voltage battery disconnect switch.
- Always assume the high voltage system is energized. Do not cut high voltage wires or touch high voltage components.

## 4. Access to the Occupants



Figure 1-10: Rear Door

T0016

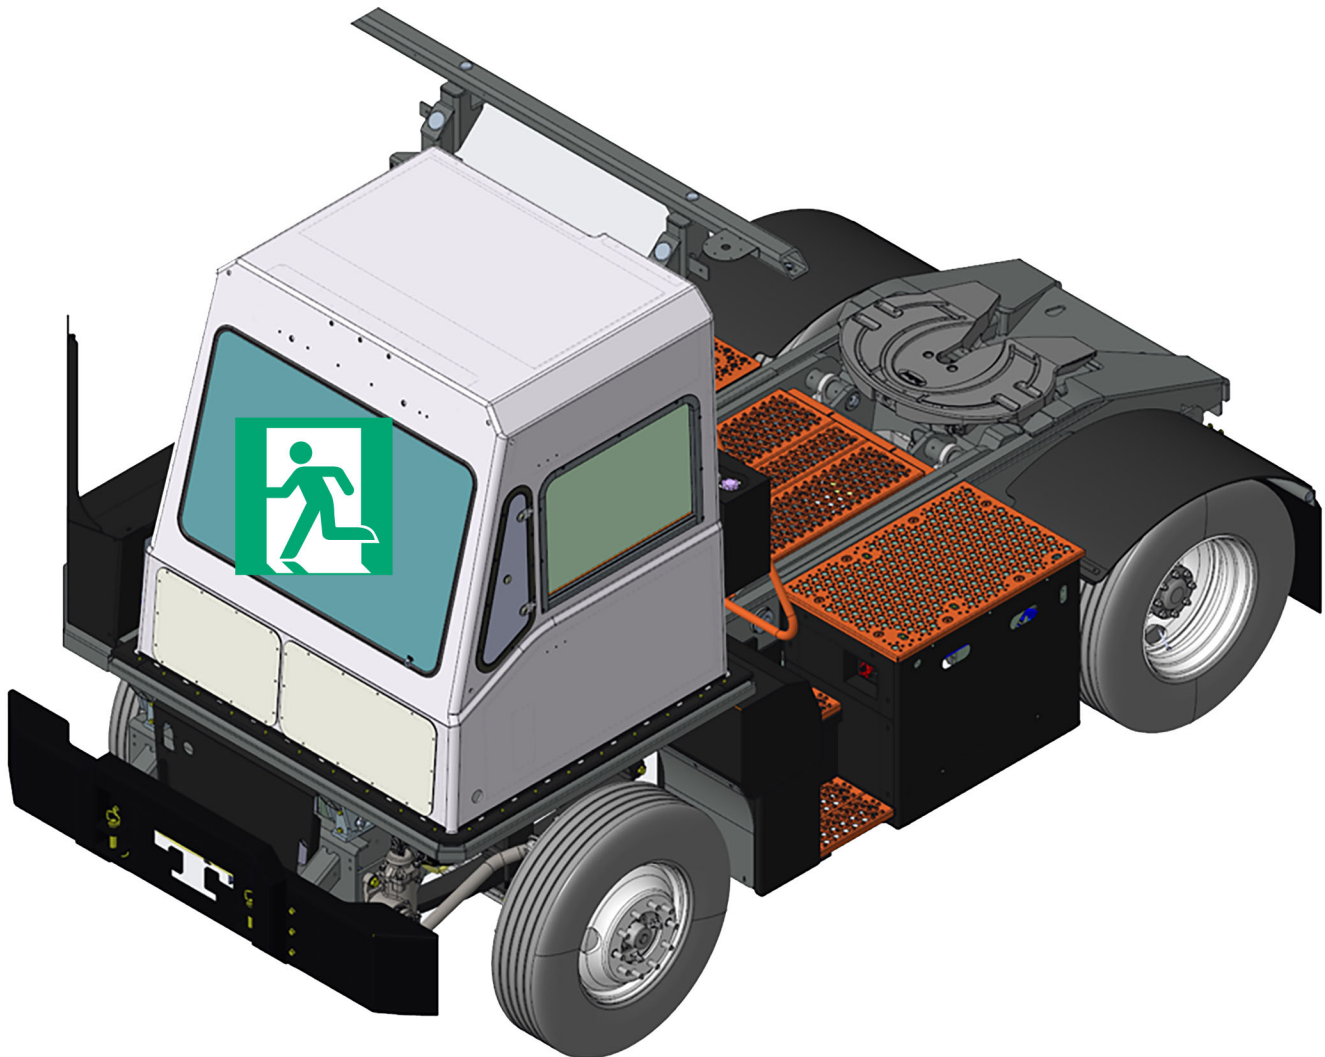


Figure 1-11: Door Override Switch

T0017



**When the tractor is on, the air system is pressurized and the doors must be actuated from inside the cab. Push the door override switch to release air pressure and allow the doors to be opened manually.**




T0018

**Figure 1-12: Windshield**



- The windshield can be forced outward from its frame to provide egress.
- The cab is constructed of fiberglass composite and contains no high-strength or ultra-high strength steel.

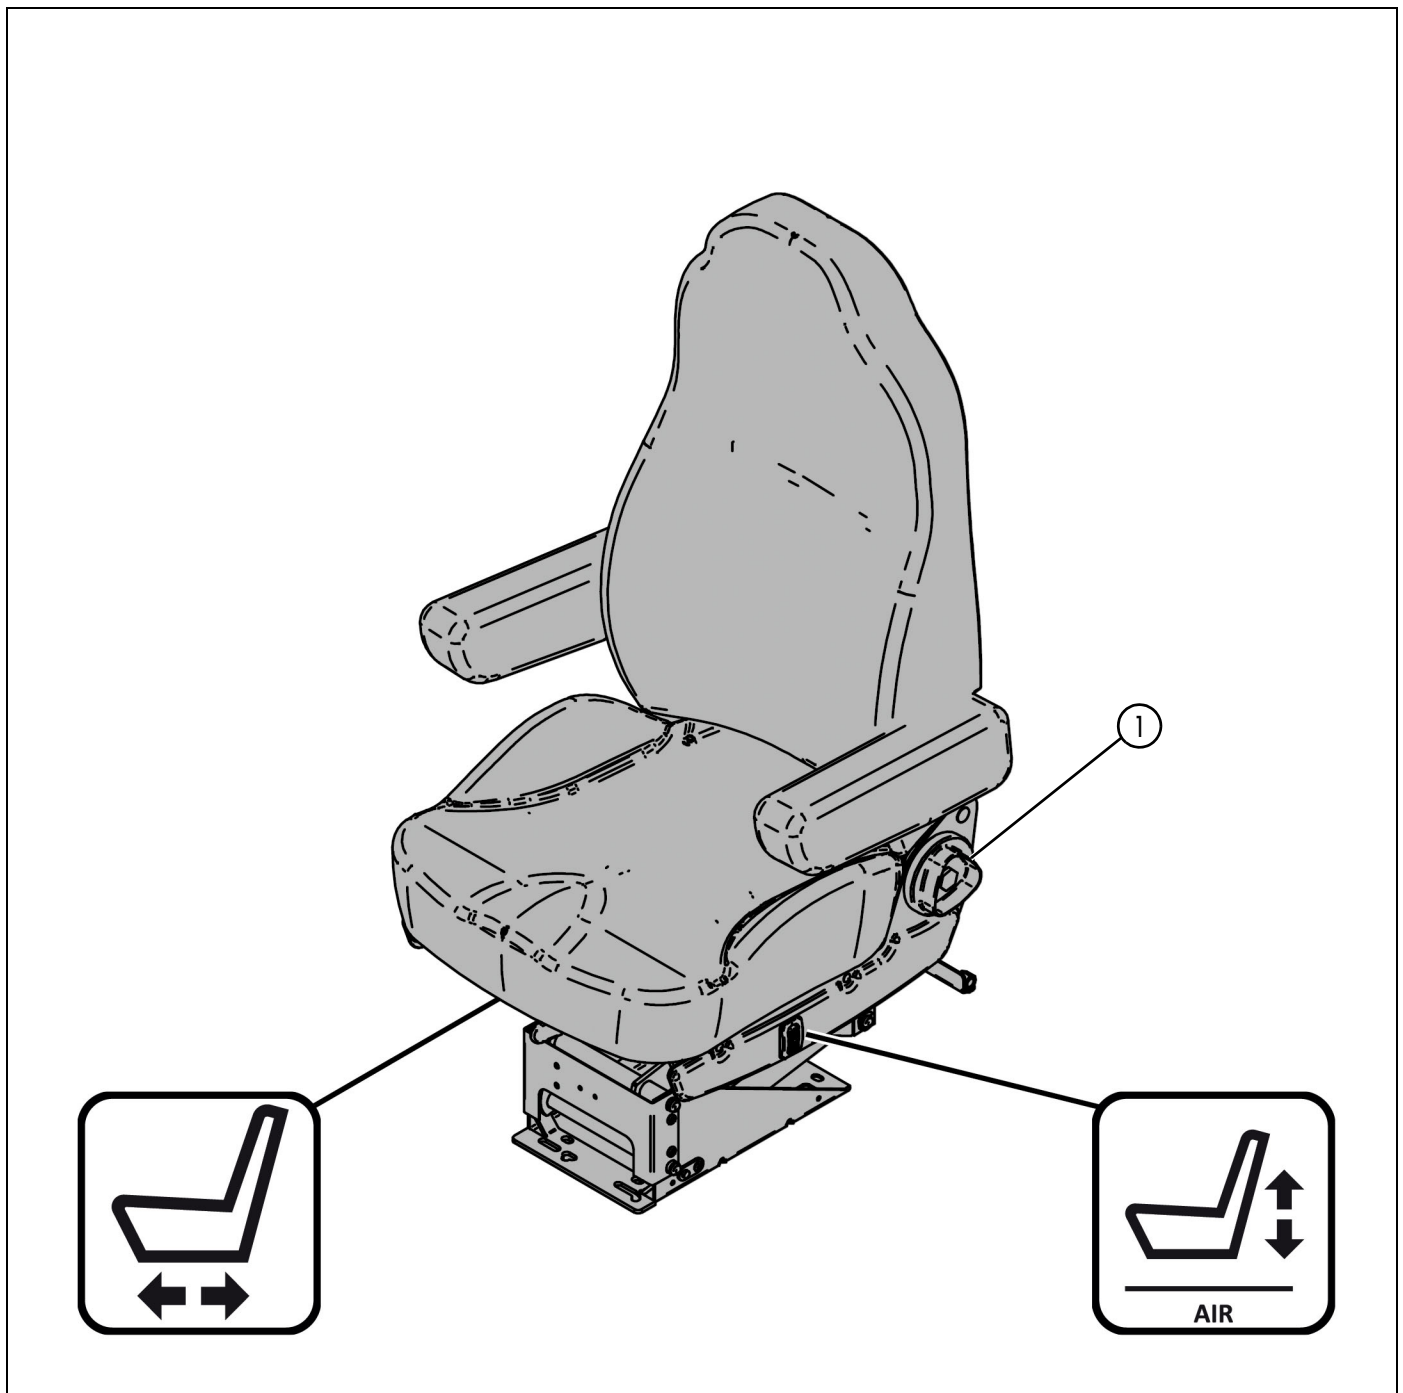

T0006

**Figure 1-13: Seat Adjustment**

- 1) Seat Recline Adjustment



**Figure 1-14: Steering Column Tilt Adjustment**

T0021

## 5. Stored Energy/Liquids/Gases/Solids

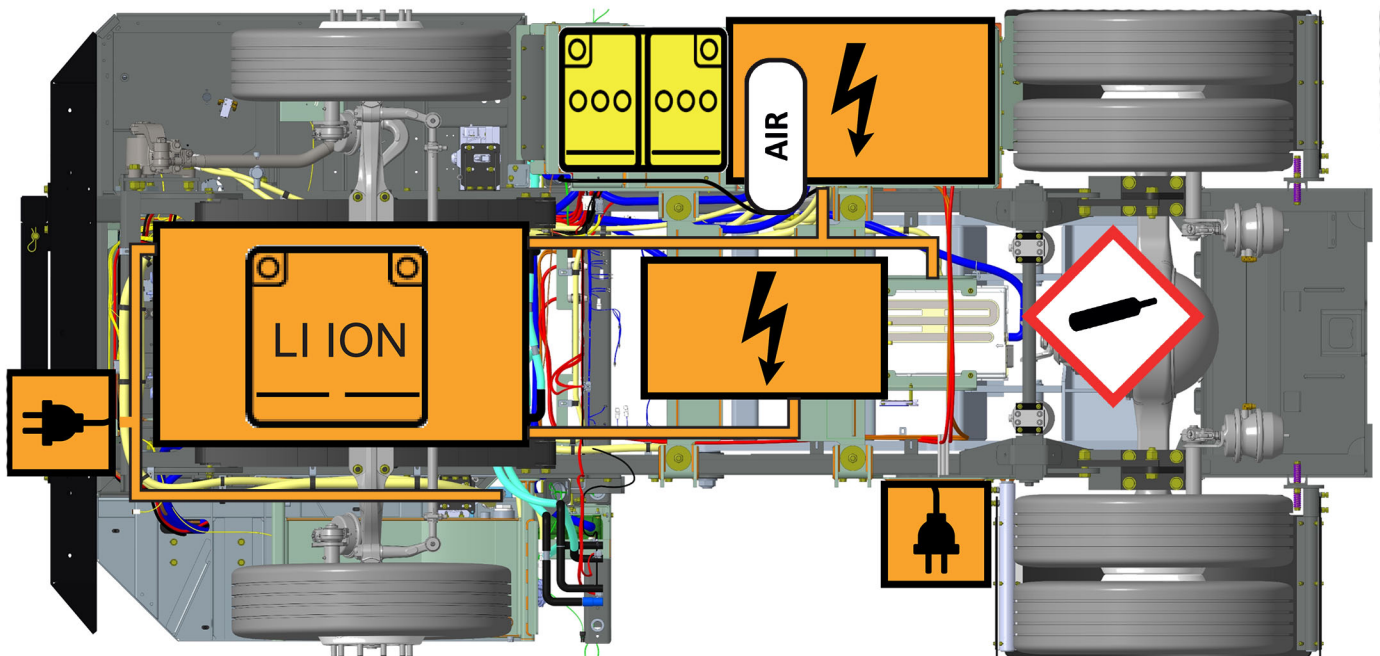


Figure 1-15: Bottom View

T0035

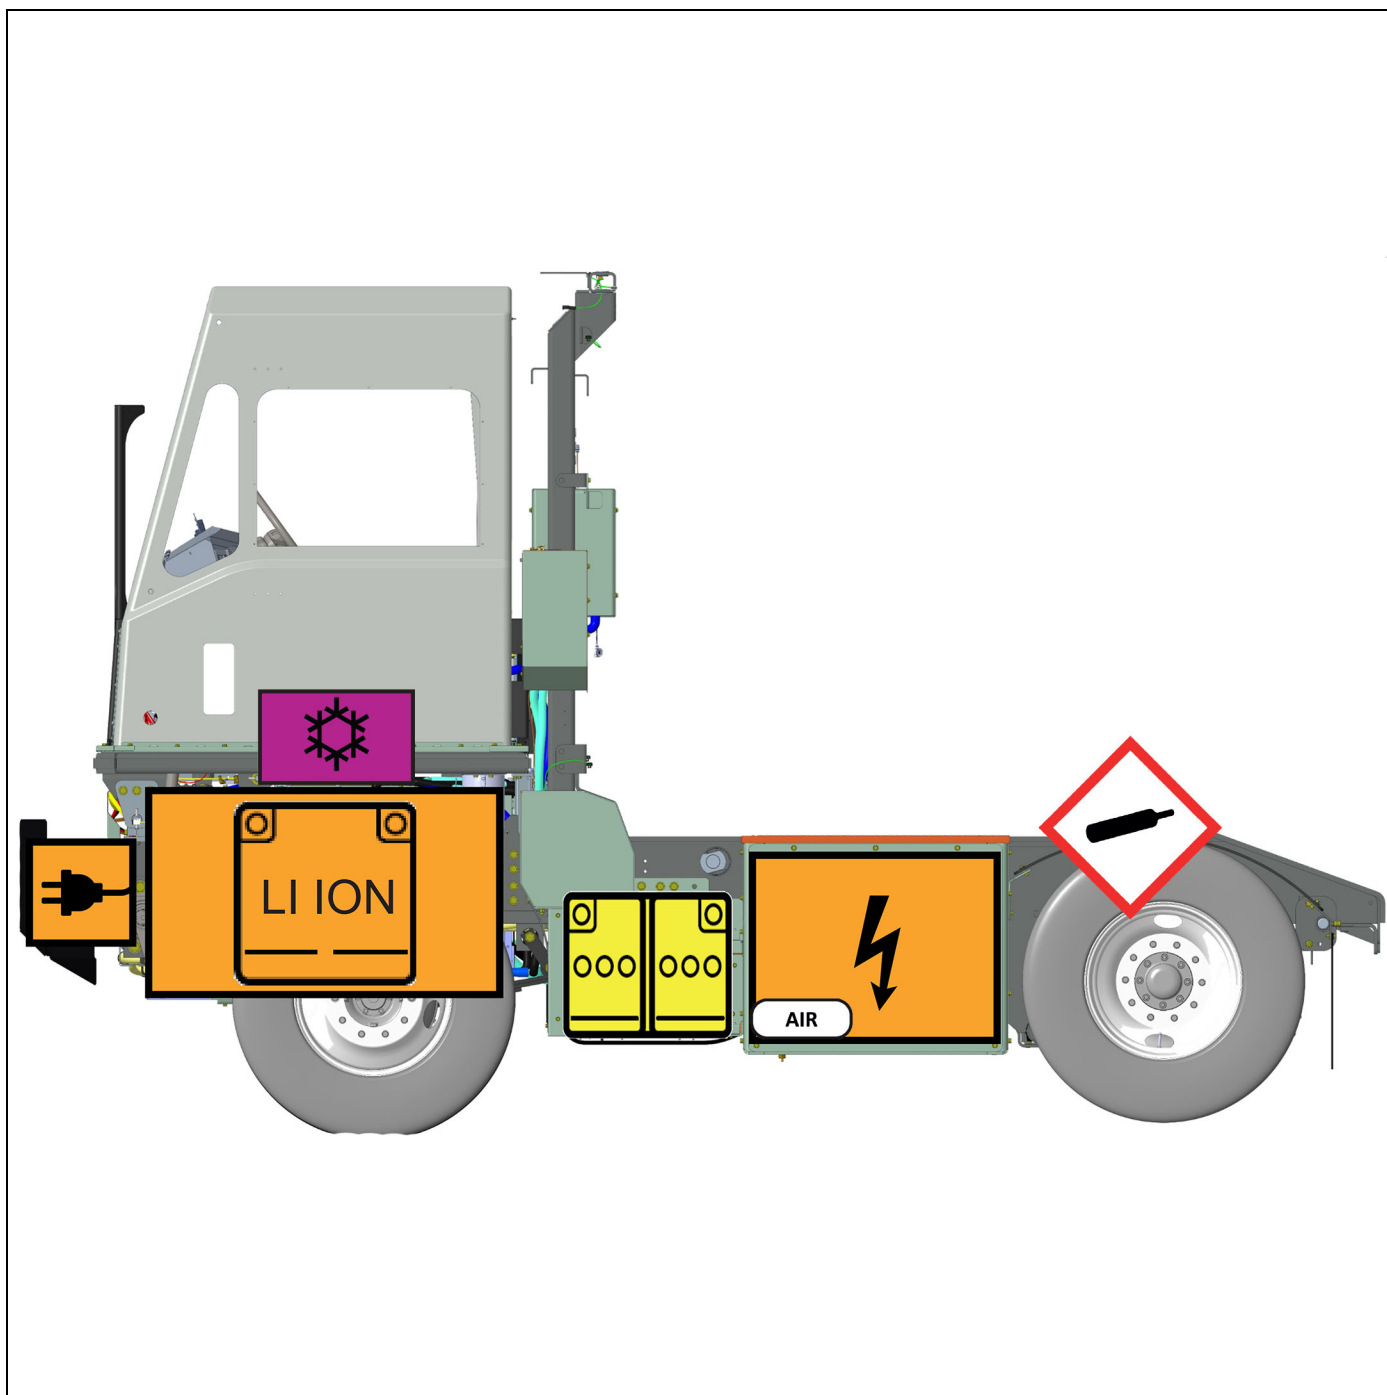


Figure 1-16: Left View

T0036



Figure 1-17: Right View

T0037

## 6. In Case of Fire



**Extinguish lithium-ion battery related fires using a large quantity of water.**



**If thermal runaway occurs, lithium ion batteries can release hydrogen fluoride. Use appropriate PPE.**



**Extinguishing a lithium-ion battery fire with water may produce hydrofluoric acid.**



**Monitor battery temperature with a thermal imaging camera. Make sure that the battery has cooled sufficiently and that temperatures do not increase.**


**An increase in temperature indicates potential thermal runaway. Check for hissing, popping, or smoke.**

## 7. In Case of Water Submersion



- A submerged tractor must only be approached by trained personnel wearing the required Personal Protective Equipment (PPE).
- Submersion can cause damage to electrical components. Avoid contact with high voltage system.
- Damage to a submerged tractor may not be visible.
- Disable all direct hazards if possible. See “3. Disable Direct Hazards/Safety Regulations”.


## 8. Towing/Transportation/Storage

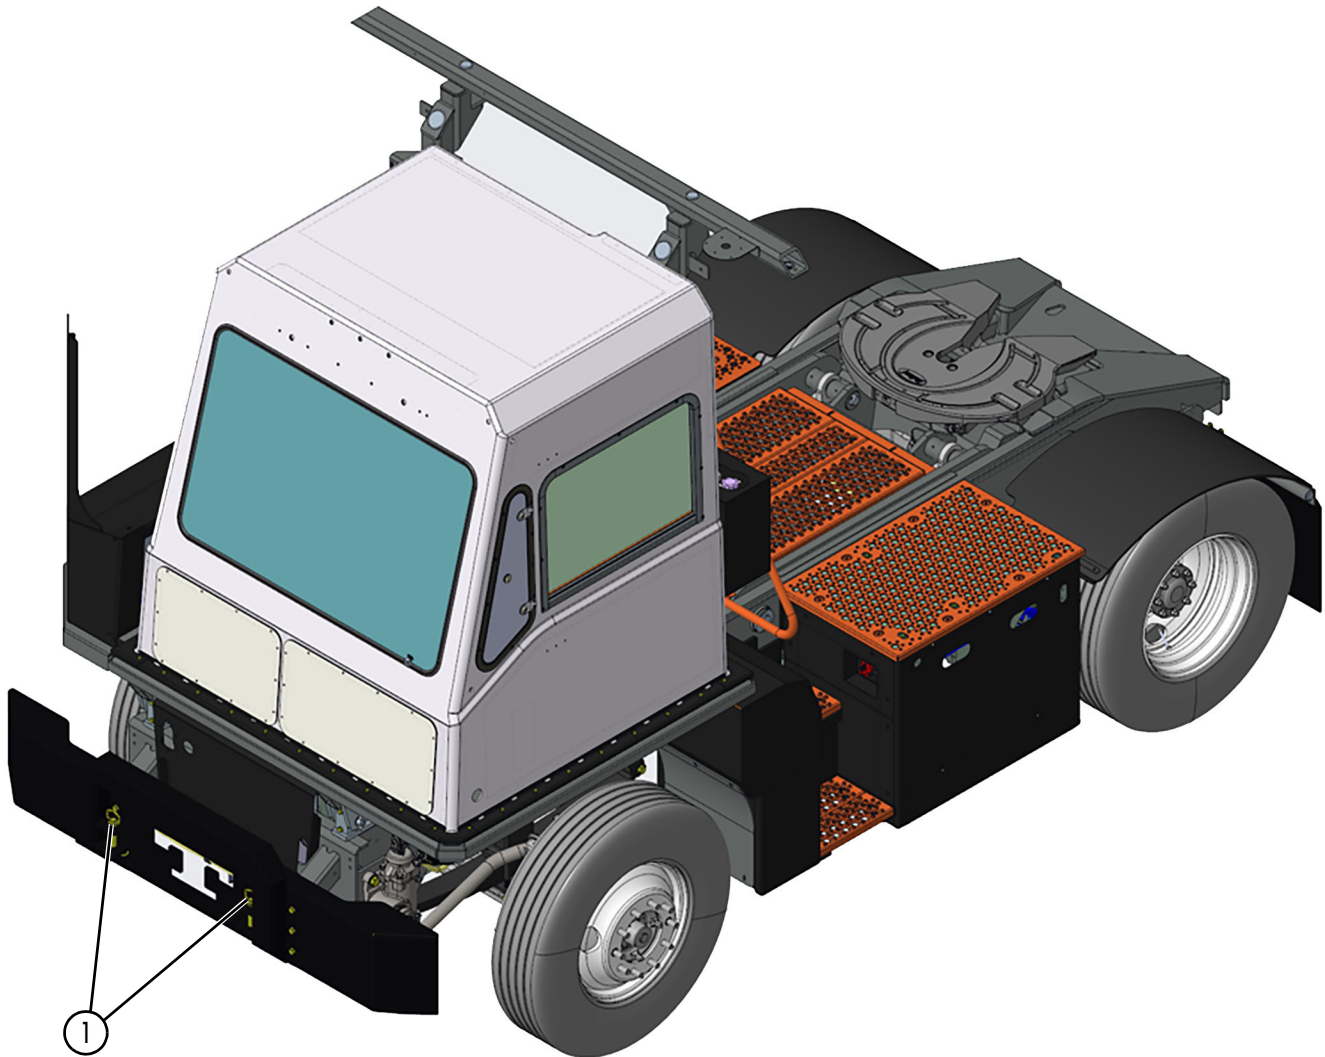

**Figure 1-18**

T0012

- 1) Front Tow Points

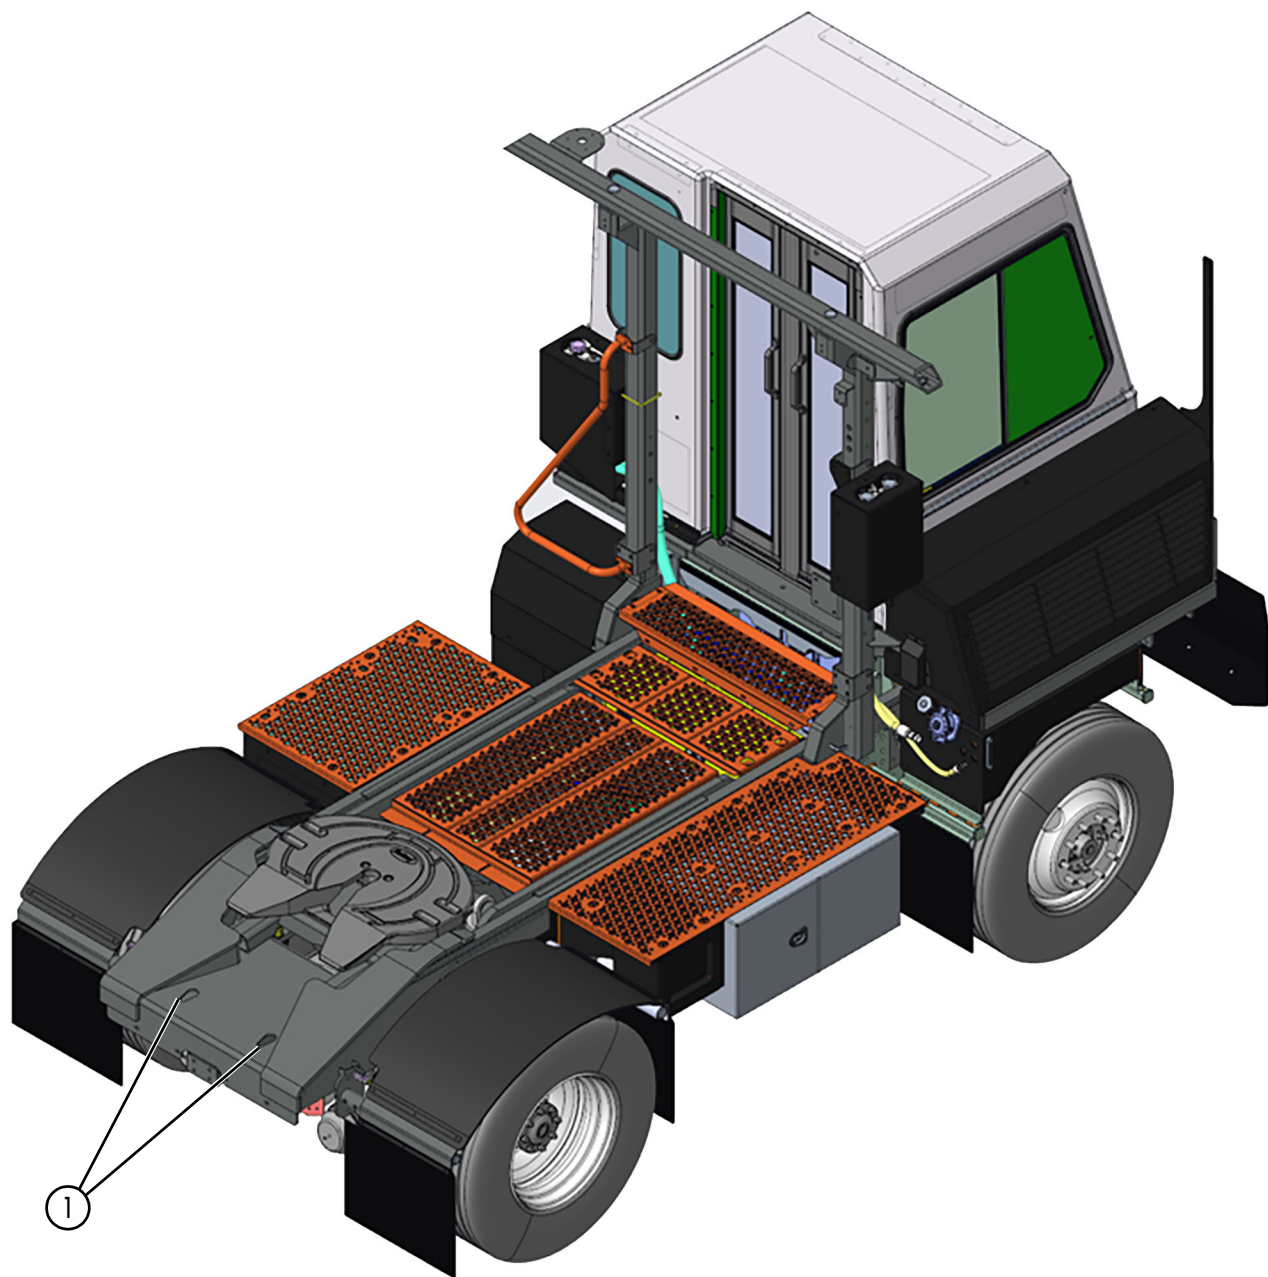**Figure 1-19**

T0011

1) Rear Tow Points



**Towing requires special equipment and training. TICO Manufacturing recommends using a professional service when towing a disabled tractor.**

### Towing the Vehicle

It is recommended to tow the tractor with the rear wheels suspended to prevent damage. This avoids the need to remove the rear axle shafts. Spring brakes must be caged if installed on the front wheels.

#### Towing the Vehicle (Front Wheels Suspended)



**It is not recommended to tow the tractor with the front wheels suspended. This may result in serious damage.**

If the tractor must be towed with the front wheels suspended:

- Always use a rigid towing bar or properly restrain the towed tractor. Towing the tractor using a chain or tow cable is not recommended.
- Always remove the axle shafts from the rear axles.
- Always cage spring/parking brakes to prevent the rear drive wheels from locking in the event of a loss of air pressure.

### Storing the Vehicle



**Damaged lithium-ion batteries can pose a risk of delayed fire. When parking a damaged tractor, maintain a safe distance from combustible objects, buildings, and other tractors**





**Monitor the battery temperature using a thermal infrared camera for 48 hours.**





## 9. Important Additional Information



- **Always assume the high voltage system is energized.**
- **Do not touch high voltage wires or components.**
- **Do not cut any orange cables or black cables with orange loom.**
- **Always use appropriate Personal Protective Equipment (PPE) when performing any operation on a damaged tractor.**

## 10. Explanation of Pictograms Used
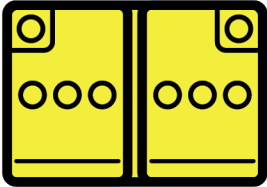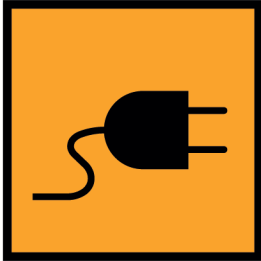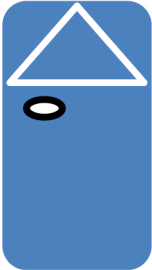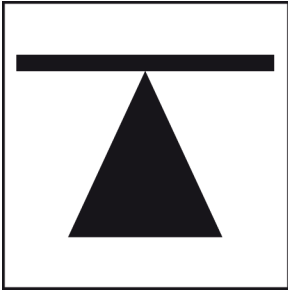
|                                                                                     |                                                                                     |                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|    |    |    |
| General Warning                                                                     | High Voltage Component                                                              | Battery Pack, High-Voltage                                                            |
|    |    |    |
| Battery, Low-Voltage                                                                | High-Voltage Battery Cable                                                          | Charge Port                                                                           |
|  |  |  |
| Air Tank                                                                            | Air-Conditioning Component                                                          | Left Hand Drive                                                                       |
|  |  |  |
| Air-Conditioning Component                                                          | Left Hand Drive                                                                     | Lifting Point                                                                         |
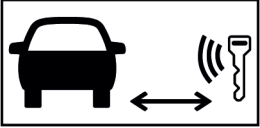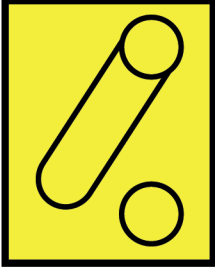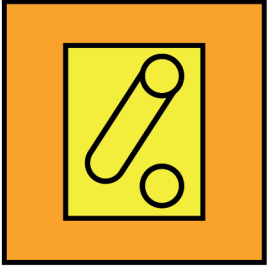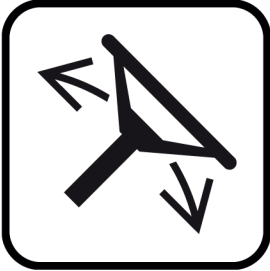
|                                                                                     |                                                                                     |                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|    |    |    |
| <b>Remove Key</b>                                                                   | <b>Low-Voltage Disconnect</b>                                                       | <b>High-Voltage Disconnect</b>                                                        |
|    |    |    |
| <b>Emergency Exit</b>                                                               | <b>Emergency Door Opener</b>                                                        | <b>Seat Height Adjustment (Air)</b>                                                   |
|   |   |   |
| <b>Seat Adjustment Longitudinal</b>                                                 | <b>Steering Wheel, Tilt Control</b>                                                 | <b>Gases Under Pressure (Hydraulics)</b>                                              |
|  |  |  |
| <b>Use Water to Extinguish Fire</b>                                                 | <b>Acute Toxicity</b>                                                               | <b>Corrosives</b>                                                                     |

10. EXPLANATION OF PICTOGRAMS USED

|                                                                                   |                                                                                   |  |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--|
|  |  |  |
| Use Thermal Infrared Camera                                                       | Battery Electric Vehicle                                                          |  |

Intentionally Left Blank Page

**TICO**

YOUR  
BEST  
MOVE.