



WORKHORSE™

First Responder Guide

Models

W4 CC

W750

Workhorse Technologies Inc.

3600 Park 42 Drive


Sharonville, OH 45241 Suite 160E


Call: 1-888-646-5205

document.control@workhorse.com



EXTRACTION INFORMATION

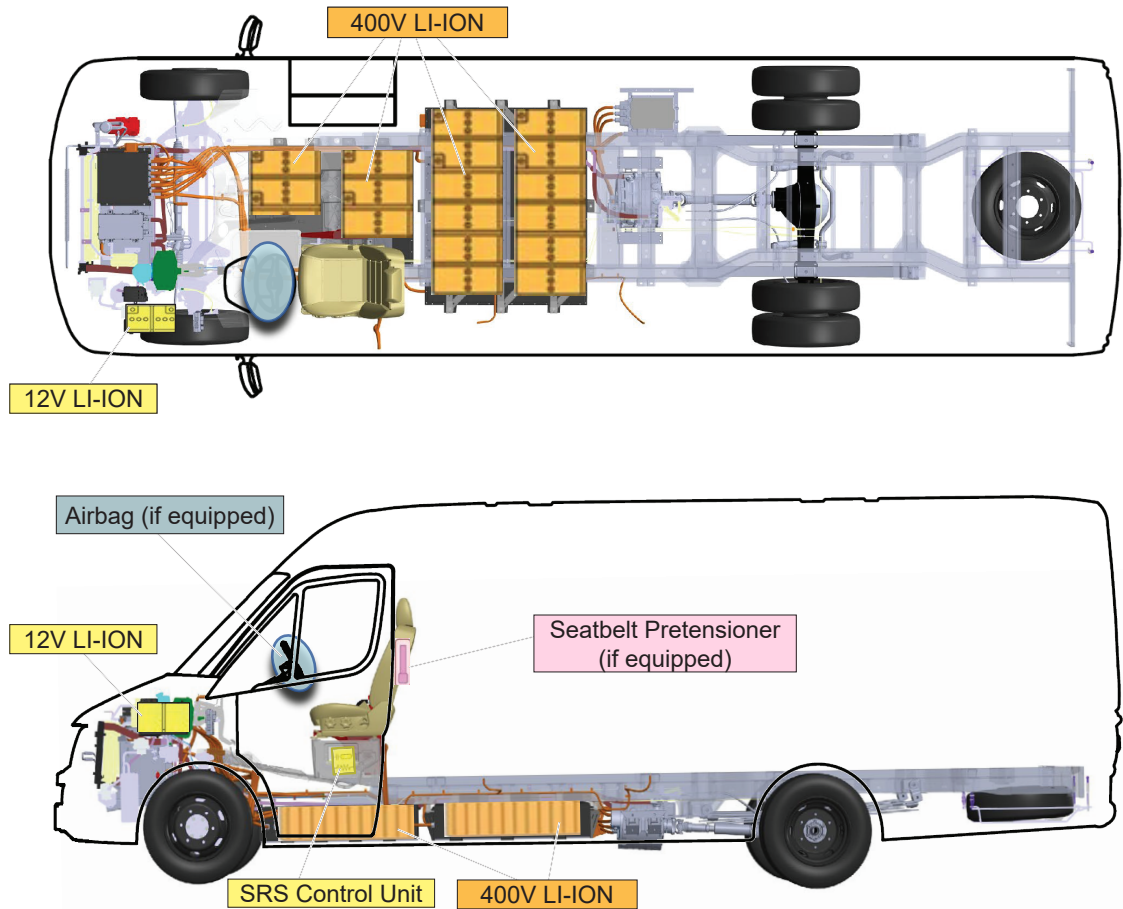

				
High Voltage Battery	12V Battery	Supplemental Restraint System Control Unit	Seatbelt Pretensioner (if equipped)	Airbag (if equipped)

 DANGER



Electrocution Danger
NEVER cut, breach, or touch high voltage components or cabling. Doing so could result in serious injury or death.

 WARNING


Electrical and mechanical releases may be compromised after a collision. Always wear appropriate protective equipment (Insulated Gloves, Safety Goggles).

EMERGENCY HV CUT ZONES

Located under hood.



Old Design

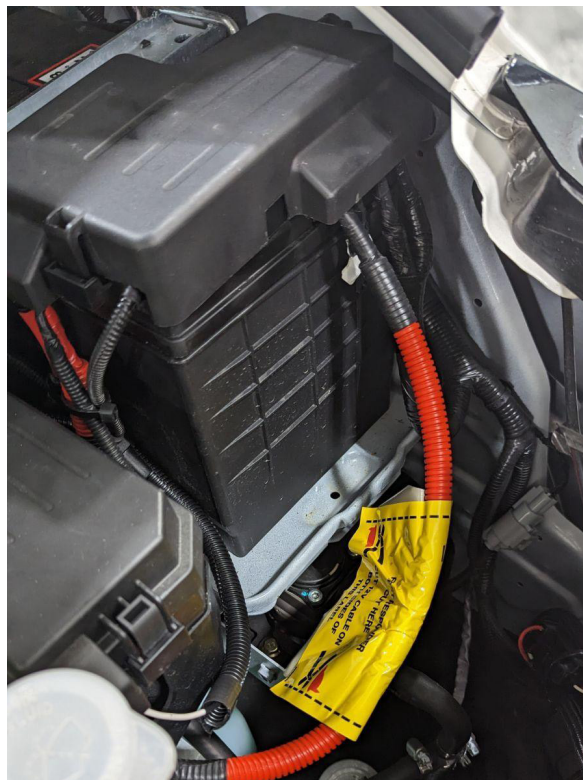

New Design




IMMOBILIZE VEHICLE:

1. Chock wheels.
2. Set parking brake.
3. Place vehicle into neutral.

Determine if vehicle is ON.

- Vehicle is ON if dash screen is illuminated.
- Vehicle is drivable if **READY** (A) is green and motor status is in **RUN** (B) mode.

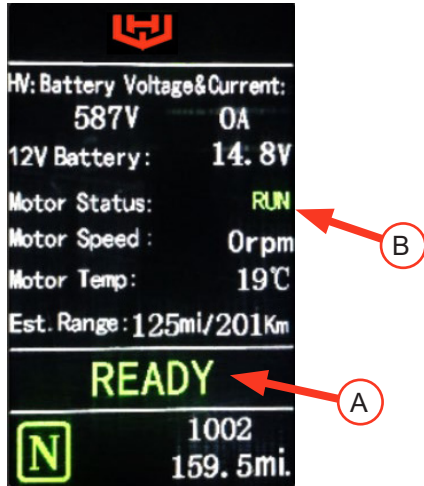

! DANGER



Electrocution Danger

Vehicle main batteries contain 400V of direct current. Ensure High Voltage is OFF. Failure to follow this precaution can/will result in death.

Low Voltage (LV) High Voltage (HV) Shutoff Procedure




1. Turn ignition to **LOCK** position (1) and remove key from ignition.

The LV battery switch (2) is located on the right side of the driver's seat and enables the interior electronics and key fob to function.




Turn OFF LV Battery Power

NOTE: Orientation can vary depending on how red key was inserted into key hole.

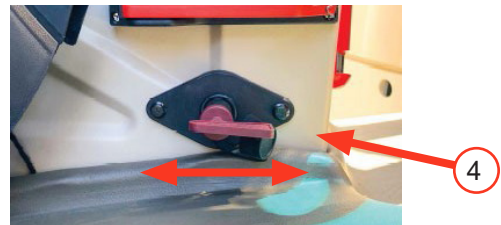

1. Rotate red key (3) 90 degrees until horizontal (4).

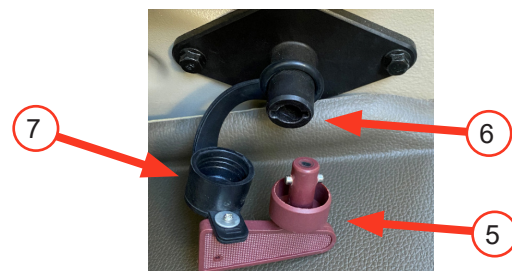

2. Remove red key (5) from key hole (6).
3. Cover key hole (7) with cap.

Turn OFF HV Battery Power

Ensure LV shutoff procedure has been performed and the red key has been removed from the LV switch. See “Low Voltage Shutoff Procedure” in previous steps.



1. Disconnect 12V negative battery terminal (8) and place a protective cap (9) over the exposed terminal.




NOTE: Remove all Manual Service Disconnect (MSD) from the HV batteries (one for each battery) and the High Voltage Distribution Unit (HVDU).

2. Press orange tab (10) to release black pull handle (11) from MSD (12).




3. Using plastic trim tool (13), pry rear corner of MSD from base (14) while lifting black pull handle (15) and remove MSD.


NOTE: HV batteries are underneath the vehicle, and the High Voltage Distribution Unit (HVDU) is under the hood.

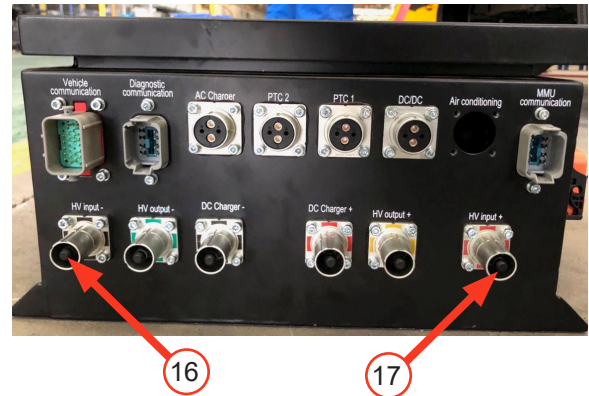

4. Disconnect **HV Input +** (16) and **HV Input -** (17) from the back of HVDU.

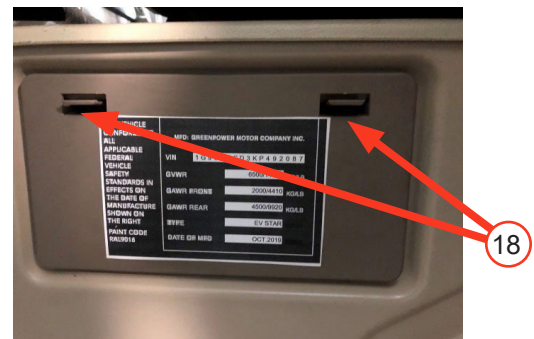

5. Open compartment under the driver's seat by pulling the two tabs (18).
6. Disconnect Vehicle Control Unit (VCU) located inside compartment.

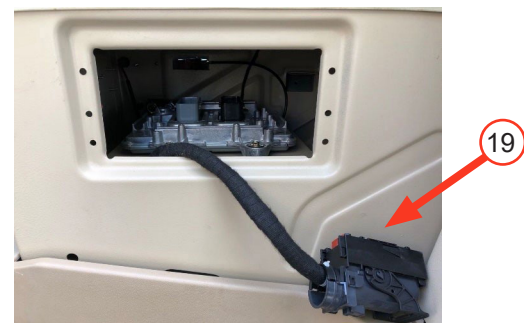

7. Lift black tab and disconnect the connector (19) from VCU.
8. Move connector outside compartment.
9. Place all (three) MSDs and ignition keys in a secure location.



⚠ DANGER

The high voltage system may remain powered for up to 1 minute after the vehicle is shut off.

⚠ CAUTION

The SRS system (airbags, etc.) may remain powered for up to 1 minute after disabling.

⚠ DANGER



Lack of engine noise does not mean vehicle is off: vehicle movement capability exists until vehicle is fully shut down. Always wear appropriate protective equipment (Insulated Gloves, Safety Goggles).

Vehicle Towing

Workhorse ALWAYS recommends the vehicle only be towed using a medium duty or higher flatbed tow truck.

For emergency use, a towing point is installed at the front and a hook is installed at the rear.

Front Tow Hook



The front tow hook (1) is included in the on-board tool kit.

NOTE: When towing the vehicle, remove the axle shafts to prevent the motor from turning while the vehicle is in motion.

1. To pull vehicle from the front, use a flat head tool to remove circular cap on right side of front bumper.
2. Screw front tow hook into vehicle on right side of front bumper.

Rear Tow Hook



A rear tow hook (2) is installed at the rear of the vehicle and can be used to tow other vehicles.

- To ensure the steering wheel is free to rotate, always turn the ignition switch to the **ON** position when positioning the vehicle for towing or securing. This ensures the steering lock is released and all required lights are operational.
- When the vehicle is being towed, release the parking brake and ensure shift lever is placed in the Neutral **N** position.

⚠ WARNING

- When towing this vehicle, it is always best to assume the vehicle has power and HV exists.
- Always avoid coming in contact with the **ORANGE** cables, they are part of the HV wiring. Some wiring for the HV system runs under the vehicle.

⚠ In Case of Submersion

Treat the W4 CC/W750 with the same precautions used for any submerged vehicle. Always wear the appropriate PPE. Water intrusion in damaged high voltage batteries can cause an 1) electrical discharge into the surrounding area of water, 2) ignition, or 3) explosion.

